

Spectra Geospatial Origin General Survey

User Guide

Version 2024.10
Revision A
October 2024

Contents

Get started	5
Supported equipment	6
Installing Origin	13
Signing in and signing out	28
The Origin workspace	31
Favorite screens and functions	35
Keypad shortcuts	40
Status bar	45
Projects & jobs	52
Managing projects	55
Managing jobs	68
Job properties	78
Transferring files to and from the controller	117
Maps and models	128
Adding data to the map	129
Viewing and reviewing items in the map	156
Adding points and lines in the map	186
Staking from the map	263
As-built inspection	265
Map toolbars	266
Conventional surveys	280
To configure the conventional survey style	280
To set up and connect the instrument	290
To start the conventional survey	291
Station setup	296
Targets	313
Instrument functions and settings	324
GNSS surveys	344
To configure the GNSS survey style	346
NTRIP protocol versions	371
To start and end the GNSS survey	389
Site calibration	416
Receiver functions and settings	424

Integrated surveys	460
To configure the integrated survey style	461
Prism to antenna offset values for standard prisms	461
To start and end an integrated survey	462
To switch between instruments	462
To change the antenna or prism height during an integrated survey	464
Additional survey equipment	465
Laser rangefinders	465
Echo sounders	469
Utility locators	472
Connections	480
Bluetooth connections	480
Radio connections	483
Receiver Wi-Fi settings	484
Auto-connect settings	485
GNSS correction source	486
Internet connection setup	487
Conventional survey measure methods	493
To measure a topo point	493
To measure rounds of observations	502
To measure to a surface	504
To measure points on a plane	505
To measure a point relative to a 3D axis	507
To measure continuous topo points	510
Surface scanning	511
GNSS survey measure methods	519
To measure a topo point	520
To measure continuous topo points	521
To measure an observed control point	523
To measure rapid points	524
To measure a horizontal tilt offset point	526
To measure a MultiTilt point	529
To measure to a surface	532
To measure a check point	533
To measure FastStatic points	533
Measurement messages and warnings	534

Measuring points with feature codes	537
To measure points in Measure codes	538
To measure multiple lines in Measure codes	538
To set up code buttons for Measure codes	540
Measure code options	544
To enter attribute values when measuring a point	546
To link an image to an attribute	547
To select feature codes in Measure points or Measure topo	549
Controlling feature geometry using control codes	552
Cadastral point tolerance checks	569
Stakeout	578
To stake out an item	578
Stake out items list	579
Stakeout navigation	581
To stake out points	592
To stake out a line	597
To stake out a polyline	607
To stake out an arc	621
To stake out an alignment	632
Stations available for stakeout	649
To stake out to the design elevation	651
To show the cut/fill to a surface during stakeout	651
To stake out a DTM	652
Job data	653
Importing data to the job	653
Reviewing and editing job data	657
Exporting data from the job	686
Working with media files	693
Data quality graph	696
Glossary of terms	698
Legal information	712

Get started

Spectra® Geospatial Origin software supports complete land survey workflows for all your projects and jobs. Intuitive and reliable, Origin provides map-based workflows for one-tap, easy-to-use measuring, feature coding, coordinate geometry calculation, and stakeout.



The Origin software supports both the Windows® and Android™ operating systems and can be installed to a range of supported Spectra Geospatial controllers. Depending on your software license type, you can use Origin with GNSS receivers, conventional robotic or mechanical instruments, or maximize the advantages of both GNSS and conventional in an integrated survey.

Cloud connectivity enables data to be shared easily between field and office.

The basic steps for getting data onto your controller and completing your fieldwork using Spectra Geospatial Origin are:

1. **Load files onto the controller.**

Transfer files from your office computer using a network connection, cable, or USB drive, or simply download a project from the cloud. See [Transferring files to and from the controller, page 117](#).

2. **Open the project and the job.**

Download projects and jobs from the cloud and open them, or create projects and jobs locally on the controller. See [Projects & jobs, page 52](#).

3. **Set up the survey style for your equipment.**

Configure connection settings for your equipment and your preferences for points measured using that equipment. The survey style can be reused for any job that uses the same equipment. Then set up your equipment on-site and start the survey.

4. **Add data to the job, as required.**

Link files and add map backgrounds to create a richer map. See [Maps and models, page 128](#).

5. **Measure or stake out points.**

Origin provides a wide range of methods for measuring points. See [Conventional survey measure methods, page 493](#) and [GNSS survey measure methods, page 519](#).

Fill out attributes for measured points and capture images as needed. See [To enter attribute values when measuring a point, page 546](#).

Stake out points, lines, arcs, polylines, alignments or digital terrain models (DTMs). See [Stakeout, page 578](#).

6. **Review your data.**

Use the **Point Manager** to view tabulated data point by point or **Review job** to view a summary of the points collected in the job. See [Reviewing and editing job data, page 657](#).

7. **Distribute your data.**

Export data to different file formats for office processing or sharing with others, or generate reports. See [Exporting data from the job, page 686](#).

Transfer the job or project to the office, or synchronize the data to the cloud.



TIP – These steps are explained in detail throughout the *Spectra Geospatial Origin General Survey User Guide*. For short videos on these basic steps, take a look at the [Origin YouTube channel](#).

Supported equipment

The Origin software can be used with the equipment listed below.

TIP – To test, demonstrate, or deliver training with Origin using a simulated connection to a GNSS receiver, see [To simulate a connection to a GNSS receiver, page 10](#). To simulate running the software on a supported controller, see [To simulate a controller, page 8](#).

Supported controllers

Windows devices

The Origin software can be installed onto the following Spectra Geospatial controllers running the Windows® 10 operating system:

- Spectra Geospatial Ranger 7 data collector
- Spectra Geospatial ST10 or ST100 tablet
- Supported third-party tablets

For more information on supported third-party tablets, refer to the support bulletin **Spectra Geospatial Origin on 64-bit Windows 10 & 11**, which can be downloaded from the [Support bulletins page](#) of the Trimble Access Help Portal.

Android devices

The Origin software can be installed onto the following Spectra Geospatial controllers running the Android operating system:

- Spectra Geospatial Ranger 5 data collector
- Spectra Geospatial MobileMapper 6 handheld
- Spectra Geospatial MobileMapper 60 handheld

- Spectra Geospatial SP30 handheld GNSS receiver
- Spectra Geospatial FOCUS controller

TIP – Origin is designed to be used in **Portrait mode** or in **Landscape mode** on the MobileMapper 6 and MobileMapper 60 handheld. There are small differences in the UI to accommodate the portrait screen and the Android operating system. See [Screen orientation, page 33](#).

NOTE – The **Spectra Geospatial SP30 handheld GNSS receiver** can only be used with Origin subscriptions - it cannot be used with Origin perpetual licenses. The SP30 is designed for GNSS-only surveying and does not support connections to total stations. For more information on using the SP30 with Origin, refer to the **Supported GNSS receivers** section below.

Supported conventional instruments

Conventional instruments that can be connected to the controller running Origin are:

- Spectra Geospatial FOCUS® 50 total stations
- Spectra Geospatial FOCUS 35/30 total stations
- Supported Nikon and third-party total stations

The functionality available in the Origin software depends on the model and firmware version of the connected instrument. Spectra Geospatial recommends updating the instrument to the latest available firmware to use this version of Origin.

Supported GNSS receivers

GNSS receivers that can be connected to the controller running Origin are:

- Spectra Geospatial integrated GNSS receiver with a built-in inertial measurement unit (IMU): SP100
- Spectra Geospatial integrated GNSS receivers: SP85, SP80, SP60
- Spectra Geospatial modular GNSS receivers: SP90m
- Spectra Geospatial SP30 handheld GNSS receiver

NOTE –

- As noted in the **Supported controllers** section above, the **Spectra Geospatial SP30 handheld GNSS receiver** can only be used with Origin subscriptions, not perpetual licenses. When used with Origin, the SP30:
 - Can connect to an external antenna but cannot connect to another GNSS receiver.
 - Can connect to other survey equipment such as an echo sounder or laser rangefinder.
 - Can be used as a GNSS RTK solution only, providing accuracy at the following levels:
 - Centimeter accuracy - Horizontal: 10mm, Vertical: 15mm
 - Decimeter accuracy - Horizontal: 70mm, Vertical: 20mm
 - Sub-meter accuracy - Horizontal: 300mm, Vertical: 300mm
 - Cannot be used with RTX and cannot be used for postprocessing.
 - Does not support camera-based eLevel.
- The communication protocols the Spectra Geospatial Origin software uses to communicate with older Spectra Geospatial GNSS receivers do not support all of the features available when using the same receivers with Survey Pro software. For more information, refer to the support bulletin **SP60, SP80 and SP85 Receiver Support with Spectra Geospatial Origin**, which can be downloaded from the [Support bulletins page](#) of the Trimble Access Help Portal.

Other supported equipment

If required, you can use additional devices when surveying, such as:

- laser rangefinders
- echo sounders
- barcode readers

If your controller supports a barcode reader you can use it to fill out the current field, for example a **Code** field. When using a Ranger 7 fitted with the EMPOWER barcode reader module, use the EMPOWER Asset settings application on the controller to enable the barcode reader and select the trigger button.

To use a laser rangefinder or echo sounder, you must configure the survey style. See [Additional survey equipment, page 465](#).

To simulate a controller

 
If you are running the Origin software on a **Windows desktop computer or laptop**, you can use the **Simulate controller** function to simulate running the software on a supported controller. This feature allows you to demonstrate the software or capture screenshots of the software with your preferred controller layout for inclusion in training materials.

NOTE – When using Origin on a Windows computer you can select to emulate Origin on a controller running the Android operating system such as the MobileMapper 60, but note that where Origin interacts with parts of the operating system, the simulator can only show the Windows operating system behavior, not Android.

 
You can use the **Simulate controller** function in conjunction with:

- the **GNSS emulator** function to simulate a connection to a GNSS receiver, removing the need to be outdoors and connected to a real GNSS receiver.
- a **manual survey style** you have set up to simulate a connection to a conventional instrument, removing the need to be connected to a real instrument.

 
To simulate running Origin on a supported controller:

1. Start Origin.
2. Tap  and select **About / Support / Simulate controller**.
3. In the **Simulate device** menu select the controller type. The software reconfigures itself to simulate how it appears when running on the selected device.

 
TIP – To start simulating a device from anywhere in the software, use the keypad shortcut **Ctrl + Shift + S** and then select the controller type.


4. By default the Origin window is shown at the size it appears on the device. To resize the window:
 - a. Tap  and select **About / Support / Simulate controller**.
 - b. In the **Simulate controller** menu select **DPI scaling**.
 - c. In the **DPI scaling mode** field, select **Custom**.
 - d. Enter the new **DPI scaling value**. You can enter a different value for each device type.

TIP – When simulating a portrait device on a landscape screen, enter **0.8** or similar to fit the entire window on the screen.

- e. Restart the Origin software to view the simulator at the new size.
When the software starts, a tooltip displays the device type of the simulated controller and the DPI scaling value used, if it is a custom value.
5. To hide or display the Windows title bar, tap  and select **About / Support / Simulate controller / Show title bar**. Restart the Origin software to apply the change.

TIP – To move the Origin window when the Windows title bar is not shown, click inside the status line area and drag the window. You must have opened a job to see the status line area of the status bar.

6. To hide or display the Android navigation bar, tap  and select **About / Support / Simulate controller / Show Android buttons**. Restart the Origin software to apply the change.

When you simulate a controller running Android, you can use the Android Back button  as an **Esc** softkey to leave the current Origin software screen. Because the Android Menu button operates the

Android operating system menu, tapping/clicking the Android Menu button has no effect when using the simulator.

NOTE – The on-screen keyboard always appears when editing text. Function keys and associated shortcut keys are not supported on devices that do not have a physical keypad. Tapping/clicking a Favorite star toggles the Favorite function on and off, instead of showing the Favorite menu.

To simulate a connection to a GNSS receiver

The GNSS emulator allows you to test, demonstrate, or deliver training with Origin using a simulated connection to a GNSS receiver. This removes the need to be outdoors and connected to a real GNSS receiver.

The GNSS emulator can be used on controllers or desktop computers that have Origin installed.

NOTE –

- The GNSS emulator is a pre-recorded set of outputs from a receiver and cannot change based on real-time commands from the software. This means that some functions cannot be used with the GNSS emulator, including tilt compensation, re-initialization, tracking resets, and SV subsets.
- You must **open a job** before you can use the GNSS emulator.
- The GNSS emulator function is not supported when using Origin on a controller running Android.


To start the GNSS emulator

1. In Origin, open the project and job you want to work in.


NOTE – The GNSS emulator function cannot be used with the default coordinate system, which is **Scale 1.000**. You must open a job that uses a fully defined a coordinate system, such as any coordinate system selected from the coordinate system library provided with the software.

2. Tap  and select **About / Support / GNSS emulator**. The **GNSS emulator** form appears next to the map.

TIP – The GNSS emulator item does not appear in the **Support** menu until you have opened a job.

If you frequently use the GNSS emulator, tap  and add it to your list of **Favorite** items. See [Favorite screens and functions](#).

3. From the **Receivers** list, select the receiver type.
4. To be able to change the position of the rover using the GNSS joystick, select the **GNSS joystick** check box.
5. Configure the location of the base receiver. You can:

- Enter coordinates that are appropriate for the coordinate system settings defined for the job.
 - Tap inside one of the coordinate fields and then use the **Select** tool  on the map toolbar to select a position on the map. The coordinate fields are updated with the coordinates of the selected position.
6. Configure the starting location of the rover.
 7. To see the extra buttons and features available if you are using augmented reality (AR) with a receiver that supports IMU tilt compensation, select the **Show AR** check box.

NOTE – The GNSS emulator function does not support emulating tilt functionality using the receiver. Enabling the **Show AR** check box enables additional controls in the software but it does not emulate inertial tilt or AR functionality. Viewing the AR controls may be useful in a classroom learning environment.

8. Tap **Accept**.

 
The **GNSS Emulator** form closes and the emulator starts. The icons in the status bar indicate the software is connected to the GNSS receiver.

The **GNSS Emulator** DOS window appears alongside the Origin window. You must keep this window open while you are using the GNSS emulator.

If you selected the **GNSS joystick** check box, the **GNSS joystick** pop-up window also appears in Origin.

If you are running Origin on a desktop computer you can click and drag the **GNSS joystick** pop-up window outside of the Origin window, if needed.

To use the GNSS emulator

1. To start the GNSS RTK survey, do one of the following:
 - Tap a point on the map to select it and then tap **Stakeout**.
 - Tap  and select **Measure / RTK / Measure points** or **Measure codes**.
2. Tap **Accept** to accept all of the default settings for the emulator receiver.

The survey starts just like when Origin is connected to a real receiver. The status line on the status bar updates, indicating the survey has started. In the map, the base position and the current rover location (indicated by the green cross) appear.
3. Measure a point or stake out the selected point.
4. To change the position of the rover, tap and hold on the map and select **Move rover here**, or use the GNSS joystick.

If the **GNSS joystick** pop-up window is not already shown, tap and hold on the map and select **GNSS joystick**.

 
In the **GNSS joystick** pop-up window, the current location of the rover is at the center of the position circle in the **λ, ϕ** tab.

- To change the horizontal position of the rover, tap anywhere in the **Position** circle. For example, tap on the inner circle to move the rover 1 m in that direction.
After a small delay, the map shows the new position of the rover.
 - To change the vertical position of the rover antenna, tap in the **Height** tile.
 - To reduce the scale used by the **GNSS joystick** by a factor of 10, for example from 1.0 m to 0.1 m, select the **Fine** check box. This change applies to both the **Position** and **Height** tiles.
 - To change the precision of the rover position, select the **σ** tab.
 - The default option is **Precise**. Select the **Coarse** option for less precise measurements.
 - By default the **Noise** check box is selected to emulate the presence of signal noise causing slight changes in position between epochs when measuring at the "same" location.

For **Precise** measurements the amount of noise emulated is +/-5 mm. For **Coarse** measurements the amount of noise emulated is +/-0.5 m. To prevent these fluctuations in measurements at the "same" location, clear the **Noise** check box.
 - To change the amount of tilt of the pole, select the **θ** tab. Tap the **eBubble** softkey to open the eBubble to see the effect of changing the amount of tilt.
5. Continue measuring or staking out points as usual.
 6. To end the survey, tap the receiver icon on the status bar and then tap **End survey** in the **GNSS functions** screen.
 7. When prompted, choose whether to power down the receiver.
 - Tap **Yes** to disconnect from the simulated receiver and close the **GNSS Emulator** DOS window.
 - Tap **No** to keep the GNSS Emulator running and stay connected to the receiver (for example, if you want to start a new survey).

 
To simulate a connection to a conventional instrument

You can simulate a connection to a basic conventional instrument to make manual observations to test, demonstrate, or deliver training with Origin. This can be useful when you don't have access to a physical instrument.


1. Tap  and select **Settings / Survey styles**.
2. Tap **New**.
 - a. Enter a name for the style, for example **Manual Instrument**.
 - b. In the **Style type** field, select **Conventional**.
 - c. Tap **Accept**.

The survey style settings pages for the survey style you created are listed.

3. Select **Instrument** and tap **Edit**.
 - a. In the **Manufacturer** field, select **Manual**.
 - b. In the **Instrument precisions** group box, modify the angle precision and EDM precision thresholds as required.

You can also modify the **Instrument centering error** and **Backsight centering error**. This can be used in an adjustment carried out in Survey Office.
 - c. Tap **Accept**.
4. Tap **Store**. The changes you made to the survey style are saved.
5. Tap  and select **Measure / [survey style name] / Station setup**.
 - a. In the **Corrections** screen, key in the corrections you would like to simulate. Tap **Accept**.
 - b. Define the instrument point. Either select a point in the job or, if you do not have any points in the job, key in the point details. Tap **Accept**.
 - c. Define the backsight point. Either select a point in the job or, if you do not have any points in the job, key in the point details. Select the measurement **Method**. Tap **Measure**.
 - d. Because the software is not connected to a real instrument you must key in the **Manual observation**. Enter the **Horizontal angle** and the **Vertical angle**. Tap **Accept**.

Just as you would when working with a real instrument, you can now view and confirm the measurement before storage.
 - e. Tap **Store**.

The station set up is now complete and you are ready to survey.
6. Measure points or stake out points as usual.
7. Tap  and select **Measure / End conventional survey**. Tap **Yes** to confirm.

Installing Origin

Before installing or updating the Origin software:

- Make sure you have the required software licenses to install the Origin software. See [Software licenses and subscriptions, page 17](#). If you do not have the required licenses you may be able to try out the software for a limited time. See [Installing a temporary license, page 21](#).
- If the Spectra Geospatial Installation Manager software is not installed on the controller, download it and install it. See [Installing Spectra Geospatial Installation Manager, page 26](#).

NOTE – Job (.job) files created using a previous version of Origin are automatically upgraded when you open them in the latest version of Origin. Once jobs are upgraded they can no longer be opened in a previous version. For more information, see [Using existing jobs with the latest version of Origin, page 24](#).

To install or update Origin on Windows

To install or update Origin on a controller running Windows using Spectra Geospatial Installation Manager for Windows:

1. Connect the controller to the internet. See [Internet connection setup, page 487](#).
2. To open Spectra Geospatial Installation Manager, tap the **Search** icon in the Windows task bar on the controller and enter **Install**. Tap **Spectra Geospatial Installation Manager** in the search results.
Spectra Geospatial Installation Manager automatically connects to the internet using the device's internet connection, updates itself if required and then checks for available updates.
3. In the product bar, select the product you want to install or update.
4. Make sure the version you want to install is selected in the **Version** field.
5. In the **Install updates** tab, select the items to install:
 - Select the software apps for which you are licensed.
If the controller has a perpetual Origin license, the Origin apps for which the controller is licensed are already selected. If you are installing Origin to use with a subscription license, you must select the Originapps you want to install.
 - In the **Tools** group, select the **GlobalFeatures.fxl** check box to install the **GlobalFeatures.fxl** example feature library file for use with the Origin software. For more information, see [Feature library, page 102](#).
 - In the **Language and Help Files** group, select the required language pack to install.
Installing your preferred language pack enables you to use the Origin software in a language other than English, and to view Origin Help files on the controller in your preferred language (if available) without connecting to the internet and browsing to the Trimble Access Help Portal. For more information, see [To change language or terminology, page 38](#).
6. If you have set up custom data folders to install Origin data files during software update/installation, select the folder(s) to install in the **Custom data folders to upload** group. See [Installing existing data during upgrade, page 24](#).
7. Tap **Install**.

The progress of the software download and installation is shown.


NOTE – If your anti-virus software shows an alert when running Spectra Geospatial Installation Manager, in most cases you can continue with the installation anyway. If your anti-virus software does not allow you to continue, you must configure your anti-virus software to accept the changes made by Spectra Geospatial Installation Manager. Spectra Geospatial strongly recommends that you always run up-to-date anti-virus software on the device.

8. To close Spectra Geospatial Installation Manager, tap **Finish**.

To install or update Origin on Android

NOTE – Devices configured with a company-managed Google account may be subject to a Google Policy restriction on installing applications via APK. To resolve this, the account will need a policy applied that has **Load From Unknown Sources** enabled.

To install or update Origin on a controller running Android using Spectra Geospatial Installation Manager for Android:

1. Connect the controller to the internet. See [Internet connection setup, page 487](#).
2. To open Spectra Geospatial Installation Manager, go to the Android **Apps** screen on the controller and tap the Spectra Geospatial Installation Manager for Android  icon.

Spectra Geospatial Installation Manager automatically connects to the internet using the device's internet connection, updates itself if required and then checks for available updates.

3. In the product bar, select the product you want to install or update.
4. Make sure the version you want to install is selected in the **Version** field.
5. In the **Install updates** tab, select the items to install:
 - Select the software components for which you are licensed.
If the controller has a perpetual Origin license, the Origin apps for which the controller is licensed are already selected. If you are installing Origin to use with a subscription license, you must select the Origin apps you want to install.
 - In the **Tools** group, select the **GlobalFeatures.fxl** check box to install the **GlobalFeatures.fxl** example feature library file for use with the Origin software. For more information, see [Feature library, page 102](#).
 - In the **Language and Help Files** group, select the required language pack to install.
Installing your preferred language pack enables you to use the Origin software in a language other than English, and to view Origin Help files on the controller in your preferred language (if available) without connecting to the internet and browsing to the Trimble Access Help Portal. For more information, see [To change language or terminology, page 38](#).

6. Tap **Install**.

The progress of the software download and installation is shown.


7. During installation, any of the following pop-up messages may appear:
 - If a version of the software is already installed, you are prompted to confirm you want to install an update to the existing application. Tap **Install**.
 - If a pop-up message indicates that the device is set to block installation of apps obtained from unknown sources:

 
- a. Tap **Settings** in the pop-up message.
 - b. In the **Settings** screen, locate the **Unknown sources** item and set the control to on to allow installation of apps from sources other than the Play Store.
 - c. Tap **OK**.
- If prompted to grant access to functions on the device, tap **Install** to agree and install the software.
8. Tap **Done** to return to Spectra Geospatial Installation Manager. Alternatively, tap **Open** to close Spectra Geospatial Installation Manager and open the newly installed software.
 9. To close Spectra Geospatial Installation Manager, tap **Finish**.

NOTE – Spectra Geospatial Installation Manager operates as the license manager service for any software installed using Spectra Geospatial Installation Manager. If you uninstall Spectra Geospatial Installation Manager, installed software will not run.

 
Using Origin for the first time


To use Origin for the first time after installation or update:

1. On the **Home** screen or the **Apps** screen of the controller, tap or double-tap the Origin software icon  to run the software.
2. The first time you use the software, you are prompted to accept the **General Product Terms**. Read the terms and then tap **OK**.

To view these terms at any time, in the Origin software, tap  and select **About**. Tap **Legal** and select **EULA**.

3. The first time you use the software, the Spectra Geospatial Solution Improvement Program screen appears. The Spectra Geospatial Solution Improvement Program collects information about how you use Spectra Geospatial programs and about some of the problems you may encounter, and uses this information to improve products and features.
 - To participate in the program, select the **I would like to participate in the Solution Improvement Program** check box and then tap **OK**.
 - If you choose not to participate, leave the **I would like to participate in the Solution Improvement Program** check box unselected and then tap **OK**.

Participation in the program is strictly voluntary. At any time, you can choose to participate or not to participate in the Solution Improvement Program. To do this, in Origin tap  and select **About**. Tap **Legal** and select **Solution Improvement Program**. Select or clear the **I would like to participate in the Solution Improvement Program** check box. For more information, see [Spectra Geospatial Solution Improvement Program, page 26](#).

4. The **Projects** screen appears. You can now create or open a project.
5. If required, tap  at the top of the **Projects** screen to sign in using your Trimble ID. You must sign in:

- To download your Origin subscription license the first time you use your Origin subscription.
- If you have a perpetual license, and you want to be able to synchronize Origin data with the cloud.

For subsequent use, you must only sign in if you have previously signed out. For more information, see [Signing in and signing out](#), page 28.

TIP – Origin provides options to help manage your subscription. For example, if you always use the same controller you can keep your subscription locked to the controller. Alternatively, you can choose to release the subscription if you typically do not always use the same controller and want to be able to sign in on another one. For more information, see [Options for releasing your subscription](#), page 30 in [Signing in and signing out](#), page 28.

Updating office software

You may need to update your office software, so that you can import your Origin version 2024.10 jobs.

All required updates to Survey Office are handled using the **Check for updates** utility provided with Survey Office.

Software licenses and subscriptions

You can purchase Origin software licenses as a perpetual license that is licensed to the controller or as a subscription license that is assigned to an individual user. Licenses are required for the General Survey app as well as for each Origin app you want to use.

You can view the licenses installed to the controller and the subscription licenses assigned to the signed in user at any time in the **About** screen of the Origin software. For more information, see [Viewing current license information](#), page 20.

TIP – If you don't have a current license or subscription you can still try out the software. You can use Spectra Geospatial Installation Manager to create a limited temporary license for Origin and then install Origin 2024.10 onto any Windows 10 computer or a supported Spectra Geospatial controller running Android. For more information, see [Installing a temporary license](#), page 21.

Origin perpetual software licenses

To install Origin 2024.10 onto a supported controller that has a perpetual license, the controller must have a **Origin Software Maintenance Agreement** valid up to **1 October 2024**. To extend your Origin Software Maintenance Agreement, contact your Trimble Distributor.

A valid **Origin Software Maintenance Agreement** allows a user that has a perpetual license to install new versions of the software. It also provides access to features that use web services when connected to the internet, including:

- Cloud data synchronization
- Trimble Maps
- IBSS

Relinquishing software licenses from a controller you no longer want to use

The Origin License Relinquish & Transfer program is designed for customers who wish to retire their existing controllers and transition to new hardware by leveraging their investment in existing software.

Run Spectra Geospatial Installation Manager on the controller you want to relinquish the license from, and select Origin in the product bar. If the **Relinquish licenses** tab is available in Spectra Geospatial Installation Manager, you can remove the software licenses from the connected device so that they can be transferred to a new device.

Select the **Relinquish licenses** tab and tap **Relinquish** to return the licenses to Trimble. Contact your distributor providing the serial number of the controller you relinquished the licenses from and the serial number of the controller you would like the licenses assigned to. Once your distributor has reassigned the licenses to your new controller, you can install Origin to the new controller using Spectra Geospatial Installation Manager.

Spectra Geospatial controllers you can relinquish licenses from include:

- Spectra Geospatial Ranger 5 or Ranger 7 data collector
- Spectra Geospatial MobileMapper 6 or MobileMapper 60 handheld
- Spectra Geospatial FOCUS controller
- Spectra Geospatial ST10 or ST100 tablet

NOTE - To relinquish a license from a controller, the controller must have a current software maintenance agreement. For more information, contact your Spectra Geospatial Distributor.

Origin subscriptions

If you are using a Origin subscription rather than a perpetual license, you can install Origin 2024.10 onto any supported controller. A valid subscription provides access to features that use web services when connected to the internet.

To use the software subscription:

1. The License Administrator in your organization must assign a subscription to you using the [License Manager webapp](#). For more information, see the [License Manager Help](#).
2. The first time you start the Origin software, you must sign in using your Trimble ID to download your Origin subscription license to the controller. Otherwise you are prompted to sign in only if you have previously signed out.

Subscriptions are locked to that controller until you sign out. Once signed out, you can run Origin on a different controller and sign in to lock the subscription to that controller and use the software.

TIP – Origin provides options to help manage your subscription. For example, if you always use the same controller you can keep your subscription locked to the controller. Alternatively, you can choose to release the subscription if you typically do not always use the same controller and want to be able to sign in on another one. For more information, see [Options for releasing your subscription, page 30 in Signing in and signing out](#), page 28.

Additional subscription licenses

To use some features of the Origin software, additional subscription licenses are required, whether you are using a Origin subscription or perpetual license.

NOTE – Additional subscription licenses are not shown in Spectra Geospatial Installation Manager because they are user-based subscriptions and do not require installation of any components using Spectra Geospatial Installation Manager.

Trimble Connect Business subscription licenses

To synchronize Origin field data with the cloud, the signed in user must have a Trimble Connect license. If you are using a controller with a perpetual license, then the controller must have a current Origin Software Maintenance Agreement.

To synchronize data, Trimble recommends that all users have a **Trimble Connect Business subscription** because it allows users to create more projects and synchronize data with more projects than a **Trimble Connect Personal subscription**. Origin users can obtain a Trimble Connect Business subscription at no cost in the following ways:

- Trimble Connect Business subscriptions are automatically included with Origin subscriptions. For those users no further action is needed.
- For Origin perpetual license users, a Trimble Connect Business subscription is available with each current Software Maintenance Agreement. However, your organization's License Administrator must assign the Trimble Connect Business subscription to the specific user using the [License Manager](#) web app. Until the Trimble Connect Business subscription is assigned to the user, then that user will have a Trimble Connect Personal subscription and can create or synchronize data only to a limited number of projects.

To assign Trimble Connect Business subscription licenses to users in your organization, sign in to the [License Manager](#) web app as a License Administrator. For more information, see the [License Manager Help](#).

For more information about the different types of Trimble Connect licenses, see [Understanding Connect Licensing](#) in the Trimble Connect Knowledge Center.

Viewing current license information

To view licensing information for Origin apps installed on the controller, tap  and select **About**.

The **About** screen shows software licenses that are in use by the controller or by the signed-in Origin user.

TIP – If the **About** screen does not show the licenses that you expect or need, contact your organization's License Administrator. This person is someone within your organization who uses the [License Manager](#) web app to administer licenses to users in your organization. For more information, see the [License Manager Help](#).

User licenses

User license types shown in the **About** screen include:

- Origin subscription licenses
- Related subscription licenses assigned to the current user (for example, Trimble Connect subscriptions)

A Trimble Connect Business subscription allows you to create more projects and synchronize data with more projects than a Trimble Connect Personal subscription. If you are using a perpetual license for Origin then the controller must have a current Origin Software Maintenance Agreement for you to be able to synchronize Origin data with the cloud.

NOTE – By default, Origin subscriptions are locked to the controller until you sign out. You must sign out on the current controller before you can use your subscriptions on a different controller. If you don't always use the same controller, you can configure the software to release your subscription licenses automatically when exiting the software, or to prompt you to sign out and release your subscription on exit. To do this, select the appropriate option from the **When exiting the software** field in the **About** screen.

Controller licenses

User license types shown in the **About** screen include:

- Controller licenses:
 - Origin perpetual licenses
 - Origin demo/trial licenses


The **Software maintenance expiry** field applies only to **perpetual licenses** and shows the expiry date of the Software Maintenance Agreement.

If you are using a perpetual license for Origin, then the controller must have a current OriginSoftware Maintenance Agreement for you to be able to synchronize Origin data with the cloud or to update the Origin software.

NOTE – If you or your organization's License Administrator has recently renewed or extended your controller's Software Maintenance Agreement, you must run the Spectra Geospatial Installation Manager software on the controller to download and install the new software maintenance file. Once this is installed, the **Software maintenance expiry** field shows the new expiry date.

GNSS receiver option subscriptions

Information about GNSS receiver options provided by subscription are **not** shown in the **About** screen because that subscription is specific to an individual receiver and is not locked to the user or the controller.

If you are using a receiver that has options provided by Trimble GNSS subscription (such as an SP100 receiver), tap  and select **Instrument / Receiver settings** to view information about the subscription.

Installing a temporary license

If you do not have the required licenses you may be able to try out the software for a limited time.

The options are:


- Create a **48-hour license** for Origin if you are not able to sign in and use your subscription or if you have purchased a perpetual license but it has not yet been assigned to your controller.
- Create a **30-day Demonstration license** for Origin if the controller does not have a current perpetual license. This type of temporary license is available on supported Windows and Android controllers.
- Create a **30-day Trial license** for specific Origin apps if the controller has a current perpetual license, but no license for the specific app you want to try. This type of temporary license is available only on supported Windows controllers.

48-hour license when unable to sign in

The 48 hour license enables you to keep working when:

- your subscription license is locked to another controller, or when you haven't locked your subscription to your current controller and you are now on-site without an internet connection.
- your perpetual license has not yet been assigned to your controller and you need to get started on-site.

To install a 48-hour license:

1. If Origin is not yet installed on the controller, use Spectra Geospatial Installation Manager to install Origin and select the Origin apps you want to install.
2. Run Origin for the first time.
3. Tap  at the top of the **Projects** screen to open the **Sign in** screen and then tap **Help, I can't sign in!** at the bottom right of the **Sign in** screen to activate a 48 hour license.

All installed Origin apps will run with full functionality for 48 hours. To continue working beyond that period, you must sign in with your usual Origin subscription or run Spectra Geospatial Installation Manager and install a perpetual license within the 48 hour license period. You can check the number of remaining hours in the **About** screen in Origin.

30-day Demonstration license

If your controller **does not have** a current perpetual license, you can create a temporary demonstration license for Origin.

TIP – Demonstration licenses can also be used on a desktop computer for training and testing purposes.

Demonstration licenses enable you to use the Origin General Survey app, as well as the Origin Roads app.

NOTE – The purpose of a demonstration license is to trial the software for evaluation. A full Origin license must be purchased for production work.

Demonstration licenses are limited to adding 30 points per job, however large jobs created elsewhere can be opened and reviewed. Demonstration licenses allow connections to GNSS receivers and total stations for the first 30 days. After 30 days you can only emulate a total station survey using a manual instrument (Windows and Android), and emulate a GNSS survey (Windows only).

To create a demonstration license

1. In Spectra Geospatial Installation Manager, make sure Origin is selected in the product bar.

A message advising the controller is not licensed for Origin appears.

TIP – If the device is licensed for other products, you may need to select **Show all** in the product bar to see this message.

2. Select the **Create demo licenses** tab, if it is not already selected.
3. Tap **Sign in** and then sign in using your Trimble ID.

When you have signed in, a Origin license is automatically created.

4. Select the **Install updates** tab and install the software.

To convert the demonstration license to a full license

Once you have purchased a perpetual license or a subscription, run Spectra Geospatial Installation Manager again to uninstall the demonstration software and install the full software version:

1. In Spectra Geospatial Installation Manager, select the **Install updates** tab.
2. If you have purchased a subscription, select the **Convert Spectra Geospatial Origin Demo to Subscription** check box.

3. Click **Install**.
4. Spectra Geospatial Installation Manager offers to uninstall the software before installing the purchased version. Click **Accept**.

NOTE – If you choose not to uninstall the software, then the applications remain installed on the device, but cannot be used.

The demonstration software components are uninstalled.

5. Run Spectra Geospatial Installation Manager again.
6. In Spectra Geospatial Installation Manager, select the **Install updates** tab.
7. Select the components to install.
8. Click **Install**.

Trial versions of Origin apps (Windows only)

If the controller has a current Origin (General Survey) perpetual license, you can use the **Try software** tab to create a temporary license to for supporting applications or trial software that can be installed to the connected device.

Supporting applications are applications that might install onto a desktop computer to support software that is installed on a device.

Trial software are additional Origin apps that you would like to try for 30 days. Trial software licenses typically expire after 30 days.

NOTE – Trial versions of select Origin applications are fully-functional and can be installed only once per device. The length of the trial period for the software is shown in Spectra Geospatial Installation Manager for Windows.

To install trial or supporting software

1. Start Spectra Geospatial Installation Manager for Windows.
2. Make sure Origin is selected in the product bar.
3. Select the **Try software** tab.
4. Select the appropriate check box(es) and then tap **Create license**.
5. Tap **Sign in** and then sign in using your Trimble ID.

When you have signed in, The Spectra Geospatial Installation Manager window switches to the **Install updates** tab and shows the software available to install, including the software you just selected.

6. Tap **Install**.

Using existing jobs with the latest version of Origin

You can open .job (JOB) files created using a recent previous version of Origin with the latest version of the software. Origin automatically converts the job to the current version of the software.

NOTE – Jobs upgraded to the latest version of Origin cannot be used with previous versions of the software. Spectra Geospatial recommends keeping a backup copy of the previous version of the job if some controllers in your organization are still using a previous version of Origin.

Use .job files in preference to .jxl files

It is possible to open .jxl (JXL or JobXML) files in Origin, however Spectra Geospatial recommends using the equivalent .job file in preference to the .jxl file if it is available.

JXL files are created by exporting the job files as a JXL file from Origin, or by importing a JOB file to Survey Office. A JXL file is an XML representation of the .job file.

While Origin can create a new .job file from a .jxl file, it does not recreate the original job. When Origin creates a job from a JXL file, it reads only the <Reductions> section of the XML file. The <Reductions> section of the file contains only point records, which means a .job file created from a .jxl file contains only keyed in points. If you have the original .job file and you upgrade it to the newest version of Origin then the raw data is retained — you will see any feature coded linework, and you are able to edit data as you can in the original job, for example you can edit antenna or target heights, and you can add a calibration point to a site calibration.

Installing existing data during upgrade

When installing or upgrading Origin on a Windows controller, you can choose to install existing data files from a predefined folder location, Where required, the files are converted to the current version of Origin when they are opened in Origin.

Installed file types might include:


- Survey styles, job templates
- Feature code libraries
- Control files, DXFs, alignments
- Customized reports/stylesheets

If you are a...	You might use custom data folders when...
Spectra Geospatial Distributor	<ul style="list-style-type: none"> • Setting up a group of new controllers for a customer • Configuring controllers with sample files for demonstration
User in an organization that has multiple controllers	<ul style="list-style-type: none"> • Setting up a group of new controllers with 'standard' files used by the organization

If you are a...	You might use custom data folders when...
	<ul style="list-style-type: none"> Configuring existing controllers with files for a specific project

NOTE – If you have modified any predefined Spectra Geospatial files and saved them with the original name, then those files are replaced with new versions of the predefined files when you upgrade the software, and any custom changes are lost. In this case, you must manually copy the modified files from the local folder and copy them into the appropriate Spectra Geospatial Data subfolder after the software upgrade. To avoid this, if you modify a predefined format then make sure you ***save it with a different name.***

To set up custom data folders

- In Spectra Geospatial Installation Manager for Windows, tap . The **Settings** dialog appears.
- In the **Source location** field, select the directory on the computer where the custom folder(s) will be located. The default location is **C:\Origin Install upload folders**.
- Select the **Overwrite existing files** check box to replace any existing files on the device that have the same name with the files from the custom folder.
- Tap **Create folder**. Enter the name of the new custom data folder, for example the name of the customer or project that the files are used by. Tap **OK**.
- A File Explorer window appears, showing the new custom data folder you created in the **Source location** directory. The **Projects** folder and the **System files** folder are automatically created in the new folder.
- Place the files you want to install onto the device in the appropriate **Projects** or **System files** folder. For more information on where to place specific file types, see [Data folders and files, page 119](#).
- In Spectra Geospatial Installation Manager for Windows, return to the **Settings** dialog. Tap **OK**.
The Spectra Geospatial Installation Manager for Windows window automatically refreshes and the folder you created appears below the **Custom data folders to upload** item in the **Install updates** tab.

Installing files from custom data folders

To install custom data files to the device, in Spectra Geospatial Installation Manager for Windows scroll down to the **Custom data folders to upload** item in the **Install updates** tab and select the folder(s) that contain the files to install. Tap **Install**.

For more information, see [Installing Origin, page 13](#).

Installing Spectra Geospatial Installation Manager

To install or update the Origin software to your controller, you must use Spectra Geospatial Installation Manager:

- If the controller is a Windows device, install or update Origin software using Spectra Geospatial Installation Manager for Windows.
- If the controller is an Android device, install or update Origin software using Spectra Geospatial Installation Manager for Android.

To install Spectra Geospatial Installation Manager for Windows

1. Go to the [Software and utilities page](#) of the Trimble Access Help Portal and click the link to download Spectra Geospatial Installation Manager for Windows.
2. Double-click the installation file to install it.

For more information, refer to the [Spectra Geospatial Installation Manager for Windows Help](#).

To install Spectra Geospatial Installation Manager for Android

Spectra Geospatial Installation Manager for Android is **usually preinstalled** on Spectra Geospatial controllers running Android. If it is not already installed, follow the instructions below to install it.

1. Go to the [Software and utilities page](#) of the Trimble Access Help Portal and click the link to download Spectra Geospatial Installation Manager for Android.
2. Tap the link to download the Spectra Geospatial Installation Manager for Android software.
3. Locate the downloaded file on your device and tap it to run it.
4. If a pop-up message indicates that the device is set to block installation of apps obtained from unknown sources:
 - a. Tap **Settings** in the pop-up message.
 - b. In the **Settings** screen, locate the **Unknown sources** item and set the control to on to allow installation of apps from sources other than the Play Store.
 - c. Tap **OK**.

NOTE – Spectra Geospatial Installation Manager operates as the license manager service for any software installed using Spectra Geospatial Installation Manager. If you uninstall Spectra Geospatial Installation Manager, installed software will not run.

For more information, refer to the [Spectra Geospatial Installation Manager for Android Help](#).

Spectra Geospatial Solution Improvement Program

At Spectra Geospatial, we know that the best products are the ones our customers can use to their fullest potential. To design our products, we gather direct customer feedback by visiting customers, gathering

information from our distribution partners, conducting surveys, technical support reports and other types of field research.

However, a large amount of people around the world use Spectra Geospatial products, so it is impossible for us to contact most of our customers in person to get their feedback. The Spectra Geospatial Solution Improvement Program was created to give all Spectra Geospatial customers the ability to contribute to the design and development of Spectra Geospatial products and services.

The Spectra Geospatial Solution Improvement Program collects information about how you use Spectra Geospatial programs and about some of the problems you may encounter. Spectra Geospatial uses this information to improve the products and features you use most often, to help solve problems, and to better meet your needs. Participation in the program is strictly voluntary.

How does the Spectra Geospatial Solution Improvement Program work?

If you participate, the Origin log file is sent to the Spectra Geospatial server each time you start Origin.

When we receive the log file, we parse it for usage information to create statistics around what our equipment is being used for, what software functions are popular in which geographical region and how often we can see any problems that can be corrected in our products. You can of course uninstall this software program at any time should you wish to do so.

Is this program affecting my performance in the field?

No. The software program does not affect your performance and productivity in the field. The transfer of the information to the Spectra Geospatial server each time you start Origin is transparent for you.

Will the Solution Improvement Program collect information about all products on my data collector?

No. The software program only collects information from the Origin log file; this contains information about connections to hardware, like GNSS receivers and total stations, targets used, user entered values such as atmospheric information, exceptions in the software and what Origin functionality is being used.

Will I be contacted or receive spam if I participate?

No.




If I choose to participate, can I opt out later?

You can opt in or out at any time. To do this, in Origin tap ☰ and select **About**. Tap **Legal** and select **Solution Improvement Program**. Select or clear the **I would like to participate in the Solution Improvement**

Program check box.

We recognize that some customers might be uncomfortable allowing the information collected by the Spectra Geospatial Solution Improvement Program to be sent without having an opportunity to review it fully even though the information does not contain contact information and is governed by the privacy statement. If you are uncomfortable with sharing this information, please choose not to participate.

Signing in and signing out


The **Sign in**  icon in the title bar of the **Projects** screen or the **Jobs** screen is grayed out  if you are not signed in. Tap the  icon to sign in.

To sign in or to sign out, you must be connected to the internet.


You must sign in using your **Trimble ID** to:

- Download your Origin subscription license the first time you use your Origin subscription. Otherwise you are prompted to sign in only if you have previously signed out.
- Synchronize Origin data with the cloud using your Trimble Connect subscription.

NOTE - If you are using a controller with a perpetual license, then the controller must have a current Origin Software Maintenance Agreement and you must have a Trimble Connect Business subscription assigned to you.

TIP - To view the types of licenses assigned to you or to the controller, tap  and select **About**. For more information, see Installing Origin, page 13.

To sign in

1. To view the **Sign in using Trimble ID** screen, tap the gray **Sign in**  icon in the **Projects** or **Jobs** screen.

TIP - If the controller has only Origin subscription apps installed and no licenses, the **Sign in using Trimble ID** screen appears the first time you start the software, and does not reappear on software start up unless you have previously signed out.


2. If you are the only person who uses Origin on the controller and you regularly use cloud projects or jobs, select the **Remember me** check box so that you are already signed in when you start Origin.


TIP - If you are signing in to use your Origin subscription, the subscription is locked to the controller until you sign out. In that situation, the **Remember me** check box has no effect.

3. Tap **Sign in using Trimble ID**. The **Trimble Identity** page opens in your browser.

NOTE – If you do not have a Trimble ID, tap **Create an account** to create one. Alternatively, tap **Sign in with Google** to sign in with an existing Google account, or click **Sign in with Apple** to sign in with an existing Apple account.

To sign in with an existing Trimble ID:

- a. Enter your username.
Your username is the email address you used when you set up your Trimble ID.
 - b. Tap **Next**.
 - c. Enter your password.
To see the characters you are entering into the **Password** field, tap .
If you have forgotten your password, tap **Forgot password?**
 - d. If you have enabled **Multi-Factor Authentication** for your Trimble Identity account, you are prompted to enter the verification code that you have chosen to receive via SMS or via an authentication app such as Google Authenticator.
 - e. The authentication successful message appears in your browser. You can close the browser tab and return to the Origin software.
4. The Origin software shows you are signed in.

The software displays the **Projects** screen or the **Jobs** screen, if you signed in from there. The yellow **Sign in** icon  in the title bar indicates you are signed in.



If you are using Origin subscription apps and signed in at software startup, the software displays the **About** screen, showing the subscriptions you have on the controller. Tap **Accept** to continue to the **Projects** screen.

NOTE – To comply with Chinese data regulations concerning the upload of Chinese geospatial data to servers outside of China, Origin allows sign in with Trimble Identity for use of subscriptions, but prevents use of the Trimble Connect cloud platform if your IP address is determined to be in China.

To sign out or to release your subscription

By default, licenses for Origin subscriptions are locked to the controller **until you sign out**. To use these subscription licenses on a different controller, you must **sign out** to release the subscription on the current controller. To change this setting, see [Options for releasing your subscription, page 30](#) below.

To sign out, do one of the following:

- Tap the **Sign in** icon  in the title bar of the **Projects** screen and then tap **Sign out**.
- Tap  and select **About** and then tap **Sign out**.

TIP – If you are sharing controllers between different members of your team, then the previous user's subscription is automatically released when a different user signs in using their own Trimble ID. In that situation, sign out from the controller is not required to release your subscription.

Options for releasing your subscription

To change whether the Origin software releases your Origin subscription licenses when you sign out, tap  and select **About**. From the **When exiting the software** field, select one of the following options:

- Automatically release my subscriptions
- Prompt me to release my subscriptions
- Leave my subscriptions locked to this device

TIP – If you typically always use the same controller, select the **Leave my subscriptions locked to this device** option.

If you have exited the software **without** signing out and you need to release your subscriptions, you must restart the software and then:

- If **Remember me** was previously selected in the software, then from the **Projects** or **About** screen tap **Sign out**.
- If **Remember me** was not selected, first tap **Sign in** and then from the **Projects** or **About** screen tap **Sign out**.

To manually release your subscription licenses without exiting the software, tap **Sign out** from the **Projects** screen or the **About** screen.

TIP – If you are sharing controllers between different members of your team, then the previous user's subscription is automatically released when a different user signs in using their own Trimble ID. In that situation, sign out from the controller is not required to release your subscription.

If you cannot sign in to use your subscription

Occasionally you may not be able to sign in to use your Origin subscription. This can happen if your subscription has lapsed, or if your subscription is locked to another controller.

In this case, you can create a 48-hour license to use until you can renew your subscription or unlock your subscription from the other controller. To create a 48-hour license, see [Installing a temporary license, page 21](#).

NOTE – If you cannot sign in and cannot create a temporary license then the software shows the serial number of the controller that is using the subscription, and warns that the software will run in limited mode. Tap **Continue** to use the software in limited mode.

In limited mode you can use the software to upload/download data from the cloud, open jobs and review them, and export data. However, you cannot open Origin apps such as Roads or Pipelines, and you cannot connect the software to an instrument or to a GNSS receiver.

The Origin workspace

This topic provides some tips on finding your way around the Origin workspace and interacting with the software.

Working from the map

Once you have opened a project and job, the Origin workspace is centered around the map. To start work, select an item from the menu or tap and hold in the map and select the required action. The actions shown in the [map tap and hold menu](#) depend on the number and type of items already selected in the map.

Selecting a menu item or action opens a new screen that appears over the map, or a form that appears alongside the map.

Softkeys

Softkeys at the bottom of the screen show actions and items relevant to the open screen or form.

Occasionally in landscape mode, and more commonly in portrait mode, the > icon appears in the softkey row to indicate there are more softkeys available. To view more softkeys, tap > or swipe right to left (or left to right) along the row of softkeys.

Menu navigation

In most software screens you can tap ☰ to view the menu. From the menu, select:

- **Project** to view the **Projects** screen.
- **Job** to view the **Jobs** screen.
- **Favorites** to view shortcuts to your favorite screens. From this screen you can also return to screens that are already open in the software, shown in the **Return to** list. In landscape mode, the menu always opens with the **Favorites** item selected, and the **Favorites** list is shown alongside the menu. For more information, see [Favorite screens and functions, page 35](#).

The **Favorites** menu item is available only when a job is open.

- **Job data** to access the **Job data** menu and open the **Review job**, **Point manager** or other job data screens.

The **Job data** menu item is available only when a job is open.

- **General Survey** to switch to a different application if you have more than one Origin app installed.
When a job is open, the items that appear below the application name provide access to the menus within that app.
- **Instrument** to access the **Instrument** or **Receiver** menu.
- **Settings** to configure settings and survey styles.
- **Help** to view the installed help files.
- **About** to view licensing information for Origin apps installed on the controller, as well as related subscription licenses.
- **Exit** to exit the software.

TIP – Swipe up in the menu to view all items. To use the controller keypad to select a menu item, press the key corresponding to the first letter of the menu item, for example press **H** to open the help, or press **I** to view the **Instrument** menu. You can use the keypad to navigate any menu in this way.

Interacting with the software

The Origin UI operates in a similar way to the smartphone and tablet applications you already use. Use gestures to zoom and pan on the map. To scroll through a menu or list, simply swipe up. Where you might be viewing a large amount of data, for example in the **Review job** or **Point manager** screens, there software provides more traditional scroll bars which you can tap and drag to move up and down the screen.

The Ranger 7 includes a **Touch panel utility** for selecting **Finger**, **Glove**, or **Stylus** mode. You can use any mode, but if you are working in the rain, Spectra Geospatial recommends selecting **Finger** mode. For more information on the **Touch panel utility**, refer to the documentation for your controller.

NOTE – On the Ranger 7, the operating system is set to display at 125% by default, and so Origin is optimized to be viewed at 125% scale on these controllers.

Tap and hold options for copying and pasting text

When copying text from one field to another in Origin, you can cut, copy, or paste text using the **Text** tap and hold menu:

- To select text, tap and hold on the word to select, or tap and drag across the field to select more text. The **Text** menu appears.
- To select all of the text in the field, double-tap in the field, or tap and hold on a word and then tap **Select All** in the **Text** menu.
- To cut or copy the selected text, tap **Cut** or **Copy** in the **Text** menu.

- To paste text into an empty field, or to paste at the end of a field, tap and hold in the field and tap **Paste**.

To paste text within existing text in the field, tap the insertion point in the text and tap **Paste**.

On Windows controllers you can also use **Ctrl** key combination shortcuts to select all **Ctrl + A**, cut **Ctrl + X**, copy **Ctrl + C**, and paste **Ctrl + V** text.

Status bar shortcuts

Tap items on the status bar to quickly navigate to the **Instrument functions** or **Receiver functions** screen and change settings or enable/disable functions. For more information, see [Status bar, page 45](#).


 
 
Screen orientation

Landscape mode


The FOCUS always operates in **Landscape mode**.

If the controller is a **Windows device**, Origin is designed to be used in **Landscape mode** but will rotate to Portrait mode if the controller is rotated and does not have a keypad.

In landscape mode, when a form is open alongside the map:

- To view more of the form, tap  and swipe left. The form will resize to the closest preset position.
- To make any form full-screen, tap  and swipe across to the very left of the screen.
- To decrease the size of a form and view more of the map, tap  and swipe right.


 

To lock the device orientation, do one of the following:

- From the Windows desktop, swipe in from the right to access the **Action center**. Tap **Rotation lock** to enable it. The **Rotation lock** tile changes to blue.
- Press the Windows  + **O** keys on the controller keypad.

Portrait mode

On the MobileMapper 6 and MobileMapper 60 handheld, Origin is designed to be used in **Portrait mode** or in **Landscape mode**.

In portrait mode:

- When a form is open alongside the map, tap  and swipe down to view more of the form, or tap  and swipe up to view more of the map.
- To view more softkeys, tap  or swipe right to left (or left to right) along the row of softkeys.
- There is no **Esc** softkey when Origin is running in portrait mode. To exit a screen without saving any changes, press the Back key on the device.



To lock the device orientation, do one of the following:

- From the Android Home screen, swipe up from the bottom of the screen and tap **Settings**. Select **Display / Advanced / Device** rotation and then select **Stay in Portrait view**.
- Swipe down twice from the top of the screen to view the Android status bar and then tap the **Auto-rotate** icon.

Tips for Windows devices

Depending on the controller you are using, the Origin software always runs in full screen mode, that is without showing the Windows title bar or task bar.

If the controller has a physical keypad, or if you have connected an external keyboard, you can use the appropriate key-press combination to quickly access a different software program or to configure Windows system settings when you are in the Origin software:

- Press the **Windows** key  on the keypad to view the Windows **Start** menu and taskbar.
- Press the **Windows** key  + **D** keys on the keypad to view the Windows desktop.
- Press **Ctrl + Q** to exit Origin.

For other useful shortcuts, see [Keypad shortcuts, page 40](#).

When using Origin on a Spectra Geospatial controller running Windows:

- The controller can connect to all supported GNSS receivers and most conventional instruments using Bluetooth.
- The controller can connect to all supported Trimble conventional instruments using a cable.

Tips for Android devices


When using Origin on a Spectra Geospatial controller running Android:

- Spectra Geospatial Installation Manager for Android must remain installed on the controller for the Origin software to run.
- You can use a USB cable to transfer files between the controller and a Windows computer. See [Transferring files to and from the controller, page 117](#).
- The controller can connect to all supported GNSS receivers and most conventional instruments using Bluetooth.
- The Ranger 5 controller can connect to all supported Trimble conventional instruments using a cable.

 
NOTE – To perform a robotic survey when using Origin on the MobileMapper 6 or MobileMapper 60 handheld, you will need to connect the handheld to the SPDL Radio Bridge or SEDB10 Data Bridge.

Favorite screens and functions

Favorites and **Functions** enable you to create shortcuts to software screens, map controls, or to enable/disable an instrument or receiver function.

To view Favorites, tap . The **Favorites** list is shown next to the menu. Tap a **Favorite** in the **Favorites** list to go straight to that screen or to enable/disable that instrument/receiver function.

The **Return to** list next to the **Favorites** list shows previously viewed screens that are still open. Tap an item to return to that screen.

NOTE - To view Favorites when Origin is running in portrait mode, tap  and then select **Favorites**. The main menu changes to the **Favorites** menu, showing the **Favorites** list and the **Return to** list.


If the controller has a numeric keypad, you can use the keypad to enter the keypad character (**1-9, 0, -** or **.**) indicated on the first twelve tiles to enable/disable the **Favorite** function or open the appropriate screen.

You can add your own items to the **Favorites** list and/or you can assign them to a function key on the controller. For example, if you assign the DR function to the **F3** function key on the controller, during a conventional survey press **F3** to enable/disable DR mode when viewing any screen in the software.

NOTE - If you are using a tablet that has programmable buttons instead of dedicated function keys, such as the Spectra Geospatial ST10 tablet, then you must enable the **Use function keys** check box in the **Select language** screen. Use the Button Manager app installed on the tablet to set any of the three programmable buttons on the front of the tablet as function keys. For more information, refer to the user guide for your tablet. If you are using a third-party tablet, check your tablet documentation for information on supported function keys and whether they are programmable.

Grouping Favorites

You can create groups of favorites and functions and then use the group that matches your workflow. For example you might use one group when using a conventional instrument and another group when using a GNSS receiver. When using groups the function that is enabled when you press **F3** for example, depends on whether you are using the conventional instrument or GNSS group of functions.

Tap  next to the group name and select the required **Auto-switch** option to have the software automatically switch to that Favorites group when you start a conventional or GNSS survey. The **Auto-switch** function works best when you have set up a conventional group and a GNSS group of Favorites. The software will also auto-switch groups when the active instrument changes during an integrated survey.

To favorite the current software function

To add a shortcut to a screen you use often or an instrument function you frequently enable and disable, tap ☆ to quickly add it to the Favorites list or assign it to a function key on the controller.

1. To add a shortcut to a:
 - software screen, navigate to the screen you want to add.
 - instrument/receiver function, tap the instrument/receiver icon in the status bar to view the **Instrument functions** or **GNSS functions** screen.
2. Tap ☆ next to the screen name or the instrument function name and then select whether to add the item to:
 - the **Favorites** screen
 - a function key
 - both the **Favorites** screen and a function key
3. If you are assigning the item to a function key, tap the appropriate function key in the **Select key to assign function to** screen. Tap **OK**.

A yellow star next to the screen name or function name in the **Instrument functions** or **GNSS functions** screen indicates this item is a favorite.

A function key name (for example **F3**) next to the screen name or function name indicates the keypad shortcut for this item.

 
 
 
TIP – If you have set up groups of Favorites, shortcuts are always added to the currently selected group. To change the group, tap ☰ and select the group from the drop-down list at the top of the **Favorites** list. You can copy or move shortcuts between groups if required.

To manage your assigned function keys

 
 



To change the shortcuts that are assigned to the controller function keys, or to assign a function key to a software function for which there is no ☆ icon:

1. Tap ☰ and then tap ✎ next to **Favorites**. The **Edit** screen appears.
2. Select the **Function keys** option.
3. To assign a shortcut to a different function key, select an item and tap the left or right arrow to move the item.
4. To assign a function key to a software function for which there is no ☆ icon, tap + on the function key you want to use and select the function you want to assign. Tap **Accept**.
5. To remove a shortcut from a function key, select the item and tap **Delete**. Alternatively, tap **Delete All**.
6. Tap **OK**.

To create a Favorites group

1. Tap  and then tap  next to **Favorites**. The **Edit** screen appears.
2. With either the **Favorites** or the **Function keys** option selected, tap **New group**.
3. Enter the name for the group and tap **Enter**.
The new group appears in the **Edit** screen.
4. Add and manage items in the group. To copy items or move items from a different group to the new group, tap and hold an item in a different group and select **Copy to** or **Move to** and then select the group.
5. To set up function key shortcuts for the group, select the **Function keys** option at the top of the screen. To copy items or move items from a different group to the new group, tap and hold an item in a different group and select **Copy to** or **Move to** and then select the group.
6. Tap **Accept**.
The **Favorites** list shows items in the currently selected group. By default this is the group selected in the **Edit Favorites** screen when you tap **Accept**.
7. To use a different Favorites group, tap  and then select the group from the drop-down list at the top of the **Favorites** list.

To manage the items in your Favorites list

1. Tap  and then tap  next to **Favorites**. The **Edit** screen appears.
2. Make sure the **Favorites** option is selected.
3. Make your changes:
 - To rearrange items in the selected Favorites group, select an item and tap the left or right arrow to move the item.
 - To remove items in the selected Favorites group, select the item and tap **Delete**.
 - To have the software automatically switch to the Favorites group when you start a conventional or GNSS survey, tap  and select the required **Auto-switch** option.
 - To replace the current shortcuts with the favorite shortcuts that are provided by default with the software, tap  next to the Favorites group name and then select **Defaults**.
If the software warns all the current favorite shortcuts will be deleted and replaced with the default ones, tap **Yes**.
 - To delete a Favorites group, make sure the **Favorites** option is selected. Tap  and select **Delete group**. To delete all **Favorites** and groups, tap the **Delete All** softkey.
4. Tap **OK**.

 
To set the date and time

Origin uses the data and time setting on the controller for recording when changes are made to files.

To set the time and date on the controller:

1. Navigate to the operating system settings screen and search for **[Date & time]**.
2. Change the date and time as required.

 
To configure the GPS time display setting for the job:

1. Tap  and select **Job** to view the **Jobs** screen.
2. Select the job and tap **Properties**.
3. Tap **Units**.
4. In the **Time format** field, select the required time display format.

A time stamp is stored with every record in the job and output to the DC file every 30 minutes.

To change language or terminology

To change the language of the software

1. Use Spectra Geospatial Installation Manager to install the required language pack to the controller.
2. Tap  and select **Settings / Languages**.
3. Choose the required language from the list.

The list of available languages is determined by the language files you chose to install with the software.

4. Restart the software.

To change the terminology used in the software

Select the **Use railroad terminology** option to use the following railway-specific terms if you are surveying a railway:

- **Slew** for **Go** when measuring your position relative to a string or when staking a station on a string.
- **Lift** for **V.Distance**

Select the **Use chainage distance terminology** option to use the term **Chainage** instead of **Station** for the distance along the road.

To use function keys on a tablet that has programmable keys

Select the **Use function keys** check box to be able to assign Origin software functions to a function key on a tablet that does not have dedicated function keys, such as the Spectra Geospatial ST10 tablet.


Use the Button Manager app installed on the tablet to set any of the three programmable buttons on the front of the tablet as function keys. For more information, refer to the *Spectra Geospatial ST10 Tablet User Guide*. If you are using a third-party tablet, check your tablet documentation for information on supported function keys and whether they are programmable.

For more information, see [Favorite screens and functions](#).

To turn sounds on and off

Sound events are prerecorded messages that notify you of an event or action that has occurred. They correspond with status line messages, and common error and warning messages.

To turn all sound events on or off:

1. Tap  and select **Settings / Languages**.
2. Select the **Play sound events** check box to turn on sound events, or clear it to turn them off.
3. Select the **Vibrate** check box to enable vibration feedback whenever Origin auto stores a point or when a point is ready to be stored.

This check box is available only when the controller is a Ranger 7, MobileMapper 6 or MobileMapper 60.

Sound events are stored as .wav files. You can customize your own sound events by replacing or deleting the existing .wav files located in the **Sounds** folder on the controller. The location of the folder depends on the controller operating system:

- Windows: **C:\Program Files\Spectra Geospatial\General Survey\Languages\<language>\Sounds**
- Android: **<Device name>\Spectra Geospatial Data\Languages\<language>\Sounds**






Keypad shortcuts

You can assign your own **custom shortcuts** to function keys on the controller. See [Favorite screens and functions, page 35](#).

If your controller has an alphanumeric keypad, or if you have connected an external keyboard, you can access frequently used functions by pressing the appropriate key combination.

Keypad shortcuts for navigating the software

To...	Press...
Display the menu	Menu key (short press)
Display Favorites	The menu appears with the Favorites screen open. Use the right or down arrow keys to select a Favorite item. To close Favorites press the left arrow key and then use the up or down arrow keys to select a different menu item.
Display Return to	
Display Instrument functions or GNSS functions screen	<p>Menu key (long press)</p> <p>The Instrument functions screen appears if the software is connected to a conventional instrument.</p> <p>The GNSS functions screen appears if the software is connected to a GNSS receiver or is not connected to a receiver or instrument.</p>
Display the target/prism selection screen	Ctrl + P
Show or hide the GNSS eBubble	Ctrl + L when connected to a GNSS receiver that supports the eBubble.
Display the fullscreen map	Ctrl + M
Display the Review job screen	Ctrl + R
Display the Key in a note screen	<p>Ctrl + N</p> <p>To access the feature code library when keying in a note, press the Space key twice.</p>
Navigate between	Ctrl + Tab to move between open screens (excluding the map) in


To...	Press...
open screens in the software, or between tabs in a form.	<p>one direction, or Ctrl + Shift + Tab to move between open screens in reverse order.</p> <p>Open screens are listed in the Return to list in the Favorites screen.</p> <p>TIP - In a form that has tabs, press Ctrl + Tab to move through the tabs.</p>
Switch between plan and cross section view	<p>Tap  or , or press the Tab key.</p> <p>TIP - The plan and cross section views are available when staking an alignment or when surveying or reviewing a road using the Roads app.</p>
Display the Windows Start menu	Windows key 
Display the Windows desktop	Windows key  + D
Lock the device orientation	Windows key  + O

 
 
Keypad shortcuts for moving around a screen or selecting items


To...	Press...
Sort columns	Tap the column heading. Tap the column heading again to reverse the sort order.
Softkeys	<p>Ctrl + 1, 2, 3, or 4.</p> <p>Press the number that corresponds to the position of the softkey (1 through 4, left to right).</p>
Move between fields or items in a list	<p>Up arrow, down arrow, Tab, Back Tab</p> <p>TIP - In the Measure codes form or the Edit Measure codes screen, press Tab to move between the different controls in the form. When the focus is on the code buttons, use the arrow keys to move to the next code button.</p>

To...	Press...
Open a dropdown list	Right arrow
Select items in dropdown lists	Press the first character of the list item. If multiple items start with the same character, press the first character again to move through the list.
Select a check box or button	Space (short press)
Delete a job or project	Ctrl + Del
To select multiple items in the map or in Point manager	Press and hold Ctrl and then tap the items.
To select a range of items in Point manager	Press and hold Shift and then tap the items at the start and end of your selection.

Keypad shortcuts to perform functions

To...	Press
Enable/disable a Favorite function or open the appropriate screen	Press the configured function key on the controller when viewing any screen in the software. Alternatively, tap  and press the numeric key on the controller keypad corresponding to the button for the favorite (1-9, 0, - or .) to enable/disable the function or open the appropriate screen.
Select an item in the Instrument functions screen	Press the numeric key on the controller keypad corresponding to the button for the favorite (1-9, 0, - or .) to enable/disable the function or open the appropriate screen. If you have configured a function key on the controller as a shortcut to an instrument function, you can press the configured function key when viewing any screen in the software.

To...	Press
Select an item in the GNSS functions screen	<p>Press the numeric key on the controller keypad corresponding to the button for the favorite (1-9, 0, - or .) to enable/disable the function or open the appropriate screen.</p> <p>If you have configured a function key on the controller as a shortcut to a GNSS function, you can press the configured function key when viewing any screen in the software.</p>
Switch between a GNSS and a conventional survey	Tap in the status line area of the status bar.
Measure a check shot	Ctrl + K
Initiate a measurement from the Measure codes screen	<p>Press the numeric key on the controller keypad corresponding to the button for the code.</p> <p>When the buttons are set to a 3 x 3 layout, keys 7, 8, 9, activate the top row of buttons, keys 4, 5, 6 activate the middle row of buttons, keys 1, 2, 3 activate the bottom row of buttons.</p> <p>When the buttons are set to a 4 x 3 layout, keys 0, - and . activate the bottom row of buttons.</p> <p>NOTE - You cannot use alphanumeric key shortcuts if the Multi-code button  is enabled.</p>
Select a group of codes in the Measure codes screen	<p>Press A to Z to move to group pages 1 to 26. Key A opens group 1, Key B opens group 2... and key Z opens group 26.</p> <p>NOTE - You cannot use alphanumeric key shortcuts if the Multi-code button  is enabled.</p>
Compute a distance between two points	<p>Enter the point names in the distance field, separated by a hyphen. For example, to compute the distance between points 2 and 3, enter "2-3".</p> <p>NOTE - This method works with most alphanumeric point names, but it does not support point names that already contain a hyphen.</p>

To...	Press
Compute an azimuth from two points	<p>Enter the point names in the Azimuth field, separated by a hyphen. For example, to compute the azimuth from point 2 to point 3, enter "2-3".</p> <p>NOTE - This method works with most alphanumeric point names, but it does not support point names that already contain a hyphen.</p>
Edit a design elevation or reload an edited elevation during stakeout	Press the Space key.
Select all	Ctrl + A
Cut	Ctrl + X
Copy	Ctrl + C
Paste	Ctrl + V
Save a screen capture of the current screen	<p>Windows:</p> <ul style="list-style-type: none"> • Press Windows + Fn + 0 to save the image as a file in the Pictures\Screenshots folder. • Press Fn + 0 to save the image to the clipboard. <p>Android:</p> <ul style="list-style-type: none"> • Press Power + Volume Down to save the image as a file in the Pictures\Screenshots folder. <p>NOTE - Screen captures saved to the Pictures\Screenshots are not saved to the job. To create a screen capture of the current map view and save it to the job, tap .</p>
Close the software	Ctrl + Q
Simulate a controller	Ctrl + Shift + S

 
Status bar

The status bar appears at the top of the screen when a job is open. It provides information about the equipment that is connected to the controller and access to commonly used functions.

Conventional survey status bar






GNSS survey status bar



Common status bar items

Items that usually appear on the status bar are:

Item	Name	Description
	Menu button	Tap to view the menu.
	Application icon	<p>Shows the current Origin app.</p> <p>If you have only one app installed, the status bar always shows the General Survey icon.</p> <p>If you have the Origin Roads app installed, then to swap between apps, tap the icon and then select the app to switch to.</p> <div style="background-color: #e8f5e9; padding: 5px; border: 1px solid #c8e6c9;"> <p>TIP - In portrait mode, the app icon does not appear on the status bar. To change to a different tap, tap  and select the name of the current app (for example, General Survey) and then in the Choose application screen, tap the name of the app to switch to.</p> </div>
	Date and time	Shows the current date and time.
	Status line	The status line displays a message when an event or action occurs. Tap the status line to switch from one instrument to another during an <u>integrated survey</u> .

Item	Name	Description
		The status line appears at the far right of the status bar. In portrait mode it appears below the status bar.

Battery status

The **Battery status** area on the status bar shows the status of the battery in the controller and devices connected to the controller. If the controller has more than one battery, the power level of each battery is shown.

To view the **Battery status** screen, tap the battery status area of the status bar.

Conventional survey status





During a conventional survey, values for the current horizontal angle or vertical angle and distance are shown in the status line.




 





Instrument status

To view the:

- [Instrument functions, page 324](#) screen, **tap** the Instrument icon in the status bar.
- [Instrument settings, page 335](#) screen, **tap and hold** the Instrument icon in the status bar.





The Instrument icon indicates the type of connected instrument. Symbols are added to the Instrument icon to indicate status.

Icon	Indicates
	The software is connected to a Spectra Geospatial FOCUS 50 total station.
	The software is connected to a Spectra Geospatial FOCUS 30 or 35 total station.
	The instrument is locked onto the target (prism).
	The instrument is locked and measuring to the target (prism).

Icon	Indicates
	F The instrument is in Fast Standard (FSTD) mode. It averages the angles while a fast standard measurement is taken.
	S The instrument is in Standard (STD) mode. It averages the angles while a standard distance measurement is taken.
	*T The instrument is in Tracking (TRK) mode. It constantly measures distances and updates in the status line.
	*T The instrument is locked to the target (prism) and receiving an EDM signal back from the prism.
	The laser pointer is on (DR mode only).
	The high power laser pointer is on.
	Radio signals from the robotic instrument are no longer being received.
	The compensator is disabled.
	Auto-connect is disabled. Tap the icon once to restart auto-connect. Tap the icon again to configure Auto-connect settings, page 485 .

Target status



To change the target or target settings, tap the Target status icon in the status bar. See [Target height, page 315](#).

Icon		Indicates
	+0 1.500	The prism is locked. "1" indicates that target 1 is in use. The prism constant (in millimeters) and target height are shown to the right of the icon. When measuring a point with a dual-prism offset, two prism constants are shown.
	+0 0.000	The instrument is in Direct Reflex mode.
	+0 0.000	The rotating target icon with a pulsing red halo indicates that the instrument has Autolock enabled but is not currently locked onto a target.
		GPS Search is enabled.

GNSS survey status

During a GNSS survey, precision information for the current position is shown in the status line.

Satellites

The number below the satellite icon  indicates the number of satellites in the solution if you have started a survey, or the number of satellites being tracked if you have not yet started a survey. To view the **Satellites** screen, tap .










TIP – If **[A]** or **[B]** appears next to the number of satellites in an RTK survey, then an independent subset of satellites is being used. See [To use independent subsets of satellites tracked in RTK surveys, page 429](#).

GNSS receiver

To view the:



- [GNSS functions, page 424](#) screen, **tap** the GNSS receiver icon in the status bar.
- [Receiver settings, page 433](#) screen, **tap and hold** the GNSS receiver icon in the status bar.









 



The GNSS receiver icon indicates the type of connected GNSS receiver:


Icon	Indicates
	Spectra Geospatial SP100 receiver, where IMU tilt compensation is enabled and the IMU is aligned. Measurements are corrected for receiver tilt. Precision values for the current pole tip position are displayed.
	Spectra Geospatial SP100 receiver, where IMU tilt compensation is enabled but the IMU is not aligned. Measurements are not corrected for receiver tilt. No precision values are displayed.
	Spectra Geospatial SP100 receiver, where IMU tilt compensation is not enabled. The receiver is operating in GNSS-only mode. Precision values for the APC are displayed.
	Spectra Geospatial SP90m receiver
	Spectra Geospatial SP85 receiver
	Spectra Geospatial SP80 receiver
	Spectra Geospatial SP60 receiver
	Spectra Geospatial SP30 handheld GNSS receiver
	Auto-connect is disabled. Tap the icon once to restart auto-connect. Tap the icon again to configure Auto-connect settings, page 485 .

Real-time correction information

To view more detailed status information, tap the real-time correction information area of the status bar.

Icon	What it shows
	Radio signals are being received.
	Radio signals are no longer being received.

Icon	What it shows
	Cellular modem signals are being received.
	Cellular modem has hung up, or has stopped receiving corrections.
	SBAS signals are being received.
	RTX satellite signals are being received and an RTX position is being generated.
	Data is being received from the RTX satellite but an RTX position cannot be generated yet.
	An RTX survey is running but data is not being received from the RTX satellite.
	A point is being measured.
	Continuous points are being measured.
	A GNSS RTK survey is running and base data from a GNSS internet source is being streamed to the rover.
	A GNSS RTK survey is running and base data streaming from a GNSS internet source is paused. Base data streaming automatically restarts when required.
	A GNSS RTK survey is running and base data from a GNSS internet source is being received but the solution from the receiver is not yet using that base data.
	A GNSS RTK survey is running and base data streaming from a GNSS internet source is stopped. The base station connection to the GNSS internet source is maintained, but the real-time base data will not be streamed to the rover.

Icon	What it shows
	A GNSS RTK survey is running but base data from a GNSS internet source cannot be received.

Antenna details


The current antenna height is shown below the antenna icon. If the antenna icon is the same as the receiver icon then the internal antenna is being used.


To change the current antenna settings, tap the antenna icon in the status bar.

Battery status

To view the **Battery status** screen, tap the battery status area in the status bar.

The **Battery status** screen shows the status of the battery in the controller and devices connected to the controller. If the controller has more than one battery, the power level of each battery is shown.

If the battery icon is , then the battery level is close to 0%. If you have inserted a battery that has a higher level of charge then the battery may be in an unusual state and the power level cannot be determined. Remove the battery and reinsert it. If the issue is not resolved, recharge the battery and try again. If there are still issues, contact your Spectra Geospatial distributor.

If external power is being used, for example when the controller is connected to an external power source, the battery icon shows .

To configure power save settings for the controller, tap the power level indicator for the controller battery.

To view instrument or receiver settings, tap the power level indicator for the instrument or receiver battery.

Projects & jobs

A **project** is a folder for grouping Origin jobs and the files used by those jobs, including control points, road or alignment RXL files, background images or surfaces, and reference files for the project such as site or health and safety information.

A **job** contains the raw survey data from one or more surveys, and the configuration settings for the job including coordinate system, calibration, and measurement unit settings. Images captured during the survey are stored in separate files and linked to the job. A job may also contain control points if you have imported them into the job instead of using a linked file from the project folder.

To start a survey you must have at least one project and one job.

Projects and jobs can be local to the controller or they can reside on the Trimble Connect cloud collaboration platform, from which they can be downloaded to the controller. On the controller, jobs are stored in the appropriate project folder in the **Spectra Geospatial Data** folder. For more information on how files and folders are organized on the controller, see [Data folders and files, page 119](#).

When creating a job, you can save the settings as a template and then create subsequent jobs using the template. Jobs in the same project usually have the same settings but this is not essential.

Project and job creation

Who creates the project and jobs and how they do this depends on your organization. The options are:

- **Projects and jobs** are created **in the office** using Sync Manager and sent to the cloud, from which they are downloaded to the controller. Project and job data on the controller can be uploaded to the cloud at any time.

If required, new jobs can be created locally on the controller and then uploaded to the cloud.

- **Projects** are created **in the office** using Sync Manager and sent to the cloud, from which they are downloaded to the controller. **Jobs** are created **locally** on the controller and uploaded to the cloud. Project and job data on the controller can be uploaded to the cloud at any time.
- **Projects and jobs** are created **locally** on the controller.
Local projects and jobs can be uploaded to the cloud later, as required.

Working with cloud projects and jobs

Creating projects and jobs in the office

Create cloud projects and jobs using Sync Manager and Survey Office

Use the **Send to Sync** tool in to Survey Office to create projects and jobs using data from your Survey Office project. You can send data as well as project settings straight to Sync Manager from your project in the Survey Office software. Use the Sync Manager desktop application to create the job with fully configured job properties inherited from the Survey Office project. For more information, see [Sync Manager Help](#) .

Create cloud projects and jobs using Sync Manager

If you use other survey and civil engineering software such as Autodesk Civil 3D, 12d Model, or Bentley civil software, you can download the Sync Manager desktop application from the [Sync Manager Installation webpage](#). Use your usual surveying and civil engineering software to export the data for the field and then use Sync Manager to organize the data into projects and jobs. All job properties can be configured in Sync Manager and, if required, saved as a template to speed up the creation of subsequent jobs. For more information, see [Sync Manager Help](#) .

Create cloud projects in Trimble Connect

To easily retain the same file and folder structure you use in your organization's network, you can upload files and folders to your Trimble Connect project directly, for example using the Trimble Connect Sync desktop app. In Origin you can browse the files and folders published to the Trimble Connect project and select them for download. For more information, refer to the [Trimble Connect Sync User Guide](#).

Jobs can be created in Origin. Job files synchronized to the cloud are shown in Sync Manager as usual. For more information, see [Sync Manager Help](#) .

NOTE - Only .job files created in Origin or in Sync Manager can be downloaded to the controller. Any .job files uploaded to the Trimble Connect project directly (for example using the Trimble Connect Sync desktop app) cannot be downloaded to the controller.

Working on cloud projects and jobs on the controller


 

To synchronize Origin field data with the cloud, the signed in user must have a Trimble Connect license. If you are using a controller with a perpetual license, then the controller must have a current Origin Software Maintenance Agreement.

To synchronize data, Trimble recommends that all users have a **Trimble Connect Business subscription** because it allows users to create more projects and synchronize data with more projects than a **Trimble Connect Personal subscription**. Origin users can obtain a Trimble Connect Business subscription at no cost in the following ways:

- Trimble Connect Business subscriptions are automatically included with Origin subscriptions. For those users no further action is needed.
- For Origin perpetual license users, a Trimble Connect Business subscription is available with each current Software Maintenance Agreement. However, your organization's License Administrator must assign the Trimble Connect Business subscription to the specific user using the [License Manager](#) web app. Until the Trimble Connect Business subscription is assigned to the user, then that user will have a Trimble Connect Personal subscription and can create or synchronize data only to a limited number of projects.

To assign Trimble Connect Business subscription licenses to users in your organization, sign in to the [License Manager](#) web app as a License Administrator. For more information, see the [License Manager Help](#).

For more information about the different types of Trimble Connect licenses, see [Understanding Connect Licensing](#) in the Trimble Connect Knowledge Center.

To see projects and jobs from the cloud, the controller must be connected to the internet and you must be [signed in using your Trimble ID](#). The **Sign in** icon  in the title bar is grayed out  if you are not signed in. Tap the **Sign in**  icon to sign in.

When you are signed in, projects and jobs that reside in the Trimble Connect cloud collaboration platform and assigned to you are shown in the **Projects** and **Jobs** screens of the Origin software. You are also notified by email when a job is assigned to you from Trimble Connect.

The cloud icons next to the project or job name indicate if there are changes to be uploaded or downloaded. For more information, see [Synchronizing data with the cloud, page 64](#).

Working with local projects and jobs

Creating local projects


You can create local projects on the controller, as required. See [Creating a project, page 58](#).

You will need to manually transfer data files that you want to use to the project folder on the controller. See [Transferring files to and from the controller, page 117](#) and [Data folders and files, page 119](#).

You can upload a project you have created on the controller to the cloud later, if required. See [Uploading a local project to the cloud, page 59](#).

Creating local jobs

You can create local jobs on the controller as required.


TIP – The process for creating a local job is the same, whether the job is part of a local project or a project that resides in the cloud. As long as a local job is in a cloud project you can upload the local job to the cloud at any time after you have created it. To do this, tap  in the details panel and select **Upload**.

You can create local jobs from:

- the last used job in the current project
- a template, including templates you have created from previous jobs
- a JobXML or DC file in one of these formats:
 - JobXML
 - SDR33 DC
 - Trimble DC v10.7
 - SC Exchange

NOTE – Importing from a JobXML file to a Origin job file is mainly used to transfer the coordinate system definition and design information. A JobXML file generated from a Origin job contains all the raw data in the FieldBook section, and "the best" coordinate for each point from the job in the Reductions section. Only the data from the Reductions section is read into the new Origin job file, raw observations are not imported.

Managing projects

The **Projects** screen appears each time you start the Origin software. To view the **Projects** screen at any time, tap  and select **Project**.

The **Projects** screen lists the projects in the **Projects** folder on the controller.

Tap a project to select it. The project details panel shows the names of jobs in the project, including jobs in any folders in the project.




TIP – To view the project details in portrait mode, select the project and then tap **Details**.

To create a project

To create a new local project, tap **New**. See [Creating a project, page 58](#).

To download a project

If you are signed in using your Trimble ID, projects that are shared with you but are not yet downloaded from Trimble Connect are shown in gray text.

NOTE – To download projects that reside in the Trimble Connect cloud collaboration platform or to upload changes to jobs in those projects, you must be signed in using your Trimble ID. The **Sign in**  icon in the title bar is grayed out  if you are not signed in. Tap the **Sign in**  icon to sign in.

To download a project from the cloud:

1. Select the project.

If the project contains jobs, the jobs are listed in the project details pane.

2. Tap **Download**.



The **Project settings** screen appears. The **Connect Files** tab shows the name, type, and size of each design file in the project.

3. In the **Connect Files** tab, select the files and folders in the Trimble Connect project folder to use in Origin. Tap **Accept**.

4. Tap **Download** to download the data to the controller.

Once the project has downloaded, the software returns to the **Projects** screen.

NOTE - In the **Connect Files** tab:


- In the **Connect Files** tab, the Sync Manager icon  appears next to files uploaded to Trimble Connect using Sync Manager. These files are already selected and cannot be deselected.
- For Origin Pipelines projects, the **Tally** folder and files are not shown in the **Connect Files** tab.
- System files are automatically saved to the **System files** folder on download to the controller.
- If you do not download all of the files you can download them later if needed. Select the project in the **Projects** screen and then tap  and select **Connect Files**.

TIP - If a cloud project is mysteriously duplicated on the controller (where the new project has a number appended to the project name), then the original project on the controller may have lost the ProjectInformation.xml file which creates the connection between the field and cloud projects. If this occurs we recommend you shut down Origin, use File Explorer to rename the two projects on the controller, and then start Origin and download the cloud project again. Use File Explorer again to copy any files from the renamed projects into the project just downloaded.

To open a project

Tap a project to select it and tap **Open**.

When you open a project, the **Jobs** screen appears. See [Managing jobs, page 68](#).

NOTE - If a downloaded project shows a locked icon , it indicates you do not have access to the project. For more information, see [Project and job sync status, page 64](#) in [Synchronizing data with the cloud, page 64](#).

To upload a local project to the cloud

To upload a local project to the cloud, see [Uploading a local project to the cloud, page 59](#).


To upload data to the cloud

Changes to projects are automatically uploaded to the cloud:


- If you have enabled automatic synchronization settings in the **Cloud settings** screen. For more information, see [Cloud settings for data sync, page 60](#).
- When you change the status of a job that resides in the cloud to **In progress** or **Fieldwork complete**. For more information, see [Managing jobs, page 68](#).

To upload changes to **any** cloud jobs for a specific **project**, for example at the end of each day, tap  next to the project name.

To manage the upload of individual files or to deal with file conflicts, see [Synchronizing data with the cloud, page 64](#).

TIP – To include project files linked to jobs when uploading data, tap  at the top of the **Projects** screen to open the **Cloud settings** screen and select the **Upload linked files** check box. To upload only field data and data exported from jobs, clear the **Upload linked files** check box. For more information, see [Cloud settings for data sync, page 60](#).


To manage project team members


To manage who is assigned to a cloud project, select the project in the **Projects** screen and then tap  and select the **Team** tab. For more information, see [Managing team members, page 67](#).


To find a project in the list

To search for part of the project name, enter the text to search for in the **Filter project** field. Project names that contain the entered letters are listed.

To show only projects on the controller, tap  and select **Controller**.

To show only projects in the cloud, tap  and select **Cloud**.

To refresh the list of projects, tap .

TIP – The projects screen checks for changes when you first open it but it does not refresh automatically. Tap  to see new projects, for example projects recently shared with you in Trimble Connect or if you have used File Explorer to create a new folder in the **Projects** folder.

To edit a project

To edit the project properties, tap **Properties**. Make your changes and tap **Accept**.

To delete or leave a project

You can delete local projects at any time. If a project resides in the cloud, you can choose to leave the project or delete it.

 

1. To delete a project, or to leave a cloud project, select the project in the list and then tap **Delete**.
2. In the confirmation message that appears, select:
 - **Delete from controller** to remove the project from the controller but stay assigned to the project.
The project remains in the projects list and is grayed out until you choose to download it again.
 - **Delete from controller and leave cloud project** to leave the project in the cloud and delete the project from the controller.
To be able to download the project again you would need to be reassigned to it.
 - **Delete from controller and the cloud** to remove the project from the controller and the cloud.
This option is only available if you are the only administrator for the project.

If the project resides in the cloud and you are not an administrator, you are not prompted to select an option. The message confirms that you will leave the project.
3. Tap **OK**.
4. When the software asks you to confirm you are sure you want to delete the project, tap **Yes**.


TIP – You can leave a cloud project that you have not yet downloaded to the controller. You cannot delete projects that you have not yet downloaded because there is no data on the controller to delete.

Creating a project

You can create a project in Origin that is local (stored only on the controller) or you can add it to the cloud so that it can be easily shared with other team members or managed from the office.

1. Tap  and select **Project**. The **Projects** screen is shown.
2. Tap **New**.
3. Enter the **Name** of the project.
4. If required, enter **Description**, **Reference**, and **Location** details.
This information will appear with the project name in the **Projects** screen.
5. If required, select an image for the project. The selected image will appear next to the project name in the **Projects** screen.
 - To select a file on the controller or your organization's file network, tap .

If you have configured an internet connection to your organization's computer network and signed in to the network then you can view files and folders on the network. Tap **This controller** and then select an available network drive.

- To capture an image using the controller camera, tap .

6. Tap **Next**.

7. To add the project to the cloud, select the **Create cloud project** check box.

TIP – If you are not ready to upload the project to the cloud, you can skip this step and upload the local project to the cloud later. See Uploading a local project to the cloud, page 59.

8. Tap **Create**.

If you selected the **Create cloud project** check box, the **Create cloud project** dialog appears.


- Select the location of the Trimble Connect file server where the project will reside.

Choosing the file server for the region closest to your location gives better performance when downloading or uploading data.

- Tap **Yes**.

The project is added to the cloud.

The project folder is created on the controller and the **New job** screen appears.

 
TIP – To update project settings at any time, select the project in the **Projects** screen and then tap  in the project details pane. If the project is a cloud project, you can:


- Select the **Team members** tab to share the project with other people in your team and assign roles to the project. See Managing team members, page 67.
- Select the **IBSS** tab to set up an Internet Base Station Service (IBSS) for GNSS RTK corrections your project. See Internet Base Station Service (IBSS), page 371.

Uploading a local project to the cloud

If you did not upload your project to the cloud when you created it in Origin, you can upload the project to the cloud at any time.

Projects and jobs that reside in the cloud can be easily shared with other team members or managed from the office using Sync Manager.

NOTE – To be able to upload a project to the cloud, you must be signed in using your Trimble ID. If you are using Origin with a perpetual license, the controller must have a current Origin software maintenance agreement, and you must have a Trimble Connect subscription. To view the types of licenses assigned to you or to the controller, tap  and select **About**. For more information, see Installing Origin, page 13.

1. Select the project in the **Projects** screen and then tap  to open the project settings screen.

 
2. Tap **Upload**.

The **Create cloud project** dialog appears.


3. Select the location of the Trimble Connect file server where the project will reside. Choosing the file server for the region closest to your location gives better performance when downloading or uploading data.


4. Tap **Yes**.

The **Upload project** screen shows the progress of the upload. Any project files that are uploaded are listed.

NOTE - If you are unable to upload the project but have previously been able to upload a project, tap  and select **About** to check your subscription type. If you have a Trimble Connect Personal subscription you may have exceeded the number of projects you can create. Ask your organization's License Administrator to assign a Trimble Connect Business subscription to you using the [License Manager](#) web app.


5. Tap **Accept**.

In the **Projects** screen, the cloud icon next to the project shows , which indicates the project in the cloud is the same as the project on the controller.

6. To upload any jobs in the project to the cloud, select the job in the **Jobs** screen and then tap  and select **Upload**.

Once the job is uploaded, it can be viewed and managed in Sync Manager.

NOTE - If jobs in the local project use a feature code library file, and you want other controllers that use this project to have access to the feature code library, then the feature code library file must be added to the project as a reference file in Sync Manager. For more information, see [To add reference files in the Sync Manager Help](#).


TIP - To update project settings at any time, select the project in the **Projects** screen and then tap  in the project details pane. Now that the project is a cloud project, you can:

- Select the **Team members** tab to share the project with other people in your team and assign roles to the project. See [Managing team members, page 67](#).
- Select the **IBSS** tab to set up an Internet Base Station Service (IBSS) for GNSS RTK corrections your project. See [Internet Base Station Service \(IBSS\), page 371](#).

Cloud settings for data sync

Use the **Cloud settings** screen to automate synchronization to the cloud for all cloud projects on the controller.

Any changes you make in the **Cloud settings** screen are saved to the controller and are active for the current cloud project. For example, if you have three projects and you set the **Sync scheduler** to upload data to the cloud every hour, then only the current project will upload data to the cloud every hour. If you open a different project, then data in that project is now uploaded to the cloud every hour.

To open the **Cloud settings** screen, tap  in the **Projects** screen.

File upload settings

Upload linked files

To include files linked to jobs when uploading data, select the **Upload linked files** check box.

To upload only field data and data exported from the jobs, clear the **Upload linked files** check box.

Linked files uploaded to the cloud from Origin are not set to be automatically downloaded with the job when another user is downloading the job to their controller. However, the files will be available in the cloud and can be downloaded to other controllers using the **Add** button in the **Layer manager**.

Automatically upload the current project

Enable **Automatically upload the current project** to upload changes to the cloud at regular intervals or when you complete specific actions.

To enable automatic upload of data, set the **Automatically upload the current project** switch to **Yes** and then select how often the data should be uploaded.

You can select as many options as required:

- Select **Periodically** to upload data to the cloud regularly.


Enter the time interval in hours and minutes in the **Time interval** field.

TIP – Data added or modified remains on the controller but is not automatically uploaded to the cloud until the specified time interval is reached. When you select the **Periodically** option, Trimble recommends you also select the **When closing a job** or **When ending a survey** option to make sure any data not yet uploaded since the last time interval is automatically uploaded when you close the job or end the survey.

- Select **When closing a job** to upload data whenever a job is closed.
This includes when you close the software or when you open another job.
- Select **When signing in** to upload data to the cloud when you sign in to the software.
Selecting this option ensures that if more than one user is using a controller then any data modified by the previous user is uploaded to the cloud when you switch users.
- Select **When ending a survey** to upload data whenever you end a survey.

NOTE – If the current project is a local project and does not yet reside in the cloud, then when you set the **Automatically upload the current project** switch to **Yes** the software shows a message asking if you want to upload the project now. In the message box:

- Select the **Connect server** to use and tap **Yes** to upload the current project to the cloud. The configured **File upload settings** will apply to the project.
- Tap **No** if you do not want to upload the current project to the cloud. The configured **File upload settings** will not apply to the current project unless it resides in the cloud. To upload the project to the cloud later, see [Uploading a local project to the cloud, page 59](#).

Regardless of the upload settings, you can manually upload data to the cloud at any time by changing the status of a job to **Fieldwork complete** or by selecting the job in the jobs list, tapping  and selecting **Upload**.

- If the **Automatically upload the current project** switch is set to **Yes**, all updated jobs in the project are uploaded to the cloud.
- If the **Automatically upload the current project** switch is set to **No**, only the selected job is uploaded.

If there is an issue with the internet connection on the controller and data cannot be automatically synchronized at the selected time, the software prompts you to check the internet connection on the controller. Tap **Yes** to check or configure the internet connection. Tap **Ignore** in the message prompt to allow the software to continue attempting to upload data in the background without showing further warnings. Data remains on the controller until the software can connect to the internet and successfully upload the data to the cloud.

TIP – To deal with file conflicts, see [Synchronizing data with the cloud, page 64](#).

File download settings

Download as TrimBIM

The TrimBIM (.trb) format is a Trimble format traditionally used to represent BIM or 3D models like IFC. It can also be used to represent other BIM models, including Navisworks Drawing (NWD), AutoCAD Drawing (DWG) and SketchUp (SKP) files, that have been uploaded to Trimble Connect.

To download these files to the controller as TrimBIM files, select the **Download as TrimBIM** check box. TrimBIM files are smaller, faster to download to the controller, and faster to load the first time you use them in Origin.

Alternatively, to download IFC, DWG and NWD files in their original format, **clear** the **Download as TrimBIM** check box.

NOTE –

- You must select the **Download as TrimBIM** check box to use DWG or NWD files when using Origin on a controller running Android. DWG and NWD files are not supported when stored directly to an Android device.
- Conversion of NWD files to TrimBIM format using Trimble Connect is in BETA. It is only supported when you upload NWD files to Trimble Connect using Trimble Connect for Windows, not Trimble Connect Web.

For more information on assimilating BIM models as TrimBIM files in Trimble Connect, refer to the Trimble Connect documentation.

Automatically download updates

Enable **Automatically download updates** to automatically receive design file updates from Trimble Connect. This ensures that you are always working on the latest version of any project file, eliminating the need for manual file transfers and reducing the risk of making decisions based on outdated information.

When the **Automatically download updates** switch is enabled, Origin shows a notification when a new version of a file you are using is available. If files are removed from the cloud, the software shows a notification and prompts you to delete the file from the controller. Alternatively you have the option to convert the file to a local-only file, which is no longer connected to the cloud.

When the **Automatically download updates** switch is enabled, Origin checks for changes:

- when you sign in
- when you open a job
- when you select a file to link to the job using **Layer manager**
- every 15 minutes

Network settings

Use the **Network settings** group box to set which networks can be used for data transfer.

Allow auto sync to use mobile data



Select the **Allow auto sync to use mobile data** check box to allow data to be uploaded using the mobile data network, if it is available. Depending on your network and your data plan, this may incur charges.

Clear the **Allow auto sync to use mobile data** check box to allow data to be uploaded using Wi-Fi only.

Restrict auto sync upload to specific networks

Set this switch to **No** to allow data upload using any network that the controller is connected to.

Set this switch to **Yes** to restrict auto sync upload to allowed networks, for example your office or home Wi-Fi. To select allowed networks:

- Select a network in the **Available networks** list and then tap  to move it to the **Saved networks** list.
- To remove an allowed network, select it in the **Saved networks** list and then tap  to move it to the **Available networks** list.
- Alternatively, double-tap a network name in either list to move it to the other list.

TIP – Saved networks are saved to the controller and are shown to any Origin user who uses that controller.

Synchronizing data with the cloud

This topic provides information on:



- Icons that appear next to projects or jobs to indicate there are changes to files on the controller to be uploaded or changes to files in the cloud to be downloaded.
- Icons that appear next to file names to indicate the files on the controller are not the same as the files in the cloud.
- How to download or upload only some files in a job.
- How to manage file conflicts between the controller and the cloud.



TIP – Make sure you are familiar with related information that is not covered in this topic:

- For the steps to download a project from the cloud for the first time, see [To download a project, page 55](#).
- To upload a local project to the cloud, see [Uploading a local project to the cloud, page 59](#).
- To automate synchronization to the cloud for cloud projects, see [Cloud settings for data sync, page 60](#).



Project and job sync status


The cloud buttons next to the project or job name indicate if there are changes to files on the controller to be uploaded or changes to files in the cloud to be downloaded.

 indicates there are changes in the project or job in the cloud to be downloaded to the controller. Tap  to download all modified files in the project or job.

 indicates there are changes in the project or job on the controller to be uploaded to the cloud. Tap  to upload all modified files in the project or job.

 indicates the project or job in the cloud is exactly the same as the project or job on the controller.


 indicates there are changes in the cloud project or job that conflict with the local project or job and action is needed. Tap  and select **Upload** or **Download**. See [Managing file conflicts, page 66](#).

 indicates you do not have access to the project or to the job. This could be because:

- you are not assigned to the project or to the job.
- you were assigned to the project or job but were then unassigned.
- you are one of several users who have access to the same controller and the project or job is assigned to one of the other users.
- you are assigned to the project but you cannot open it because you have not been assigned a Connect Business for Origin subscription. Users without a Connect Business for Origin subscription are able to work with only one project. To request a subscription, contact your project administrator.

TIP – When you change the status of a job that resides in the cloud to **In progress** or **Fieldwork complete**, changes to the job are automatically uploaded to the cloud. Job files synchronized to the cloud are shown in Sync Manager.

File sync status

To manage the upload or download of individual files or to deal with file conflicts, select the project or job and then tap  and select **Download** or **Upload**.

The cloud icons next to the file names in the **Download** or **Upload** screen indicate the sync status of each file. If you do not want to automatically sync all files, or if there are file conflicts to resolve, tap the name of the file and then select the most appropriate action.



indicates the file is ready to be downloaded to the controller.



indicates you have selected to skip this file and it will not be downloaded to the controller.



indicates the file is ready to be uploaded to the cloud.



indicates you have selected to skip this file and it will not be uploaded to the cloud.



indicates the file is being synchronized with the cloud.



indicates the file on the controller is exactly the same as the file in the cloud.



indicates there are changes to the file in the cloud that conflict with the local file and action is needed. See [Managing file conflicts, page 66](#).



indicates the file conflict has been resolved (because you have chosen to overwrite the file or keep the local file). See [Managing file conflicts, page 66](#).





Choosing to sync only some files


If required, you can choose to skip downloading or uploading individual files. This is especially useful when you have large files that you do not want to transfer from the field.

To select which files are synchronized to the cloud:



1. In the **Jobs** screen, select the job and then tap  and select **Download** or **Upload**.


The **Download** or **Upload** screen appears, showing the name, type, and size of each file in the job that will be synchronized.

2. To skip downloading or uploading a file, tap the name of the file and select **Skip this file**. The icon next to the file changes from  or  to  or , to indicate that the file will be skipped. You can download or upload the file later when you have returned to the office.
3. To synchronize the files you have selected, tap **Download** or **Upload**.



Files you have selected to skip have a  icon next to them and will not be synchronized until you choose to do so. See [Managing file conflicts, page 66](#) below.

Managing file conflicts

If  appears next to the project or job it indicates there are changes in the cloud project or job that conflict with the local project or job and action is needed. Tap  and select **Upload** or **Download**.

In the **Upload** or **Download** screen, the  icon indicates the file that is in conflict. Tap the file and then select one of the following:



 
- **Overwrite local file:** Changes made to the local file will be lost.
- **Keep local file:** Cloud file contents will be overwritten on the next upload.

 
Once you have selected the action, the icon next to the file changes to , indicating that the file conflict has been resolved. Once the file syncing action is complete, the icon will change to .

Occasionally when downloading a project the software will not present the **Overwrite local file** or **Keep local file** options and instead shows a message warning that the file contains content from another project and the local file must be removed or renamed before the file can be downloaded. Tap **Esc** to return to the **Projects** list and then open File Explorer and navigate to the **C:\ProgramData\Spectra Geospatial Data** folder and remove or rename the appropriate file.

If you are unable to sync data

If you are unable to sync data with **any** projects:

- Make sure you are signed in.
If the **Sign in**  icon in the title bar of the **Projects** screen or the **Jobs** screen is gray, you are signed out. Tap the  icon to sign in.
- Check that you have an internet connection by opening your web browser and visiting a site that is frequently updated, for example a news site.
To set up an internet connection, see [Internet connection setup, page 487](#).
- If you are using a Origin subscription, make sure the subscription has not expired.
To check the subscription expiry, tap  and select **About**.
- If you are using Origin with a perpetual license, make sure the controller has a current Software Maintenance Agreement.


To check the current Software Maintenance Agreement status, tap  and select **About**. The expiry date of the Software Maintenance Agreement is shown in the **Software maintenance expiry** field.

If you are unable to sync data with **some** projects but not others:


- If you cannot view jobs that you are expecting to see or if you cannot sync data to some jobs, you may not be assigned to the job.

Contact the project administrator to make sure you are assigned to the job.

- Make sure you are using a Trimble Connect Business subscription, rather than a Trimble Connect Personal subscription.

A Trimble Connect Business subscription allows you to create more projects and synchronize data with more projects than a Trimble Connect Personal subscription. To check your subscription type, tap  and select **About**. If you have a Trimble Connect Personal subscription you may have exceeded the number of projects you can create. Ask your organization's License Administrator to assign a Trimble Connect Business subscription to you using the [License Manager](#) web app.

Managing team members

To manage who is assigned to a cloud project, select the project in the **Projects** screen and then tap  and select the **Team** tab.

The **Team** tab shows the people assigned to the project, their email address, role, status, and the date they last accessed the project.

Team roles

Team members are assigned the **User** role or the **Administrator** role.

User role

A team member with the **user** role can:

- create jobs, update jobs that are assigned to them, and delete jobs that they have created
- invite other users to the project or reassign their own jobs to a different user
- add or remove report stylesheets to the project
- leave the project

Users cannot edit or modify the properties of projects or jobs that are not assigned to them.

Administrator role

A team member with the **administrator** role can perform the same tasks as users, and can also:

- edit the project properties
- delete any job or project
- manage the administration rights of other users
- invite users to the project
- remove other users from the projects

To change roles

To change a team member's role, select their name in the team list and tap **Update**. Select the **Role** and then tap **Update**.

To invite someone to the project


1. In the **Team** tab, tap **Invite**.
2. Enter the email address of the person you are inviting. This must be the email address the person uses or will use for their **Trimble Identity**.
3. Select the **User** or **Administrator** role. Generally, field users will have the **User** role.
4. Tap **Invite**.

If the invited user already has a Trimble ID, they will receive an email with the project link and will automatically be added to the project. If the invited user does not have a Trimble ID, they will receive an email instructing them to create a new account. After creating their Trimble ID, they can access the project and the folders and the files to which they have permissions.

TIP – To invite multiple users at once, create a .csv file that specifies the email address, group, and role for each user. Spectra Geospatial Origin does not use the **Group** field, so this field can be left blank. The .csv file format will be: **email, , role**.

To assign a job to someone

To assign a job to someone, the job must reside in the cloud and the person you are assigning it to must be a member of the project. See [To manage project team members, page 57](#).

To assign the job, open the job and then in the job details pane, tap . In the **Assignees** list, select the team member or members to assign to the job and then tap **Accept**. Upload your changes to the job to the cloud.


You can also unassign someone from the job using the same workflow.

To remove someone from the project


To remove someone from the project, select their name in the **Team** tab and tap **Update**. Tap **Remove**.

NOTE – An administrator cannot leave a project or change their user role to **User** if they are the only administrator assigned to the project.

Managing jobs

The **Jobs** screen appears each time you open a project or create a local project. To view the **Jobs** screen at any time, tap  and select **Job**.

The **Jobs** screen lists the jobs and folders in the current folder. If there are no jobs in the project, you can create one in Origin.

Tap a job to select it. The job details panel shows information about the job, including description, status, and linked files. To view the job details in portrait mode, tap  and select **Details**.




You can open .job (JOB) files created using a recent previous version of Origin with the latest version of the software. Origin automatically converts the job to the current version.

NOTE – Where possible, Spectra Geospatial recommends using the job (.job) file created in Origin in preference to the equivalent JobXML or JXL (.jxl) file created in Survey Office. For more information, see [Using existing jobs with the latest version of Origin, page 24](#).

To create a job

To create a new local job, tap **New**. See [To create a local job, page 72](#).


To download a job

NOTE – To download or upload jobs and job data, you must be [signed in using your Trimble ID](#). The **Sign in** icon  in the title bar is grayed out  if you are not signed in. Tap the **Sign in**  icon to sign in.

If you are signed in using your Trimble ID, jobs and folders that contain jobs that are assigned to you but are not yet downloaded from Trimble Connect are shown in gray text.

To download a job from the cloud:

1. If the project contains folders, tap a folder to view the jobs in the folder. Double-tap a folder to open it.

TIP – Tap  to move up a folder level. To view the folder structure, tap the folder path field above the job list.

2. Select the job and tap **Download**. Jobs and folders that have not yet been downloaded to the controller are colored gray in the **Jobs** list.


The **Download** screen shows the name, type, and size of each file in the job that will be downloaded. The first time you download a job, Spectra Geospatial recommends you download all files. To manage the download of individual files or to deal with file conflicts, see [Synchronizing data with the cloud, page 64](#).

3. Tap **Download** to download the data to the controller.


To open a job

Tap a job to select it then tap **Open**. If a job is already open then the current job is automatically closed.

 

If the job you are opening has no defined project height, the **Project height** screen appears. Key in the project height, or tap **Here** to define the height using the current GNSS position. If there is no position available, the **Here** button is disabled.

When the job opens, the map appears. If no data appears in the map, or you cannot see the data you expect to see, tap  in the map toolbar to open the **Layer manager**. See [Managing layers using the Layer manager, page 137](#).

To find a job in the list


To refresh the list of jobs, tap .

TIP – The projects screen checks for changes when you first open it but it does not refresh automatically.

- Tap  to see new jobs, for example jobs recently shared with you in Trimble Connect or if you have used File Explorer to copy a job into the **Projects** folder.
- If you cannot see a job in the list that you are expecting to see, tap  above the job list and make sure the correct filters are applied. Jobs shown in the **Jobs** screen are automatically filtered so that by default only jobs in the cloud that are assigned to you (**Cloud: Assigned to me**) or were created by you (**Cloud: Created by me**), and any local jobs (**Controller**) are shown.

To search for part of the job name, enter the text to search for in the **Filter job** field. Job names that contain the entered letters are listed.

CAUTION – If you still cannot see a job after checking the job filters list, or if you can only download the job as a read-only job, then the job is probably not assigned to you. In that case, ask the project administrator to assign the job to you. Do not attempt to create an editable copy of the job on the controller, for example by copying the job from a USB drive or by downloading it from an email. Creating a copy of the job can cause unintended problems when you attempt to upload the data to the cloud, such as duplicate jobs or lost data.

To hide completed jobs from the **Jobs** screen, tap  above the job list and select **Status: Completed** so that there is no check mark next to it. The next time you change the status of a job to **Complete**, it will also disappear from the jobs list.

To edit a job

To change the status of a job, tap the job to select it and in the details panel, select the new **Status** from the list. The status of a job can be **New**, **In progress** or **Fieldwork complete**.

To edit the job properties, tap **Properties**. Make your changes and tap **Accept**. See [Job properties, page 78](#).

To delete a job and all associated data files from the controller, tap  and select **Delete**. Tap **Yes** to confirm.

TIP – Files in the project folder are not affected when you delete a job. If the job resides in Trimble Connect, the job is only removed from the controller. Nothing is removed from Trimble Connect. You cannot delete jobs that you have not yet downloaded.

To assign a job to someone

To assign a job to someone, the job must reside in the cloud and the person you are assigning it to must be a member of the project. See [To manage project team members, page 57](#).

To assign the job, open the job and then in the job details pane, tap **+** next to **Assignees**. In the **Assignees** list, select the team member or members to assign to the job and then tap **Accept**. Upload your changes to the job to the cloud.

You can also unassign someone from the job using the same workflow.

To assign tags to a job

To assign tags to a job, the job must reside in the cloud and the available tags you can assign to the job must be set up in Trimble Connect. For more information on setting up groups, see **Tags** in the [Trimble Connect for Browser's 3D Viewer User Guide](#).

To assign tags, you must have downloaded the job from the cloud. If you have created a local job in a cloud project but not yet uploaded it to the cloud, you can also assign tags.

To assign tags, select the job in the **Jobs** screen and then in the job details pane tap **+** next to **Tags**. In the **Tags** list, select the tags to assign to the job and then tap **Accept**. Upload your changes to the job to the cloud.

You can remove tags from the job using the same workflow.

NOTE – If you are working locally on a job in a cloud project but are not signed in, then if you make changes to the job tags in Origin and changes *are also* made to the job tags in Trimble Connect while you are working offline, the changes made in Origin will overwrite the changes made in Trimble Connect when data is next synchronized with the cloud.


To upload data to the cloud

Changes to jobs are automatically uploaded to the cloud:

- When you change the status of a job that resides in the cloud to **In progress** or **Fieldwork complete**.
- If you have enabled automatic synchronization settings in the **Cloud settings** screen. This includes new jobs you have created locally on the controller for projects that reside in Trimble Connect. For more information, see [Cloud settings for data sync, page 60](#).

To upload changes to a job at any time, select the job in the **Jobs** screen and then tap **⋮** and select **Upload**. The **Upload** screen shows the name, type, and size of each file in the job that will be uploaded. Tap **Upload**

to upload the data to the cloud. To manage the upload of individual files or to deal with file conflicts, see [Synchronizing data with the cloud, page 64](#).


To upload changes to *all* jobs in the **project**, for example at the end of each day, select the project in the **Projects** screen and then tap  and select **Upload**.

TIP – If there are no **Upload** or **Download** options in the **Details** menu, the job resides in a local project and data cannot be uploaded to the cloud.

NOTE – Projects created directly in Trimble Connect rather than using Origin or Sync Manager must be opened in Origin by a user with an **Administrator** role before new jobs can be uploaded to the cloud by team members who have a **User role**.

To close a job

The current job remains open until you [open a different job](#) or you exit the software.

To exit the software, press **Ctrl + Q** on the controller keypad, or tap  and select **Exit**.

When switching jobs or exiting the software, if there are forms open that have unsaved changes, then you are prompted to do one of the following:


- Select one of the forms listed and tap **Return to** to view the form and the unsaved changes.
- Tap **Close all** to discard changes and close all forms.
- Tap **Cancel** to return to the software without closing the job.

To create a local job

When you create a new project, the **New Job** screen appears automatically.

To create a new job in an existing project, open the project from the **Projects** screen to view the **Jobs** screen. Tap **New**. The **New Job** screen appears.

NOTE – Any job created in Origin is at first only a local job, even if the project is a cloud project. Once you have created a local job in a cloud project, you can upload it to the cloud.

TIP – To create a folder in the project folder for the new job, tap  in the **Jobs** screen. Enter the **Folder name** and tap **Create**. The folder path is shown at the top of the **New job** screen.

In the **New job** screen:

1. To create a job from a template or the last used job:
 - a. Select the **Create from template** option.
 - b. Enter the **Job name**.


- c. In the **Template** field, select:
- **Default** to create the job from the default template provided with the software.
 - **<Template name>** if you have created a job template. See [Job templates, page 74](#).
 - **Last used job**.

All the job properties from the selected template or job are copied into the job.

The button next to each property field shows a summary of the current properties.

2. To create a job from a JobXML or DC file:
- Select the **Create from JobXML or DC file** option.
 - Enter the **Job name**.
 - Select the **File format**.

TIP – If you are unsure of the file format, select any format and the software will check this when it imports the file.

- In the **From file** field, select the file. Tap  to browse to the file and select it. Tap **Accept**.
 - Tap **OK**.
3. To define or change the job properties, tap the appropriate button:
- Tap **Coord. sys.** to choose the coordinate system for the job. See [Coordinate system, page 79](#).
 - Tap **Units** to select the units and formats for numerical values. See [Units, page 97](#).
 - Tap **Layer manager** to link point files and map files to the job. See [Managing layers using the Layer manager, page 137](#).
 - Tap **Feature library** to associate a feature library with the job. See [Feature library, page 102](#).
 - Tap **Cogo settings** to set the coordinate geometry settings for the job. See [Cogo settings, page 107](#).
 - Tap **Additional settings** to set additional settings for the job. See [Additional settings, page 114](#).
 - Tap **Media file** button to link media files to the job or to points in the job. See [Media files, page 116](#).
 - If required, enter **Reference**, **Description** and **Operator** details, and any **Notes**.

TIP – To set default values for the **Reference**, **Description**, **Operator**, or **Notes** fields, use a text editor to modify the **JobDetails.scprf** file in the **C:\ProgramData\Spectra Geospatial Data\System Files** folder.

4. Tap **Accept**.

TIP – If you have created a job locally on the controller and the project it is in resides in the cloud, you can assign tags to the job and upload the job to the cloud at any time from the **Jobs** screen. Once a job resides in the cloud, you can assign team members to the job in the **Jobs** screen. For more information, see [Managing jobs, page 68](#).

Job templates

A template makes it faster and easier to create jobs with the same settings. Create a template with the job properties configured as required and then create jobs from the template.

NOTE - Templates are used only to import a set of job properties as you create the job. Editing or deleting a template has no effect on jobs previously created from the template.

Tap  and select **Settings / Templates**. The **Templates** screen shows the default templates provided with the software and any templates you have created.

To create a template

1. Tap **New**.
2. Enter the template name.
3. To create the template from another template or the last used job, select the template or **Last used job** in the **Copy from** field.

The properties from the selected template or job are copied into the job. Edit the properties as required.

4. Tap **Accept**.

To Import a template from another job

1. Tap **Import**.
2. In the **Select job** screen, select the job. Tap **Accept**.
3. Enter the **Template name**. Tap **Accept**.

The new template appears in the **Templates** screen.


To edit the job properties configured in the template

1. To edit a template, select it and tap **Edit**.
2. To define or change the job properties, tap the appropriate button. Tap:
 - Tap **Coord. sys.** to choose the coordinate system for the job. See [Coordinate system, page 79](#).
 - Tap **Units** to select the units and formats for numerical values. See [Units, page 97](#).
 - Tap **Layer manager** to link point files and map files to the job. See [Managing layers using the Layer manager, page 137](#).
 - Tap **Feature library** to associate a feature library with the job. See [Feature library, page 102](#).
 - Tap **Cogo settings** to set the coordinate geometry settings for the job. See [Cogo settings, page 107](#).

- Tap **Additional settings** to set additional settings for the job. See [Additional settings, page 114](#).
- Tap **Media file** button to link media files to the job or to points in the job. See [Media files, page 116](#).
- If required, enter **Reference**, **Description** and **Operator** details, and any **Notes**.

TIP – To set default values for the **Reference**, **Description**, **Operator**, or **Notes** fields, use a text editor to modify the **JobDetails.scprf** file in the **C:\ProgramData\Spectra Geospatial Data\System Files** folder.

To copy job files

To copy jobs or to copy items between jobs, tap  and select **Job**, and then tap **Copy**. The **Copy** screen appears.

TIP – In portrait mode, swipe right to left along the row of softkeys to view the **Copy** softkey.

You can copy jobs into or out of the project folder or from one folder to another folder inside the project folder. All files associated with the job, including files that were collected during the survey (for example, image files) are copied at the same time.

The **Copy** function is especially useful when copying job files to a USB drive so that you can transfer jobs from one controller to another.

NOTE – To avoid data synchronization issues, do not copy jobs downloaded from Trimble Connect to a different folder.

Copied items

When **copying job files**, you can choose to copy the following types of additional files:

- Coordinate system files
- Linked files
- Media files
- Feature library files
- Road files
- Exported files

TIP – To include design definition files used for road or alignment staking when copying job files, select the **Copy road files** or **Copy exported files** options.



NOTE – Broadcast RTCM transformation (RTD) files associated with the job are not copied with the job. Users of RTD files should ensure the grid file on the controller that the data is being copied to contains grid data that covers the area of the copied job.

When **copying items between jobs**, you can select from:

 
- Calibration
- All control points
- Calibration and control
- Local transformations
- Points
- RTX-RTK offset

To copy a job to a different folder

Use these steps to copy jobs from one folder to another, for example on a USB drive.

1. In the **Copy** screen, select **Copy job files to**.
2. Tap  to select the **Job to copy**.
3. Tap  to select the **Destination folder** for the copied job.


You can select a folder on any available drive, such as a network drive or a USB drive. For controller running Android, USB drives should be formatted to the FAT32 format.

If the controller is running Android, you may be prompted to give Origin read and write permissions for the USB drive. When you tap **Yes**, the Android folder selection screen appears. Tap  in that screen, browse to the USB drive and tap **[SELECT]** or **[Use this folder]**. The USB drive now appears in the Origin **Select folder** screen. If the **USB drive detected** message does not appear, or if you have dismissed the message, tap the **Select USB drive** softkey once the USB device is connected. Note that it can take up to 30 seconds for the USB drive to be detected.

 
4. Select the folder for the copied job from the **Select folder** screen. Tap **Accept**.
5. To create a JobXML file, enable the **Create JobXML file** switch.
6. To copy project files associated with the job, select the appropriate check box(es).
7. Tap **Accept**.

To copy a job into the current folder

Use these steps to copy a job from a folder into the current folder.

1. In the **Copy** screen, select **Copy job files from**.
2. Tap  to select the **Job to copy**.

The job can be in a folder on any available drive, such as a network drive or a USB drive. For controllers running Android, USB drives should be formatted to the FAT32 format.


If the controller is running Android, you may be prompted to give Origin read and write permissions for the USB drive. When you tap **Yes**, the Android folder selection screen appears. Tap  in that screen, browse to the USB drive and tap **[SELECT]** or **[Use this folder]**. The USB drive now appears in

the Origin **Select folder** screen. If the **USB drive detected** message does not appear, or if you have dismissed the message, tap the **Select USB drive** softkey once the USB device is connected. Note that it can take up to 30 seconds for the USB drive to be detected.

3. Select the job to copy. Tap **Accept**.
4. To include all files starting with the same job name in the **<project>\Export** folder, select the **Include exported files** check box.
5. To copy project files associated with the job, select the appropriate check box(es).
6. Tap **Accept**.

To copy items between jobs

NOTE – You can only copy information between jobs that are in the current project folder.

1. In the **Copy** screen, select **Copy between jobs**.
2. Tap  to select the **Job to copy**.
3. Select the job in the **<project>** folder that the data will be copied to.
4. Select the type of data to be copied and select whether duplicate points should be copied. Duplicate points in the job you are copying to will be overwritten.

NOTE –

- When copying points between jobs, make sure that the points you are copying use the same coordinate system as the job that the files are being brought into.
- When copying local transformations between jobs, all transformations are copied, and the copied transformations are not editable. To modify or update a copied transformation, update the original transformation and then copy it again.


5. Tap **Accept**.

Repairing jobs

The **Job repair** wizard runs when Origin detects damage in the job file. You can cancel the wizard at any point or go back to any previous step.

The wizard retrieves job data up to the point of the damage, discards anything beyond this point, and informs you of the time and date of the last good item in the job.

As a safety measure, the wizard can make a copy of the job before anything is discarded. Before proceeding with the copy, check that the file system has enough space for a copy of the entire job.

Once the repair is completed,  and select **Job data / Review job** to check if anything has been discarded from the end of the job. Because the job is stored in chronological order, anything discarded is timed later than the last good record reported by the wizard.

 
Be aware that discarded data may include changes made to the job such as deletions (the item may no longer be deleted), changes to antenna or target heights, coordinate systems, and new items such as points, observations, and lines.

Damage to Job files may be caused by a hardware problem, failure to properly shut down the software, or an unexpected power failure due to a flat battery. When the Job wizard reports a problem, review the controller's operating procedure, and/or check the hardware. If you repeatedly experience corruption problems, there may be a fault in your controller hardware. For more information, contact your Spectra Geospatial distributor.

Job properties

Job properties are configured when a job is created.

To edit the job properties at any time:

1. Tap  and select **Job**. The current job is already selected.
2. Tap **Properties**.
3. To define or change the job properties, tap the appropriate button:
 - Tap **Coord. sys.** to choose the coordinate system for the job. See [Coordinate system, page 79](#).
 - Tap **Units** to select the units and formats for numerical values. See [Units, page 97](#).
 - Tap **Layer manager** to link point files and map files to the job. See [Managing layers using the Layer manager, page 137](#).
 - Tap **Feature library** to associate a feature library with the job. See [Feature library, page 102](#).
 - Tap **Cogo settings** to set the coordinate geometry settings for the job. See [Cogo settings, page 107](#).
 - Tap **Additional settings** to set additional settings for the job. See [Additional settings, page 114](#).
 - Tap **Media file** button to link media files to the job or to points in the job. See [Media files, page 116](#).
 - If required, enter **Reference**, **Description** and **Operator** details, and any **Notes**.

 
TIP – To set default values for the **Reference**, **Description**, **Operator**, or **Notes** fields, use a text editor to modify the **JobDetails.scprf** file in the **C:\ProgramData\Spectra Geospatial Data\System Files** folder.

4. Tap **Accept**.

Coordinate system

Origin provides a comprehensive database of coordinate systems used around the world. The database is continually updated to reflect changes to different zones. To customize the list of coordinate systems available, see [To customize the coordinate system database, page 94](#).

To select the coordinate system settings for the job from the coordinate system database:

1. Tap  and select **Job**. The current job is already selected.
2. Tap **Properties**.
3. Tap **Coord sys**.
4. In the **Select coordinate system** screen, select **Select from library**. Tap **Next**.
5. From the lists, select the required **System** and **Zone**.

TIP – Drag your finger up the list to scroll, or press the first letter of the country name on the keypad to jump to that section of the list.

When you have selected the **System** and **Zone**, the following read-only fields are updated:

- **Local datum:** The local datum for the selected coordinate system and zone.
- **Global reference datum:** The datum of RTK measurements, such as the reference frame of base stations including VRS.
- **Global reference epoch:** The epoch of realization of the **Global reference datum**.
- **Displacement model:** The displacement model used to propagate RTX coordinates between ITRF 2020 at the epoch of measurement and the global reference frame.

NOTE – If you perform an RTK survey in the job, you must make sure the selected real-time correction source is providing GNSS positions in the same datum as that specified in the **Global reference datum** field.

6. If the job will contain GNSS observations and you want to use a geoid model or datum grid file:
 - If the controller is connected to the internet, enable the **Geoid model** switch and the **Datum grid** switch as required. The default geoid model and datum grid or shift grid for the selected coordinate system are automatically selected and are downloaded to the controller when you tap **Store** in the **Select coordinate system** screen.
 - To use a different geoid model and datum grid or shift grid from the default selection, or if the controller is **not** connected to the internet, you must have copied the required files to the **Spectra Geospatial Data / System Files** folder on the controller. To select the geoid model or datum grid file:
 - a. To select the geoid model, enable the **Use geoid model** switch. Select the file in the **Geoid model** field.

- b. To select the datum grid file, enable the **Use datum grid** switch. Select the file in the **Datum grid** field.

The semi-major axis and flattening values for the selected datum grid file are displayed. These details overwrite any already provided by a specified projection.

- c. To select the shift grid file, select the file in the **Shift grid** field.

For more information on using geoid models and datum grids, see [Coordinate system parameters, page 84](#).

7. Select the type of **Coordinates** to use. The default is grid. To use ground coordinates, see [To set up a ground coordinate system, page 92](#).
8. Enter the **Project height**. See [Project height, page 90](#).
9. Tap **Store**.
10. If prompted to confirm download the geoid model and datum grid or shift grid files, tap **Yes**.

Alternatively, you can define the coordinate system using one of the methods below.

CAUTION – Do not change the coordinate system or calibration after you have staked out points, or computed offset or intersection points. If you do, the previously staked out or computed points will be inconsistent with the new coordinate system and any points computed or staked out after the change.

Scale factor only

Use this projection type when the job will contain observations only from a conventional instrument and you are using a local scale factor to reduce distances to the local coordinate system.

TIP – If you are working in a small area and are not sure which coordinate system to use, select the **Scale factor only** projection and enter a scale factor of 1.000.

1. In the **Select coordinate system** screen, select **Scale factor only**.
2. Enter a value in the **Scale factor** field.
3. Tap **Store**.

Key in parameters

Use this method to key in your own parameters, particularly if you have your own projection files you want to use or if the job will contain GNSS observations and you want to key in a site calibration adjustment.

1. In the **Select coordinate system** screen, select **Key in parameters**. Tap **Next**.
2. Tap **Projection**.

- a. Fill out the details for the projection.

TIP – Drag your finger up the list to scroll, or press the first letter of the country name on the keypad to jump to that section of the list.

- b. Select the type of **Coordinates** to use. The default is grid. To use ground coordinates, see [To set up a ground coordinate system, page 92](#).
 - c. Enter the **Project height**. See [Project height, page 90](#).
 - d. Tap **Accept**.
3. If the job will contain only observations from a conventional instrument, tap **Store**.
 4. If the job will contain GNSS observations, or a combination of conventional and GNSS observations:
 - a. To specify the datum transformation, tap **Datum trans**.
To use a datum grid file, select **Datum grid** in the **Type** field and select the **Datum grid** file to use.
The semi-major axis and flattening values for the selected datum grid file are displayed. These details overwrite any already provided by a specified projection.
 - b. To use a geoid model file, tap **Vert. adjustment** and select **Geoid model** and select the **Geoid model** file.
The remaining fields in the **Horizontal adjustment** and **Vertical adjustment** screens are filled out when you perform a site calibration. See [GNSS observations and local coordinate systems, page 85](#) and [Site calibration, page 416](#).
 - c. Tap **Store**.

No projection / no datum

Use this method if you want to measure points using GNSS observations using a coordinate system with an undefined projection and datum, or if you do not know what the coordinate system settings should be.

1. In the **Select coordinate system** screen, select **No projection/no datum**. Tap **Next**.
2. To use ground coordinates after a site calibration, set the **Coordinates** field to **Ground** and enter the average site height in the **Project height** field. Alternatively, set the **Coordinates** field to **Grid**.
3. To calculate a geoid vertical adjustment after a site calibration, select the **Use geoid model** check box and then select the geoid model file.

NOTE –

- If no datum and no projection are defined, you can only stake out lines and points that have **Global** coordinates. Displayed bearings and distances are in terms of **Global reference datum**.
- Without a datum transformation, you can only start a real-time base survey with a point that has **Global** coordinates.

When you perform a site calibration, the software calculates a Transverse Mercator projection and a Molodensky three-parameter datum transformation using the supplied control points. The project height is used to compute a scale factor for the projection so that ground coordinates can be computed at elevation. See [Site calibration, page 416](#).

Broadcast RTCM

Use this projection type when the **Broadcast format** is set to RTCM RTK and the broadcast datum definition messages are broadcast by the VRS network.

1. In the **Select coordinate system** screen, select **Broadcast RTCM**.
2. Select the appropriate projection parameters for your location.
3. Select the type of **Broadcast RTCM** messages to include. See [Broadcast RTCM coordinate system messages, page 96](#).
4. Select the type of **Coordinates** to use. The default is grid. To use ground coordinates, see [To set up a ground coordinate system, page 92](#).
5. Enter the **Project height**. See [Project height, page 90](#).
6. Tap **Store**.

Coordinate system name

The name of the coordinate system indicates whether the coordinate system was selected from the library, was later modified, or whether the coordinate system is user defined.

When the coordinate system is:

- Selected from the library:
 - The **Coordinate system** field displays "Zonename (SystemName)".
Changing the geoid model or project height does not change the name of the coordinate system
 - Editing any projection or datum parameters changes the coordinate system name to "Local site". To remove these changes and revert to the original name of the coordinate system, you must reselect it from the library. If you overlay a GNSS site calibration over this "Local site" the name of the coordinate system remains "Local site".
 - Completing a GNSS site calibration changes the coordinate system name to "Zonename (Site)". If you disable the site calibration (by keying in parameters) the coordinate system name reverts to the original name.
 - Editing any horizontal adjustment or vertical adjustment parameters changes the coordinate system name to "Zonename (Site)". If you remove these changes, the coordinate system name reverts to the original name.
- Defined using **Key in parameters**, the coordinate system name is "Local site".

- Defined using **No projection/no datum**, completing a GNSS site calibration changes the coordinate system name to "Local site".

Choosing the coordinate system

Before starting a survey, it is important to choose a suitable coordinate system. The parameters you must configure depend on whether the job contains observations from a conventional instrument or from a GNSS receiver.

CAUTION – Do not change the coordinate system or calibration after you have staked out points, or computed offset or intersection points. If you do, the previously staked out or computed points will be inconsistent with the new coordinate system and any points computed or staked out after the change.

Conventional observations only

If the job will contain observations from only a conventional instrument, you can specify the coordinate system and zone by **selecting them from the library** or by **keying in the parameters**. With either method you can use grid or ground coordinates. Grid coordinates are computed at the grid level, which is usually at the ellipsoid level.

Because in a conventional survey measurements are usually made at ground level, you can choose to **use ground coordinates** and then key in the scale factor or calculate the scale factor the software will use when converting ground observations to grid. To use ground coordinates, see [To set up a ground coordinate system, page 92](#).

TIP – If you are working in a small area and are not sure which coordinate system to use, select the **Scale factor only** projection and enter a scale factor of 1.000.

GNSS observations only

If the job will contain GNSS observations, the coordinate system settings will consist of a projection and a datum transformation. You can specify the map projection and datum transformation by **selecting them from the library** or by **keying in the parameters**.

NOTE – If you perform an RTK survey in the job, you must make sure the selected real-time correction source is providing GNSS positions in the same datum as that shown in the **Global reference datum** field in the **Select coordinate system** screen of the job properties.

When you have chosen a coordinate system, search your survey archives for any horizontal and vertical control points in that coordinate system that are in the area to be surveyed. You can use these to calibrate a GNSS survey. Calibration is the process of adjusting projected (grid) coordinates to fit the local control. Slight discrepancies can exist between local control and GNSS-derived coordinates. These discrepancies can be reduced using minor adjustments. Origin calculates these adjustments when you use the **Site calibration** function. They are called horizontal and vertical adjustments. See [Site calibration, page 416](#).

If you are surveying with VRS and the RTCM broadcast includes coordinate system parameters, you can set the job to use the settings included in the **Broadcast RTCM** messages.

With any of these methods you can use grid or ground coordinates. Grid coordinates are computed at the grid level, which is usually at the ellipsoid level. Because during a survey measurements are usually made at ground level, you can choose to **use ground coordinates** and then key in the scale factor or calculate the scale factor the software will use when converting ground observations to grid. To use ground coordinates, see [To set up a ground coordinate system, page 92](#).

TIP – If you are not sure which coordinate system to use, select the **No projection/no datum** option.

Combining conventional observations with GNSS observations

If you intend to combine conventional observations with GNSS observations, choose a coordinate system that lets you view GNSS observations as grid points. This means that you must define a projection and a datum transformation.

NOTE – You can complete the field work for a combined survey without defining a projection and a datum transformation, but you will not be able to view the GNSS observations as grid coordinates.

To combine GNSS measurements with two-dimensional conventional observations, specify a project height for the job.

Coordinate system parameters

A coordinate system locates points in two dimensional or three dimensional space. The coordinate system transforms measurements from a curved surface (the earth) onto a flat surface (a map or plan). A coordinate system consists of at least a map projection and a datum.

Map projection

A map projection transforms locations from the surface of an ellipsoid into locations on a plane or map using a mathematical model. Transverse Mercator and Lambert are examples of common map projections.

NOTE – Positions on a map projection are commonly called "grid coordinates". Origin abbreviates this to "Grid".

Ellipsoid (local datum)

Because an exact model of the earth's surface cannot be created mathematically, localized ellipsoids (mathematical surfaces) have been derived to best represent specific areas. These ellipsoids are sometimes referred to as local datums. NAD 1983, GRS-80, and AGD-66 are examples of local datums.

GNSS observations and local coordinate systems

GNSS RTK measurements (both single base and VRS) are referenced to the **Global reference datum** defined for the job. However, for most survey tasks, it is better to display and store results in terms of a **local coordinate system**. Before you start a survey, choose a coordinate system and zone. Depending on the requirements of the survey, you can choose to give the results in the national coordinate system, a local coordinate grid system, or as local geodetic coordinates.

In addition to a map projection and local datum, a **local coordinate system** for a GNSS survey consists of:

- datum transformation
- horizontal and vertical adjustments calculated after a site calibration

When **Global** coordinates are transformed onto the local ellipsoid using a datum transformation, local geodetic coordinates result. Local geodetic coordinates are transformed into local grid coordinates using the map projection. The result is northing and easting coordinates on the local grid. If a horizontal adjustment is defined, it is applied next, followed by the vertical adjustment.

TIP – When keying in a point or when viewing point details in **Review job** or **Point manager**, you can change the coordinates shown. In the **Coordinate view** field, select **Local** to display local geodetic coordinates. Select **Grid** to display local grid coordinates. See [Coordinate view settings, page 683](#).

NOTE – To conduct a real-time survey in terms of local grid coordinates, define the datum transformation and map projection before starting the survey.

Datum transformation

To survey in a local coordinate system, the GNSS positions in **Global** coordinates must first be transformed onto the local ellipsoid using a datum transformation. For many modern coordinate systems, the **Global reference datum** and the **Local datum** are equivalent. Examples are NAD 1983 and GDA2020. In these cases, there is a "null" transformation between the **Global reference datum** and the **Local datum**. Some older datums require a datum transformation between the **Global reference datum** and the **Local datum**.

Three types of datum transformation are supported:

- **Three-parameter** – The three-parameter transformation involves three simple translations in X, Y, and Z. The three-parameter transformation that Origin uses is a Molodensky transformation, so there may also be a change in ellipsoid radius and flattening.
- **Seven-parameter** – This is the most complex transformation. It applies translations *and* rotations in X, Y, and Z, as well as a scale factor.
- **Datum grid** – This uses a gridded data set of standard datum shifts. By interpolation, it provides an estimated value for a datum transformation at any point on that grid. The accuracy of a datum grid depends on the accuracy of the gridded data set it uses.

A **datum grid transformation** uses interpolative methods to estimate the value of the datum transformation at any point in the area covered by the datum grid files. Two gridded datum files are required for this interpolation – a latitude datum grid file and a longitude datum grid file. When you export a datum grid using Survey Office, the two datum grid files associated with the current project are combined into a single file for use in the Origin software.

NOTE – If you use the Canadian NTv2 datum grid please note the data is provided on an "as is" basis. The Department of Natural Resources Canada (NRCan) makes no guarantees, representations, or warranties respecting the data.

Calibration

Calibration is the process of adjusting projected (grid) coordinates to fit the local control. A calibration calculates parameters for transforming **Global** coordinates into local grid coordinates (NEE).

You should calculate and apply a calibration before:

- staking out points
- computing offset or intersection points

If you calibrate a project and then survey in real time, the General Survey software gives real-time solutions in terms of the local coordinate system and control points.

You can reuse the calibration from a previous job if the new job is completely encompassed by the initial calibration. If a portion of the new job lies outside the initial project area, introduce additional control points to cover the unknown area. Survey these new points and compute a new calibration, and then use this as the calibration for the job.

To copy the calibration from an existing job to a new job, select the existing job as the current job and then create a new job and in the **Template** field select **Last used job**. Alternatively, use the **Copy between jobs** function to copy the calibration from one job to another.

Horizontal and vertical adjustments

If published datum transformation parameters are used, slight discrepancies can exist between local control and GNSS-derived coordinates. These discrepancies can be reduced using minor adjustments. Origin calculates these adjustments when you use the **Site calibration** function, if the coordinate system settings for the job include a projection and a datum transformation. They are called horizontal and vertical adjustments.

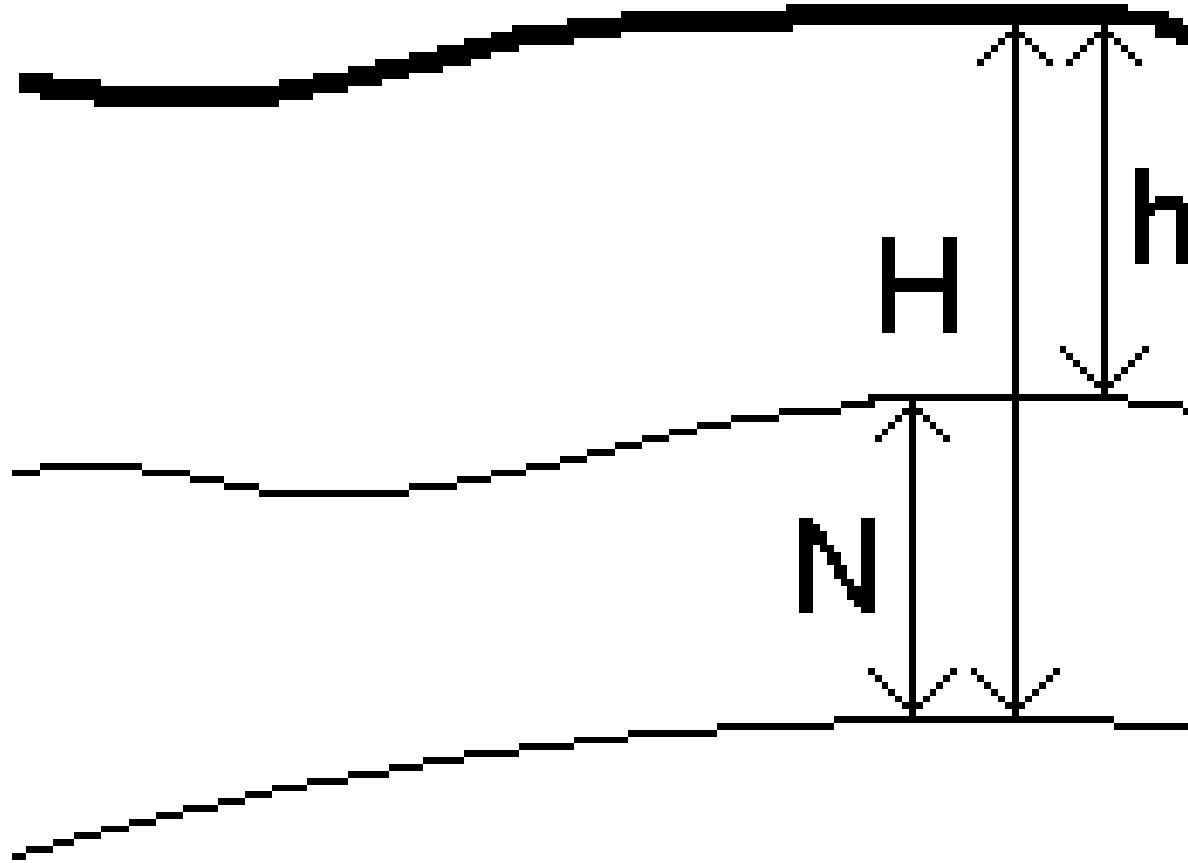
If required, you can use a geoid model file as part of the vertical adjustment calculation.

Geoid models

Spectra Geospatial recommends that you use a geoid model to obtain more accurate orthometric heights from your GNSS measurements than from the ellipsoid. If required you can then perform a site calibration to adjust the geoid model by a constant value.

The geoid is a surface of constant gravitational potential that approximates mean sea level. A geoid model or Geoid Grid file (*.ggf) is a table of geoid-ellipsoid separations that is used with the GNSS ellipsoid height observations to provide an estimate of elevation.

The geoid-ellipsoid separation value (N) is obtained from the geoid model and is subtracted from the ellipsoid height (H) for a particular point. The elevation (h) of the point above mean sea level (the geoid) is the result. This is illustrated in the following diagram:



1	Ground
2	Geoid
3	Ellipsoid

When you select geoid model as the vertical adjustment type, the software takes the geoid-ellipsoid separations from the geoid file chosen, and uses them to display elevations on the screen.

The benefit using the geoid model for the vertical adjustment is that you can display elevations without having to calibrate on elevation benchmarks. This is useful when local control or benchmarks are not available, as it makes it possible to work "on the ground" rather than on the ellipsoid.

NOTE – If you have a valid subscription or the controller has a valid **Origin Software Maintenance Agreement** and the controller is connected to the internet, enable the **Geoid model** switch and the **Datum grid** switch in the **Select coordinate system** screen as required. The most up-to-date files for the selected coordinate system are automatically downloaded to the controller when you tap **Store** in the **Select coordinate system** screen. Otherwise, you must have copied the required files to the **Spectra Geospatial Data / System Files** folder on the controller, and you then must select the file to use.

Projection

A projection is used to transform local geodetic coordinates into local grid coordinates. GNSS RTK measurements (both single base and VRS) are referenced to the **Global reference datum** defined for the job.. To work in local grid coordinates during a GNSS survey, you must specify a projection and datum transformation.

You can specify a projection:

- when a job is created and you have to choose a coordinate system (select from a list, or key in)
- during a survey (you calculate values by performing a calibration)
- in the Survey Office software, when the data is transferred.

NOTE – Enter an appropriate default height value for the software to correctly calculate a sea level correction and then apply it to the grid coordinate.

TIP – If a projection and datum transformation are specified, you can reduce any discrepancies between the **Global** coordinates and the local grid coordinates by performing a site calibration.

Projection grids

Use a projection grid to handle projection types that are not directly supported by the coordinate system routines provided by the Origin software. A projection grid file stores local latitude and longitude values that correspond to regular northing/easting positions. Depending on the direction of the conversion, either projection or local latitude/longitude positions are interpolated from the grid data for points within the grid extents.

Use the Coordinate System Manager to generate the defined projection grid (*.pjt) file. For more information, refer to the **Coordinate System Manager Help**. Transfer the projection grid file to the controller.

To use the projection grid, in the **Projection** screen, select **Projection grid** in the **Type** field and then select the **Projection grid file**. If required, select a shift grid.

Shift grids

Initial projection coordinates are projections that are computed using specified projection routines. Some countries use shift grids to apply corrections to these coordinates. The corrections are generally used to fit the initial coordinates to local distortions in the survey framework, and so cannot be modeled by a simple transformation. You can apply a shift grid to any type of projection definition. Coordinate systems that use shift grids include the Netherlands RD zone, and the United Kingdom OS National Grid zones. The OS National Grid zones are treated as a standard Transverse Mercator projection plus shift grid.

Shift grid files are installed to the desktop computer running the Coordinate System Manager utility, which is installed with Survey Office. Shift grid files can be transferred from the desktop computer to the controller using your favorite [file transfer](#) method.

To apply a shift grid to a projection definition, in the **Projection** screen, enable the **Use shift grid** switch and then select the **Shift grid file**.

SnakeGrid

SnakeGrid is a coordinate system with minimal scale factor and height distortion, even when projects extend for many hundreds of kilometers.

 
A job using a SnakeGrid coordinate system must use a custom SnakeGrid parameter file. These files are obtained through a licensing arrangement from the UCL Department of Civil, Environmental and Geomatic Engineering. Each SnakeGrid parameter file is customized for a specific project alignment envelope. Go to snakegrid.org for details.

NOTE – The SnakeGrid parameter file name must be named SnakeXXXXX.dat and placed in the **System Files** folder on the device. See [Data folders and files, page 119](#).

To choose a SnakeGrid projection, in the **Projection** screen, select **Snakegrid** in the **Type** field and then select the **SnakeGrid parameter file**.

Project height

The project height can be defined as part of the coordinate system definition when creating a new job. To edit the project height:

1. Tap  and select **Job**.
2. Tap **Properties**.
3. Tap **Coord Sys**.
4. Select the **Select from library** or **Key in parameters** option. Tap **Next**.
5. Enter the **Project height**.

TIP – To automatically complete the **Project height** field when defining or editing the coordinate system, tap **Here** to use the current autonomous height derived by the GNSS receiver, or tap **Point** to use the height of a point in the job or in a linked file. The **Point** softkey is not available when you are creating a new job. The **Here** softkey is available only when the software is connected to a GNSS receiver.

If a point has no elevation, the Origin software uses the project height in Cogo calculations. If you combine GNSS and 2D conventional observations, set the **Project height** field to approximate the height of the site. This height is used with 2D points to calculate grid and ellipsoid distances from measured ground distances.

In 2D surveys where a projection has been defined, enter a value for the project height that approximates the height of the site. You need this value to reduce measured ground distances to ellipsoid distance, and to compute coordinates.

NOTE – When the ground coordinate system scale factor is being computed based on the project location, any changes to the project location will change the ground scale factor, and this in turn will mean that any GNSS calibration based on this will need to be recomputed.

Horizontal adjustment

If published datum transformation parameters are used, slight discrepancies can exist between local control and GNSS-derived coordinates. These discrepancies can be reduced using minor adjustments. Origin calculates these adjustments when you use the **Site calibration** function, if the coordinate system settings for the job include a projection and a datum transformation. They are called horizontal and vertical adjustments.

If required, you can use a geoid model file as part of the vertical adjustment calculation.

You can reuse the calibration from a previous job if the new job is completely encompassed by the initial calibration. If a portion of the new job lies outside the initial project area, introduce additional control points to cover the unknown area. Survey these new points and compute a new calibration, and then use this as the calibration for the job.

To copy the calibration from an existing job to a new job, select the existing job as the current job and then create a new job and in the **Template** field select **Last used job**. Alternatively, use the **Copy between jobs** function to copy the calibration from one job to another.

Vertical adjustment

If published datum transformation parameters are used, slight discrepancies can exist between local control and GNSS-derived coordinates. These discrepancies can be reduced using minor adjustments. Origin calculates these adjustments when you use the **Site calibration** function, if the coordinate system settings for the job include a projection and a datum transformation. They are called horizontal and vertical adjustments.

If required, you can use a geoid model file as part of the vertical adjustment calculation.

 
You can reuse the calibration from a previous job if the new job is completely encompassed by the initial calibration. If a portion of the new job lies outside the initial project area, introduce additional control points to cover the unknown area. Survey these new points and compute a new calibration, and then use this as the calibration for the job.

To copy the calibration from an existing job to a new job, select the existing job as the current job and then create a new job and in the **Template** field select **Last used job**. Alternatively, use the **Copy between jobs** function to copy the calibration from one job to another.

To set up a ground coordinate system

If you need coordinates to be at ground level instead of projection level (for example, in areas of high elevation), use a ground coordinate system.

When you set up a ground coordinate system in a job, the software applies a ground scale factor to the coordinate system projection definition so that grid distances equal ground distances. This means that the distance between the coordinates of two points equals the distance measured on the ground between those two points.

1. Tap  and select **Job**.
2. Tap **Properties**.
3. In the **Job properties** screen, tap **Coord Sys**.
4. In the **Select coordinate system** screen:
 - Choose the **Select from library** option to select a coordinate system from the library provided. Tap **Next**.
 - Choose the **Key in parameters** option to key in the coordinate system parameters. Tap **Next** and then select **Projection**.
5. To use ground coordinates with the selected coordinate system, from the **Coordinates** field, do one of the following:
 - To key in a scale factor, select **Ground (Keyed in scale factor)**. Enter a value in the **Ground scale factor** field.

The number entered should be the inverse of the combined scale factor for the location of the job.

TIP – NGS datasheets in the United States report the “Combined factor” for control points. The **Ground scale factor** in Origin is the inverse of the “Combined factor” number on the datasheet. So:

Ground scale factor = 1 / Combined factor;

Where: Combined factor = Elevation factor x Projection scale factor

- To let the Origin software calculate the scale factor, select **Ground (Calculated scale factor)**.
6. If you selected **Ground (Calculated scale factor)**, enter the **Project location**.

WARNING – If you have not yet fully defined the underlying coordinate system, including any geoid models, datum grids, return to step 4 above and do that before continuing, as those parameters may affect the calculation of the ground scale factor.

Set the **Entry method** to:

- **Local coords** to enter the Local LLH coordinates of the project location. ***This is the recommended entry method.***
- **Grid coords** to enter the underlying projection grid coordinates for the project location. These are the grid coordinates on the projection of the currently selected coordinate system, which are not always the ground coordinates of the project location.

Alternatively, do one of the following:

- Tap **Here** to enter the current autonomous position derived by the GNSS receiver. The autonomous position is displayed in terms of the **Global reference datum**.

NOTE – This should only be used if the **Global coordinates** are close to the Local LLH coordinates, particularly the **Height**.

- Tap **Point** and then select a point from in the job or in a linked file to use the coordinates of that position. The Local LLH of the point chosen is used, transformed to or from grid as required, using the currently stored coordinate system in the current job.

NOTE – The **Point** softkey is not available until there are positions in the job. When creating a new job, you must create the job, finish selecting the underlying coordinate system for the job, then link files to the job or measure a new point, and then return to the **Job properties** and edit the coordinate system settings. The **Point** softkey is now available.

WARNING – Points keyed into the job as offset ground coordinates **before** the offsets are set up should not be selected using the **Point** softkey and used as the project location. Instead, you should select points stored as Local LLH.

The project height is used with 2D points to reduce ground distances in Cogo calculations. For more information, see [Project height](#).

These fields are used to calculate the ground scale factor. The computed ground scale factor is displayed in the **Ground scale factor** field.

The computed ground scale factor is the inverse of the combined scale factor. The combined scale factor is the elevation factor computed at the **Height** of the **Project location**, multiplied by the projection point scale factor computed at the **Project location** using the projection of the currently selected coordinate system. The resulting combined scale factor, after the application of the computed ground scale factor at the **Project location**, equals 1.

The software applies the ground scale factor to the projection.

7. Enter the details of the ground coordinates for the **Project location** into the fields in the **Project location ground coordinates** group box. Ground coordinates are often differentiated from the underlying projection grid coordinates to avoid confusion between the two.
 - To specify the ground coordinates of the **Project location**, enter the ground northing into the **Northing** field and the ground easting into the **Easting** field. When values are entered in the **Northing** and **Easting** fields, the offsets from the underlying projection grid coordinates are

computed and shown in the **Northing offset** and **Easting offset** fields.

- Alternatively, to add known offsets to the underlying grid coordinates to differentiate the ground coordinates from those grid coordinates, enter a value in the **Northing offset** and **Easting offset** fields. The **Northing** and **Easting** ground coordinates are computed.

NOTE – In a job with a ground scale factor, keyed in Grid coordinates are treated as ground coordinates in terms of the ground coordinate offsets. Points keyed into the job as Grid coordinates before the offsets are stored in the job are treated as being in terms of those offsets after the ground coordinate system is applied to the job. The Grid coordinate values of those points do not change.

8. Tap **Accept**.

NOTE –

- When working with a ground coordinate system the reported ground distance may not be exactly the same as the reported grid distance between ground coordinates. The reported ground distance is simply the ellipsoid distance corrected for the average height above the ellipsoid. However, the grid distance is computed between the ground coordinates of the points and is therefore based on a coordinate system that provides a combined scale factor of 1 at the **Project location**.
- When the ground coordinate system scale factor is being computed based on the **Project location**, any changes to the **Project location** will change the ground scale factor, and this in turn will mean that any GNSS site calibration based on this will need to be recomputed.
- Origin does not transform ground coordinates to grid coordinates and vice-versa if the coordinate system setup is changed from ground to grid (or vice-versa). If the coordinate system, including the ground coordinate setup, is changed, Grid coordinates keyed into the job remain the same numerical values for **Northing**, **Easting**, and **Elevation** as were keyed in.

To customize the coordinate system database

You can customize the coordinate system database used by the Origin software. This enables you to:

- Reduce the number of coordinate systems available so that it includes only the ones you need.
- Customize existing coordinate systems definitions or add new coordinate system definitions.
- Include GNSS site calibrations in the coordinate system library.

You must use the Coordinate System Manager software to modify the Coordinate System Database (CSD) and then transfer the modified database to the **System Files** folder on the controller. When a **custom.csd** file exists in the **C:\ProgramData\Spectra Geospatial Data\System Files** folder, the Origin software uses the **custom.csd** database instead of the coordinate system database built into the software.

NOTE – The Coordinate System Manager software is installed with the Spectra Geospatial Survey Office software.

To reduce the coordinate system library to one or more coordinate systems, zones, or sites

1. Run the Coordinate System Manager software on your office computer.
2. To hide the required element:
 - **Coordinate system:** In the left pane of the **Coordinate Systems** tab, select the coordinate system(s) that you do not want, right click and then select **Hide**.
 - **Zone:** In the left pane of the **Coordinate Systems** tab, select a coordinate system, from the right pane, select the Zone(s) you do not want, right click and then select **Hide**.
 - **Site:** From the **Sites** tab, right click the site(s) you do not want and then select **Hide**.
3. Select **File / Save As**.
4. Name the file **custom.csd** and then click **Save**.

By default, the file is saved in **C:\Program Files\Common Files\Spectra Geospatial\GeoData** with the extension *.csd.

To export only user-defined coordinate systems

1. Run the Coordinate System Manager software on your office computer.
2. Select **File / Export**.
3. Select **User-defined records only** and then click **OK**.
4. Name the file **custom** and then click **Save**.

By default, the file is saved in **C:\Program Files\Common Files\Spectra Geospatial\GeoData** with the extension *.csw.

NOTE – If a GNSS site calibration has been saved using the Survey Office software, a site with the assigned name is added to the **Sites** tab and a Site group is created in the **Coordinate Systems** tab, if required. When you create a customized coordinate system that includes sites saved by Survey Office, include those sites created in the **Sites** tab. The Site group in the **Coordinate Systems** tab contains the coordinate system details *referenced* by the sites saved in the **Sites** tab, but the calibration details are *only* stored in the site in the **Sites** tab.

To transfer custom coordinate systems

Transfer the custom coordinate system file to the controller. The file must be called **custom.csd** For the Origin software to use it, the file must be in the **C:\ProgramData\Spectra Geospatial Data\System Files** folder and named **custom.csd**.

To select a custom site

1. In the **Select coordinate system** screen, select **Select from library**. Tap **Next**.
2. If this is a new **custom.csd** file, a warning appears. Tap **OK**.
3. In the **System** field, select **[User sites]**.
4. In the **Site** field, select the required site.
5. If required, select a geoid model.
6. Tap **Store**.

Broadcast RTCM coordinate system messages

A Network RTK provider can configure a VRS network to broadcast RTCM coordinate system messages that include some of the coordinate system definition parameters. When the **Broadcast format** is set to **RTCM RTK** in the **Rover options** screen of the survey style, and the RTCM messages are broadcast by the VRS network, Origin can use this to provide the datum and ellipsoid definition for a job. See [Coordinate system, page 79](#).

Origin supports a subset of the RTCM transformation parameters, as shown below:

Message	Details	Supported
1021	Helmert/Abridged Molodensky (Control)	Yes
1022	Molodensky-Badekas Transformation (Control)	Yes
1023	Ellipsoidal Datum Shift Grid Residual	Yes
1024	Plane Grid Residual	No
1025	Projection	No
1026	Projection Lambert Conformal Conic Two Parallel	No
1027	Projection Oblique Mercator	No
1028	Local Transformation	No

The broadcast RCTM message must contain either the 1021 or the 1022 control message. This defines what other messages will be present. All other messages are optional.

Datum shift grid values are broadcast at fixed time intervals for a grid surrounding the area you are working in. The size of the grid that is broadcast depends on the density of the source grid data. To perform coordinate system transformations, the grid file that is built by Origin must include shift grids covering the location of points you are transforming. When you move to a new location, a new set of datum shift grid values is broadcast and there may be a slight delay until the appropriate values are received from the VRS network server.

The broadcast transformation messages include a unique identifier for the broadcast parameters. If the broadcast parameters change, the identifier changes, and the Origin creates a new grid file to store the new datum grid shift values. A message warns if the broadcast RTCM transformation changes and you are prompted to continue. If you select:


- **Yes** the system creates a new grid file, or, if it exists, uses another grid file that matches the newly broadcast transformation. If you change grid files, the new grid file may not cover the same area as the old grid file, so Origin may not be able to transform points where there are 'holes' in the grid file.
- **No** you cannot continue surveying. Create a new job and start the survey again. If you need access to data in the old job, link that job.

If you copy a job that is defined to use a Broadcast RTCM datum onto a different controller, you should copy the appropriate grid file so that the software can transform grid coordinates on the other controller.

NOTE – When a job with broadcast RTCM data is exported as a DC file, the GNSS observations are output as grid positions.

Units

To configure units and formats for numerical values for the job:

1. Tap  and select **Job**. The current job is already selected.
2. Tap **Properties**.
3. Tap **Units**.
4. Change the fields as required.

TIP – Some fields in the Origin software allow you to enter a value in units other than the system units. When you enter a value in one of these fields (for example **Azimuth**) and tap **Enter**, the value is converted to the system units.

Units

Available unit settings are:

Distance and grid coords	Distance and northing/easting coordinates. Select from Meters, Millimeters, International Survey Feet, and US Survey Feet.
Height	Height and elevation
Angles	Angles

Quadrant bearings

Bearing values are automatically converted to quadrant bearings when this check box is enabled.

For example, to enter the quadrant bearing N25° 30' 30"E in a bearing field, key in **25.3030** and then tap ► and select **NE**.

Temperature

Temperature

 
Pressure

Pressure

Grade

The grade of a slope can be displayed as an angle, percent, or ratio.

The ratio can be displayed as **Rise:Run** or **Run:Rise**.



Area

Supported area units include:

- Square meters
- Square miles
- Square international feet
- Square US survey feet
- Square international yards
- Square US survey yards
- Acres
- Hectares

Volume

Supported volume units include:

- Cubic meters
- Cubic international feet
- Cubic US survey feet
- Cubic international yards
- Cubic US survey feet
- Acre feet
- US acre feet

Mass

Supported mass units include:

- Kilograms
- Milligrams
- Grams
- Tons (metric)
- Tons (US)
- Tons (imperial)
- Ounces
- Pounds
- Stone

Formats for numerical values

Available formats for numerical values are:

Distance display	<p>Select the number format that matches the number of decimal places to be shown in all distance fields.</p> <p>When the Distance and grid coordinates field is set to US survey feet or international feet you can configure the distance display to be in feet and inches. Supported fractions of an inch include: 1/2", 1/4", 1/8", 1/16" and 1/32".</p>
Coordinate display	The number of decimal places in all northing/easting coordinate fields
Area display	The number of decimal places for a computed area
Volume display	The number of decimal places for a computed volume
Angle display	The number of decimal places for a computed angle.
Lat/Long	Latitude and longitude
Coordinate order	<p>The order for the displayed grid coordinates. Select from:</p> <ul style="list-style-type: none"> • North-East-Elev • East-North-Elev • Y-X-Z (equivalent to East-North-Elev – field prompts changed) • X-Y-Z (equivalent to North-East-Elev – field prompts changed) • XYZ (CAD) (where the coordinates are in the same order as CAD files) <p>The Y-X-Z and X-Y-Z options follow the geodetic convention that the Y axis is the East axis and the X axis is the North axis, forming a left-hand coordinate system.</p> <p>The XYZ(CAD) option follows the mathematical convention and forms a right-hand coordinate system.</p>

Station display

(Also known as Chainage in some countries.)

This defines the distance along a line, arc, alignment, or road.

The station values can be displayed as:

- 1000.0 where the values are displayed as entered
- 10+00.0 where the + separates the hundreds from the remaining values
- 1+000.0 where the + separates the thousands from the remaining values
- **Station index**

The **Station index** display type uses an extra **Station index increment** field value as part of its definition. The station value is displayed as per the 10+00.0 option, but the value before the + is the station value divided by the **Station index increment**. The remainder is displayed after the +. For example if the **Station index increment** is set to 20, a station value of 42.0 m is displayed as 2 + 02.0 m. This display option is used in Brazil but may have application in other markets.

Station index increment

If the **Station display** is set to **Station index** the **station index increment** field appears enabling an appropriate station index increment to be entered. See details above.

Laser VA display

Laser vertical angles

Can be vertical angles measured from the zenith, or inclinations measured from horizontal.

Time format

The format for date and time. Select from:

- Local date/time
- UTC time
- GPS weeks and seconds

Precision display

Confidence level of displayed GNSS precision estimates. Supported confidence levels and the likely probability that the precision is within range are:

	Horizontal		Vertical	
	Scalar	Percent	Scalar	Percent
1 sigma	1	39.4%	1	68.3%
<u>DRMS</u>	1.414	63.2%	1	68.3%
95%	2.447	95%	1.960	95%
99%	3.035	99%	2.575	99%

NOTE - The DRMS option is available only when connected to a Spectra Geospatial SP100 GNSS receiver.

Feature library

A **feature library** is a text file with an FXL extension that contains the definitions of feature codes, attributes, linework and symbology, and control codes:

- **Feature codes** define the code for types of features, so that features of the same type use the same code.
- An **attribute** is a characteristic or property of a feature in a database. All features have a geographic position as an attribute. Other attributes depend on the type of feature. For example, a road has a name or designation number, surface type, width, number of lanes, and so on. The value chosen to describe a particular feature is called the attribute value.

When you measure a point and select a feature code from the feature library in the **Code** field, if the feature code has attributes then the Origin software prompts you to enter the attribute data.

- **Linework** and **symbology** define how the feature appears on the map, including line thickness and color. For points, different symbols can be used to represent different point features.
- **Control codes** define the relationship between points so that the geometry of a line or polygon is drawn in the map. The easiest way to use **control codes** to create line, arc, and polygon features in the map as you measure points, or by drawing line and arc features using points already in the job using the CAD toolbar.

NOTE - If you have enabled **Use descriptions**, you cannot select codes from feature libraries in **Description** fields.

You can create your own feature library using the Feature Definition Manager in the Spectra Geospatial Survey Office software and then transfer the file to the **System Files** folder on the controller.

You can also create a feature library using Origin, however the functionality in Origin for defining an FXL file is more limited. When you create a feature library file in Origin, you can only define feature codes, line type and color or polygon line type and color, and control codes. See [To add or edit a feature library in Origin, page 105](#).

To create a feature library that contains attribute definitions or to add symbols you must use the Feature Definition Manager in Survey Office. See [Survey Office feature libraries, page 103](#).

Example feature library file for installation

Spectra Geospatial has created the **GlobalFeatures.fxl** example feature library file for you to install and use with the Origin software.

The **GlobalFeatures.fxl** feature library file has feature codes set up for points, attributes, lines and symbols, and control codes for drawing features using the CAD toolbar. You can use the file to see how the feature library files makes it easy to enter attributes, draw features using the CAD toolbar, or measure and code features in one step using **Measure codes**.

 
You can install the **GlobalFeatures.fxl** using Spectra Geospatial Installation Manager. If you keep the **GlobalFeatures.fxl** check box selected in Spectra Geospatial Installation Manager, the file will be installed each time you install or update the software, including any updates to the **GlobalFeatures.fxl**. The **GlobalFeatures.fxl** file is installed to the **System Files** folder.

To set up your own feature library file, you can take a copy of the **GlobalFeatures.fxl** file and edit it in Origin or using the Feature Definition Manager in Survey Office.

To select the feature library

To select a code in a survey, the job must be using the feature library that contains the appropriate codes.

To select the library:

1. Tap  and select **Job**. The current job is already selected.
2. Tap **Properties**.
3. Tap **Feature library**. The **Select feature library** screen shows the available feature library files in the **System Files** folder.
4. Tap the feature library file to select it.
5. To add a feature library file from a different folder, tap **Browse** and navigate to the location of the feature library file. Tap the file to select it and tap **Accept**. The file is copied to the **Spectra Geospatial Data / System Files** folder and appears in the **Select feature library** list.

Survey Office feature libraries

You can create your own feature library using the Feature Definition Manager in the Spectra Geospatial Survey Office software and then transfer the file to the **System Files** folder on the controller.

Feature code names that contain spaces are shown in Origin with a small dot between the words, for example, Fire·Hydrant. These dots do not appear in the office software.

Attributes

Attributes for feature codes created in the Feature Definition Manager can be edited in Origin, with the following exceptions:

- **Read only** attributes are shown but cannot be edited in Origin.
- **Office use only** attributes are not shown in Origin.

Control codes

If you are using an old FXL file, then the control codes supported depend on the FXL file version.

- Smooth curve control codes need FXL file version 4 or later.
- Rectangle and circle control codes need FXL file version 5 or later.
- Horizontal and vertical offset control codes need FXL file version 6 or later.
- Block control codes need FXL file version 8 or later.

To upgrade older version files select **File / Save As** in the Feature Definition Manager and select the latest **Save As** format.

Block codes


Blocks must be created or edited using the Feature Definition Manager in Survey Office. If required, you can change the feature code and feature code description for a block using Origin.

Block control codes have a **Control code action** field that controls the behavior of the block:

Control code action	Enter this control code to...
Rotation	Rotate the block by the specified value about the current point in a clockwise direction.
Scale X	Scale the block along the X axis.
Scale Y	Scale the block along the Y axis.
Scale Z	Scale a 3D block along the Z axis.
From 1 point	Specify the construction of a block using the current point as the insertion point.
From 2 points	Specify the construction of a block using the current and next point as insertion

Control code action	Enter this control code to...
	points.
From 3 points	Specify the construction of a block using the current and next two points as insertion points.

Symbology

Origin supports both point symbols and block symbols, including 1 point, 2 point, and 3 point blocks. To view symbols in the map, tap  and select **Settings**, and then from the **Point symbols** field select **Feature symbols**. See [Map settings, page 181](#).

The colors defined in the FXL file created using the Feature Definition Manager software may not be identical to the colors used by the Origin software.

Colors can be defined in the Feature Definition Manager as **By layer** or **Custom**.

- When **By layer** has been defined, Origin uses the color defined in the FXL file. If a layer color is not found then Origin uses black.
- When **Custom** has been defined, by default Origin uses the closest color match to the Origin palette.


Where **By layer** or **Custom** has been defined, you can change the default Origin color to a different color but if you do this you cannot change it again.

The Origin software does not fill feature coded polygons.

To add or edit a feature library in Origin


NOTE – Feature codes created using Origin are used only to draw feature geometry. To create a feature library that contains attribute definitions you must use the Feature Definition Manager provided with Survey Office.

To add an existing feature library

1. Tap  and select **Settings / Feature Libraries**.
2. Tap **Browse**.
3. Navigate to the location of the feature library file.
4. Tap the file to select it and tap **Accept**.


The file is copied to the **System Files** folder in the **Spectra Geospatial Data** folder and appears in the **Select feature library** list.

To create a new feature library in the Origin software

1. Tap  and select **Settings / Feature Libraries**.
2. Tap **New**.
3. Enter the name.
4. Tap **Accept**.

To add or edit feature codes in the feature library

TIP – While you can edit features codes in an existing feature library in Origin, Spectra Geospatial recommends editing feature codes using the Feature Definition Manager provided with Survey Office. This will help to ensure field crews are using the same feature library.

1. Tap  and select **Settings / Feature Libraries**.
2. Select the feature library in the list. Tap **Edit**.
3. To add a new feature code:
 - a. Tap **Add**.
 - b. Enter the **Feature code**.

The maximum length of this field is 20 characters. Spectra Geospatial recommends keeping code names short and meaningful to allow multiple codes to be selected for a point. When selecting codes for a point, the maximum length of the **Code** field is 60 characters.

Feature code names that contain spaces are shown in Origin with a small dot between the words, for example, **Fire·Hydrant**. These dots do not appear in the office software.


- c. If required, enter a **Description** for the code.

By default, if the code is a control code the value of the **Control code action** field appears in the **Description** field when viewing the **Code list**.

- d. Select the **Feature type**.
- e. Select the **Layer**.

If there were no layers defined when the Feature Library FXL file was created using the Feature Definition Manager in Survey Office, then the **0** layer is selected.

 
- f. If the **Feature type** is a:
 - **Point**, select the symbol used for the point.
 - **Line**, select the **Line style**, **Field line style**, and **Line color**.
 - **Polygon**, select the **Line style**, **Field line style**, and **Border color**.
 - **Control code**, select the control code action.

TIP – Lines and polygons are shown in the map using the simple solid or dashed **Field line style** unless you choose to display feature symbols in the map. To do this, tap  in the map toolbar and select **Settings**, and then in the **Display options** group box, select **Feature library symbols** in the **Symbols** field. For more information, see [Map settings, page 181](#).

- g. Tap **Accept**.
4. Tap **Store**.

Cogo settings

To configure Cogo settings for the job:

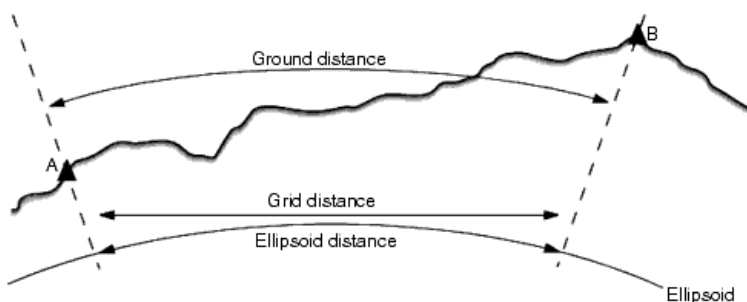
1. Tap  and select **Job**. The current job is already selected.
2. Tap **Properties**.
3. Tap **Cogo settings**.
4. Change the fields as required.

Distance display and calculation

The **Distances** field specifies how distances are displayed and calculated in the software. The **Distances** field appears in the **Cogo settings** screen and in some Key in and Cogo **Options** screens.

When Distances are set to...	The length or area is computed...
Ground	At the mean ground elevation
Ellipsoid	On the ellipsoid surface
Grid	Directly off the grid coordinates

The following diagram shows the options between points A and B.



NOTE – If the coordinate system for a job is defined as **Scale factor only**, ellipsoid distances cannot be displayed.

Ground distance

A ground distance is the horizontal distance calculated between the two points at the mean elevation parallel to the chosen ellipsoid.

If an ellipsoid has been defined in the job and the **Distances** field is set to **Ground**, the distance is calculated parallel to that. If no ellipsoid has been defined, the WGS-84 ellipsoid is used.

Ellipsoid distance

If the **Distances** field is set to **Ellipsoid** then a correction is applied and all distances are calculated as if on the local ellipsoid, which usually approximates to sea level. If no ellipsoid has been specified, the WGS-84 ellipsoid is used.

Grid distance

If the **Distances** field is set to **Grid**, the grid distance between two points is displayed. This is the simple trigonometrical distance between the two sets of two-dimensional coordinates. If the coordinate system for the job is defined as **Scale factor only**, and the **Distances** field is set to **Grid**, the software displays ground distances multiplied by the scale factor.

To perform Cogo calculations in a **No projection / No datum** coordinate system, set the **Distances** field to **Grid**. The software then performs standard Cartesian computations. If the grid distances you enter are distances on the ground, the new computed grid coordinates will be ground coordinates.

NOTE – A grid distance between two measured GNSS points cannot be displayed unless you have specified a datum transformation and a projection, or performed a site calibration.

Curvature correction

In Origin, all ellipsoid and ground distances are parallel to the ellipsoid.

Sea level (ellipsoid) correction

Select the **Sea level (ellipsoid) correction** check box if the horizontal components of distances measured with a conventional total station should be corrected to their equivalent length on the ellipsoid.

In most cases, Spectra Geospatial recommends selecting the **Sea level (ellipsoid) correction** check box to compute the correct geodetic grid coordinates from the total station observations. However, if the local ellipsoid was inflated to provide computed ground coordinates, but the point heights were not changed to be

in terms of the inflated ellipsoid, do not select sea level correction; for example, when using jobs with Minnesota county coordinate systems.

The sea level correction is carried out using the average height (not elevation) of the line above the local ellipsoid. If both ends of the line have null heights, the default height specified for the job is used to compute this correction.

The formula used for the computation is:

Ellipsoid horizontal distance = $\text{HzDist} \times \text{Radius} / (\text{Radius} + \text{AvHt})$

HzDist:	Horizontal component of measured distance
Radius:	Ellipsoid semi-major axis
AvHt:	Average height above local ellipsoid of the measured line

NOTE –

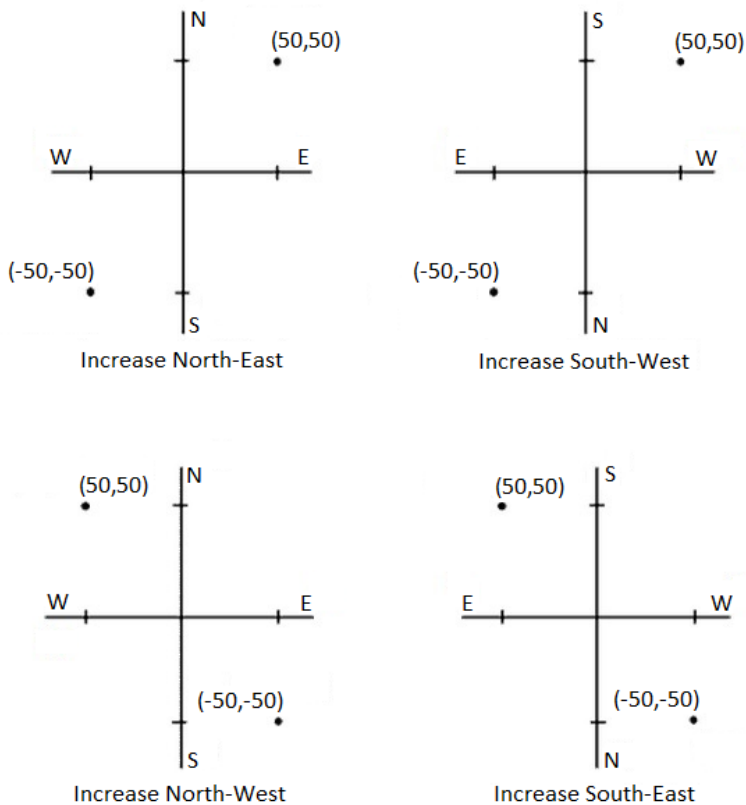
- In jobs where the coordinate system is configured to provide ground coordinates, the **Sea level (ellipsoid) correction** is always enabled and cannot be edited. This is because the sea level correction is already applied in the computation of the ground coordinates.
- In a Scale only job, there is no local ellipsoid available because this is not a geodetic projection. In this case, the correction computation defaults to using the semi-major axis of the WGS-84 ellipsoid (6378137.0 m) as the radius value. The sea level correction in Scale only jobs also uses the point elevations because there are no ellipsoidal heights available.
- You cannot set a default height for Scale only jobs. This means that if the **Sea level (ellipsoid) correction** is enabled in a Scale only job, you must use 3D points, or null coordinates will be computed because it is not possible to compute the sea level correction.

Grid coordinate direction

The Grid coordinate direction setting used by the software depends on the coordinate system that you defined for the current job. The **Grid coords** field shows that the grid coordinates increase in one of the following sets of directions:

- north and east
- south and west
- north and west
- south and east

The following diagram shows the effect of each setting.

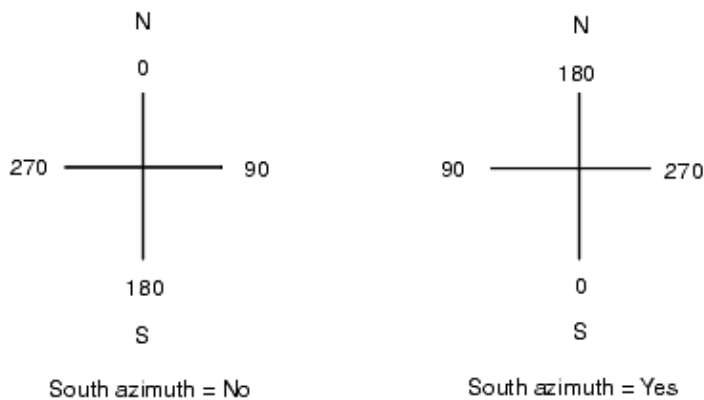


Azimuth display

The azimuth displayed and used by the software depends on the coordinate system that you defined for the current job:

- If you defined both a datum transformation and a projection, or if you selected **Scale factor only**, the grid azimuth is displayed.
- If you defined no datum transformation and/or no projection, the best available azimuth is displayed. A grid azimuth is the first choice, then a local ellipsoidal azimuth, then the WGS-84 ellipsoid azimuth.
- If you are using a laser rangefinder, the magnetic azimuth is displayed.

If a south azimuth display is required for the selected coordinate system, the **South azimuth** field is set to **Yes**. All azimuths still increase clockwise. The following diagram shows the effect when the **South azimuth** field is set to **No** or **Yes**.



Neighborhood adjustment

To apply a neighborhood adjustment to all conventional foresight observations made from a Station setup plus or Resection, and to all GNSS observations made in a job that has a valid site calibration, select the **Neighborhood adjustment** check box.

Neighborhood adjustment uses the residuals from **Station setup plus, Resection** or **GNSS site calibration** to calculate delta grid values to apply to subsequent observations made during the survey. Each observation is adjusted according to its distance from each of the backsight points (for a conventional survey) or calibration points (for a GNSS survey). The following formula is used to calculate the weight to give the residuals of each backsight or calibration point:

$p = 1/D^n$ where:

p is the weight of the backsight or calibration point

D is the distance to the backsight or calibration point

n is the weight exponent

A weighted average is then computed and the resulting delta values are applied to each new observation to get an adjusted grid position.

NOTE - A high value for the weight exponent results in low impact (weight) of distant backsight or calibration points.

For **Neighborhood adjustment** to be applied, the station setup or calibration must have at least 3 known points with 2D grid residuals. That is, if you perform a:

- Station setup plus, you must have HA VA SD observations to at least 2 backsight points, each with known 2D coordinates.
- Resection, you must have HA VA SD observations to at least 3 backsight points, each with known 2D coordinates.
- Calibration, you must have GNSS observations to at least 3 control points, each with known 2D coordinates.

NOTE –


- Neighborhood adjustment will use a **GNSS site calibration** only if it has been observed in the current job. This is because a GNSS calibration that is part of the coordinate system in an uploaded job does not include the GNSS calibration residuals.
- For **Station setup plus**, the known station coordinate is included in the neighborhood adjustment calculation. In the calculation, the station coordinate is given grid residuals of zero.
- Neighborhood adjustment is a 2D-only adjustment. Any vertical residuals from station setup or calibration are not used in the neighborhood adjustment calculations.
- Neighborhood adjustment using GNSS site calibration residuals is applied to all WGS-84 points in the job, not just GNSS observations.

WARNING – Make sure that the backsight or calibration points are around the perimeter of the site. Do not survey outside the area enclosed by the backsight or calibration points (and for Station setup plus, the station point). The neighborhood adjustment is not valid beyond this perimeter.

Reference azimuth

3D map views are always oriented to the **Reference azimuth**. The plan view in the map is oriented to North by default, but you can choose to orient it to the **Reference azimuth** if required.

By default, the **Reference azimuth** field shows the value entered in the **Reference azimuth** field of the **Cogo settings** screen. The **Reference azimuth** field is also shown in the Map settings screen. Editing the **Reference azimuth** field in one screen updates the **Reference azimuth** value in the other screen. When staking a point in a GNSS survey, you can also edit the **Reference azimuth** value when you select **Relative to azimuth** from the **Stake** field. See [GNSS stake methods, page 594](#).

The **Reference azimuth** field also updates if you orbit the map and then tap the **Reset limits**  button rotate the **Limit box** so that the faces of the **Limit box** align with map data. See [Limit box, page 167](#).

To reorient the map, for example to more precisely align the faces of the **Limit box** with map data such as the front facade of a model, enter the required value in the **Reference azimuth** field. To find the reference azimuth value, tap the line in the map you want to orient the map to, and then tap **Review**. In the review pane, if required select the line from the list and tap **Details**.

Magnetic declination

Set the magnetic declination for the local area if magnetic bearings are being used in the Origin software. You can use magnetic bearings if you choose the **Cogo / Compute** point using the Brng-dist from a point method.

The magnetic declination defines the relationship between magnetic north and grid north for the job. Enter a negative value if magnetic north is west of grid north. Enter a positive value if magnetic north is east of grid north. For example, if the compass needle points 7° to the east of grid north, the declination is +7° or 7°E.

NOTE –

- Use the published declination values if available.
- If grid north in the job has been rotated away from true north due to the coordinate system definition (possibly via a GNSS calibration) then this must be allowed for in the magnetic declination specified.

Advanced Geodetic

Select **Advanced Geodetic** to enable the following options:

- Station setup scale factor – see [Station setup options, page 301](#)
- Helmert transformation for resection – see [To complete a resection, page 306](#)
- Local transformations – see [Transformations, page 248](#)
- SnakeGrid projections – see [Projection, page 89](#)

Averaging

The **Averaging** field defines how duplicate points are averaged. Select one of the following options:

- Weighted
- Unweighted

If **Weighted** is selected, points in an average are weighted as follows:

- GNSS positions use the horizontal and vertical precisions of the observations. Observations that do not have precisions, and keyed-in points, use 10 mm for horizontal and 20 mm for vertical.
- For conventional observations that include a measured slope distance, horizontal and vertical standard errors are computed based on the standard errors of the components of the observation.

The standard error used for weighting the horizontal position is a combination of those used for the horizontal direction and horizontal distance weights from the resection calculation.

For more information, refer to the **Resection Computations in Spectra Geospatial Origin Reference Guide**, which can be downloaded from the [PDF guides page](#) of the Trimble Access Help Portal.

Averaging uses **Least squares** to average points/observations stored with the same name in the job.

 
- If the average includes positions in any coordinates except ECEF or **Global** coordinates, the average is stored as a grid.
- GNSS observations and conventional observations that include a measured slope distance are resolved to grid and then averaged using Least squares. The intersections of angles only conventional observations are averaged using Least squares.

- Conventional angle-only observations are only added to the solution if there are no other positions or observations. Any Mean Turned Angle (MTA) observed to the point is ignored and the original observations are used to compute the average position.
- When the average includes only positions in ECEF or **Global** coordinates, the averaged grid position is converted to **Global** coordinates and stored. When the average contains only grid positions and conventional observations, or a mixture of position types, then the averaged grid position is stored as a grid.

NOTE - An averaged position is not automatically updated if the positions used to compute the average are changed. For example, if the calibration is updated, if observations are transformed or deleted, or if new observations of the same name are added, recompute the averaged position.

Additional settings

To configure additional settings, such as adding description fields or configuring the point range for the job, or to add measured points to a CSV file:

1. Tap  and select **Job**. The current job is already selected.
2. Tap **Properties**.
3. Tap **Additional settings**.
4. Change the fields as required.


Use descriptions

To display two additional description fields in some software screens, enable the **Use descriptions** switch and then enter the **Description 1 label** and **Description 2 label**.

The description fields are similar to **Code** fields because they enable you to add additional information to data. They do not use feature code libraries, and they do not support attributes.

Once the additional descriptions fields are enabled, they are available in the following features of the Origin software:

- Measure topo, Continuous topo or Measure codes
- Stakeout
- Point manager or Review job
- Key in point, line, and arc
- Compute point, Compute average, Transformations, or Traverse
- Station setup
- Wildcard search

Each of the **Description** fields remembers the descriptions that are entered. To view the stack of previously used descriptions, tap  next to the **Description** field.

The description field data is available in Trimble DC files as **Note** records. If required, you can export the data stored in the description fields.

Feature library – Use attributes of base code

Select the **Use attributes of base code** check box to provide attributes for the complete code, or from a portion of the code – the "base code".

Typically, base codes are used when you use the + **Str** and - **Str** softkeys to "string" feature codes.

For example, when you code a fence where all observations coded "Fence01" are joined together and all observations coded "Fence02" are joined together, and so on, and they all have the same attributes. In this example, you can create feature code libraries that contain all the "Fence**" codes, or contain just the base code "Fence".


If you do string codes, and the feature library includes only the base code, then select the **Use attributes of base code** check box.

If you do not string codes, or if you do string codes but you include the entire code in the feature library, then you are not using base codes and you should clear the **Use attributes of base code** check box.

For more information, see [Use attributes of base code, page 544](#) in the [Measure code options, page 544](#).

Add to CSV file

Enabling the **Add to CSV file** option allows you to add specific measured points to a CSV file, for example a list of control points.

To select the file, move the **Enable** switch to **Yes** and then enter the **CSV file name** or tap  to browse to the file and select it.

When this option is enabled, an **Add to CSV file** check box appears in the **Measure points** form during a GNSS survey or the **Measure topo** and **Measure rounds** forms during a conventional survey. Select the check box to add the current point to the CSV file.

Point name range for the job

To specify the minimum and maximum point name for the job, enable the **Apply point name range** switch and then enter the required point names.

NOTE – The point names must be numeric. Numbers that include decimal points or alphabetic characters are ignored. Negative and positive numbers are supported.

Next point names

Origin supports using different point names for different types of points. When creating a new job you can configure whether the point names in the new job auto increment from the last used job, or start based on

the values set in your job template. You can edit the next point name fields when creating the new job or at any time in an existing job.

To specify the next point name for different point types, enter the required point name in the appropriate field(s). To use the same point name thread for different types of points, for example Topo points and Rapid points, set the **Next point names** for both **Measure points** and **Rapid points** to the same name.

Available point types include measured points, stake out points, keyed in points, construction points, laser points, lines, arcs and polylines.


When creating a new job:

- If you have selected **Last used job** as the template, the default values for the next point name fields will continue from the last used job.
- If you have selected a template, select one of these options to determine the default name of the next point:
 - **Continue from last job:** Populates the next point name fields with the next available point name from the **last used job**.
 - **Template:** Populates the next point name fields with the names specified in the template.

Media files

Configure media file settings at the job level so that when the image is captured the Origin software knows whether to link the file to the job or a point in the job. You can now configure a standard format for naming media files, so that you can more easily identify the media file that corresponds to a job or point.

For more information on media files and how to use them, see [Working with media files, page 693](#).

1. Tap  and select **Job**. The current job is already selected.
2. Tap **Properties**.
3. Tap **Media files**.
4. In the **Link to** field, select how the images will be linked. Choose from:
 - **Job** – linked to the job
 - **Previous point** – linked to the latest point stored
 - **Next point** – linked to the next point to be stored
 - **Point name** – linked to the point entered in the **Point name** field
 - **None** – the image is saved but is not linked to the job or a point

NOTE -

- For all options, the media file is always saved to the **<project>\<job name> Files** folder. If there is no job open, the media file is saved to the current project folder.
- You can capture the image at any time. However, if the points have attributes but do not include a file name attribute, then avoid capturing the image when the attributes form for a point is open. If you capture an image when the attributes form is open then the software looks for a file name attribute to attach the image to. If no file name attribute is found then the file is not linked and must be linked manually. See [To link an image to an attribute, page 547](#).

5. Select the **Show with new media file** option to show the media file screen immediately after capturing an image. This enables the **Link to** method to be changed and, if linking by point name, the point name. Changing this setting applies the setting to all jobs.
6. If the **Link to** option was set to **Previous point**, **Next point**, or **Point name**, you can select **Geotag images**. See [To geotag an image, page 694](#).
7. Use the fields in the **Image name** group boxes to create a standard format for image file names that are linked to the job, entities in the job, or to attributes.

- a. Select the elements to include in the file name.

For any image you can include the job name, date and time.

For images linked to entities in the job or to attributes of an entity, you can include the entity name and code (for example, the point name and code).

An underscore is used to separate each element in the file name.

- b. To add the identical custom text to every image file name, select **Custom string** from any **Element** field, and then enter the text in the **Custom string** field.

When you use the **Custom string** option, the software automatically appends a number to the end of the custom string if required to ensure a unique file name.

TIP - If you have selected the **Show with new media file** option, you will be able to edit the media file name in the media file screen after capturing the image. When the image is linked to the **Next point**, the media file screen shows a placeholder file name which will be modified with the correct details when the next point is stored.

8. Tap **Accept**.

Transferring files to and from the controller

Origin supports the following methods for transferring files between your controller and the cloud, your organization's network, an office computer or between controllers.

All data used by the Origin software must be stored in the appropriate folder in the **Spectra Geospatial Data** folder. See [Data folders and files](#).

Working with cloud data

Downloading data from and uploading data to the cloud is the simplest method of transferring data to and from the device. When you are signed in to Trimble Connect, projects and jobs that reside in the Trimble Connect cloud collaboration platform and assigned to you appear automatically in the **Projects** and **Jobs** screens of the Origin software.

NOTE – To sign in to Trimble Connect, you must have configured an internet connection.


Use the Origin software to download projects and jobs to the controller and then upload changes to the cloud. See Projects & jobs, page 52.

Transferring files from your organization's network

You can configure an internet connection to your organization's computer network and then log in to the network to view files and folders on the network.

If you are transferring job files, you can use the **Copy** job function in Origin to transfer the job between the controller and a folder on the network. See To copy job files, page 75.

If you are transferring project files:


- Use **File Explorer** to copy files to and from the controller. To open **File Explorer** from the Origin software, tap  and select **Job data / File Explorer**.
- Use the Origin file browser which appears when performing software functions that enable you to select files or folders, for example when exporting the job. To view available network drives, tap **This controller** in the Origin file browser and then select the drive. See Selecting files and folders, page 124.

Transferring files from a USB drive

You can use a USB drive to transfer files from one computer to another. A USB drive, also called a flash drive or USB stick, plugs into the USB port of the controller.

NOTE – For Android controllers, USB drives should be formatted to the FAT32 format. When you insert a USB drive into a FOCUS controller, it can take up to 30 seconds for the USB drive to appear in the list of storage locations.



If you are transferring job files, you can use the **Copy** job function in Origin to transfer the job between the USB drive and the project folder. See To copy job files, page 75.

If you are transferring project files, use **File Explorer** to copy files to and from the USB drive. To open **File Explorer** from the Origin software, tap  and select **Job data / File Explorer**.

Using a USB cable to transfer files (Android devices only)

If the Spectra Geospatial controller is running Android, you can transfer files between the controller and a Windows computer.

1. To ensure the latest changes in the job are transferred, close the job in Origin. To do this, close the Origin software or open a different job.
2. To put the controller into **file sharing mode**:
 - If the controller is a FOCUS, use the Hirose-to-USB (PC) cable. The controller automatically enters file sharing mode when the cable is connected.
 - For any other controller running Android, use a USB cable. To put the controller into file sharing mode, connect the cable and tap the **USB charging this device** notification on the Android device (you may need to swipe down from the notifications area at the top of the screen to see it). When you tap the notification, the **[Use USB to]** pop-up screen appears. Tap the **[Transfer files]** option.
3. To put the controller into file sharing mode, connect the cable and tap the **USB charging this device** notification on the controller (you may need to swipe down from the notifications area at the top of the screen to see it). When you tap the notification, the **[Use USB to]** pop-up screen appears. Tap the **[Transfer files]** option.
4. Once the controller is in file sharing mode, use **File Explorer** on the Windows computer to copy files to and from the controller.

If you cannot see the **Spectra Geospatial Data** folder, in **File Explorer** tap  and select **[Show internal storage]**. In **File Explorer** tap  and select the device name. The **Spectra Geospatial Data** folder appears in the list of folders on the device.


TIP – If the folders in the **Spectra Geospatial Data** folder do not appear as expected in **File Explorer**, restart the controller.

Data folders and files

All data used by the Origin software must be stored in the appropriate folder in the **Spectra Geospatial Data** folder.

The location of the folder depends on the controller operating system:

- Windows: **C:\ProgramData\Spectra Geospatial Data**
- Android: **<Device name>\Spectra Geospatial Data**

To view the **Spectra Geospatial Data** folder from the Origin software, tap  and select **Job data / File Explorer**.

NOTE –

- If you cannot see the **Spectra Geospatial Data** folder on an Android device, in **File Explorer** tap  and select **[Show internal storage]**. Then in **File Explorer** tap  and select the device name. The **Spectra Geospatial Data** folder appears in the list of folders on the device.
- To see the **System Files** folder on a Windows device, select **View** at the top of the **File Explorer** window and select the **Hidden items** check box.
- The **Projects** folder is created in the **Spectra Geospatial Data** folder the first time you run the Origin application.

TIP – To pin the **Spectra Geospatial Data** folder to your **Favorites** list in Windows Explorer, select **File explorer** from the **Job data** menu in Origin. In Windows Explorer, scroll up to the **Favorites** list at the top of the left pane. Right click **Favorites** and select **Add current location to Favorites**.

Project folders

Each project is stored in its own folder in the **Spectra Geospatial Data\Projects** folder.

Project files are stored in the appropriate **<project>** folder and can be used by any job in that project.

Project files are typically map files, alignments, or control point files. The following file types are stored in the **<project>** folder:

File type	File extension
Job	.job
JobXML	.jxl
CSV (comma delimited)	.csv
TXT (comma delimited)	.txt
DTM (Digital Terrain Model)	.dtm
TTM (Triangulated Terrain Model)	.ttm
IFC (Industry Foundation Classes)	.ifc, ifczip
TAP (Trimble Additional Properties)* (For IFC file of same name when station interval settings are configured)	.tap
TrimBIM (Trimble BIM)	.trb
DWG (Drawing)	.dwg

File type	File extension
NWD (NavisWorks Drawing)	.nwd
DXF (Drawing Exchange Format)	.dxf
ESRI Shapefiles	.shp
Georeferenced map file world files	.dwgw, .dxfw, .icw, .ifcw, .tbw, .trbw, .wld
Georeferenced background images	.tif, .bmp, .jpg, .png
Georeferenced background image world files	.bmpw, .bpw, .jgw, .jpegw, .jpgw, .pgw, .pngw, .tfw, .wld
RXL (Trimble Road or alignment)	.rxl
LandXML	.xml
GENIO road	.crd .inp .mos
12d Model files	.12da

NOTE –

- Where possible, Spectra Geospatial recommends using the job (.job) file created in Origin in preference to the equivalent JobXML or JXL (.jxl) file created in Survey Office. For more information, see [Using existing jobs with the latest version of Origin, page 24](#).
- All .xml files except the GNSSCorrectionSource.xml and GNSSInternetSource.xml are stored in the **<project>** folder. The GNSSCorrectionSource.xml and GNSSInternetSource.xml files must be stored in the **System Files** folder.
- Georeferenced map file world files are created when you use the **Georeference map** Cogo function in Origin and contain information about the transformation.
- Georeferenced background image files cannot be created in Origin. GeoTIFF files do not require a world file. JPG files must be in 24-bit color; pure grayscale JPG files are not supported.
- Htm reports (.htm) and comma delimited files (.csv) that are created when you export data using the **Export** function in the **Jobs** screen are also stored in the **<project>** folder, unless you select a different export folder.
- The **.wfs Files** folder appears in the **<project>** folder when you connect to a web feature service and then save the features as a .wfs file.
- A TAP file appears in the **<project>** folder when you configure station interval settings for an IFC file. For more information, see [Stations available for stakeout, page 649](#).

Job folders

Each job is stored as a .job file in the appropriate **<project>** folder.

If required, you can store jobs in folders in the **<project>** folder. For Origin to be able to use the job, the combined length of the project folder name and folder names must not exceed 100 characters. The name of the job is not included in the 100-character limit.

To move a job to a different folder, use the **Copy job** function in Origin to copy the job and all linked files to the new folder and then delete the original job. See [To copy job files, page 75](#).

NOTE - To avoid data synchronization issues, do not move jobs downloaded from Trimble Connect to a different folder.

Each job has a **<job name> Files** folder which contains files such as image or GNSS data files that are created as work is done on the job.

Files created while working in the job are stored in the **<job name> Files** folder. These include images, point clouds, and GNSS data files:

File type	File extension	Subfolder
GNSS data	.t01, .t02, .t04	
Images	.jpg	
Original images	.jpg	<project>\<job name> Files\Original Files

Auto-generated folders are created as required, inside the **<job name> Files** folder:

- **<project>\<job name> Files\Original Files** is created when you draw on or annotate an image file. The original, unedited image is copied to the **Original Files** folder.

To easily copy jobs and associated files from one folder to another, or from one controller to another using an external drive such as a USB drive, tap **Copy** in the **Jobs** screen.

System files folder

All system type files are stored in the **Spectra Geospatial Data\System Files** folder. System files are files that can be used by any project or job, such as survey styles, coordinate system files, and feature library files.

NOTE - System files cannot be accessed if they reside in another folder.

The following files must be stored in the **System Files** folder:

File type	File extension
Feature Library files (TBC)	.fxl
Survey Style files	.sty
Geoid Grid files	.ggf
Combined Datum Grid files	.cdg
Configuration	.cfg
Projection grid files	.pjpg
Shift grid files	.sgf
SnakeGrid coordinate system files	.dat
UK National Grid files	.pgf
Broadcast RTCM transformation files	.rtd
Antenna files	.ini
GNSSCorrectionSource file	.xml
GNSSInternetSource file	.xml
Cadastral tolerances file	.xml
Custom Import file definitions	.ixl
XSLT Custom Export Stylesheet files	.xsl
XLST Custom Stakeout Stylesheet files	.sss
Measure Codes Database files	.mcd
Coordinate System Database files	.csd
Web map service configuration file	.wms
Web map tile service configuration file	.wmts
Echo sounder definition file	.esd

File type	File extension
Utility locator definition file	.uld

Web map service (.wms) and web map tile service (.wmmts) files are created when a WMS or WMTS is added in the **New web map** screen. They can be copied between projects and controllers.

The **Cache** folder appears in the **System files** folder when DWG, IFC, or NWD files are loaded in Origin. Caching DWG, IFC, and NWD files on the controller enables faster reloading of these files.

NOTE – Stakeout stylesheet files (.sss) and Custom Export stylesheet files (.xsl) can be located in the language folder or **System Files**. Translated Stakeout stylesheet files and translated Custom Export stylesheet files are typically stored in the appropriate language folder.

Language, sound, and help files

Language files (.lng), sound files (.wav) and help files are stored in the appropriate language folder.

The location of the folder depends on the controller operating system:

- Windows: **C:\Program Files\Spectra Geospatial\General Survey\Languages\<language>**
- Android: **<Device name>\Spectra Geospatial Data\Languages\<language>**

Selecting files and folders

When performing software functions that enable you to select files or folders, the software shows the Origin file browser.

Depending on the software screen from which you open the Origin file browser, you may be able to select files and browse folders from any of the following locations:

- **This controller**

You can select and use files from their current file location on the controller. System files are copied to the **System Files** folder in the **Spectra Geospatial Data** folder.

The following locations are pinned for **This controller**:

- The main internal storage location on the controller.
- The **Projects** folder in the **Spectra Geospatial Data** folder.
- The current project folder.
- The default **Downloads** folder for the controller operating system.

TIP – To add your own favorite folders, navigate to the folder and then tap and hold the folder in the right pane and select **Pin to shortcuts**.

- **Trimble Connect**

If you are working in a cloud project and the controller is connected to the internet, you can select files from Trimble Connect when adding files to the **Layer manager**.

Files you select from Trimble Connect are automatically downloaded to the appropriate location in the **Spectra Geospatial Data** folder.

- **SD memory card**

If the controller has an SD memory card (flash storage) or microSD card installed, you can select and use files on the memory card from their current file location.

- **USB drive**

If you insert a USB drive to the controller, you can select files from the USB drive. Linked files you select from a USB drive are first copied to the **<project>** folder or the **System Files** folder in the **Spectra Geospatial Data** folder on the controller and then linked to the job.

NOTE – For controllers running Android, USB drives should be formatted to the FAT32 format. When you insert a USB drive into a FOCUS controller, it can take up to 30 seconds for the USB drive to appear in the list of storage locations.

- **Network location**

If you have configured an internet connection to your organization's computer network and signed in to the network then you can view files and folders on the network and use them from their current network location. Tap **This controller** and then select an available network drive.

Modifying system files before sharing

You can modify some of the files in the **C:\ProgramData\Spectra Geospatial Data\System Files** folder in a text editor to meet your requirements and then copy those files to the other controllers.

NOTE – Spectra Geospatial recommends saving any modified system files with a custom name. If you keep the original name, then the files will be replaced when you upgrade the controller and any custom changes are lost.

To set up default job properties

To streamline the process of creating a job, create a job and configure the job properties that you want to reuse and then save the job as a template.

To set default values for the **Reference**, **Description**, **Operator**, or **Notes** fields, or to set these fields as "required" so that values must be entered in these fields, edit the **JobDetails.scrpf** file in the **C:\ProgramData\Spectra Geospatial Data\System Files** folder. The settings in the **JobDetails.scrpf** file are read each time the Origin application is run. For more information on editing the file, refer to the notes provided at the top of the **JobDetails.scrpf** file.

To modify the list of descriptions used, edit the **descriptions.xml** file in the **C:\ProgramData\Spectra Geospatial Data\System Files** folder. The **descriptions.xml** file is created when you enter descriptions for points. The description stack is unique for each description field.

To share groups of codes

To share groups of codes between controllers, create the code groups on one controller using the **Measure codes** screen. Code groups, and the codes within each group, are stored in a Measure Codes Database (MCD) file in the **C:\ProgramData\Spectra Geospatial Data\System Files** folder.

If you do not use a feature library, the software creates a **Default.mcd** file and this file is used whenever a job has no assigned feature library. Once you have set it up, you can copy the **Default.mcd** file to other controllers.

If you use a feature library, the MCD file is tied to that feature library and has a matching name. You can copy the MCD file to other controllers, but to use it in the software the associated feature library must also be on the controller and assigned to the job.

To lock a survey style

To prevent a survey style from being edited in the field, use File Explorer to navigate to the **C:\ProgramData\Spectra Geospatial Data\System Files** folder. Right-click the required survey style file and select **Properties**. In the **General** tab, select **Read-only** and tap **OK**.

In Origin, the lock symbol to the left of the style name indicates that you cannot edit this style.

NOTE – A locked style will be updated to reflect any changes made during the auto-connect cycle when connecting to an instrument.

To customize the coordinate system database

To customize the coordinate system database used by the Origin software, you must use the Coordinate System Manager software to modify the Coordinate System Database (CSD) and then transfer the modified database to the **System Files** folder on the controller. When a **custom.csd** file exists in the **C:\ProgramData\Spectra Geospatial Data\System Files** folder, the Origin software uses the **custom.csd** database instead of the coordinate system database built into the software.

For more information, see [To customize the coordinate system database, page 94](#).

To edit the list of antennas

The Origin software includes an **Antenna.ini** file that contains a list of antennas that you can choose from when creating a survey style. You cannot edit this list in the Origin software. To shorten the list or add a new antenna type, edit the **Antenna.ini** file in the **C:\ProgramData\Spectra Geospatial Data\System Files** folder.

To edit the content and format of the delta display or reports

The content and format of the delta display that is shown during stakeout or when measuring a point relative to a 3D axis is controlled by XSLT stylesheets. XSLT stylesheets are also used to control the output and format of reports generated during export or to create custom import file formats. You can edit the existing stylesheets or create new formats in the office and then copy them to the **C:\ProgramData\Spectra Geospatial Data\System Files** folder on the controller. For more information on editing stylesheets, see [Custom import formats, page 656](#) and [Custom export formats, page 691](#).

Maps and models

The Map provides a rich view of all points, lines and polygons in the job, as well as:

- 3D models in linked BIM files
- points, lines and polygons in linked files
- data from background maps

Adding data to the map

You can add data to the map that is not in the job using the **Layer manager**. Use the **Layer manager** to:

- Link point files, map files, (including BIM models), scans and surface inspections to the job.
- Link background maps from a variety of sources and in various formats.

For more information, see [Adding data to the map, page 129](#).

Viewing and reviewing items in the map

Use the view and selection tools in the map to:

- Locate and view the data in the map you are most interested in.
- Select items in the map and review information about them.
- Tap **Review** to review details of the selected items.

For more information, see [Viewing and reviewing items in the map, page 156](#).

Adding points and lines to the map

From the map you can add new points, lines, and polygons to the map (and the job) using a variety of software functions:

- Measure new points, lines, and polygons using position information from the connected GNSS receiver or conventional survey instrument.
- Key in new points and lines, if needed.
- Perform measurements and calculations using Cogo functions.
- Select items in the map and use them in other software functions, for example to perform a Cogo calculation or to create a surface.

For more information, see [Adding points and lines in the map, page 186](#).

Staking from the map

Select items in the map and stake them out using position information from the connected GNSS receiver or conventional survey instrument.

For more information, see [Staking from the map, page 263](#).

As-built inspection

Use the inspection and comparison tools to check as-built structures against the design.

For more information, see [As-built inspection, page 265](#).

Map toolbars

Tools on the map toolbars are referred to throughout the **Maps and models** section of the Origin Help.

For a useful reference to all of the tools available in the map, see [Map toolbars, page 266](#).

Adding data to the map

You can add data to the map that is not in the job by:

- linking point files, map files, scans and surface inspections to the job and making them visible in the map.



When you select an item, such as a point, from a linked map file and use it in Origin during stakeout, to perform a Cogo calculation, or to create a point in the job, Origin copies the attributes of the item from the file and stores them with the point in the job.

- adding background maps from a variety of sources and in various formats.

Background maps provide context for the other data in the map. Items in background maps may be selectable for review but cannot be used during stakeout, to perform a Cogo calculation, or to create a point in the job.

Linking files to the job

To link data to the job, use the **Layer manager**. For a list of file types you can link to the job, see [Supported linked file types, page 130](#).

Tap  in the map toolbar to open the **Layer manager** and select the appropriate tab. Tap the file once to link it to the job (✓), and tap it again to make items in the file selectable (). To add files from a different location to the project folder, tap **Add**.

Linked map files typically contain layers. To make only some layers visible or selectable, in the **Map files** tab, tap the arrow next to the file name and then tap each layer once to hide it, or twice to make it visible but not selectable. Tap the layer again to make it visible and selectable.

For more information on linking files, see [Managing layers using the Layer manager, page 137](#).

Adding background maps

To add a background map to the job, use the **Layer manager**. For a list of map background types you can add to the job, see [Adding background maps, page 146](#).

For more information on adding background maps, see:

- [Trimble Maps provides a simple, easy-to-use way to obtain background map imagery for your Origin jobs., page 147](#)
- [Web maps, page 148](#)
- [Background image files, page 155](#)

Supported linked file types

Linked files are **files linked to the job** that contain points, lines, arcs, polylines, and other map items such as alignments and surfaces that you want to be able to view and select in the map.

To link files to the job, use the **Layer manager**. See [Managing layers using the Layer manager, page 137](#).

Supported linked file types are:

- [BIM models:](#)
 - AutoCAD Drawing files (.dwg)
 - IFC (Industry Foundation Classes) files (.ifc, .ifczip)
 - Navisworks Drawing files (.nwd)
 - SketchUp files (.skp)
 - TrimBIM (Trimble BIM) files (.trb)
- [Point and line files:](#)
 - CSV and TXT files
 - AutoCAD Drawing Exchange Format (DXF) files (.dxf)
 - ESRI Shapefiles (.shp)
 - RXL files (.rxl)
 - LandXML files (.xml)
 - 12d Model files (.12da)
- [Surfaces:](#)

- Digital terrain models (.dtm .ttm .xml, .dxf, .12da)
- Surfaces in BIM models
- Scan points and point clouds (.tsf and .rwcx)
- Road files:
 - RXL files (.rxl)
 - LandXML files (.xml)
 - 12d Model files (.12da) – typically used in Roads
 - GENIO roads (.inp, .crd, .mos)

TIP – You can also add background imagery and data to the map using Trimble Maps, Google Earth KML or KMZ files (.kml, .kmz), georeferenced image files, or a web map provider. See [Adding background maps, page 146](#).

BIM models

A BIM model is a 3D model of a building or other built asset such as a bridge, road, or pipeline. BIM models are used in the planning, design, construction, and maintenance of the built asset. In Origin, BIM models can be used for surveying fieldwork including stakeout, cogo calculations and measuring points.

NOTE – IFC and TrimBIM files are not supported on 32-bit Spectra Geospatial controllers running Android. These controllers are the FOCUS controller and the MobileMapper 60 model 1 handheld.

Supported file types



Origin supports the following BIM model file types:

- Drawing (.dwg) files created using Autodesk AutoCAD software.
- IFC (Industry Foundation Class files) in the .ifc or .ifczip file format.
- Navisworks (.nwd) files created using Navisworks software.
- SketchUp files (.skp) created using Trimble SketchUp software.
- TrimBIM (.trb) files, which are a smaller, more efficient alternative to IFC.

NOTE – DWG and NWD files are not supported when stored directly to an Android device. When using Origin on a controller running Android, upload DWG and NWD files to a Trimble Connect project using [Trimble Connect for Windows](#). The files are automatically converted to TrimBIM files in the cloud. When you download the project to the controller, select the **Settings** tab and select the **Download as TrimBIM** check box. This setting is not required when using a controller running Windows, but may still provide better performance. For more information, see [Cloud settings for data sync, page 60](#).

TIP – Origin supports the reading of standard AutoCAD entities from DWG files. Some CAD applications, for example Civil 3D, use AutoCAD extensions to create 3D objects which may not be supported by Origin. Using a DXF file may be better than trying to use DWG, or you could try converting a Civil 3D drawing to a standard AutoCAD DWG format. For more information, visit Autodesk's Knowledge Network to learn [how to convert Civil 3D drawings to standard AutoCAD format](#).


Viewing BIM models in the map


To display a BIM model in the map, tap  in the map toolbar to open the **Layer manager** and select the **Map files** tab. Tap the BIM model file once to make it visible (✓), and tap it again to make items in the file selectable (). For more information, see [Managing map file layers, page 140](#).



To make only some layers visible or selectable, tap the arrow next to the file name and then tap each layer once to hide it, or twice to make it visible but not selectable. Tap the layer again to make it visible and selectable. Note that for IFC files, layers are named based on the IFCPRESENTATIONLAYERASSIGNMENT attribute in the IFC file.

To see more clearly inside a model, use the **Limit box** to exclude parts of the model such as floors or exterior walls. See [Limit box, page 167](#).

To easily show only some items in a BIM model regardless of the BIM file or layer they are in, use the **BIM** toolbar. See [Hiding and isolating items in BIM models, page 173](#).

Objects in BIM models can be displayed as solid objects, or you can make the object semi-transparent. To make the object more transparent, tap  and select **Transparency**. In the **BIM models** group box, use the **Transparency** slider control to change the transparency of the BIM model.



You can also display the model as a wireframe rather than as a solid object. Displaying as a wireframe enables you to see more detail in the BIM model and makes it easier to select the correct points or lines for stakeout. To view the model as a wireframe, tap  and select **Transparency**. In the **BIM models** group box, select **Wireframe** in the **Display** field. If you frequently switch between wireframe and solid views, you can [configure a function key on the controller](#) to switch between the wireframe and solid view of the BIM model. For more information, see [Map data transparency, page 166](#).

To rotate the BIM model in the map, tap  and then tap the map and drag to rotate the view. The  icon in the center of the map indicates the point of orbit.

NOTE – To improve performance, the map may not display very small items or details until the map is zoomed in to an appropriate zoom level.

Working with BIM models


To select an item from a BIM model, tap it in the map. The item you have selected is shown in blue. To select multiple items, press the Ctrl key on the controller and then tap the items in the map to select them.

NOTE – Items in a BIM file cannot be selected using **Rectangle selection**  or **Polygon selection** .

You can select items in the BIM model from the map and then use them in other software functions, for example to perform a Cogo calculation, create a surface, or stake out. Tap an item in the BIM model to select it.

You can select vertices, edges, curved edges (polyedges, such as the rim of a cylinder), or surfaces.

NOTE – To select a surface the BIM model must be shown in the map as a solid object, not as a wireframe.

You can choose whether selecting surfaces in the map selects **Individual faces** or selects the **Whole object**. To change the **Surface selection** mode, tap  and select your preferred **Surface selection** mode. See [BIM model selection mode, page 171](#).

To measure to a surface in a BIM model, select the surface in the map and then select **Measure to selected surface** from the tap and hold menu. This is useful in determining the perpendicular distance from the physical surface to the design.

When you use a vertex, edge, curved edge, or surface from a BIM model in a Cogo calculation, during stakeout, or to create a point in the job, Origin copies the attributes of the object from the BIM model and stores them with the point or polyline in the Origin job.

To review BIM model attribute information for objects in a BIM model, select the items in the map and then tap **Review**. If you selected more than one item, select it from the list and tap **Details**.

Cogo calculations using BIM models

To compute the center point of a surface in a BIM model, select the surface in the map and then select **Compute center point** from the tap and hold menu. This is useful to find the center point of a bolt or cylinder so you can then stake it out. See [Compute center point](#).

To compute the centerline of any tube-like item in a BIM model, such as a pipe or cylinder, select it in the map and then select **Compute centerline** from the tap and hold menu. The software computes a polyline that runs along the center of the item. See [Compute centerline](#).


Staking from a BIM model

You can select vertices and stake them as points or you can select edges, curved edges, or grid lines and stake them as lines directly from the BIM model. See [Staking from the map, page 263](#).

Point and line files

Origin supports the following point and line file types:

- Points in a CSV, TXT or linked job file
- AutoCAD Drawing Exchange Format (DXF) files (.dxf)
- ESRI Shapefiles (.shp)
- 12d Model files (.12da)
- LandXML files (.xml)

The Origin software provides settings for controlling the display of data in point and line files. To configure these settings, tap  in the map toolbar, select **Settings** and configure the setting in the **Map data controls** group. See [Map data settings for DXF, Shape, 12da, and LandXML files, page 184](#).

Supported items in DXF files

A **DXF file** is a 2D or 3D vector graphic file format generated from CAD software such as AutoDesk. DXF stands for Drawing Exchange Format.

For DXF files that contain layers, a name is generated for every selectable feature in the file. A code can be generated for every selectable feature within the file. This is derived from the attributes stored in the file; often, it is the name, code, and attributes of features in the original file.

For DXF files, the name is the first 8 characters of the layer name, followed by a space and then the line number of the feature in the DXF file. For DXF files from Survey Office the item name, where present, is used.

You can review a selectable feature in the map to find the file and layer name.

Displayable and selectable DXF items:

- ARC, CIRCLE, INSERT, LINE, POINT, POLYLINE, LWPOLYLINE.

Display only DXF items:

- 3D FACE, SPLINE, SOLID, ATTRIB, BLOCK ATTRIB, TEXT, MTEXT, HATCH.
- Control characters: C – diameter symbol, D – degree symbol, P – plus/minus symbol, % – percentage symbol.

Extrusion arcs contained in a DXF file are displayed correctly in the map, but cannot be made active.

Extrusion arcs form an ellipse in plan view and the staking of ellipses is not supported.

Supported items in Shapefiles

A **Shapefile** is an ESRI vector data storage format for storing geographic features as points, lines, or polygons as well as attribute information.

For Shapefiles that contain layers, a name is generated for every selectable feature in the file. A code can be generated for every selectable feature within the file. This is derived from the attributes stored in the file; often, it is the name, code, and attributes of features in the original file.

For Shapefiles, the name is the first five characters of the Shapefile name, followed by a file index number, then a space and then the line number in the Shapefile where this feature is defined.

You can review a selectable feature in the map to find the file and layer name.

Supported Shapefile items:

- Null shape, Point, PolyLine, Polygon, MultiPoint, PointZ, PolyLineZ, PolygonZ, MultiPointZ, PointM, PolyLineM, PolygonM, MultiPointM, MultiPatch, Hatching.

To view attribute information for Shapefile items, the Shapefile must have an associated .dbf file.

Supported items in 12da files

The displayed layers in a 12da file are based on the model names in the 12da file. In addition, any surfaces and alignments read in from a 12da file are placed in their own layer. If there are any duplicate layer names, suffixes consisting of an underscore character plus an incrementing number are used to ensure unique layer names.

Point strings are read in as points and assigned to the appropriate layer. The points are given the names specified in the 12da file, but if no names have been specified they are given names based on the string name plus a suffix consisting of an underscore character plus an incrementing number.

Line, arc and circle strings are read in as standard lines and arcs and assigned to the appropriate layer using the color specified in the 12da file, when standard colors have been used.

Polyline strings are read in as polylines or polygons (for closed polylines) and assigned to the appropriate layer using the color specified in the 12da file, when standard colors have been used.

Super alignments and alignments are read in as alignments and each alignment is assigned to its own layer. Alignments are displayed as a red line.

Triangulated surfaces are read in and each surface is assigned to its own layer.

Supported items in LandXML files

A **LandXML file** is an XML file format for civil engineering design and survey measurement data such as points, surfaces, parcels, pipe network data and alignments.

LandXML files can contain different XML elements and what they contain will depend on the application that created the LandXML file, the items selected and options chosen at the time of export. Only points, lines, surfaces, and alignments that are contained in elements directly under the primary LandXML element are supported.

The following lists the element types and how they can be used in Origin:

- **Alignments only**

Stake as an alignment, using Origin General Survey or Origin Roads.

- **Alignments with templates**

Save and then stake as an RXL road, using Origin Roads.

- **Parcels and feature lines**

Stake as a polyline, using Origin General Survey or Origin Roads.

- **Alignments and feature elements defined as per the Inframodel specification**

Alignments are grouped to form a road surface, you can have multiple roads in a single file. Stake using Origin Roads.

- **Alignments and breakline elements in a surface element**

Alignments and breaklines from the surface element are grouped to form a road surface, you can have multiple roads in a single file. Stake using Origin Roads. The Survey Office LandXML exporter

creates files using this format, Points, surfaces, parcels and feature lines can also be included in this file export.

The layers created for LandXML files are based on the following:

- Point items (from <CgPoint> elements) are placed in a layer called Points.
- Line items (from <Parcel> and <PlanFeature> elements) are placed in a layer called Lines.
- Alignment and surface items are placed in layers named according to the alignment and surface names.

A code can be generated for every selectable feature within the file. This is derived from the attributes stored in the file – often, it is the name, code, and attributes of features in the original file. You can review a selectable feature in the map to find the file and layer name.

If there are overlapping surfaces on the map, the interpolated elevation will be that of the first surface returning a non-null elevation (the surface with the first name alphabetically).

Surfaces

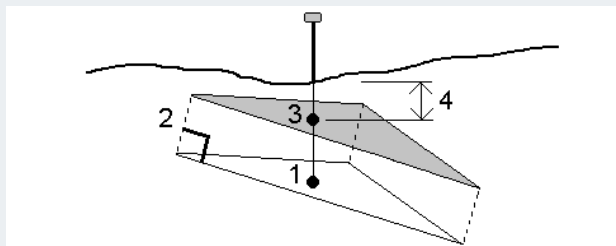
A surface can be a topographical or non-topographical:

- A **topographical surface** is a digital representation of the shape of a land surface, formed by a mesh of contiguous triangles. The surface may be existing terrain, proposed grade surfaces, or a combination of both.
- A **non-topographical surface** is a representation of an object or the face of objects in a 3D model or BIM file.

The Origin software supports topographical surfaces in the following file formats:

- gridded digital terrain models (.dtm)
- triangulated terrain models (.ttm)
- triangular 3D faces in a DXF file (.dxf)
- triangulated DTMs in a LandXML file (.xml)
- triangulated DTMs in a 12da file (.12da)

NOTE – When the offset is applied perpendicular to the DTM, the cut/fill value is computed using the following steps:



1. Determine the triangle that the current position lies on (1).
2. Offset that triangle at a right angle by the specified offset value (2) to define a new triangle.
3. Compute the elevation of the same position on the new triangle (3).
4. Compute the cut/fill value from the computed elevation to the staked position (4).

RXL files

RXL files define an alignment and can be used in General Survey or in Roads:

- Alignments in General Survey always have a horizontal component. A vertical component is optional.
- Alignments in Roads, as well as having a horizontal and vertical component, can also include templates, superelevation and widening records, and additional points and strings that define additional components.


If an RXL file contains these additional components, they cannot be staked from the General Survey **Stakeout** menu. You must use the Roads **Stakeout** menu to stake out components other than the horizontal or vertical alignment.

A GENIO road file can be used only in Origin Roads.

Managing layers using the Layer manager

Use the **Layer manager** to link files to the job and to manage the data that is visible in the **Map** screen.

To open the **Layer manager**, do one of the following:

- Tap  in the **Map** toolbar.
- In the **Job properties** screen, tap the **Layer manager** button.

The **Layer manager** provides tabs for managing different types of data:


 
- Use the **Point files** tab to link point files (CSV, TXT, and job files) so that you can view and use the points in the file without importing them into the job. See [Managing point file layers, page 138](#).
- Use the **Map files** tab to:

- Link supported map files (including BIM model, DXF, RXL, and surface files) to the job so that you can use existing data from those files in Origin. See [Supported linked file types, page 130](#).
- Make items in linked files visible and/or selectable so that you can work with them. Items that are selectable ("active") can be used in various software functions, including navigating to a point, staking out, and some Cogo functions. See [Managing map file layers, page 140](#).
- Add a map background data to provide background maps and context information for other data in the map. Adding map background data is available only when you open the **Layer manager** from the map. See [Adding background maps, page 146](#).
- Use the **Filter** tab to filter the job data shown by measurement type or by creating a wildcard search. See [Filtering data by measurement type, page 142](#).
- Use the **Features** tab to make features in the job visible and/or selectable ("active") by feature layer. The feature layers listed are determined by the [Feature Library FXL file](#) linked to the job and by the feature codes used in the job. See [Filtering data by feature layer, page 145](#).

To automatically update the data shown in the map as you make changes in the **Layer manager**, tap the **Auto update** softkey. A check mark on the **Auto update** softkey indicates **Auto update** is enabled.

NOTE – Changes made when **Auto update** is enabled are retained when you exit the **Layer manager** using either the **Accept** or **Esc** key.

TIP – To view more of the **Layer manager** form when it is open alongside the map:

- In landscape mode, tap  and swipe left. The form will resize to the closest preset position.
- In portrait mode, tap  and swipe down to view more of the form

For more tips on resizing forms, see [The Origin workspace, page 31](#).

Managing point file layers

The **Point files** tab in the **Layer manager** screen lists the CSV, TXT and job files in the current [project folder](#).

Use the **Point files** tab to link CSV, TXT or job files so that you have access to the points in those files without [importing the points](#) into the job. This is especially useful when using a file containing control points.

NOTE – When using points from linked files, make sure that they use the same coordinate system as the job that they are being brought into. The coordinate order (northing and easting ordinates) in the comma delimited file must be the same as the setting in the **Coordinate order** field in the **Units** screen. Make sure the data in the file is in the format: Point name, First ordinate (Northing or Easting), Second ordinate (Northing or Easting), Elevation, Point code.

You can use points from a linked file to:

- stake out without having the design points in the job
- enter values into **Point name** fields, such as for Cogo functions
- navigate to control or check shots from previous surveys

You cannot use lines, arcs or polylines in a linked job.


You can link multiple files. When the point does not exist in the current job, but does exist in multiple linked files, the point in the first linked file is used. If multiple points of the same name exist in a linked job, the [search rules](#) work within that job to find the best point.

Linked points from a CSV file are shown in the **Map** as a blue comma (,). Linked points from another job are shown using their original point symbol, but are colored blue. Once you select a linked point and use it for a software function, the linked point is copied into the current job, and is shown as a "c" in the map.


To automatically update the data shown in the Map as you make changes in the **Layer manager**, tap the **Auto update** softkey. A check mark on the **Auto update** softkey indicates **Auto update** is enabled.

NOTE – Changes made when **Auto update** is enabled are retained when you exit the **Layer manager** using either the **Accept** or **Esc** key.

To link point files to the job

- To open the **Layer manager**, do one of the following:
 - Tap  in the **Map** toolbar.
 - In the **Job properties** screen, tap the **Layer manager** button.
- Select the **Point files** tab.
- To link more files to the job, tap **Add** and then select the files to link from a location on the controller or from Trimble Connect if the project you are working in is a cloud project. Tap **Accept**.

TIP – To pin a favorite folder to the shortcuts shown for **This controller**, navigate to the folder and then tap and hold the folder in the right pane and select **Pin to shortcuts**. For more information, see [Selecting files and folders, page 124](#).

By default, points in files you have linked to the job are visible and selectable in the map, indicated by the check mark inside a square  next to the file name ✓.

- Tap **Accept**.

To specify the point coordinate type

If the **Advanced geodetic** check box is enabled in the **Cogo settings** screen, and you select a CSV or TXT file, you must specify the **Coordinate type** of the points in the file.

- In the **Point files** tab, tap the file that you want to link to the current job.
- Select **Grid points** or **Grid (local) points**.
- If the points in the file are **Grid (local) points**, select the transformation to use to transform them to grid points:

- To assign the transformation later, select **Not applied, this will be defined later**. Tap **Accept**.

TIP – If you select this option and you later decide to assign an input transformation to this file, you must unlink and then relink the file.

- To create a new display transformation, select **Create new transformation**. Tap **Next** and complete the required steps. See [Transformations, page 248](#).
- To select an existing display transformation, select **Select transformation**. Select the display transformation from the list. Tap **Accept**.

4. Tap **Accept**.

For more information on Grid (local) coordinates, see [Local transformations](#).

Managing map file layers

The **Map files** tab in the **Layer manager** screen lists the linked map files in the current [project folder](#).

Map files include BIM models, RXL files, raster image files, and TTM surface files. See [Supported linked file types, page 130](#).

 
Use the **Map files** tab to:

- Link supported map files to the job so that you can use existing data from those files in Origin.
- Make items in linked files visible and/or selectable so that you can work with them. Items that are selectable ("active") can be used in various software functions, including navigating to a point, staking out, and some Cogo functions.
- Add a map background data to provide background maps and context information for other data in the map. Adding map background data is available only when you open the **Layer manager** from the map. See [Adding background maps, page 146](#).

To automatically update the data shown in the Map as you make changes in the **Layer manager**, tap the **Auto update** softkey. A check mark on the **Auto update** softkey indicates **Auto update** is enabled.

NOTE – Changes made when **Auto update** is enabled are retained when you exit the **Layer manager** using either the **Accept** or **Esc** key.


To link map files to the job

1. To open the **Layer manager**, do one of the following:
 - Tap  in the **Map** toolbar.
 - In the **Job properties** screen, tap the **Layer manager** button.
2. Select the **Map files** tab.
3. To link more files to the job, tap **Add** and then select the files to link from a location on the controller or from Trimble Connect if the project you are working in is a cloud project. Tap **Accept**.

TIP – To pin a favorite folder to the shortcuts shown for **This controller**, navigate to the folder and then tap and hold the folder in the right pane and select **Pin to shortcuts**. For more information, see [Selecting files and folders, page 124](#).


If the file you want to link is not shown, make sure it is a [supported file type](#) and that the file name does not contain invalid characters (such as a dollar sign or parentheses).

By default, features in files you have linked to the job are visible in the map, indicated by the check mark next to the file name ✓ .

4. To make the features in a file selectable, tap the file name in the **Map files** tab. A check mark inside a square  indicates the features are selectable.

NOTE – If the icon does not change, the file does not contain any features that can be selected.


5. If the file contains layers, by default all layers have the same setting as the file. To make only some layers visible or selectable, tap the arrow next to the file name and then tap each layer once to hide it, or twice to make it visible but not selectable. Tap the layer again to make it visible and selectable.

The icon next to the file name indicates if some layers are not visible  or not selectable .


6. Tap **Accept**.

NOTE – If the first map files you link to the job are BIM models or DXF files in a location coordinate system that are located far from existing job data, then the software warns that the map file is far away from the job data and suggests georeferencing the file. Tap **Yes** to allow the software to perform an approximate georeference by relocating the center of the map file close to the existing job data. The **Georeference map** Cogo **Adjust** form opens, allowing you to fine-tune the georeferencing. For more information, see [Georeference map, page 255](#). If you choose not to adjust the georeferencing, tap **Esc**. The approximate georeference performed by the software is then removed.



To change which features in linked map files are visible or selectable

To change the features that are visible and selectable at any time, tap  in the map toolbar and select the **Map files** tab. Showing and hiding features can be useful to reduce visual clutter or to make it easier to select features that are close to other features.

To control which features are visible or selectable per file:

- To display all features in the file, tap the file name once. The check mark ✓ next to the file name indicates the features in the file are displayed.
- To make all features in the file selectable, tap the file name twice. The check mark inside a square  indicates the features in the file are selectable ("active").
- To disable all features in the file, tap the file name three times. No icon next to the file name indicates the features in the file are not shown and are not selectable.

If the file contains layers (typically BIM model, DXF, LandXML, or Shapefile):

- To expand or collapse the file contents to view the layers, tap the arrow next to the file name.
- To display all features in the layer, tap the layer name once. The check mark ✓ next to the layer name indicates the features in the layer are displayed. If features in only some layers are displayed, the check mark next to the file name is gray ✓.
- To make all features in the layer selectable, tap the layer name twice. The check mark inside a square  indicates the features in the file are selectable. If features in only some layers are selected, the check mark inside a square next to the file name is gray .
- To disable all features in the layer, tap the layer name three times. No icon next to the layer name indicates the features in the layer are not shown and are not selectable.
- An ✕ icon indicates the file does not contain any features that can be displayed.

TIP – To exclude some features or items from the map, regardless of the file or layer they are contained in:

- Use the **Limit box** to exclude parts of a BIM model such as floors or exterior walls. See [Limit box, page 167](#).
- Use the **BIM** toolbar to isolate items in the BIM model you are most interested in. See [Hiding and isolating items in BIM models, page 173](#).


If you are viewing a BIM model, you can use the **Limit box** and the tools on the **BIM** toolbar together to isolate the particular part of the model you want to view.

Filtering data by measurement type

Use the **Filter** tab in the **Layer manager** screen to filter the points, lines, arcs, and polylines in the job by data type.

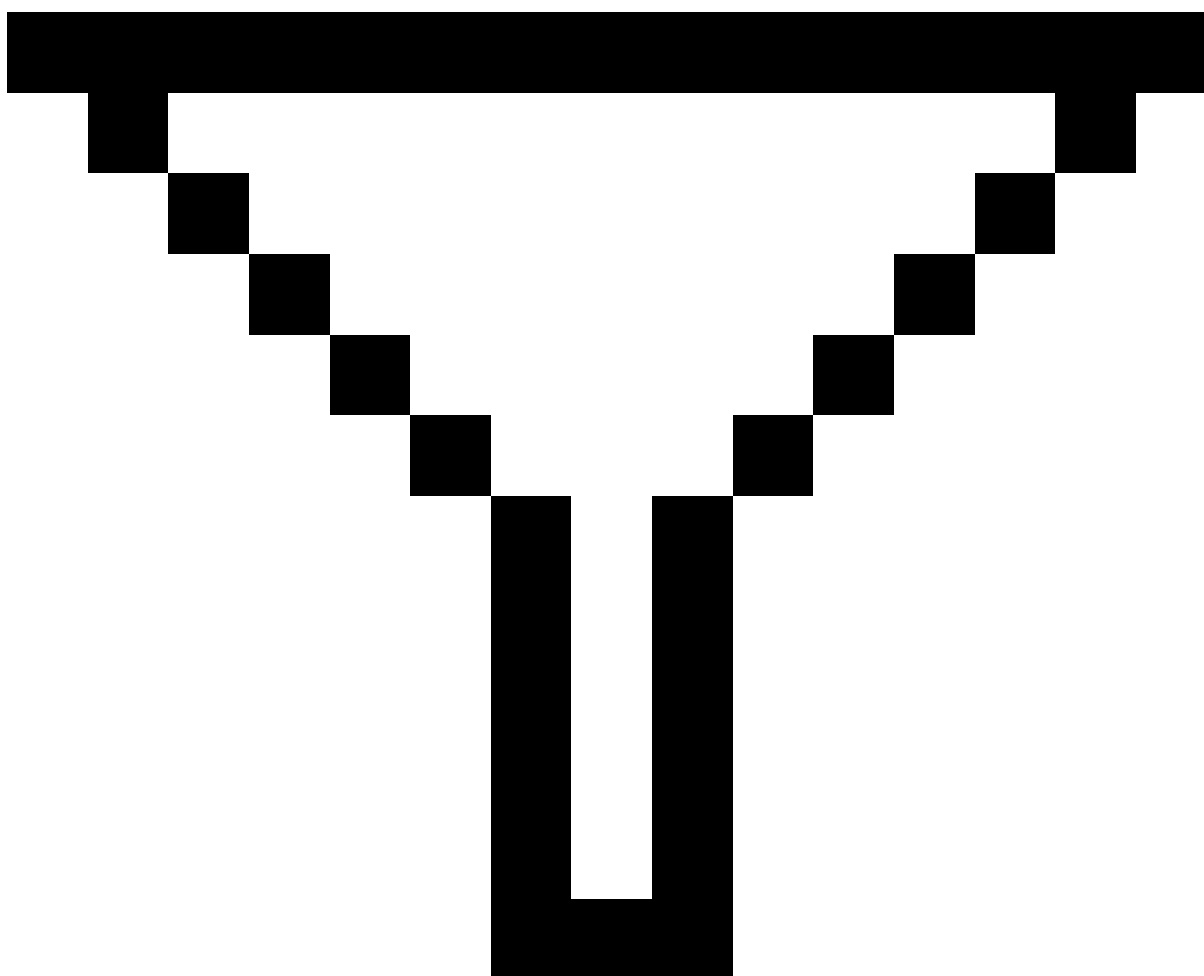
Select or clear the check boxes to make only the data you are interested in visible and selectable in the map. For example, you can filter by point types such as topo points, observed control points, or as-staked points. You can also filter lines, arcs, polylines, CAD linework, and points in linked files.

To change which data types are visible

1. To open the **Layer manager**, do one of the following:
 - Tap  in the **Map** toolbar.
 - In the **Job properties** screen, tap the **Layer manager** button.
2. Select the **Filter** tab.
3. To automatically update the data shown in the Map as you make changes in the **Layer manager**, tap the **Auto update** softkey. A check mark on the **Auto update** softkey indicates **Auto update** is enabled.

NOTE – Changes made when **Auto update** is enabled are retained when you exit the **Layer manager** using either the **Accept** or **Esc** key.

4. Tap the point type or feature type to hide it. The check mark inside a square next to the file name disappears.
5. Tap the point type or feature type again to show it. The check mark inside a square next to the file name appears, indicating those points or features are visible and selectable ("active") in the map.
6. To reset the data filters, use the softkeys below the map. Tap **None** to hide all point and feature types. Tap **All** to make all point and feature types visible.
7. Tap



to apply a finer filter. You can filter data by **Point name**, **Code**, **Descriptions** (if enabled) and **Note**.

For more information, see [To filter data using wildcard search, page 662](#).

8. Tap **Accept**.

Available data types

You can choose to filter by the following feature types in the **Filter** tab:

- Topo points (GNSS) (measured in a GNSS survey)
- F1 Topo points (Conv.) (measured in a conventional survey)
- F2 Topo points (Conv.) (measured in a conventional survey)
- Mean turned angle
- As-staked points
- Keyed in points (normal)
- Keyed in points (control)
- Calibration points
- Cogo points (computed)
- Construction points
- Observed control points
- FastStatic points
- Base points
- Check points
- Offset points
- Intersection points
- Rapid points
- Laser points
- Resection points
- Continuous points
- Copied control points
- Copied construction points
- Copied normal points
- Copied as staked points
- Adjusted points
- Copied adjusted points
- Points on plane

- Points measured to surface
- Lines
- Arcs
- Polylines
- Linked file points
- CAD linework

Filtering data by feature layer

Use the **Features** tab in the **Layer manager** screen to manage which features are shown in the map by feature layer.

The feature layers shown in the **Features** tab are defined by the [Feature Library FXL file](#) linked to the job. Each feature layer contains a separate layer for each feature code defined for the layer when the Feature Library FXL file was created using the Feature Definition Manager in Survey Office.


Click the arrow next to the layer to view the codes defined for each layer and to show or hide features in the layer.

The **0** layer contains features that are not defined by pre-existing codes in the FXL file. This includes:

- Features that use codes that are not defined in the FXL file, but were entered manually in the **Code** field when the point was measured are in the code layers listed in the **0** layer.
- Features that use only control codes and do not use a feature code are in the **Invalid** layer in the **0** layer. Use this filter to locate these features and make them valid by entering a feature code.
- Features that do not use a feature code or a control code are in the **Uncoded** layer in the **0** layer.

TIP – When features use multiple codes, the feature is visible and/or selectable if any of the assigned codes is set to visible or selectable. For example, a point that uses "code1 code2" is selectable if "code2" is set to selectable and "code1" is set to hidden. Control codes are not shown in the **Features** tab.


To change which coded features are visible


1. To open the **Layer manager**, do one of the following:
 - Tap  in the **Map** toolbar.
 - In the **Job properties** screen, tap the **Layer manager** button.


2. Select the **Features** tab.

To automatically update the data shown in the Map as you make changes in the **Layer manager**, tap the **Auto update** softkey. A check mark on the **Auto update** softkey indicates **Auto update** is enabled.

NOTE – Changes made when **Auto update** is enabled are retained when you exit the **Layer manager** using either the **Accept** or **Esc** key.

3. Tap a layer to hide it. The check mark inside a square  next to the layer name disappears.

4. To make features in a layer visible, tap the layer name. A check mark ✓ indicates features in the layer are visible.
5. To make layers selectable, tap the layer name again. A check mark inside a square  indicates features in the layer are selectable ("active") in the map.
6. If the feature layer has multiple codes, by default all codes have the same setting as the layer. To make features using only some codes visible or selectable, tap the arrow next to the layer name and then tap each code once to hide it, or twice to make it visible but not selectable. Tap the code again to make it visible and selectable.


The icon next to the layer name indicates if some code are not visible  or not selectable .

7. To make all layers and codes selectable, tap the **All** softkey. To all feature-coded points, tap the **None** softkey.
8. Tap **Accept**.

Adding background maps

Add background information to your map to provide context for the other data in the map.

NOTE – Unlike other linked map files, items in background maps cannot be selected.

To configure any of the supported map background sources, tap  in the **Map** toolbar and select **Layer manager**. In the **Layer manager**, select the **Map files** tab and then tap the appropriate softkey.

Supported sources of map background information are:

- **Trimble Maps**

Trimble Maps is the simplest option for providing map backgrounds if the controller is typically connected to the internet.

Trimble Maps requires no configuration and is available with any Origin controller that has a current Origin Software Maintenance Agreement or to any user who has a valid Origin subscription.

See [Trimble Maps provides a simple, easy-to-use way to obtain background map imagery for your Origin jobs.](#), page 147.

- **Web map service (WMS)**

Create a web map in Origin by providing the URL to a web map service (WMS) and view data provided by the service in the Origin map.

To view the data provided by the WMS, the controller must be connected to the internet.

See [Web maps](#), page 148.

- **Web map tile service (WMTS)**

Create a web map in Origin by providing the URL to a web map tile service (WMTS) and view data provided by the service in the Origin map.

When working offline, you can use map data from the WMTS in the Origin map for up to 7 days, but you will be able to zoom or pan only to the same data as when the controller was connected to the internet.

See [Web maps, page 148](#).

- **Web feature service (WFS)**

Create a web map in Origin by providing the URL to a web feature service (WFS) and view georeferenced vector data from the WFS in the Origin map.

In Origin, save the data as a .wfs file so that you can use the data in the field without an internet connection.

See [Web maps, page 148](#).

- **Google Earth KML or KMZ files (.kml, .kmz)**

KML and KMZ files are linked files created from Google Earth. While KML and KMZ files do not provide survey accuracy, they are useful for providing general geographical information relevant to the job, such as a polygon showing the limits of the job site or a nearby wetland sketched onto the local area in Google Earth, which is accurate to within a few meters.

You can select features in a KML or KMZ file in the map in Origin and view attribute information about them. Use the **Snap-to** toolbar to more easily select the point you are interested in or the end of a line.

NOTE – Because KML and KMZ files are always in the WGS 1984 coordinate system they can be linked to any job that uses a projected coordinate system. They will not display in a job that uses a **Scale factor only** or **No projection / no datum** coordinate system, as the WGS 1984 coordinates cannot be transformed to job coordinates.

- **Image**

Link to your own background image file stored on the controller. This option does not require an internet connection.

See [Background image files, page 155](#).

Trimble Maps


Trimble Maps provides a simple, easy-to-use way to obtain background map imagery for your Origin jobs.


Using Trimble Maps requires no configuration – simply connect the controller to the internet and the Trimble Maps service can automatically provide background data for the extents of the job.


NOTE – The job must use a defined projection and datum. Trimble Maps cannot provide background imagery for jobs that use a **Scale factor only** or **No projection / no datum** coordinate system.

Trimble Maps is available with any Origin controller that has a current Origin Software Maintenance Agreement or to any user who has a valid Origin subscription.

To show Trimble Maps background imagery:

1. In the map, tap  in the map toolbar to open the **Layer manager**.
2. In the **Layer manager**, select the **Map files** tab.
3. Tap **Trimble Maps** and then select the type of background imagery you want to view. Select from **Satellite**, **Street** or **Terrain**.

Wait while the map updates with the selected background imagery. If you cannot see the data, tap  in the map toolbar and then select **Plan** or **Top** view.

4. To provide better contrast with features in the job or in other linked files, tap  in the map toolbar and select **Transparency**, and then move the first slider to the left to increase the transparency of Trimble Maps.

Web maps

Map backgrounds provide context for your data. Instead of adding your own background images and potentially viewing out of date information, you can add a web map that uses up to date information from a web map provider. Available map data may include cadastral layers, land topography, or roads. Choose the appropriate service based on availability for your location, your information needs, and your workflow.

If the web map provider requires sign in credentials such a username and password or additional URL information to access the service, you can select and configure the appropriate **Sign in method** in Origin when you set up the web map, so that your sign in information is passed onto the service when you connect.

Web map services (WMS) and web map tile services (WMTS)

The connection to the WMS or WMTS must be configured while the controller is connected to the internet.

NOTE – When working offline, you can use map data from the WMTS in the Origin map for up to 7 days, but you will be able to zoom or pan only to the same data as when the controller was connected to the internet. To use map data from a WMS in Origin the controller must be connected to the internet.

To use a WMS or WMTS, in Origin create a new web map and enter the URL you use to retrieve data from the service. Origin saves the configuration information for each WMS or WMTS in a .wms or .wmts configuration file in the **C:\ProgramData\Spectra Geospatial Data\System Files** folder.

Control the visibility of data from the web service (including sublayers) in the **Map files** tab of the **Layer manager** screen.

TIP – You can use data from more than one WMS or WMTS in the same job, and you can use them in addition to Trimble Maps. Use the **Base layer** and **Request transparent PNGs** check boxes to determine the order and transparency of web map layers. See [To configure WMS or WMTS settings, page 154](#).

Web feature services (WFS)

Once you have created a web map using a web feature service, you can save the data as a .json file so that you can use it in the field when the controller is not connected to the internet.

To create the web map, connect the controller to the internet (for example while the controller is in the office) and configure the WFS settings so that Origin connects to the WFS. The software then prompts you to zoom the map to the map extents you want to use and then to select the georeferenced vector layers available from the WFS. You can then save the data you have selected as a .wfs file so that you can use the data in the field without an internet connection. You can set up as many instances of the WFS data as you need - for example you can select the same layers in different instances but have different map extents to cover a different area.

In the field, you can select lines or polylines from the WFS file in the map and stake them. You can also create points at the ends of lines and at all points along a polyline, by selecting the **Create nodes (DXF, Shape, 12da & LandXML)** check box in the **Map settings** screen. You can also create nodes using the tools in the **Snap-to** toolbar. The created points can then be selected for stakeout or Cogo calculations.

When you create nodes or points from entities in the WFS file, Origin copies the attributes of the entity from the WFS file and stores them with the point in the Origin job.

CAUTION – When staking WFS data make sure you understand the accuracy of the WFS data provided, and make sure it is in the same coordinate system as the job.

Origin supports the following online feature services:

- Esri Feature Service
- Open Geospatial Consortium (OGC) web feature service (WFS) in the following standards:
 - OGC WFS 1.1.0
 - OGC WFS 2.0.0

Origin supports feature service data delivered as .json or .gml files:

The following data types are supported for each format:

GeoJSON (.json)	GML (.gml)
point, XYZ point	point, XYZ point, multipoint
linestring, multilinestring	linestring, multilinestring
polygon, multipolygon	polygon, multipolygon
	curve, multicurve
	surface (boundary only), multisurface (boundary only)

Before you can add a web map

- To add a web map, the controller must be connected to the internet. For information on connecting the controller to the internet, see [Internet connection setup](#).

The controller must also be connected to the internet whenever you want to use a web map service (WMS). An internet connection is not required to view web feature service (WFS) data once you have saved the data to a file.

- You must know the URL to use for the web map. To ensure you receive the latest web map data, do not include the version number in the URL.

To use a specific version, add the version number as a parameter appended to the URL, for example: **<https://examplewms.org/wms?version=1.1>**.

- Whenever possible, you should select an EPSG code that matches the coordinate system and zone of the job.


If Origin is able to detect a matching EPSG code, it will add "(default)" after that entry in the list, and will select that EPSG code by default. In some cases Origin cannot detect a matching EPSG code, and you may have to select one yourself. If you are not sure of the correct EPSG code for the coordinate system and zone you are using, visit the EPSG.io website: epsg.io/.

Some WMS or WMTS services may include "EPSG:3857 - Web Mercator" or "EPSG:4326 - WGS 1984" in their list of supported coordinate systems. These are "universal" coordinate systems that can be used with any job, regardless of its coordinate system. It is still preferable to select an EPSG code that matches the job coordinate system when one is available, as the web map can be positioned more accurately and reliably when the coordinate systems are identical. However, Web Mercator and WGS 1984 will still produce accurate results in most cases. Note that Origin supports the use of Web Mercator with both WMS and WMTS services, but WGS 1984 is supported only with WMS. WGS 1984 will not work with WMTS services.

To add a web map

1. Map services are delivered based on your current map location and scale. Before adding the web map:
 - a. If there are no points in the job, key in a point with coordinates that match the job coordinate system and that are in a location you would expect to see on the map.
 - b. Zoom the map to a reasonable scale, for example 100m or 1000m works better than 2m or 20,000km.

To open the **Layer manager**, do one of the following:

- Tap  in the **Map** toolbar.
- In the **Job properties** screen, tap the **Layer manager** button.

2. Select the **Map files** tab.
3. Tap **Web maps**.

(In portrait mode, swipe right to left along the row of softkeys to view the **Web maps** softkey.)

4. In the **Web maps** screen, tap **New**.
5. Enter the **Name** of the web map.
6. In the **Service type** field, select the service type.
7. Enter the **URL** of the web service and tap **Enter**.

TIP – If the URL includes parameters for sign in credentials such as a username and password, Spectra Geospatial recommends removing them from the URL and instead enter the sign in credentials by selecting **Basic HTTP Authentication** from the **Sign in method** field. For more information, see [To configure the sign in method for the web service , page 152](#)below.

8. Select the **Sign in method** and configure the required settings. See [To configure the sign in method for the web service , page 152](#).
9. If the software does not automatically test the connection to the configured server, tap **Test**.
10. When the test is successful, additional fields appear in the **Web maps** screen. Configure settings for the selected web service. See the following sections:
 - [To configure WFS settings, page 153](#)
 - [To configure WMS or WMTS settings, page 154](#)
 - [To configure the sign in method for the web service , page 152](#)
11. Tap **Accept**.
The name of the web map you have added is shown in the **Map files** tab of the **Layer manager**.
12. To make data from the web map visible in the Origin map, tap the name of the web map in the **Layer manager**.
To show or hide layers from the web map, tap the arrow next to the layer name and then tap the individual layers to show or hide them.
13. To exit the **Layer manager** and return to the map, tap **Accept**.

TIP – When displaying WMS data:

- To view data from the WMS in the map you may need to zoom to an appropriate level. Different levels of map detail may be shown at different zoom levels.
- Internet connection issues can affect the display of web maps. If the map does not show any data from the web map, return to the **Web map** screen, select the web map from the list and then tap **Test** to check the software is able to connect to the configured server.
- To provide better contrast with features in the job or in other linked files, use the map **Transparency** slider to increase the transparency of WMS data. See [Map data transparency, page 166](#).

To configure the sign in method for the web service

The **Sign in method** field provides options for signing in to the web map. Depending on the server setup, your authentication credentials may be encrypted when passed to the server.

While many publicly available services have no authentication requirements, this can be quite technical to set up. You will need to enter the sign in details supplied to you by the web map provider.

TIP – If you are using a URL that includes sign in credentials as parameters, you can keep the sign in credentials as part of the URL and select **None** in the **Sign in method** field. However sign in credentials that are part of the URL are never encrypted. To ensure that your credentials can be encrypted if supported by the server setup, Spectra Geospatial recommends that you remove the sign in parameters from the URL and select **Basic HTTP Authentication** in the **Sign in method** field and then enter the **Username** and **Password**.

1. To select the authentication approach, at the end of the **Web map** screen, select the appropriate **Sign in method** from the drop-down list.

- **None:** Many services do not require any authentication.
- **ArcGIS Token Server:** Requires a **Token Server URL** and an account **Username** and **Password**.

If you select the **Save account details** check box, the **Username** and **Password** are saved to the configuration file on the controller. For more information, refer to the note below.

- **Basic HTTP Authentication:** Requires an account **Username** and **Password**.

If you select the **Save account details** check box, the **Username** and **Password** are saved to the configuration file on the controller. For more information, refer to the note below.

- **OAuth:** Is the most secure type of authentication and requires quite extensive inputs. Contact your OAuth service provider for these details.

Once configured, tap **Fetch** to open the server sign in page in your web browser. Depending on the server setup, this page may open and automatically accept the sign in credentials and then close without being visible. Alternatively, the web page may prompt you to sign in using multifactor sign in.

- **ArcGIS Online:** Effectively a pre-populated OAuth connection, this may require some server side configuration to allow Origin to successfully connect.

Once configured, tap **Fetch** to open the server sign in page in your web browser. Depending on the server setup, this page may open and automatically accept the sign in credentials and then close without being visible. Alternatively, the web page may prompt you to sign in using multifactor sign in.

NOTE – The **ArcGIS Token Server** and **Basic HTTP Authentication** sign in methods provide a **Save account details** check box:

- Select the **Save account details** check box to save the **Username** and **Password** in the configuration file.
This allows your organization to choose between a common shared sign in across all users, so that users don't need to manage individual credentials.
- Clear the **Save account details** check box to prevent the **Username** and **Password** fields being saved in the configuration file and instead require the user to enter these details when prompted each time the software attempts to load the WMS or WFS data.
This allows your organization to use the improved security associated with each individual user being required to sign in and have access provided to each feature service at an individual level.

2. After inputting the appropriate credentials, tap **Test** to confirm receipt of a valid sign in token. A message confirms if the software can communicate with the server or if there is an issue.

To configure WFS settings

After entering the URL for a WFS, configure the remaining settings for the web map:

1. Make sure the **Coordinate system** field shows the correct EPSG code. The EPSG codes in the list are provided by the WFS. Origin selects the most likely EPSG code to use, based on data already in the job.
The EPSG code must match the coordinate system and zone of the job. If you are not sure of the correct EPSG code for the coordinate system and zone you are using, visit the [EPSG.io](http://epsg.io/) website: epsg.io/.
2. In the **Bounding box type** field, select the format and order of the coordinates used by the bounding box function.
Web feature services using the older OGC WFS 1.1.0 standard commonly require bounding box coordinates in reversed Latitude, Longitude coordinate order.
3. The **Send bounding box EPSG** field determines if the bounding box coordinate EPSG is appended to the bounding box fetch request. Only rarely should this setting need to be adjusted and if you are unsure then leave it set to **Yes (default)**.
4. Select the **Invert axis order** check box to reverse the coordinate order of received feature data.
Web feature services using the OGC WFS standard that serve data in GML format commonly require reversed coordinate order.
5. If the WFS requires users to sign in to use the service, select the authentication approach in the **Sign in method** field and then enter the required details. For more information, see [To configure the sign in method for the web service , page 152](#)
6. Tap **Next**.

7. Enter the name of the .wfs file you want to create from this instance of the WFS and then select the georeferenced vector layers from the WFS to include. Tap **All** or **None** to quickly select all or deselect all layers and then tap individual layers in the list to toggle the selection. Tap **Next**.
8. Use the map toolbar to zoom and pan the map to the extents required, and then tap **Start** to download the data to the file.

The software shows the progress of the download. To view more information about each layer you selected, tap **Results**. If any layers have exceeded the feature limit or time out limit, you could choose a smaller map area and try again.

9. Tap **Save** to save the downloaded layers.

The .wfs file is saved to the **System Files** folder and metadata about the downloaded layers is saved to the **.wfs Files** folder in the <project> folder.

TIP – Internet connection issues can affect the display of web maps. If the map does not show any data from the web map, return to the **Web map** screen, select the web map from the list and then tap **Test** to check the software is able to connect to the configured server.

To configure WMS or WMTS settings

After entering the URL for a WMS or WMTS, configure the remaining settings for the web map:

1. Make sure the **Coordinate system** field shows the correct EPSG code. The EPSG codes in the list are provided by the service. Origin selects the most likely EPSG code to use, based on data already in the job.

The EPSG code must match the coordinate system and zone of the job. If you are not sure of the correct EPSG code for the coordinate system and zone you are using, visit the [EPSG.io](http://epsg.io/) website: epsg.io/.

2. If you select Web Mercator as the coordinate system for a WMS or WMTS, the **Use job datum** check box is shown. If you know that the WMS or WMTS server uses Web Mercator coordinates referenced to the same datum as your job rather than WGS 1984, then select the **Use job datum** check box.

The **Use job datum** setting corrects for a possible misalignment in the image data of up to 1-2 meters when the Web Mercator coordinate system is based on an underlying datum that is not WGS 1984. You may need to contact the provider of the WMS or WMTS service to determine whether the server's Web Mercator coordinates are referenced to WGS84 or to some other datum.

3. Select the **Base layer** check box if you want data from this web service to be displayed below other web map layers.

If you are using data from more than one web map in the job, the layers are displayed in the following order: Trimble Maps imagery (if used) is the bottom layer, web maps that have **Base layer** selected are displayed above that, and web maps that do not have **Base layer** selected are displayed above those.

4. Select the **Request transparent PNGs** check box to request transparent PNG files instead of JPG files from the web service.

This is useful if you are using data from more than one web service in the job and you want data from this web service to appear on top of data from other web services.

NOTE – PNG files are higher resolution images than than JPG files and may consume more data. Not all WMS services provide transparent PNG files. Many WMTS services provide transparent PNG files by default.

TIP – For more detailed information on setting up or troubleshooting a web map, refer to the support note **Web map support in Origin**, which can be downloaded from the [Support bulletins page](#) of the Trimble Access Help Portal.

Background image files

If your controller does not have access to the internet to view [Trimble Maps](#) or you have not [set up a web map](#) to use data from a web map provider, you can add your own image files to provide a background to the map.

Supported image file types

The following image file types and associated world files are supported:

Image files	World files
GeoTIFF	N/A
TIFF (.tif)	.wld .tfw
Bitmap (.bmp)	.wld .bpw .bmpw
JPG	.wld .jgw .jpgw .jpegw
PNG (.png)	.wld .pgw .pngw


NOTE –



- With the exception of GeoTIFF files, background image files that you add to the project must have an associated world file to appear in the map.
- Only 24-bit color JPG files are supported. Pure grayscale JPG files are not supported.

TIFF files are generally more efficient in their use of program memory than other background image formats such as BMP, JPG or PNG. This makes it possible to load TIFF files with file sizes of 100 MB or more, while using only a few MB of program memory. However, if the TIFF file is one large tile then this means the entire file will be loaded into the program memory which will affect controller performance.

Adding background images

Link background image files to the job using the **Map files** tab of the **Layer manager**.

1. To open the **Layer manager**, do one of the following:
 - Tap  in the **Map** toolbar.
 - In the **Job properties** screen, tap the **Layer manager** button.
2. Select the **Map files** tab.
3. To add files from another folder to the list, tap **Add**, navigate to the required folder and then select the file to add. You do not need to select the world file because the software automatically checks for the compatible world file.

If you add a map file that is stored on a USB drive the software automatically copies the file to the current project folder and then links to that file.
4. Tap **Accept** to return to the Layer manager. A single check mark  next to the file name in the **Map files** tab indicates this file is visible in the map. Tap the file again if you want to hide the image from the map.
5. To provide better contrast with features in the job or in other linked files, tap  in the map toolbar and select **Transparency**, and then move the first slider to the left to increase the transparency of background image file.

Viewing and reviewing items in the map

Origin provides various tools for controlling which data is displayed in the map so that you can focus on the data you are working on and more easily find and return to the features or areas you are most interested in.

Basic map view and selection tools

The **Map** toolbar provides tools for:






- orbiting the map, panning around the map and zooming in or out. See [Basic map view, page 159](#).
- selecting individual items, or by drawing a rectangle or polygon around multiple items. See [Selecting items in the map, page 161](#).

Zooming to areas of interest


- **Area of interest**

Creating an area of interest that you can return to as needed.


An **area of interest** is useful when you have a large job site and you want to view only the part you are currently working in.

- To create an area of interest, use the map pan and zoom tools so that the map shows only the part of the map you are interested in and then tap and hold **Zoom extents**  in the **Map** toolbar and select **Set area of interest**.
- To return to this view, tap and hold **Zoom extents**  and select **View area of interest**.
- **Set user zoom extent**
Configure the zoom extents so that part of the map is excluded when you tap **Zoom extents**  in the **Map** toolbar.
Setting a **user zoom extent** is especially useful when you want to exclude a base station position that is several kilometers away.
 - To set the zoom extents, use the map pan and zoom tools so that the map shows only the part of the map you want included in the zoom extents and then tap and hold **Zoom extents**  in the **Map** toolbar and select **Set user zoom extent**. This is now the map view shown when you tap **Zoom extents**.
 - To clear the custom view, tap and hold **Zoom extents**  and select **Clear user zoom extent**.


Showing or hiding linked files or layers

- **Hide linked files or make them unselectable**
Reduce clutter in the map by choosing to show only some of the files linked to the job, or some of layers within those files. To change the files or layers within files that are visible or selectable, tap  in the map toolbar to open the **Layer manager**, select the **Map files** tab and then tap the check mark next to the file or layer name. For more information, see [Managing map file layers, page 140](#).

Improving data visibility and selectability in the map


- **Data transparency**
To provide better contrast with features in the job or in other linked files, tap  in the map toolbar and select **Transparency**, and then adjust the settings to increase the transparency of the map background or BIM model.
See [Map data transparency, page 166](#).
- **Snap-to tools**
Use the **Snap-to** toolbar to accurately select the end point of a line or polyline, or the center of an arc, from linework in a map file even if no point exists. You can also create points from the points calculated by the **Snap-to** tool.
See [Snap-to toolbar, page 272](#).

- **BIM selection mode**

To quickly disable or re-enable the selectability of item types when selecting items from a BIM model in the map, tap **Selection mode**  in the **BIM** toolbar.

See [BIM model selection mode, page 171](#).

- **BIM selection using Organizer**

To select items shown in the BIM model by Organizer group set up in Trimble Connect, tap **Organizer**  in the **BIM** toolbar.

See [Selecting from BIM models by Organizer group, page 172](#).

Isolating data of interest in the map



To isolate data you are most interested in:

- **Limit box**

To see more clearly inside a BIM model, use the **Limit box** to exclude parts of the BIM model such as floors or exterior walls.

See [Limit box, page 167](#).

- **Show and hide from the BIM model**

To easily show only some items in a BIM model regardless of the BIM file or layer they are in, tap **Show only**  or **Hide**  in the **BIM** toolbar.

See [Hiding and isolating items in BIM models, page 173](#).

TIP – If you are viewing a BIM model, you can use the **Limit box** and the tools on the **BIM** toolbar together to isolate the particular part of the model you want to view.

Filtering job data shown in the map

The **Layer manager** provides two tabs for filtering the points, lines, arcs, and polylines in the job that are shown on the map:

- **Filter by point type**

Use the **Filter** tab to filter job data by measurement type, for example by topo points, observed control points, keyed in points, computed cogo points, and so on.

See [Filtering data by measurement type, page 142](#).

- **Filter by code**


Use the **Features** tab to filter job data by the feature codes defined by the Feature Library FXL file linked to the job.

See [Filtering data by feature layer, page 145](#).

Equipment-specific data views

Depending on your connected equipment, you may be able to view data in the map using the following:



- **Augmented reality view**

If Origin is connected to a Trimble GNSS receiver with [IMU tilt compensation](#) and you have started a survey, tap  in the **Map** toolbar to switch to the **Augmented reality** view.

See [Augmented reality viewer, page 176](#).

Map settings

Use the Map settings screen to set up the map so that it is easier to select the right item:



- To change the information that is shown in the map, such as labels and symbols, and to change the appearance of ground planes, surfaces and point clouds, tap  and select **Settings**. See [Map settings, page 181](#).
- To explode polylines contained in DXF, Shape, 12da and LandXML files into individual line and arc segments, or to create points at the ends of lines and arcs and at all points along a polyline so that you can select them, tap  and select **Settings** and then select the appropriate check boxes in the **Map data controls** group box. See [Map data settings for DXF, Shape, 12da, and LandXML files, page 184](#).


 
Basic map view

The **Map** screen appears when you open the job, showing the last used view for the job.

You can complete most work from the map:

- **Software forms** appear alongside the map, enabling you to interact with the map and the form at the same time.

To view more of the form, tap  and swipe left. To decrease the size of a form and view more of the map, tap  and swipe right.

In portrait mode, tap  and swipe down to view more of the form, or tap  and swipe up to view more of the map.

- **Software screens** are full-width and temporarily obscure the map while you are working in them.

To view the map while a full-width software screen is open, tap  to view the **Favorites** screen and then from the **Return to** list at the right of the **Favorites** list, tap **Map**.

Data shown in the map




Any points, lines, arcs, and polylines in the job are shown on the map in black, unless they have a code that defines the color of the feature in the feature library file associated with the job. See [Survey Office feature libraries, page 103](#). Any items you have selected are shown in blue.

The map also shows data from other data files, such as IFC, DXF, or RXL that you have linked to the job using the **Layer manager**. Items in linked files are shown in the colors defined in the file. You can use **Map** tools to select items in linked files and work with them. For more information on the types of files you can link to the job, see [Supported linked file types, page 130](#).

You can add background information to your map to provide context for the other data in the map. Unlike linked files, items in background maps cannot be selected. For more information, see [Adding background maps, page 146](#).

Current position information







 
When you start a survey, the map shows the location of the surveying equipment in use, where:



- The current orientation of a conventional instrument is shown by a dotted line extending from the instrument to the end of the screen.
- The current location of the prism is displayed as .
- The current position of the GNSS antenna is displayed as .
- If you are using IMU tilt compensation, the GNSS antenna icon indicates the heading direction, for example . You must be facing the LED panel of the receiver for the GNSS cursor to be orientated correctly.


Basic Map tools for viewing data


The **Map** toolbar provides basic tools for viewing the data in the map at different zoom levels and from different angles.

The default **Plan** view shows the map in two dimensions. All other map views are three-dimensional views.

- Tap  in the map toolbar to select a different view. To rotate data in the map, tap  and then tap the map and drag to rotate the view. The  icon in the center of the map indicates the point of orbit. Viewing data in 3D is useful for looking at elevation changes and detecting antenna height errors, and to view scan data and surfaces from different sides.
- Tap  or  to zoom in or out one zoom level at a time. Alternatively, place two fingers on the screen and stretch out to zoom in on the center of the map or pinch in to zoom out. To view the map extents, tap .
- To pan around the map, make sure  is selected in the map toolbar and then tap and drag in the map. Alternatively, place two fingers on the screen and slide in the desired direction to move the view. If you are using a controller that has arrow keys, you can use the arrow keys to pan.

NOTE - You cannot tap and drag the map to pan when the map is in **Rectangle selection**  or **Polygon selection**  mode, but you can still use two fingers or the controller arrow keys to pan.

To pan to a point in the map, tap  in the **Map** toolbar and select **Pan to point**. Enter a point name and scale value.

To center the map at the current position, tap  in the **Map** toolbar and select **Pan to here**. For more options, such as to change the scale at which to zoom, select **Pan to point** and configure your settings and then tap the **Here** softkey in the **Pan to point** screen.

For more information, see [Map toolbar](#).

Selecting items in the map



From the map you can select points, lines, arcs, and polylines in the job, as well as items from linked files, including items in a BIM model or scan points from scan point files.

Software forms appear next to the map so that you can still view the map and select items from the map when the form is open.

NOTE -

- To select items from a linked file, the file and the feature layer within the file must be made selectable in the **Layer manager**. See [Managing map file layers, page 140](#). You cannot select points in background images displayed in the map.
- To select a surface, the BIM model must be shown in the map as a solid object, not as a wireframe. See [Map data transparency, page 166](#).

Selecting single points or items

You can select single points or items in the map when using the **Select and pan**  or **Rectangle selection**  tools on the **Map** toolbar.

To select an item in the map, tap it in the map. The point, line, arc, polyline or polygon you selected is shown in blue.

- If you are working in a form that appears alongside the map, for any field where you need to enter a point or item name, tap the point or item in the map to select it. The name of the selected item appears in the field on the form.

For some Cogo and Stakeout functions, when you select items from the map and then select the function, the selected items are automatically entered into the appropriate fields.



- If there are several items close together, when you tap an item in the map a list of nearby items appears. Select the items as required and then tap **OK**.
- When selecting a line, arc, or polyline to stakeout, tap near the end of the line, arc, or polyline that you want to designate as the start. Arrows are then drawn on the item to indicate the direction.


If the direction is not correct, tap the item to deselect it and then tap it at the correct end to reselect the direction required.



NOTE – The direction of alignment and road files is defined when they are created, and cannot be changed.

Selecting multiple points or items


To select multiple points or items in the map, press the Ctrl key on the controller and then tap the items in the map to select them, or use the multi-select button in the **Map** toolbar.

NOTE – Items in a BIM file cannot be selected using **Rectangle selection**  or **Polygon selection** .

The multi-select button toggles between **Rectangle selection**  or **Polygon selection** . Tap the button to change from **Rectangle selection**  to **Polygon selection**  and back.

- To draw a rectangular box around items in the map, tap **Rectangle selection**  in the **Map** toolbar and then drag a box around the items you want to select. Items inside or partially inside the rectangle drawn on the map are colored blue to indicate they are selected.
- To draw a polygon shape around items in the map, tap **Polygon selection**  in the **Map** toolbar and then tap in the map to create a polygon shape around the items you want to select. Keep tapping in the map to add nodes to the polygon.

If you need to undo the last node added, tap . To delete the polygon (for example, to start again) tap .

When you are done adding nodes, tap  to close the polygon. The polygon shape disappears from the map and items inside or partially inside the polygon are colored blue to indicate they are selected.

TIP –

- When multiple items are selected using **Rectangle selection** or **Polygon selection** mode they are typically sorted in the order in which they are stored in the database. If the order of the items in the selection is important, you should select them one by one.
- When in **Rectangle selection** mode you can still tap a single point or line to select it if you are not currently drawing a rectangle.

To deselect items from the map

The fastest way to clear any selection in the map is to double-tap an empty part of the map. Alternatively, tap and hold in the map and select **Clear selection**.

To deselect some of the selected items:

- Tap the selected item again to deselect it. The color of the item changes from blue to its usual color.
- Tap and hold in the map and select **List selection**. A list of the selected items appears. Deselect the items as required.

TIP – If the softkey at the bottom right of the map shows **Stakeout**, there are items selected in the map. When there are no items selected in the map, the softkey at the bottom right of the map shows **Measure**.

Selecting points

There are a number of ways you can select the point or group of points you want to work with.

To enter a point name

For any field that requires a point name, you can:


- Tap the point in the map to select it.
- Type in the name of an existing point.
- Tap ► next to the field and then select one of the options below to create or select the point.

Select...	To...
List	Select from a list of all points in the job.
Wildcard search	Search the job using a filter.
Key in	Create a point by keying in the Point name , Code , and Coordinates .
Fast fix	Quickly measure and automatically store a point. Wherever the instrument is pointing, that position is stored.
Measure	View the Measure screen so that you can enter the Point name , Code , and Target height .
Map selections	View a list of points selected from the map.

To select features from the map

To select features such as points, lines, or arcs from any supported map file type except background images, you can select them from the map. See [Selecting items in the map](#).

To select points in the job or linked files that match selected criteria

1. Tap and hold in the map and tap **Select**.
 2. Select whether to include points from the **Current job** or the **Current job and linked files**.
 3. Define your selection using any combination of the following fields:
 - **Point name** or **Point range**
Tap  to toggle between the **Point name** field and the **Point range (From point, To point)** fields.
 - **Code**
 - **Description 1** and **Description 2**
Description fields appear only if the **Use description fields** option is enabled in the job properties.
 - **Minimum elevation**
 - **Maximum elevation**
- TIP** – Use wildcards in these fields to make multiple selections. Use * for multiple characters, and ? for a single character.
4. If points are already selected, an **Append to current selection** check box appears on screen. Clear this option if you want to overwrite the current selection.
 5. Tap **Accept**.
Any point selections made in the **Select** screen can be edited in the map view. See [Selecting items in the map](#).

To create a list of points

If you have a large number of points in the job you can create a list of points to work from.

The Origin software allows you to perform some functions, such as [staking points](#), [applying a transformation](#), [defining a plane](#) and [export](#), on the list of points.

To create the list of points, tap **Add** in any software screen that supports working from a list and then use one of the following methods to add points:

Method	Description
Enter single point name	Enter a single point name in the current job or linked files. To enter a point from a linked file into a Point name field, access the field and key in the point name. A linked point entered into a point name field is copied into the current job database.
Select from list	Select from a list of all points in the current job and linked files. Tap a column name to sort points by that column.
Select using wildcard search	Select from a filtered list of all points in the current job and linked files.
Select from file	Add all points from a defined CSV or TXT file.
All grid points	Add all grid points from the current job.
All keyed in points	Add all keyed in points from the current job.
Points within radius	Add all points within a defined radius from the current job and linked files.
All points	Add all points from the current job and linked files.
Points with same code	Add all points with a defined code from the current job and linked files. When creating a list of points for export, you can define up to 5 codes.
Points by name range	Add all points within a name range from the current job and linked files. When creating a list of points for export, you can define up to 5 point name ranges.
Section of job	Add all points in chronological order from the first occurrence of "From point" through to and including the first occurrence


Method	Description
	of "To point".
Map selection	Any points currently selected in the map are listed. Tap points to select them in the map or tap them again to deselect them. Alternatively, use the softkeys below the map to add or remove points from the list. Tap a column name to sort points by that column.

NOTE –

- The **Current map selection** method is not available when applying a transformation. However, any points selected in the map automatically populate the list.
- When you add points to the list for stakeout using the **Select from file** option, you can add them from the linked file even if the point in the linked file already exists in the current job. The **Select from file** option is the only way you can stake a point from a linked file when a point of the same name exists in the current job.
- If a linked job contains two points of the same name, the point with the higher class is displayed.

Map data transparency

Increase the transparency of map backgrounds and BIM models in the map to provide better contrast with features in the job or in other linked files.

To open the **Transparency** form, tap  and select **Transparency**.

TIP – Transparency settings do not apply to features in the job or in linked files such as DXF, LandXML or RXL files. Points, lines, arcs, and polylines in the job and feature labels always remain full intensity, regardless of the **Transparency** slider setting.

Map backgrounds

Use the **Transparency** slider control to control the transparency of map background data, including Trimble Maps, data layers from a WMS, and background images.

- To make map background data **more** transparent, tap toward the left side of the slider, or tap and drag the slider control to the left. When the slider is positioned all the way to the left, map background data is displayed at 10% opacity.
- To make map background data **less** transparent, tap toward the right side of the slider, or tap and drag the slider control to the right. When the slider is positioned all the way to the right, map background data has no transparency applied.

BIM models

The **BIM models** group box controls how solid the BIM model appears in the map.

In the **Display** field:

- Select **Wireframe** to view the edges of the object. White lines in the BIM model are shown in black when the **Wireframe** option is selected.
- Select **Solid** to view items as solid objects. To make the object semi-transparent, select a **Transparency** value greater than 0%.
- Select **Both** to show both solid objects as well as the edges of objects.

NOTE – To select a surface, the BIM model must be shown in the map as a solid object, not as a wireframe.



Use the **Transparency** slider control to control the transparency of the BIM model in the map.

- To make the BIM model **more** transparent, tap toward the left side of the slider, or tap and drag the slider control to the left. When the slider is positioned all the way to the left, the model is displayed at 10% opacity.
- To make the BIM model **less** transparent, tap toward the right side of the slider, or tap and drag the slider control to the right. When the slider is positioned all the way to the right, the model is completely visible and appears as a solid object.

Limit box


The **Limit box** enables you to exclude parts of the map to view more clearly the area you are interested in. The **Limit box** is especially useful when viewing BIM models, where you can exclude the outer parts of the model so that you can view inside it.

To use the Limit box

1. Tap  on the **Map** toolbar and then select **Limit box**. The **Limit box** toolbar and sliders appear alongside the map.
2. If needed, zoom and orbit the map to more clearly view the data. Tap the **Reset limits**  button on the **Limit box** toolbar to refit the **Limit box** to the current view. If needed the **Limit box** is rotated so that the faces of the **Limit box** align with the map data shown.




TIP – To more precisely align the faces of the **Limit box** with map data, for example with the front facade of a model, enter a value in the **Reference azimuth** field of the **Map settings** screen. See [Reference azimuth, page 183](#).

3. To fine-tune the extents of the **Limit box**, [use the sliders](#) or [key in values](#).
4. Once you have fitted the **Limit box** to the objects of interest, leave the **Limit box** open while you use Origin. The **Limit box** can be especially useful when measuring to a surface or during staking out.




5. To stop using the **Limit box**, tap  on the map toolbar and then select **Limit box**.

The **Limit box** extents are retained the next time you open it. Repeat the steps above to change the extents.




To fine-tune Limit box extents using the sliders

1. Tap the appropriate button on the **Limit box** toolbar:
 - To set vertical limits for the top and bottom faces of the **Limit box**, tap .
 - To set horizontal limits for the left and right faces of the **Limit box**, tap .
 - To set horizontal limits for the front and back faces of the **Limit box**, tap .
2. Tap and drag the nodes on the slider up or down. The highlighted faces of the **Limit box** move accordingly.

The values on the **Limit box** slider show the extents of each slider, and the center of the map (vertical slider) or the width of the limit box (side and front/back sliders).



3. Repeat these steps to change the extents for each face.
4. To hide the slider and retain the set extents, tap the ,  or  button again.

To fine-tune Limit box extents by keying in values

1. Tap and hold the appropriate button on the **Limit box** toolbar:
 - To key in vertical limits for the top and bottom faces of the **Limit box**, tap and hold . The **Vertical limits** pop-up window appears.
 - To key in horizontal limits for the left and right faces of the **Limit box**, tap and hold . The **Side limits** pop-up window appears.
 - To key in horizontal limits for the front and back faces of the **Limit box**, tap and hold . The **Front limits** pop-up window appears.
2. Enter the required value in the appropriate value field.

TIP – If the **Side limits** or **Front limits** pop-up window does not show fields in which you can key in values, then the **Limit box** is currently rotated and is not aligned with the extents of the job. Either modify the horizontal limits using the sliders or refit the **Limit box** to the extents of the job to make the fields available. See [Clearing limits and refitting the Limit box to the job extents, page 169](#).


3. To close the pop-up window and retain the set extents, tap X in the top right of the window.
4. To inspect 'slices' of a model, for example when viewing each floor of a building:

- a. Tap and hold  to open the **Vertical limits** pop-up window.
- b. Enter the **Thickness** value of the part of the building you want to view and then tap  to lock the **Thickness** value.
- c. To inspect the next 'slice' of the model, edit one of the other values (**Top**, **Center** or **Bottom**).

Clearing limits and refitting the Limit box to the job extents

Each time you open the **Limit box**, the extents are retained from the previous time you used it.

You can clear the current limits and refit the **Limit box** to the extents of the job at any time:

- To reset the **Limit box** to the extents of the job, tap and hold the **Reset limits**  button on the **Limit box** toolbar. Alternatively, when keying in limit values, tap and hold any **Limit box** toolbar button and then tap **Clear all limits** in the pop-up window.
- To clear some limits when keying in limit values, tap and hold the appropriate **Limit box** toolbar button and then tap the **Clear limits** button for the corresponding direction.

Reviewing item properties in the map

To review information for items in the map, select the items in the map and then tap **Review**. If you selected more than one item, select it from the list and tap **Details**.

From the Origin map you can review properties for points, lines and polygons in the job or in linked map files, as well as items from some web map services.

Managing properties

Properties for items in a linked map file are shown in expandable and collapsible groups. To quickly expand or collapse *all* groups, press **Ctrl + Space**, or press **Ctrl** when you tap one of the expand or collapse icons.

To select favorite properties, tap the ☆ next to one or more properties and then tap **Refresh** to copy the selected properties and their group names to the **Favorite properties** group at the top of the properties list.

Favorite properties must be selected per controller. Once you have added a favorite property, the property always appears in the **Favorite properties** group if that property is used for the selected item in any linked map file.

To remove a property from the **Favorite properties** group, tap the ★ next to the property in the **Favorite properties** group and then tap **Refresh**.

Properties in linked files

Properties in linked files are read-only and cannot be edited.

When you use an item from a linked map file in the Origin software, for example in a Cogo calculation, during stakeout, or to create a point in the job, Origin copies the properties of the item from the linked map file and stores them as read-only properties with the point or line in the Origin job.

BIM model property sets



Properties in custom property sets that have been added to the BIM model in Trimble Connect can be viewed and edited for the items selected in the map in the **Review** screen. For more information, see [Reviewing custom property sets, page 175](#).

NOTE – Properties in custom property sets that have been added to the BIM model in Trimble Connect can be edited only in the **Review** screen. When you use an item from a BIM model in the Origin software, for example in a Cogo calculation, during stakeout, or to create a point in the job, Origin copies the custom property sets of the item and stores them as read-only properties with the point or line in the Origin job. If you need to change the value of a custom property, edit the property value before using the item in the software.

Viewing and reviewing BIM models

You can select items in BIM models from the map and then view information about them and use them in other software functions, for example to perform a Cogo calculation, create a surface, or stake out.






To select an item from a BIM model, tap it in the map. The item you have selected is shown in blue. To select multiple items, press the **Ctrl** key on the controller and then tap the items in the map to select them. Depending on the enabled BIM model selection modes, you can select vertices, edges, curved edges (polyedges, such as the rim of a cylinder), or surfaces.


NOTE – Items in a BIM file cannot be selected using **Rectangle selection**  or **Polygon selection** .

Tap **Review** to view more information about the selected items.


When viewing a complex BIM model, the items you are most interested in may be hard to view because they are obscured by other objects, the model may not have well defined layers, or a layer may contain many items.


The tools in the **BIM** toolbar enable you to more easily isolate and view the data in the BIM model you are most interested in.

- Tap **Selection mode**  to quickly disable or re-enable the selectability of item types when selecting items from a BIM model in the map.
See [BIM model selection mode, page 171](#).
- Tap **Organizer**  to select items shown in the BIM model by Organizer group set up in Trimble Connect.
See [Selecting from BIM models by Organizer group, page 172](#).
- Tap **Show only**  or **Hide**  to filter items in the BIM model in the map.
See [Viewing and reviewing BIM models, page 170](#).
- Tap **Property sets**  to download custom property sets applied to the BIM models shown in the map from Trimble Connect.
See [Reviewing custom property sets, page 175](#).

TIP – The **BIM** toolbar automatically appears next to the **Map** toolbar when at least one BIM model has at least one layer set to **selectable** in the map. If the BIM toolbar is not shown, tap  on the **Map** toolbar and then select **BIM toolbar**.



BIM model selection mode

On the **BIM** toolbar, tap  to quickly disable or re-enable the selectability of some item types when selecting items from a BIM model in the map.


Tap  and then disable item types you do not want to be able to select right now, for example disable line selection when you want to select a vertex rather than the line on which the vertex is located.

BIM model selection mode options are:

- **Point/vertex selection** controls whether points or vertices in the model are selectable.
- **Line/edge selection** controls whether lines or edges in the model are selectable.
- **Surface selection:** controls how much of a surface is selectable. Only one surface selection option can be enabled at a time. Choose from:
 - **Whole object** to select the whole object as a single surface.
 - **Individual faces** to select only a single face of the object at a time.

A check mark in the list indicates those item types are selectable. The absence of a check mark means selection of those item types are disabled. The  button changes to  when selection of any item types is disabled, to indicate that not all item types in the BIM model are selectable.

Selecting surfaces

NOTE – To select a surface the BIM model must be shown in the map as a solid object, not as a wireframe. To change this setting, tap  in the **Map** toolbar and then select **Transparency**. In the BIM models group, select **Solid** or **Both** from the **Display** field.

When you enable:

- **Surface selection - whole object**, any hidden parts of the object are also selected, such as parts that are used to join the object to another object.

For example, when performing a surface inspection of a square pillar, select the **Whole object** option so that when you tap the pillar all 6 faces of the pillar are selected and used in the inspection.

- **Surface selection - individual faces**, when you select multiple faces each face is treated as a separate surface.

For example, when measuring to the top of a concrete slab, select the **Individual faces** option and then select the top surface of the slab to ensure that when measuring to the surface the software will measure only to the top surface rather than to the closest point of the whole concrete slab.

Software functions that apply to surfaces can be used whether the **Surface selection** mode is set to **Individual faces** or **Whole object**.

TIP – Items selected in the map remain selected when you change the **Surface selection** mode. However, if you set the **Surface selection** mode to **Whole object**, then selecting an object first deselects any individual faces of the object that are already selected.

A selected surface is oriented so that it faces outward from the object it is part of. The outside surface is highlighted blue and the inside surface is highlighted red.

Sometimes BIM models are not oriented correctly and the surfaces are back to front. In many instances this does not matter, for example **Compute center point**, **Compute center line** and **Measure to surface** are not sensitive to which surface face is selected. However, **Surface inspection** and the **Point, edge, plane** method when performing an object oriented setup are both sensitive to the displayed surface orientation. To select the other face of the selected surface, tap and hold in the map and select **Reverse faces**.

Selecting large numbers of surfaces

To select **all surfaces** in the map, tap and hold on the map and choose **Select all surfaces**. Origin selects every selectable surface in all BIM models that are currently set to selectable in the **Layer manager**.

- If the **Surface selection** mode is set to **Whole object**, then all surfaces in the map are selected as a whole object surface.

If an error message warns that Origin is "Unable to select all surfaces because the selectable layers of linked map files contain too many objects", then if any selectable layers are not needed use the **Layer manager** to make those layers not selectable and then try again.

- If the **Surface selection** mode is set to **Individual faces**, then each face is selected as separate surfaces.

If an error message warns that Origin is "Unable to select all surfaces because the selectable layers of linked map files contain too many individual faces", then change the **Surface selection** filter to **Whole object** selection mode, or if any selectable layers are not needed use the **Layer manager** to make those layers not selectable and then try again.

Selecting from BIM models by Organizer group

If you have a **Trimble Connect Business Premium license**, you can use the Trimble Connect Organizer to organize items in one or more BIM models into groups, for example by project phase, object type or location (floors or sections).

For more information on setting up groups, see **Organizer** in the [Trimble Connect Workflow Extensions User Guide](#).

To select items in BIM models by Organizer group in Origin

1. Tap **Organizer**  on the **BIM** toolbar.

The **Organizer** form appears alongside the map. It shows any manual groups created in the Trimble Connect Organizer that are relevant to the BIM models that are at least partially selectable in the map. Partially selectable means that at least one layer in the BIM model is set to selectable in the **Layer manager**.

2. Tap the arrow next to a group name to view subgroups.



The first number next to a group name shows the total number of items in a group. The second number shows the number of items in subgroups.

3. Tap the name of a group or subgroup to select or deselect the group.

A check mark next to the group or subgroup name indicates items in the group are selected. Selected items are highlighted in the map:

- Selecting more than one subgroup in the same group creates a **combination** so that items in **any** of the selected subgroups are selected in the map.
- Selecting more than one group or subgroups in different groups creates an **intersection** so that only items that are in **all** of the selected groups or subgroups are selected in the map.

TIP – A gray check mark next to a group or subgroup name indicates that some items in the group cannot be selected because they appear in layers in the BIM model that are not selectable. If the name of a group or subgroup is gray then it references layers in the BIM model that are not selectable. You must set the layer to selectable in the **Layer manager** before you can select the group or subgroup in the **Organizer** form.



4. To filter items in the map based on the selection in the **Organizer** form, tap the **Show only**  or **Hide**  button on the **BIM** toolbar. See [Hiding and isolating items in BIM models, page 173](#).
5. To review properties of items selected in the **Organizer** form, tap **Review**. Select an item from the **Review** list.





To move to the next item, tap **Next**. To view the previous item, tap **Prev**. To return to the **Review** list, tap **Back**.

To close the **Review** form and return to the **Organizer** form, tap **Esc**.
6. To close the **Organizer** form, tap **Close**.

NOTE – Existing map selections are cleared when you open the **Organizer** form.

Hiding and isolating items in BIM models


The **Show only**  and **Hide**  buttons on the **BIM** toolbar are not active (cannot be selected) until you select one or more items in the BIM model from the map using the selection tools on the **Map** toolbar or the **BIM** toolbar.


The **Undo**  and **Reset**  buttons on the **BIM** toolbar are not active until you have used the **Show only**  or **Hide**  buttons.





To filter items in the map

1. From the map select one or more items in the BIM model. Alternatively, select items using Organizer groups. See [Selecting from BIM models by Organizer group, page 172](#).

The items you select do not have to be in the same layer or in the same BIM file.

2. Tap **Hide**  on the **BIM** toolbar.

When you tap  :


- The items you selected are no longer visible. The software always hides the **Whole object** even if the **Surface selection mode** is set to **Individual faces**.
- The **Show only**  and **Hide**  buttons on the **BIM** toolbar are inactive, because there are no longer any selected items.
- In the **Map files** tab of the **Layer manager**, the check mark next to the BIM file name changes to  to indicate that some parts of the BIM file are no longer visible and no longer selectable. The check mark next to the name of the layer or layers containing the items you selected also changes to .





To show only selected items in the map

1. From the map select one or more items in the BIM model.


The items you select do not have to be in the same layer or in the same BIM file.

2. Tap **Show only**  on the **BIM** toolbar.

When you tap  :



- The items you selected are now the only items in the BIM file that are visible in the map. The software always shows the **Whole object** even if the **Surface selection mode** is set to **Individual faces**.
- The **Show only**  and **Hide**  buttons on the **BIM** toolbar are inactive, because there are no longer any selected items.
- In the **Map files** tab of the **Layer manager**, the check mark next to the BIM file name changes to  to indicate that some parts of the BIM file are no longer visible and no longer selectable. The check mark next to the name of the layer or layers containing the items you selected also changes to .
- There is now no check mark icon next to any other layers in the BIM file because they are no longer visible.

To undo filtering actions

To undo the previous filtering action, tap **Undo**  on the **BIM** toolbar.

To undo all previous filtering actions and reset the map, tap **Reset**  on the **BIM** toolbar.

NOTE –

- If all items in a layer are hidden using the tools on the BIM toolbar, then that layer is no longer eligible for selection. To be able to select items in that layer you must use the Layer manager to return the layer to fully visible.
- Any changes you make in the **Map files** tab of the **Layer manager** override any filtering actions you make using the **BIM** toolbar, and will affect the current filter. For example:
 - Tap the  icon next to any layer to return the layer to fully visible and selectable.
 - Tap the  icon next to any BIM file name to return all layers in the file to fully visible and selectable.

Reviewing custom property sets

You can use Trimble Connect to create custom property sets for items in a BIM model that can be updated in the field using Origin.

If you have a **Trimble Connect Business Premium license**, you can **create** custom property sets and assign them to any model element in Trimble Connect, without having to access the original authoring tool used to create the BIM model. A **Trimble Connect Business Premium license** is **not** required to **view or edit** custom property sets in Origin.



Because the value of a custom property set can be updated in Origin, custom property sets are a useful way to add properties to the model that inform the office something has changed in the field.

TIP – For example, after staking a BIM object, you could update the property set for each part of the model to change the **As-built** custom property set value from **False** to **True**, which allows the team in the office to track the progress of the build as parts of the as-built structure are staked in the field.

Custom property sets can only be edited when Origin is connected to the internet. Changes to custom property sets are synchronized to the model in the cloud in real time.

For more information on setting up custom property set libraries and assigning custom property sets to BIM models in Trimble Connect, see **Property Set Libraries** and **Using Property Sets in 3D** in the [Trimble Connect Workflow Extensions User Guide](#).

To review custom property sets for a BIM model in Origin

1. In Origin, tap  on the **BIM** toolbar to download custom property sets applied to the BIM models shown in the map.
2. To review information for an item in the BIM model, select the item in the map and then tap **Review**.
3. If you selected more than one item, select it from the list and tap **Details**.
4. Review the properties of the selected item. Properties in the BIM model file are read-only, but properties in custom property sets are editable. Editable properties are indicated by .
5. For custom property sets, select the new value as required.
6. Tap **Accept**.

Custom property sets can only be edited when Origin is connected to the internet. Changes to custom property sets are synchronized to the model in the cloud in real time.

NOTE – Properties in custom property sets that have been added to the BIM model in Trimble Connect can be edited only in the **Review** screen. When you use an item from a BIM model in the Origin software, for example in a Cogo calculation, during stakeout, or to create a point in the job, Origin copies the custom property sets of the item and stores them as read-only properties with the point or line in the Origin job. If you need to change the value of a custom property, edit the property value **before** using the item in the software.

Augmented reality viewer

The **Augmented reality viewer** enables you to interact with your spatial data in the context of the real world. The **Augmented reality viewer** shows map data in 3D, overlaid on the view from the controller camera. Position and orientation information is provided by the connected GNSS receiver.


NOTE – To use the **Augmented reality viewer** you must have started a survey using a Trimble GNSS receiver with [IMU tilt compensation](#).

Use the **Augmented reality viewer** to:

- Visualize map data in 3D, overlaid on the view from the controller camera.
- Use for guidance before beginning precise stakeout.
- Capture images that show the site as well as the features overlaid on the site.
- Document important visual information and share it with stakeholders.

Map backgrounds, including images and Trimble Maps are not shown in the **Augmented reality viewer**. Job data and supported map files, including BIM models and DXF files, are shown. You can use any map tools, including the **Layer manager**, **Limit box**, **Snap-to** toolbar, and **CAD** toolbar to work with the any of the data shown in the **Augmented reality viewer**.

To use the Augmented reality viewer



1. In the **Rover options** page of the RTK survey style, make sure the **IMU tilt compensation** and the **AR viewer** check boxes are enabled in the **Tilt** group.
2. Connect to the GNSS receiver and start the survey.
3. To open the **Augmented reality viewer**, tap  in the map toolbar. The **GNSS antenna** settings screen appears.
4. If you have not yet entered the antenna height, in the **Measured to** field, select where you are measuring the antenna height to and then enter the height value in the **Antenna height** field.
5. Configure the **AR camera setup** fields to match how the controller is mounted to the pole. The Origin software uses this information to calculate the position of the controller camera lens relative to the GNSS receiver. For information about mounting options, see [AR camera setup options, page 177](#)

below.

6. Tap **Accept**.

The **Augmented reality viewer** appears, showing the camera feed from the controller camera.




7. Make sure the IMU is well-aligned by walking a short distance (generally less than 3 meters) while changing direction a few times. A well-aligned IMU will help you to align the camera in the next step.

When the IMU is aligned, the receiver icon in the status bar changes from  to  and the status line shows **IMU aligned**.

8. Align the camera feed with the map data.

Once the camera is aligned with the data, you can measure points or select points for stakeout.

TIP -

- When staking out, the Stakeout AR icon  is displayed over the point you are staking out to make it easy to view in the AR mode. The usual stakeout navigation form appears alongside the **Augmented reality viewer**.
- To save a screen capture that includes the model overlay, press the camera key on the controller keypad or tap . The current **Transparency** setting is used for the image. To save a screen capture and then automatically open the **Media file** screen so that you can annotate the image, long-press the camera key or tap and hold .

AR camera setup options

To use a standard **AR camera setup**, you must use the standard pole mount bracket for your Spectra Geospatial controller. These are:

- Ranger 7: Pole mount and adjustable bracket arm P/N 121349-01-1.
- Ranger 5: Quick release pole mount and adjustable bracket arm P/N 121951-01-GEO.
- MobileMapper 60: Pole bracket P/N 117057-GEO-BKT.
- MobileMapper 6: Pole clamp with magnet mount P/N 125522-GEO.

TIP - If you are not using a standard Trimble pole bracket, use a **custom** AR camera setup. See [Custom AR camera setup, page 179](#) below.

Standard AR camera setup for a Ranger 7 or Ranger 5 controller

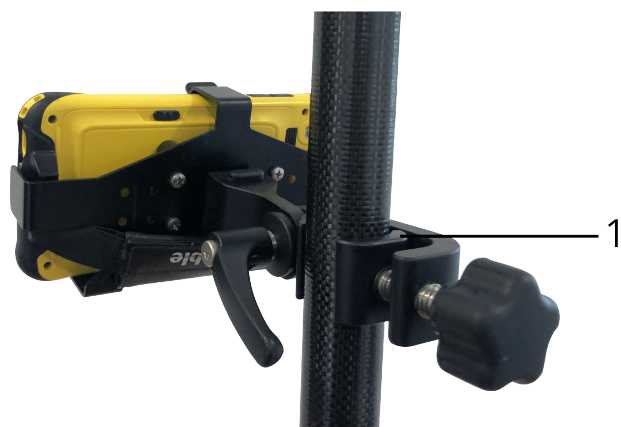
1. Attach the controller to the bracket using the 4 outer screw holes. You will be able to fit the bracket to the pole so that the controller is on the right side or the left side of the pole.
2. Fit the bracket to the pole so that you are squarely facing the controller and the LED panel of the receiver.

3. Select **Standard** in the **Setup configuration** field.
4. In the **Mount** field, select whether the controller is mounted on the right hand or left hand side of the pole.
5. In the **Clamp height** field, enter the height from the pole tip to the top of the pole clamp (**1**), as indicated in the image below.



Standard AR camera setup for a MobileMapper 6 or MobileMapper 60 controller

1. Fit the bracket to the pole so that you are squarely facing the controller and the LED panel of the receiver.
2. Fit the controller to the pole bracket, oriented to landscape.
3. Select **Standard** in the **Setup configuration** field.
4. In the **Clamp height** field, enter the height from the pole tip to the top of the pole clamp (**1**), as indicated in the image below.



Custom AR camera setup

Use a custom AR camera setup only if you are not using a standard Trimble pole bracket.

1. Fit the bracket to the pole so that you are squarely facing the controller and the LED panel of the receiver.
2. Select **Custom** in the **Setup configuration** field.
3. In the **X** field, enter the distance left or right from the center of the pole to the center of the camera lens on the controller.

A positive value indicates the camera lens is to the right of the pole tip, a negative value indicates the camera lens is to the left of the pole tip.

4. In the **Y** field, enter the distance forward or back from the center of the pole to the center of the camera lens on the controller.

A positive value indicates the camera lens is forward of the center of the pole (that is, away from you).
A negative value indicates the camera lens is back from the center of the pole (that is, toward you).

5. In the **Z** field, enter the height from the pole tip to the center of the camera lens on the controller.


Camera alignment



Use the camera alignment controls to align the camera feed with the data shown on screen.

To do this you need to be able to align a virtual element on-screen that aligns with something you can easily identify in the physical world. You can use:

- A point in the job or in a linked CSV file that can align with a physical point at your location.
- A BIM model that you can align with the as-built model in the physical world.
- Virtual markers that you add in the **Augmented reality viewer** and then align with items that are easy to see in the physical world, for example an access cover or a curb edge.

NOTE – Before beginning the camera alignment, make sure the IMU is well-aligned by walking a short distance (generally less than 3 meters) while changing direction a few times. A well-aligned IMU will help prevent movement while you are aligning the camera. When the IMU is aligned, the receiver icon in the

status bar changes from  to  and the status line shows **IMU aligned**.

1. To start aligning the camera, tap  in the toolbar. The **Camera alignment** controls appear.
2. If you need to add virtual markers:
 - a. Position the pole tip at the location of a physical feature that is easy to see in the camera feed, for example an access cover or a curb edge. Tap **Add marker**.
The virtual marker icon  appears at your location in the **Augmented reality viewer**. The location of any virtual marker is temporarily saved in the job until the survey ends.
 - b. Step back to see the marker displayed in the **Augmented reality viewer**.
 - c. Add one or two additional virtual markers as needed. When adding additional virtual markers, position the pole tip at a location that is on the same axis as the previous virtual marker location but at some distance, for example further along the curb edge.
3. Use the sliders in the **Camera alignment** pop-up to align the physical objects shown in the camera feed with the digital data or virtual markers on-screen:
 - a. Use the **Pitch** slider control to fine-tune the vertical axis (tilt) of the camera. Adjusting the **Pitch** slider moves the camera view up or down in relation to the data.
 - b. Use the **Yaw** slider control to fine-tune the horizontal axis (pan) of the camera. Adjusting the **Yaw** slider moves the camera view left or right in relation to the data.
If a coarse adjustment is required, make sure the LED panel of the receiver and the controller screen are facing you squarely. If they are not, you can loosen the bracket clamp and rotate the pole slightly and then use the **Yaw** slider for fine-tuning.
 - c. Use the **Roll** slider control to adjust both the horizontal and vertical axes of the camera. Adjusting the **Roll** slider to moves the camera up or down as well as left or right in relation to the data. In general adjusting the **Roll** slider is less common than adjusting the **Pitch** and **Yaw** sliders.
 - d. Use the **Scale** slider control to fine-tune the rendering of the scale used for the model in the **Augmented reality viewer**. To use the **Scale**, position a well aligned object near the screen center then adjust the scale to get objects near the screen edges aligned.

TIP – To reset the **Camera alignment** settings to default values, tap the **Reset** softkey.



4. If you remain stationary for too long the IMU will start to drift, making it difficult to align the digital data with objects in the physical world. In that case, realign the IMU.
5. To close the **Camera alignment** pop-up, tap the **X** in the corner of the pop-up window.
Once the camera is aligned with the data, you can measure points or select points for stakeout.

Transparency control

Use the **Transparency** slider control to control the transparency of the camera feed, BIM models and point cloud data in the **Augmented reality viewer**.

NOTE – Points, lines, arcs, and polylines and feature labels remain full intensity, regardless of the **Transparency** slider setting.


The mid point of the **Transparency** slider enables you to see both the camera feed and the map data at 50% transparency.

- To make map data more transparent, tap on the left of the slider, or tap and drag the control to the left. At the very left of the slider , only the camera feed is visible and the map data is 100% transparent.
- To make the camera feed more transparent, tap on the right of the slider, or tap and drag the control to the right. At the very right of the slider , only the map data is visible and the camera feed is 100% transparent.

Map settings

Use the **Map** settings to change the appearance of information shown in the **Map** screen, and to configure map behavior.

To open the **Map** settings, tap  and then select **Settings**. The available settings depend on the connected instrument.

To change the information that is shown in the map, such as labels and symbols, tap  and then select an option from the list.

NOTE – The following settings are job-specific and must be set in the map for each job: vertical exaggeration scale, groundplane, and surface options. Other settings apply to all jobs.

Display options

To change the information shown in the map, tap each check box to show or hide:

- name labels next to points
- code labels next to points
- elevations
- points from the stakeout list
- hatched polygons in a background file (including DXF files or Shapefiles)

NOTE – To display labels and elevations for points in data files such as DXF, RXL, or LandXML, use the check boxes in the **Map data controls** group (see below). Labels are not shown for points stored by **Continuous topo**.

Symbols

To change the symbols used for points and lines, select an option from the **Symbols** field:

- Select **Dot symbols** to:
 - Show all points with a uniform dot symbol.
 - Show line and polygon features using the simple solid or dashed **Field line style** from the Feature Library.
- Select **Method symbols** to:
 - Show points by the method used to create the point. For example, different symbols are used for topo points, control points, keyed in points and as-staked points.
 - Show line and polygon features using the simple solid or dashed **Field line style** from the Feature Library.
- Select **Feature library symbols** to:
 - Show points using the symbol defined for points of the same feature code in the feature library (FXL) file. Points that do not have a feature symbol associated are displayed as a small circle.
 - Show line and polygon features using the custom **Line style** from the Feature Library.

NOTE – The drawing of **Feature library symbols** requires the map to be redrawn after every measurement to display the symbol for the new point. On very large jobs, if the map redraw slows, consider changing the **Symbols** setting to display **Method symbols** or **Dot symbols** instead.

TIP – For more information on selecting point and line styles from the Feature Library, see [To add or edit a feature library in Origin, page 105](#).

Label color

To change the color used for labels, select it from the **Label color** list.

Lighting effects

The **Lighting effects** check box controls whether shading and refraction are automatically applied to surfaces. Lighting effects give more graphical depth to surfaces, but can introduce shading or shine effects in small areas on some surfaces.

Dark mode

Select the **Dark mode** check box to change the map background to black. This can be useful when working in low light conditions or for better contrast when working with light colored linework.

Monochrome map

To display items in map files in grayscale, select the **Monochrome map** check box.

Abbreviate labels

By default, point name and code labels are abbreviated to show only the first 16 characters. To display the complete label, clear the **Abbreviate labels** check box.

Map behavior

Automatic pan to current position

If the current position is off-screen and the previous position was on-screen, select the **Automatic pan to current position** check box to automatically center the map on the current position. If no current position is available, for example during a station setup, the map does not pan.

Vertical exaggeration

To emphasize vertical features which might be too small to identify relative to the horizontal scale, enter a value larger than 1.00 in the **Vertical exaggeration** field. The default setting of 1.00 indicates that the horizontal and vertical scales are identical, which gives a true representation of the data.


Map orientation

Select whether the plan view of the map is oriented to **North** or to the **Reference azimuth**.

Reference azimuth

3D map views are always oriented to the **Reference azimuth**.

By default, the **Reference azimuth** field shows the value entered in the **Reference azimuth** field of the **Cogo settings** screen of the job properties (see [Cogo settings, page 107](#)). Editing the **Reference azimuth** field in one screen updates the **Reference azimuth** value in the other screen. When staking a point in a GNSS survey, you can also edit the **Reference azimuth** value when you select **Relative to azimuth** from the **Stake** field. See [GNSS stake methods, page 594](#).

The **Reference azimuth** field also updates if you orbit the map and then tap the **Reset limits**  button rotate the **Limit box** so that the faces of the **Limit box** align with map data. See [Limit box, page 167](#).

To reorient the map, for example to more precisely align the faces of the **Limit box** with map data such as the front facade of a model, enter the required value in the **Reference azimuth** field. To find the reference azimuth value, tap the line in the map you want to orient the map to, and then tap **Review**. In the review pane, if required select the line from the list and tap **Details**.

Map data controls

For information on settings for controlling the display of the data in linked DXF, Shape, 12da, and LandXML files, see [Map data settings for DXF, Shape, 12da, and LandXML files, page 184](#).

To show station values on lines, arcs, polylines, or roads, select the **Display station values** check box. This check box applies to DXF files, RXL alignments, RXL roads, LandXML roads, GENIO roads, or 12da files.

TIP – If the station interval value is null no station labels are displayed. If the station interval is 0 the station labels for the start and end stations plus any PI, PC or PT stations are displayed. If the station interval is a numeric value labels for all stations are displayed (depending on the zoom scale).

Groundplane options


To configure the groundplane displayed in the map, select the **Display groundplane** check box and then enter the elevation of the groundplane. Background imagery from Trimble Maps or a background image file is drawn at the ground plane elevation.

The groundplane elevation is used as a visual reference when viewing the map in 3D. It is not used in calculations.

Surface options

To change how surfaces appear in the map, select one of the following from the **Display** field:

- Color gradient
- Shaded
- Triangles
- Color gradient + triangles
- Outline

If required, in the **Offset to surface** field, specify an offset to the surface. Tap  to select whether the offset is to be applied vertical or perpendicular to the surface.

To modify a surface, for example to delete some triangles, see [Creating a surface from existing points](#).


Road surface options

To change how the road surface appears in the map, select one of the following from the **Display** field:

- Color gradient
- Shaded
- Outline

Map data settings for DXF, Shape, 12da, and LandXML files

The Origin software provides settings for controlling the display of the data in linked DXF, Shape, 12da, and LandXML files.

To configure these settings, tap  in the map toolbar, select **Settings** and configure the setting in the **Map data controls** group.

Map data controls

To explode polylines

To explode polylines contained in the file into individual line and arc segments, select the **Explode polylines (DXF, Shape, 12da & LandXML)** check box. Each segment in an exploded polyline is given a unique name, based on the polyline name and a segment number.

To create nodes

To create points at the ends of lines and arcs and at all points along a polyline, select the **Create nodes (DXF, Shape, 12da & LandXML)** check box. The created points can then be selected for stakeout or Cogo calculations.

This option also creates points at the center of circle and arc elements in DXF files, but creating a point at the center of a DXF arc element does not apply to arc elements that are part of a polyline.

NOTE – Because Shapefiles do not support arcs, arcs are often represented as a series of short lines resulting in a large number of points. Performance may be impacted when **Create nodes** is selected.

To specify the null elevation (DXF only)

Some applications use a value such as -9999.999 to represent null. For the Origin software to correctly treat this value as null, you must enter the value that represents null in the DXF file in the **Null elevation (DXF only)** field. Values are considered to be null if they are less than or equal to the null elevation value. For example, if the null elevation is -9999, then -9999.999 is also considered to be null.

Only grid coordinates are displayed. If you have not defined a projection, only points stored as grid coordinates appear. Grid (local) coordinates cannot be displayed if the input transformation was not defined. See [Transformations, page 248](#).

If the **Grid coords** field in the [Cogo settings](#) screen is set to Increase South-West or Increase South-East, the map display is rotated by 180° such that increasing south coordinates are displayed up the screen.

To display DXF text

To show or hide text in a DXF file, tap the **Display DXF text** check box. Disabling text display in a DXF file that includes a lot of text can improve map performance.

To display name, code, and elevation labels

To show or hide names, codes, and elevations for items in linked files, tap the appropriate check boxes in the **Display** group.

The software shows these extra labels only when the file is set to selectable in the **Layer manager**. If the file is only set to visible, the extra labels are not shown. See [Managing map file layers, page 140](#).


To display station values

Station values are displayed in the map for any lines, polylines or alignments selected from the linked file. To show or hide station values for all items, select the **Display station values** check box.

TIP – If the station interval value is null no station labels are displayed. If the station interval is 0 the station labels for the start and end stations plus any PI, PC or PT stations are displayed. If the station interval is a numeric value labels for all stations are displayed (depending on the zoom scale).

Display settings

To display hatched polygons

To show hatched polygons in a DXF file or Shapefile, tap  in the map toolbar, select **Settings** and select the **Hatch polygons** check box in the **Display** group.

Adding points and lines in the map

From the map you can create new points, lines, and polygons in the job using a variety of software functions.

Measure new points

Measure new points using position information from the connected GNSS receiver or conventional survey instrument.

- To measure points, tap **Measure** to open the **Measure topo** or **Measure point** form and select the measurement method.
If you have not yet started a survey, the software prompts you to start a survey.
- To easily code points as specific feature types as you measure them, use the **Measure codes** form.
See [Measuring points with feature codes, page 537](#).

Create features from existing points and lines

In the map, use existing points and lines in the job to create new features:

- **Offset a line**
Create a new line or polyline by offsetting an existing line or polyline.
See [Offsetting a line or polyline, page 188](#).
- **Create a surface**
Select three or more existing points to create a surface and store it as a triangulated terrain model (TTM) file in the current project folder. You can then use the surface to calculate a volume.

See [Creating a surface from existing points, page 188](#).

- **Compute an intersection**

Compute and store an intersection point for two or three intersecting items.

See [Compute intersection, page 189](#).

- **Draw lines**

Draw line and arc features using feature coded points already in the job using the **CAD toolbar**.

See [CAD toolbar](#).

Key in new points and lines

Key in new points and lines, if needed by selecting existing points and lines from the map or by entering coordinates for new points from the keypad.

See [Keying in points and lines, page 190](#).

Measure and calculate using Cogo functions

Select items in the map and use them in other software functions, for example to perform a Cogo calculation or to create a surface.

When you use an item in a linked file in a Cogo calculation or to create a point in the job, Origin copies the attributes of the item from the file and stores them with the point, polyline or polygon in the job.

See [Cogo calculations, page 197](#).

Measure and store construction points or waypoints

You can quickly measure and store construction points or waypoints that you can use to create other points and lines.

- If the controller is connected to a GNSS receiver, or you are using a controller with internal GPS, you can quickly store a point, such as a waypoint, without having to start a survey. Tap and hold an empty space in the map and select **Store a point**.

See [Current position information, page 430](#).

- If you have started a conventional survey or a GNSS RTK survey, you can quickly measure a construction point. tap ► next to the **Point name** field in the Cogo or Key in screen and then select **Fast fix**:

Typically, a construction point is used in Cogo functions or when keying in lines, arcs, or polylines.

See [Construction points, page 262](#)

Offsetting a line or polyline

1. In the map, select the line/polyline to offset.
2. Tap and hold in the map and select **Offset line/Offset polyline**.
3. Enter the **Horizontal offset** and/or **Vertical offset** value. To change the offset direction, tap ► next to the appropriate offset field.
4. To change how distances are calculated, tap **Options**. See [Cogo settings, page 107](#).
5. Enter the name and, if required, the code for the new line/polyline.
6. If you are offsetting a polyline, enter the **Start station** and **Station interval**.
7. Tap **Store**.

Creating a surface from existing points

If you have three or more 3D points in the job, you can create a surface and store it as a triangulated terrain model (TTM) file in the current project folder. You can then use the surface to calculate a volume. See [Compute volume, page 215](#).

1. In the map, select three or more 3D points.
2. Tap and hold in the map and select **Create surface**.
3. Enter the surface name. Tap **OK**.



The surface is linked to the current job as a linked map file and appears in the map.


To change the appearance of the surface

1. In the map, tap ☰ and select **Settings**.
2. In the **Surface** group, select one of the following from the **Display** field:
 - Color gradient
 - Shaded
 - Triangles
 - Color gradient + triangles
 - Outline
3. If required, in the **Offset to surface** field, specify an offset to the surface. Tap ► to select whether the offset is to be applied vertical or perpendicular to the surface.

To modify the surface

You may need to modify the surface before performing a volume calculation.

 
NOTE – To modify the surface, you must have only one TTM model displayed in the map, which must be set to **visible and selectable**. To change visibility/selectability settings, tap  in the map toolbar to open the **Layer manager** and select the **Map files** tab. In addition, the surface must be displaying **triangles** in the map. To enable this, tap  in the Map toolbar and select **Settings**. In the **Surface** group, select **Triangles** or **Color gradient + triangles** in the **Display** field.

1. Tap  and select **Plan**.
2. In the map, select one or more triangles in the surface.

A triangle can be selected only if no other items, such as points, are selected. To make triangle selection easier, hide other items using the **Filter** tab in the **Layer manager**. To select triangles, the map must be in **Plan** view.
3. Tap and hold in the map and select **Delete selected triangles**. This option is not available if you selected all the triangles in the surface.
4. Tap **OK**.

Compute intersection

To compute and store points at the intersection of features in the map:

1. In the map, select the items to intersect. You can select:
 - two points and a line
 - two lines
 - two arcs
 - two points and an arc
 - a line and an arc
2. Tap and hold in the map and select **Compute intersection**.
3. If required, enter a horizontal and/or vertical offset for each item. Tap  to select the appropriate offset direction.

The horizontal offset direction is relative to the selected direction of the item.

4. In the **Assign elevation using** field, select how the elevation for the intersection point will be calculated.

The available options depend on the items selected but can include:

- **None** – the elevation will be null
 - **Line/Arc 1** – the elevation is computed using the grade of the first line/arc
 - **Line/Arc 2** – the elevation is computed using the grade of the second line/arc
 - **Average** – the average of the elevations is computed using the grade of the first and second line/arc
5. Tap **Calc**.

When one or both items are an arc, two intersections may be computed. You can store both points. If you don't want to store the first point, tap **Skip**.

6. Tap **Store**.

Keying in points and lines

To create points and lines (including arcs and polylines), use the functions available from the **Key in** menu to enter coordinates for new points from the keypad.

You can also access some key in methods from the tap and hold menu in the map.

The selected **Key in** screen appears alongside the map. To select points, enter the point name or tap in the appropriate field in the **Key in** screen and then tap the point in the map. For other ways to select points, tap ▶ and select an option. See [To enter a point name, page 163](#).

To key in points

1. To open the **Key in point** screen, do one of the following:
 - Tap ☰ and select **Key in / Points**.
 - In the map, tap and hold the location for the point and then select **Key in point**.
The **Key in point** option is not available from the tap and hold menu if you are viewing the map in 3D and the map does not include a ground plane or surface.
2. Enter the **Point name** and, if required, the **Code**.
3. Enter the coordinate values. To configure the **Coordinate view** settings, tap **Options**.
4. If you key in a **Station and offset** value, select from the **Type** field the item the station and offset values are relative to.
5. If you key in a **Grid (local)** value, select or create the transformation to apply. To define the transformation later, select **None**.
6. To set the search class for the point to **Control**, select the **Control point** check box. Leave the check box unselected to set the search class to **Normal**.

You can change the search class after the point has been stored using the **Point manager**.

7. Tap **Store**.

TIP – When keying in points from the map:

- If you are keying in multiple points, for each point you can tap in the **Northing** or **Easting** field in the **Key in point** form and then tap in the map to define the coordinates for the point. The **Coordinate view** option must be set to **Grid** or **Grid (local)**. **Grid (local)** is available only when the **Advanced geodetic** option is enabled.
- If the map is in **Plan** view (2D), the **Elevation** field is set to null (?), and a value is optional. If the map is in one of the 3D views, the value in the **Elevation** field is calculated with reference to the ground plane, surface or BIM model. You can edit this value if required.
- If the **Coordinate view** option is set to **Station and offset** and the **Type** is set to **Road**, then if the road format is:
 - **RXL** or **GENIO** and the point is on the road, a **V.Distance** value is applied relative to the elevation at the entered station and offset. If the point is off the road you can enter an elevation.
 - **LandXML** and the point is either on or off the road you can enter an elevation.
- If the **Coordinate view** option is set to **Station and offset** and the **Type** is set to **Tunnel**, then if the tunnel has templates assigned the **V.Distance** value is always applied relative to the elevation of the vertical alignment at the entered station.

To key in a line

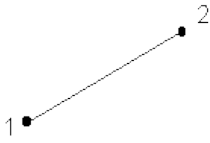
1. Tap  and select **Key in / Line**.

Alternatively, if you are creating a line from two points, you can select the points in the map and then from the tap and hold menu select **Key in line**.

2. Enter the name of the line and, if required, the code for the line.
3. Select the point(s) to define the line. See [To enter a point name, page 163](#).
4. Define the line using one of the following methods:
 - [Two point method, page 191](#)
 - [Bearing-distance from a point method, page 192](#)
5. Tap **Calc**.
6. Tap **Store**.

Two point method

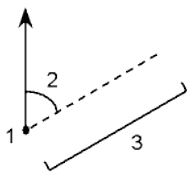
1. In the **Method** field, select **Two points**.
2. Select the start point **(1)** and end point **(2)**.



3. Enter values for the **Start station** and the **Station interval**.

Bearing-distance from a point method

1. In the **Method** field, select **Brng-dist from a point**.
2. Enter the name of the start point (**1**), the azimuth (**2**), and the length of line (**3**).



3. Enter the **Grade** between the start and end points.
4. To change how distances are calculated, tap **Options**. See [Cogo settings, page 107](#).
5. Enter values for the **Start station** and the **Station interval**.

To key in a polyline

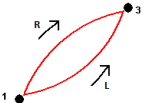
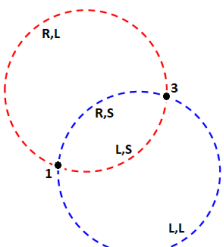
Polylines are two or more lines or arcs connected together.

1. Tap  and select **Key in / Polyline**.

Alternatively, you can select the points, lines, arcs, or other polylines in the map from which to create a new polyline and then, from the tap and hold menu, select **Key in polyline**.


2. Enter the **Polyline name**.
3. If required, enter the **Code** for the polyline.
4. Enter the **Start station** and **Station interval**.

5. To enter the point names that define the polyline:

Enter...	To...
1,3,5	Create a line between points 1 to 3 to 5
1-10	Create lines between all points from 1 through 10
1,3,5-10	Create a line between points 1 to 3, to 5, and 5 through 10
1(2)3	Create an arc between points 1 and 3, through point 2
1(2,L)3	<p>Create an arc that turns to the left from the start point (1) to the end point (3), with point 2 as the center point.</p> <p>The direction (L or R) defines whether the arc turns to the left (counterclockwise) or right (clockwise) from the start point (1) to the end point (3).</p> 
1(100,L,S)3	<p>Create a small arc with a radius of 100 that turns to the left from the start point (1) to the end point (3).</p> <p>The direction (L or R) defines whether the arc turns to the left (counterclockwise) or right (clockwise) from the start point (1) to the end point (3).</p> <p>The size L (large) or S (small) defines the size of the arc.</p> 

6. Tap **Store**.

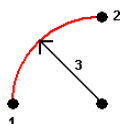
To key in an arc

1. Tap  and select **Key in / Arcs**.
2. Enter the arc name and, if required, the code for the arc.
3. Define a new arc using one of the following methods.
4. To change how distances are calculated, tap **Options**. See [Cogo settings, page 107](#).

5. Tap **Calc.**
6. Tap **Store.**

Two points and radius method

 
1. In the **Method** field, select **Two points and radius.**
2. Select the start point **(1)** and end point **(2)**, and enter the radius **(3)** of the arc.



3. Specify the direction of the arc.
4. Enter values for the **Start station** and the **Station interval.**
5. If required, select the **Store center point** check box and then enter a point name for the centre point.

Arc length and radius method

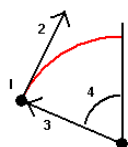
1. In the **Method** field, select **Arc length and radius.**
2. Select the start point **(1)**, the back tangent **(2)**, the radius **(3)** and the length of the arc.



3. Specify the direction of the arc and the grade between the start and end points.
4. Enter values for the **Start station** and the **Station interval.**
5. If required, select the **Store center point** check box and then enter a point name for the centre point.

Delta angle and radius method

1. In the **Method** field, select **Delta angle and radius.**
2. Enter the name of the start point **(1)**, the back tangent **(2)**, the radius **(3)** and the turned angle **(4)** of the arc.

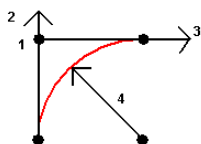


3. Specify the direction of the arc and the grade between the start and end points.
4. Enter values for the **Start station** and the **Station interval.**

- If required, select the **Store center point** check box and then enter a point name for the centre point.

Intersect point and tangents method

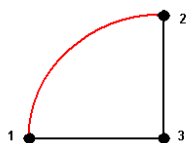
- In the **Method** field, select **Intersect point and tangents**.
- Select the intersection point **(1)**, and enter the back tangent **(2)**, the forward tangent **(3)** and the radius **(4)** of the arc.



- Enter values for the **Start station** and the **Station interval**.
- If required, select the **Store center point** check box and then enter a point name for the centre point.

Two points and center point

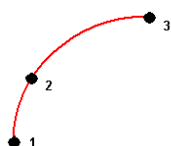
- In the **Method** field, select **Two points and center point**.
- Specify the direction of the arc.
- Select the **Start point (1)**, **End point (2)**, and **Center point (3)** of the arc.



- Enter values for the **Start station** and the **Station interval**.

Three points method

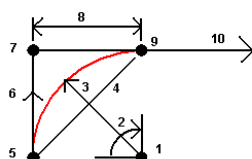
- In the **Method** field, select **Three points**.
- Select the **Start point (1)**, the **Point on arc (2)**, and the **End point (3)** of the arc.



- Enter values for the **Start station** and the **Station interval**.
- If required, select the **Store center point** check box and then enter a point name for the centre point.

Features of an arc

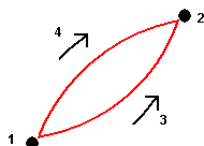
The features of an arc are indicated below.



1	Center point	2	Delta angle
3	Radius	4	Chord length
5	From point	6	Back tangent
7	Intersection point	8	Tangent length
9	To point	10	Forward tangent

The back tangent value (**6**) is related to the direction (right in the above diagram) in which the station or chainage increases. For example, when you stand at the intersection point (**7**) looking in the direction of increasing station or chainage, the forward tangent (**10**) is in front of you and the back tangent (**6**) is behind you.

The direction field defines whether the arc turns to the left (counterclockwise) or right (clockwise) from the start point (**1**) to the end point (**2**). The following diagram shows both a left (**3**) and right (**4**) arc.



The grade of the arc is determined by the elevations of the arc start and end points.

To key in a note

- To add a note to:
 - the job, tap \equiv and select **Key in / Notes**, or press **Ctrl + N** on the keypad.
 - the current record in **Review Job**, tap **Note**.
 - a point record in **Point manager**, tap in the **Note** column for the point.
- Enter the note text. To insert a line break in the text, tap **New line**.
- To generate a record of the current time, tap **T/Stamp**. (In portrait mode, swipe right to left along the row of softkeys to view the **T/Stamp** softkey.)
- To enter codes from the feature library in the note, press the **Space** key *twice* in the **Note** screen. Select a code from the list or type in the first few letters of the code.

5. To attach the note to the:
 - previous point in the job, tap **Prev**.
 - next point in the job, tap **Next**.

NOTE - The note is stored only if another observation is stored during the current survey. If the survey ends before another observation is stored the note is discarded.

6. Tap **Store**.

Cogo calculations

To calculate distances, azimuths, point positions and other coordinate geometry (cogo) functions by various methods, use the Cogo functions provided in Origin.

Most Cogo functions are available from the **Cogo** menu. Some Cogo functions are **also** available from the tap and hold menu in the map, depending on what is selected in the map.

The following Cogo functions are available **only** from the map:

- [Compute intersection, page 189](#)
- [Compute center point, page 264](#)
- [Compute centerline, page 264](#)

You can store the results of Cogo functions in the job.

Selecting points to use in the Cogo function

Select points to use in the Cogo function by selecting them on the map.

TIP - The **Snap-to** toolbar provides a simple way to select locations on objects in the map by snapping onto a specific point, even if no point exists. For example, you can use the **Snap-to** toolbar to accurately select the end point of a line or the center of an arc from linework in a map file, such as a BIM model or DXF file. If a point does not already exist at the selected location, Origin calculates a point. See [Snap-to toolbar](#).

If you have started a survey, tap the **Fastfix** softkey to create a construction point that you can use in the Cogo calculation. See [Construction points, page 262](#).

Coordinate systems for Cogo calculations

When storing points calculated from cogo functions, tap **Options** and use the **Coordinate view** field to specify if the calculated point is to be stored as **Global**, **Local** or **Grid** coordinate values. See [Coordinate view settings, page 683](#).

For some calculations, you must define a projection, or select a **Scale factor-only** coordinate system. If the points were measured using GNSS, the coordinates of the point can only be displayed as grid values if a

projection and a datum transformation are defined.

WARNING – In general, do not compute points and then change the coordinate system or perform a calibration. If you do, these points will be inconsistent with the new coordinate system. An exception to this is points computed using the **Brng-dist from a point** method.


Calculating distances

To change whether distances are displayed and calculated with reference to the ellipsoid, or to grid or ground coordinates, tap **Options** and change the selection in the **Distances** field.


If you are connected to a laser rangefinder, you can use it to measure distances or offsets. See [Laser rangefinders](#), page 465.

Compute point

To calculate the coordinates of an intersection point from one or more points, a line, or an arc:

1. Tap  and select **Cogo / Compute point** and then select the method to use for the calculation.
2. Enter the name of the point and, if required, the code for the point.
3. Define the new point as required for the selected method.

TIP –

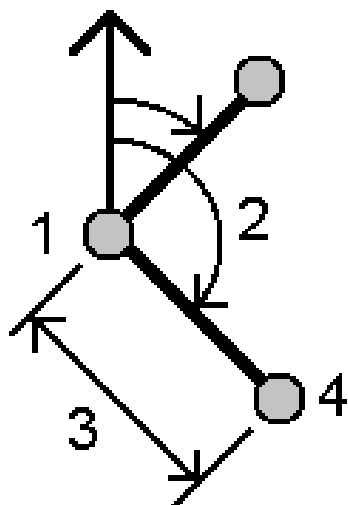
- When selecting reference points, select them from the map or tap  for other selection methods. See [To enter a point name](#), page 163.
- To change how distances are calculated, tap **Options**. See [Cogo settings](#), page 107.

Bearing and distance method

- a. Select the start point **(1)**.
- b. In the **Start point** field, tap  to select the **Radial** or **Sequential** measurement method.

When **Sequential** is selected, the **Start point** field is automatically updated to the last stored intersection point.

Radial



c. Set the **Azimuth origin** to Grid 0°, True, Magnetic, or Sun (GNSS only).

d. Enter the azimuth **(2)** and the horizontal distance **(3)**.

To adjust the azimuth value:

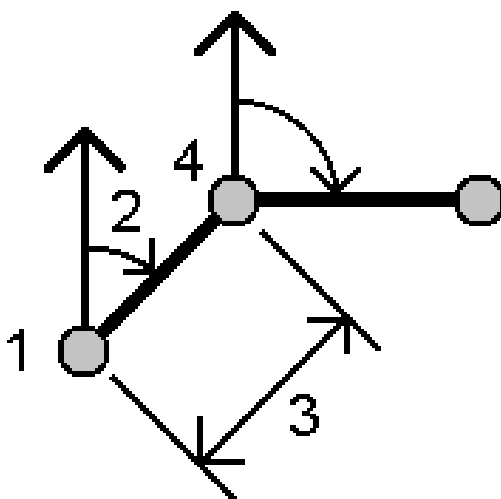
- In the **Azimuth** field, tap ► to adjust the azimuth by +90°, -90°, or +180°.
- Enter a value in the **Delta azimuth** field. The **Computed azimuth** field displays the azimuth adjusted by the delta azimuth.

e. Tap **Calc**. The software calculates the intersection point (4).

f. Tap **Store**.

Sequential:

b.



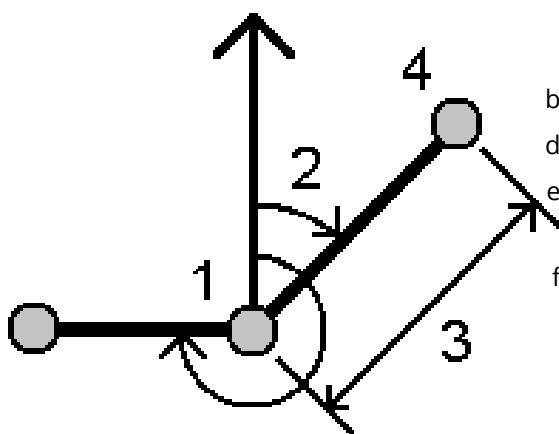
Turned angle and distance method


a. Select the start point **(1)**.

In the **Start point** field, tap ► to select the **Radial** or **Sequential** measurement method.

When **Sequential** is selected, the **Start point** field is automatically updated to the last stored intersection point. The reference orientation for new points moving forward is the computed reverse azimuth from the previous turned angle.

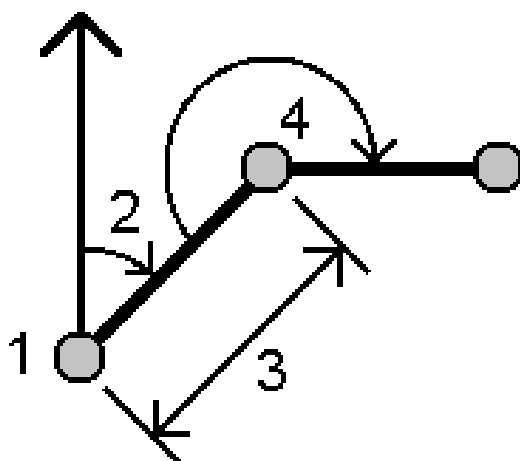
Radial:



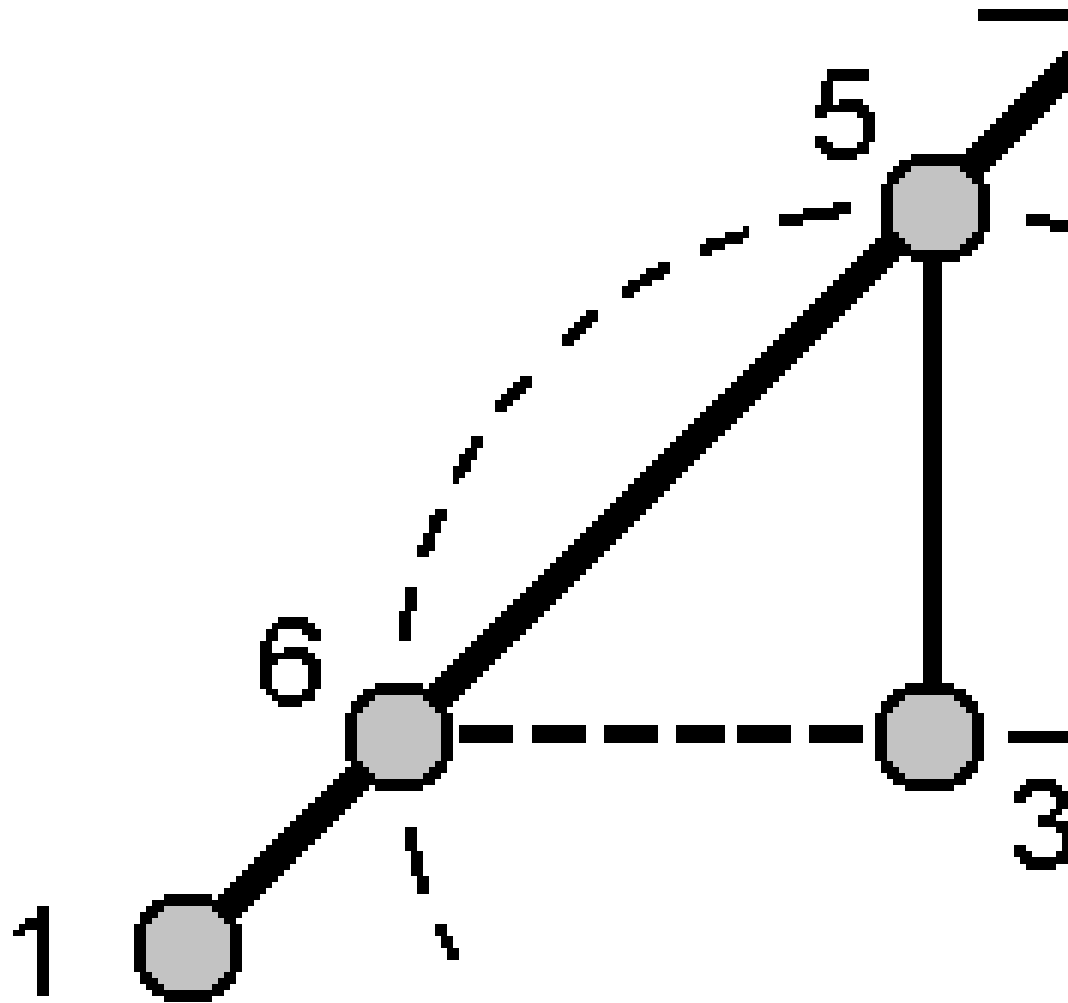
- c. To define the reference orientation:
 - a. Select the **End point**. Alternatively, tap  in the **End point** field and select **Azimuth** and then enter the azimuth **(2)**.
 - b. Enter the **Turned angle**.
 - d. Enter the horizontal distance **(3)**.
 - e. Tap **Calc**. The software calculates the intersection point **(4)**.
 - f. Tap **Store**.

Bearing-distance intersection method

Sequential:



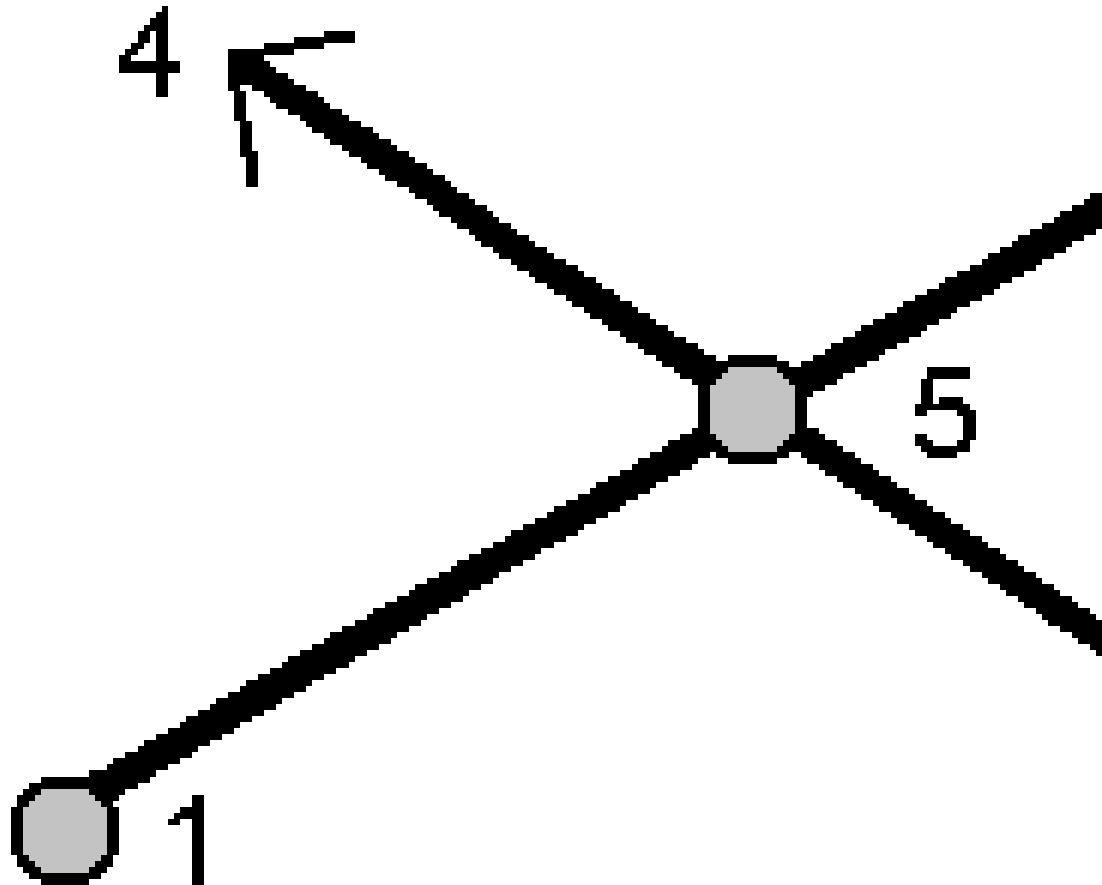
- a. Select point 1 **(1)** and point 2 **(3)**, and enter the azimuth **(2)** and the horizontal distance **(4)**.



- b. Tap **Calc**. There are two solutions (**5,6**) for this calculation.
- c. To view the second solution, tap **Other**.
- d. Tap **Store**.

Bearing-bearing intersection method

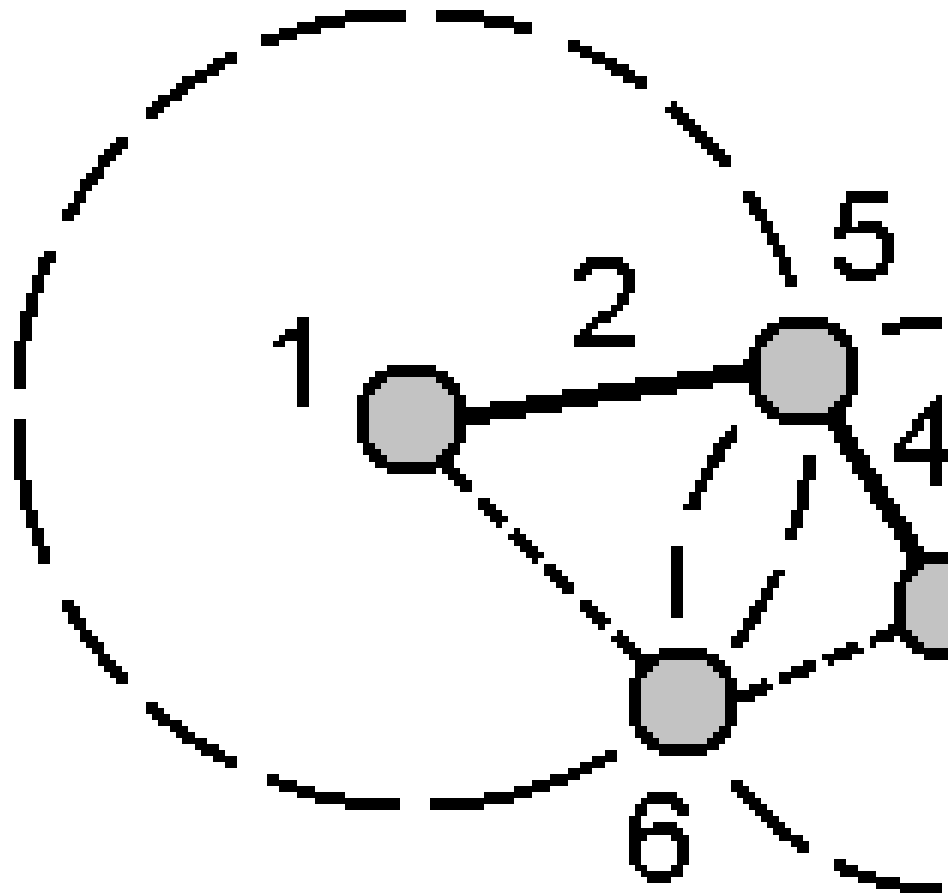
- a. Select point 1 **(1)** and point 2 **(3)**, and enter the azimuth from point one **(2)** and point two **(4)**.



- b. Tap **Calc**. The software calculates the intersection point **(5)**.
- c. Tap **Store**.

Distance-distance intersection method

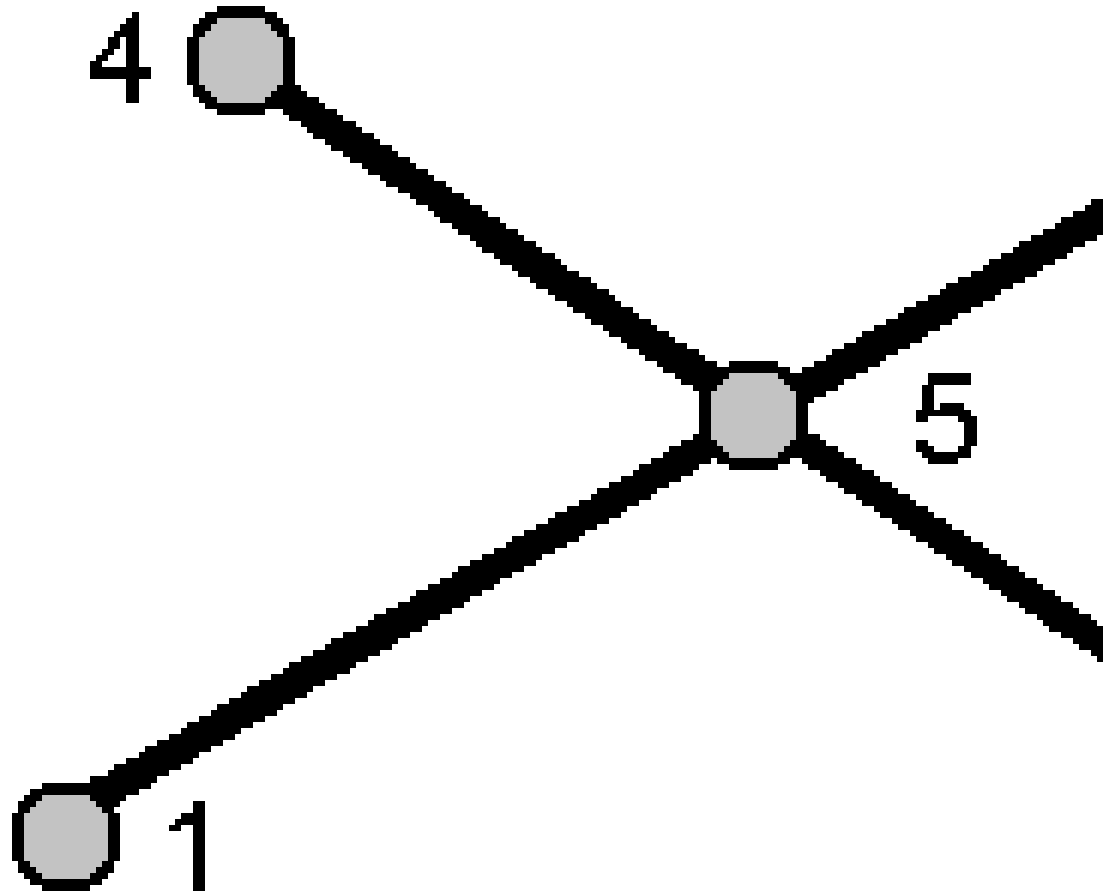
- a. Select point 1 **(1)** and point 2 **(3)**, and enter the horizontal distance from point one **(2)** and point 2 **(4)**.



- b. Tap **Calc**. There are two solutions (**5,6**) for this calculation.
- c. To view the second solution, tap **Other**.
- d. Tap **Store**.

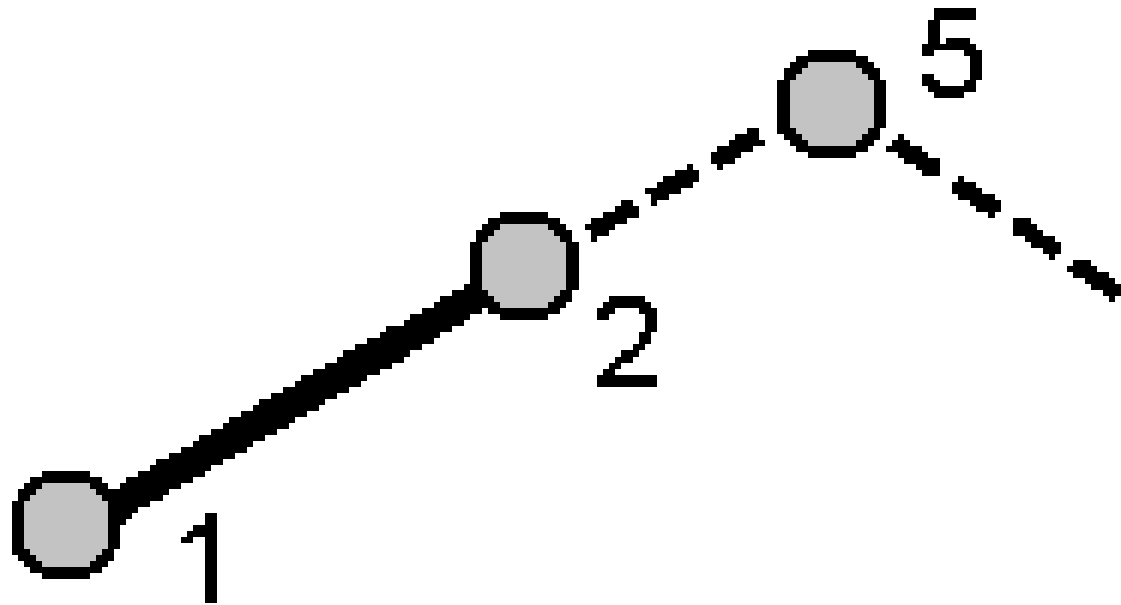
Four-point intersection method

- a. Select the start point of line 1 (**1**), the end point of line 1 (**2**), the start point of line 2 (**3**) and the end point of line 2 (**4**).



- b. Enter any change in the vertical position as a vertical distance from the end of line 2.
- c. Tap **Calc**. The software calculates the offset point (5).

The two lines do not have to intersect, but they must converge at some point, as shown below.

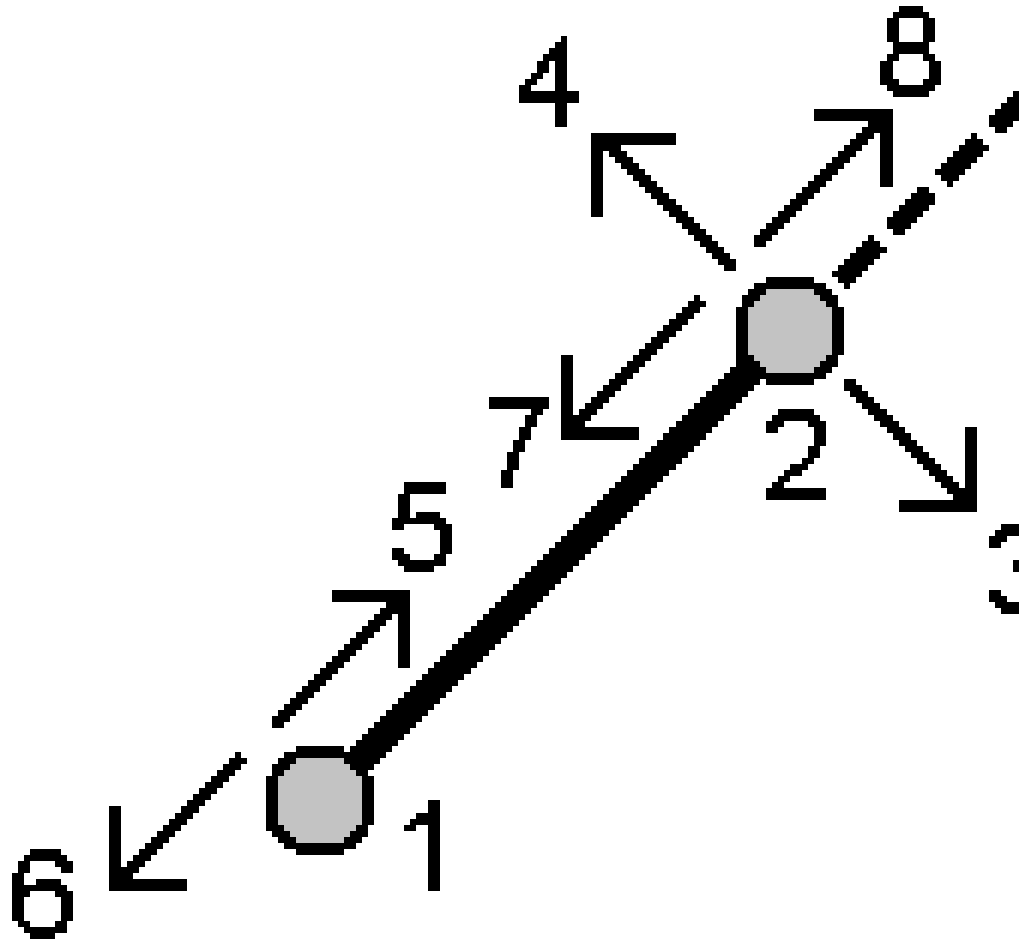


d. Tap **Store**.

NOTE - If you use the **Four point intersection** method or the **From a baseline** method and then change the antenna height record for one of the source points, the coordinates of the point will not be updated.

From a baseline method

- a. Select the start point **(1)** and the end point **(2)** of the baseline.



- b. Enter a **Distance** and select the **Distance direction** method (**5, 6, 7, or 8**).
- c. Enter the offset distance and select the **Offset direction**(**3 or 4**).
- d. Enter the vertical distance.

The vertical distance is dependent on the **Distance direction**. If the direction is relative to the start point, the elevation of the computed point is the elevation of the start point plus the vertical distance. Similarly, if the direction is relative to the end point, the elevation of the computed point is the elevation of the end point plus the vertical distance.

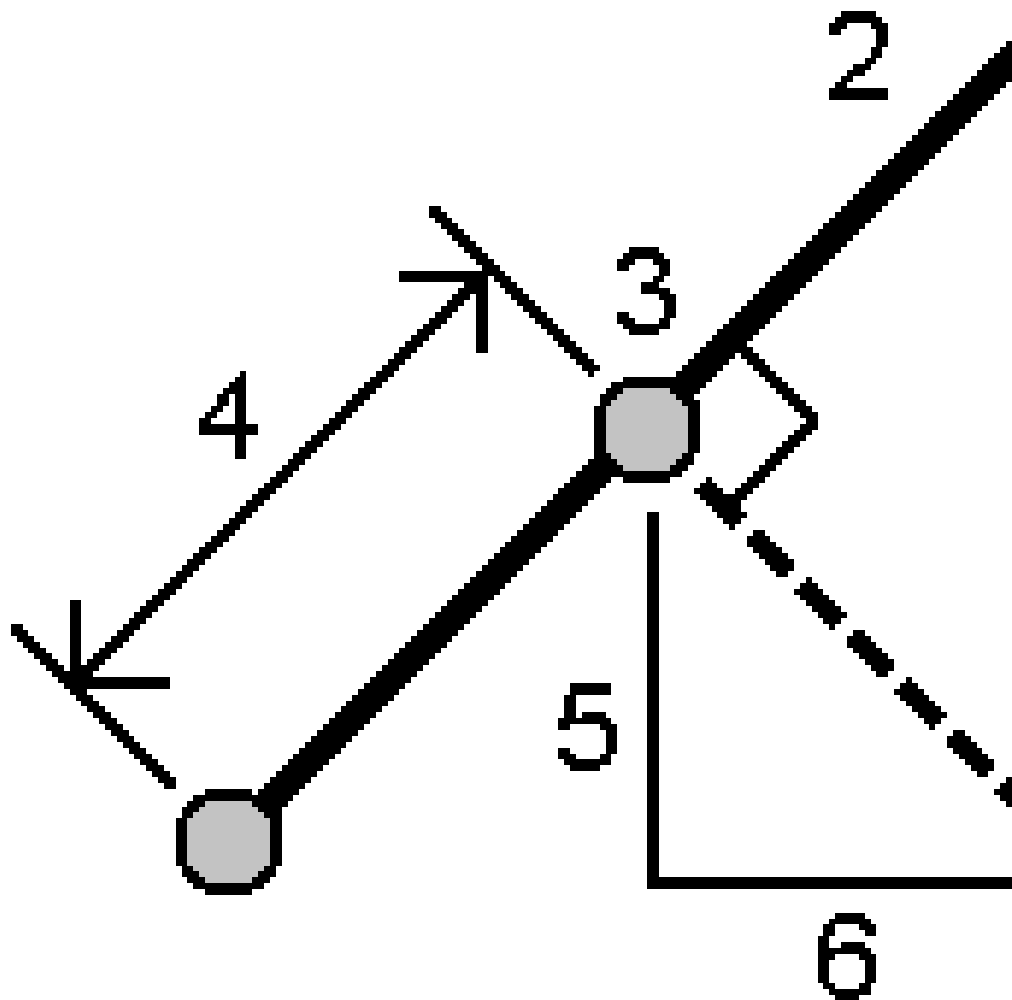
- e. Tap **Calc**. The software calculates the offset point **(9)**.

NOTE - If you use the **Four point intersection** method or the **From a baseline** method and then change the antenna height record for one of the source points, the coordinates of the point will not be updated.

Project point to line method

To compute a point at a position along a line that is perpendicular to another point:

- a. Enter the **Point to project (1)**.



- b. Enter the **Line name(2)** or select the **Start point** and **End point** to define the line.

c. Tap **Calc.**

The software calculates the following values:

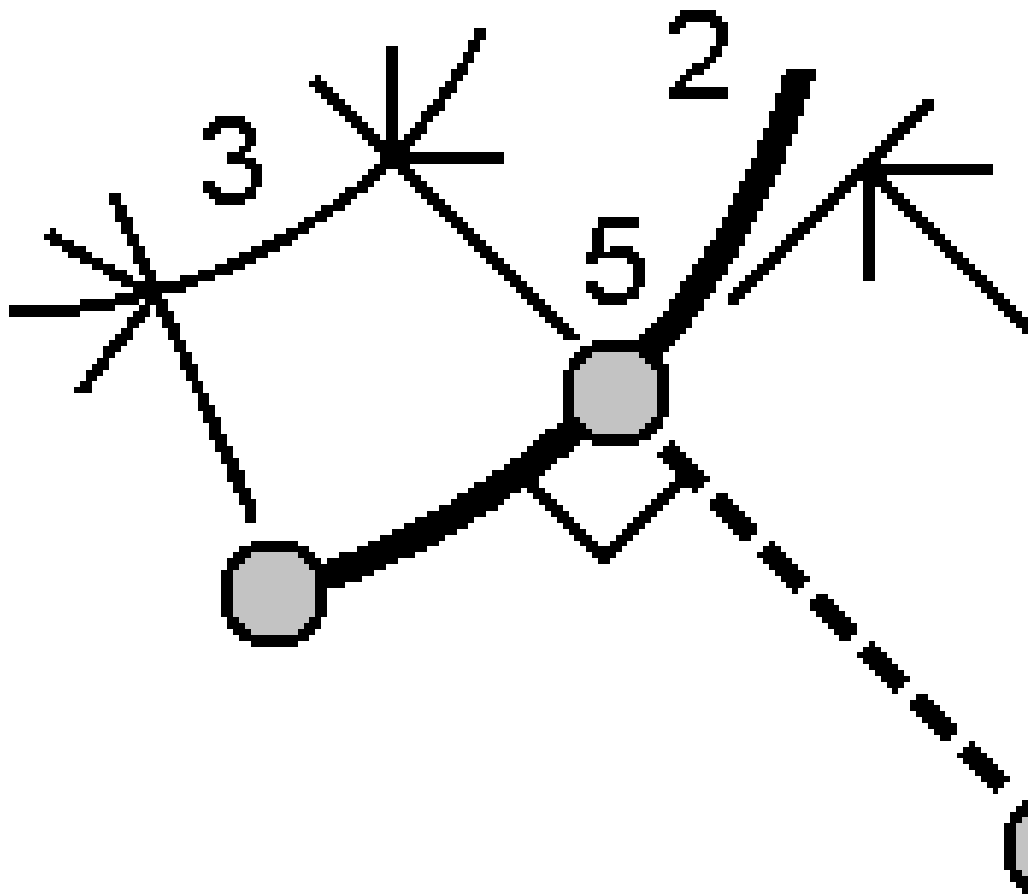
- coordinates of the point **(3)**
- horizontal distance along the line **(4)**
- horizontal and slope distance, azimuth, grade, vertical distance, and delta north **(5)** and east **(6)** values from the selected point **(1)** to point **(3)**

d. Tap **Store.**

Project point to arc method

To compute a point at a position along an arc that is perpendicular to another point:

- a. Enter the **Point to project (1)**.



- b. Enter the **Arc name** or key in a new arc.
- c. Tap **Calc**.

The software calculates the following values:


- coordinates of the point **(5)**
- horizontal distance along the arc **(3)**
- horizontal distance from the arc **(4)**

d. Tap **Store**.

Compute inverse

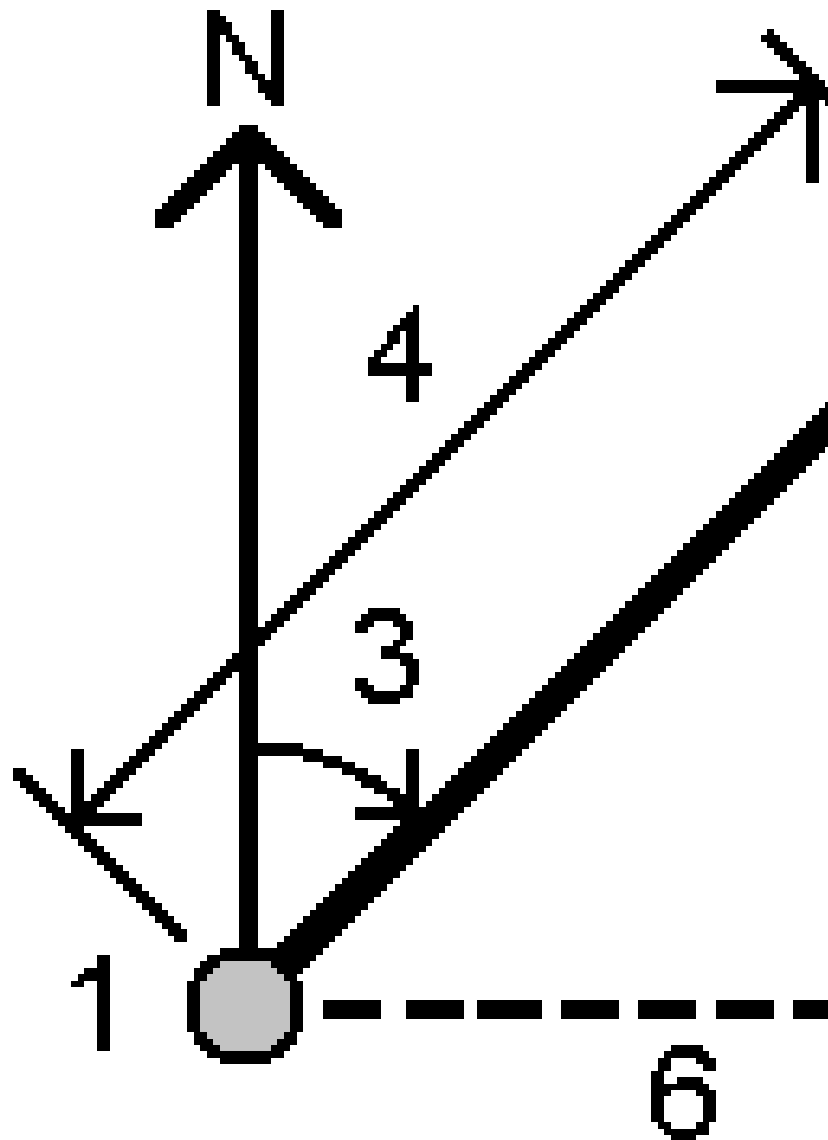
Use the **Compute inverse** cogo function to compute the inverse between points.

1. To open the **Computeinverse** form, you can:

- In the map, select the points and then from the tap and hold menu, select **Compute inverse**.
- Tap  and select **Cogo / Compute inverse** Select the **From point (1)** and **To point (2)**. See [To enter a point name, page 163](#).

The software calculates the following values:

- azimuth **(3)**
- horizontal distance **(4)**
- the change in elevation, slope distance and grade between the two points
- delta north **(5)** and east **(6)**




2. Tap **Store**.

Compute distance

You can compute a distance using keyed-in data, points stored in the job, or data in a map layer. For keyed in data or points stored in the job, the compute distance results are stored in the job. For data in a map layer, compute distance results are stored as a note record.

TIP – You can compute the horizontal distance between two points in the job directly in any **H. Dist** field by tapping inside the **H. Dist** field and then tapping the first point in the map and then tapping the other point. Alternatively, enter the point names in the **H. Dist** field, separated by a hyphen. For example, to compute the horizontal distance from point 2 to point 3, enter "2-3" and then press **Enter**. This method works with most alphanumeric point names, but it does not support point names that already contain a hyphen. You can also select a line and the software copies the distance of the line into the **H. Dist** field.


1. To open the **Compute distance** form, you can:

- Tap  and select **Cogo / Compute distance** and then select the method to use for the calculation.
- In the calculator, tap **Distance**.
- In the map, select the point and the line or arc. Tap and hold in the map and select **Compute distance**.

NOTE – If you select two points in the map, **Compute distance** is not available from the tap and hold menu. Select **Compute inverse** instead.

2. Calculate the distance as required for the selected method.

TIP –

- When selecting reference points, select them from the map or tap  for other selection methods. See To enter a point name, page 163.
- You can enter data in different units. For example, if you add a distance in meters to a distance in feet, the answer is returned in the format you specified in the job properties.

Between two points method

Select the **From point** and the **To point**.

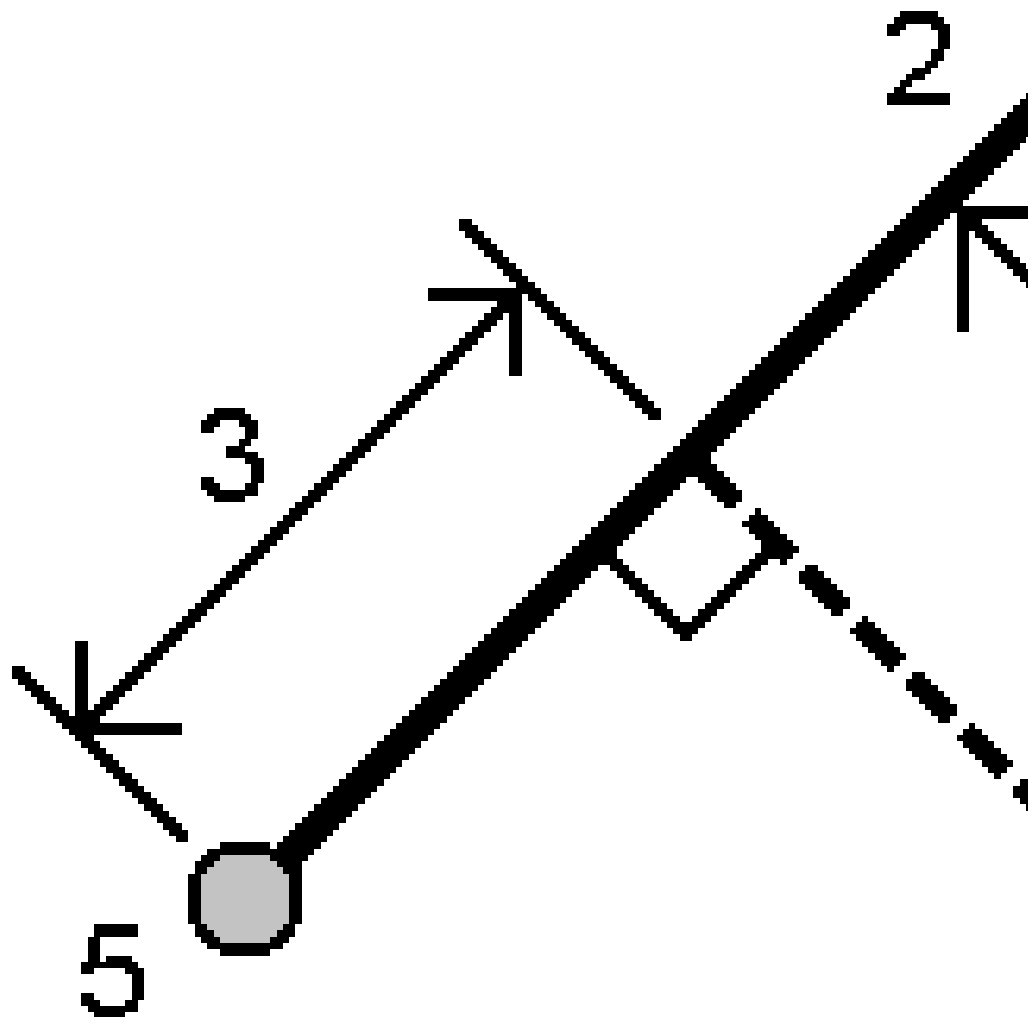
The distance between the two points is calculated.

TIP – You can compute a distance between two points in the job directly in a distance field. To do this, enter the point names in the distance field, separated by a hyphen. For example, to compute the distance between points 2 and 3, enter "2-3". This method works with most alphanumeric point names, but it does not support point names that already contain a hyphen.

Between point and line method

If required, enter the **Point name (1)** and the **Line name (2)**.

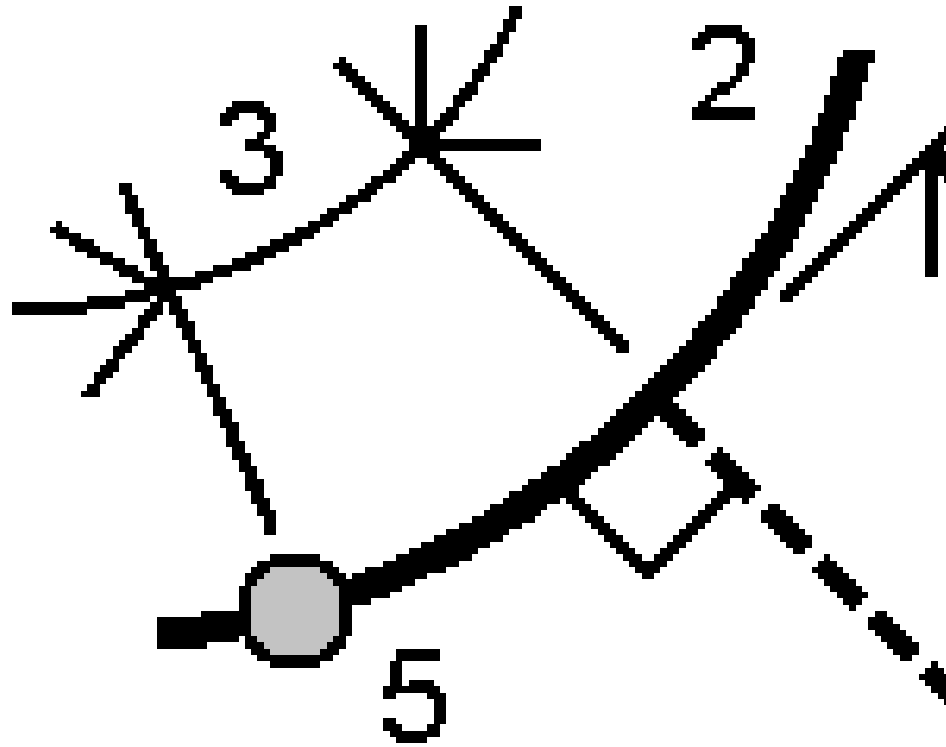
If the line does not already exist, tap  and select **Two points**. Enter the start point and end point to define the line.



The distance along the line **(3)** and the perpendicular distance **(4)** to the line is calculated. The distance along the line is from the point specified **(5)**.

Between point and arc method

If required, enter the **Point name (1)** and the **Arc name (2)**.



The distance along the arc **(3)** and the perpendicular distance **(4)** to the arc is calculated. The distance along the arc is from the point specified **(5)**.

Compute volume

You can calculate volumes from surfaces stored in triangulated terrain model (TTM) files.

You can import TTM files from your office software or generate them from the map in General Survey. See [Creating a surface from existing points, page 188](#).

1. Tap  and select **Cogo / Compute volume**.

Alternatively, to create a surface at the same as time as computing a volume. select at least three 3D points in the map and then from the tap and hold menu, select **Compute volume**. Enter the name for the surface and tap **Accept**. The surface appears in the map.

2. In the **Compute volume** screen, select the required calculation method:

- **Above an elevation** method

Calculates the volume of a single surface above the specified elevation. Only the cut volume is computed.

- **Void volume** method

Calculates the volume of material needed to fill a surface up to the specified elevation.

- **Surface to elevation** method

Calculates the cut and fill volumes between a single surface and the specified elevation. Where the surface is below the elevation, fill will be computed; where the surface is above the elevation, cut will be computed.

- **Surface to surface** method

Calculates the cut and fill volumes between two surfaces. The **Initial surface**, is the original surface and **Final surface** is the design surface or surface after excavation. Where the **Initial surface** is above the **Final surface**, then cut is computed; where the **Initial surface** is below the **Final surface**, then fill is computed.

NOTE - Volumes are computed only in areas where the initial and final surfaces overlap.

- **Stockpile/depression** method

This works in a similar way to **Surface to surface** except with only one surface. The selected surface is treated as the final surface and the initial surface is defined from the perimeter points of the selected surface. Where the surface is above the perimeter surface, then cut is computed (stockpile); where the surface falls below the perimeter surface, then fill is computed (depression).

- **Surface area** method

Calculates the surface area, and using the specified depth can calculate the volume.

3. Select the surface to use.
4. If required, enter the **Haul bulkage** or **Shrinkage** factor to apply to the calculation.

A **haul bulkage** factor allows for the expansion of cut material as it is excavated. Haul bulkage is defined as a percentage. The **Adjusted cut** volume is the cut volume with the haul bulkage factor applied to it.

A **shrinkage** factor allows for compaction in fill material. Shrinkage is defined as a percentage. The **Adjusted fill** volume is the fill volume with the shrinkage factor applied to it.

5. Tap **Calc.**

After haul bulkage and/or shrinkage have been applied, the software shows the **In situ volume** (original volume) and the **Adjusted volume**:


 
- The **Adjusted cut volume** is the cut volume with the haul bulkage factor applied to it.
- The **Adjusted fill volume** is the fill volume with the shrinkage factor applied to it.

Compute azimuth

You can compute an azimuth using keyed-in data or points stored in the job and store the results in the job.


 
TIP – You can compute an azimuth from two points in the job directly in any **Azimuth** field by tapping inside the **Azimuth** field and then tapping the first point in the map and then tapping the other point. Alternatively, enter the point names in the **Azimuth** field, separated by a hyphen. For example, to compute the azimuth from point 2 to point 3, enter "2-3" and then press **Enter**. This method works with most alphanumeric point names, but it does not support point names that already contain a hyphen.

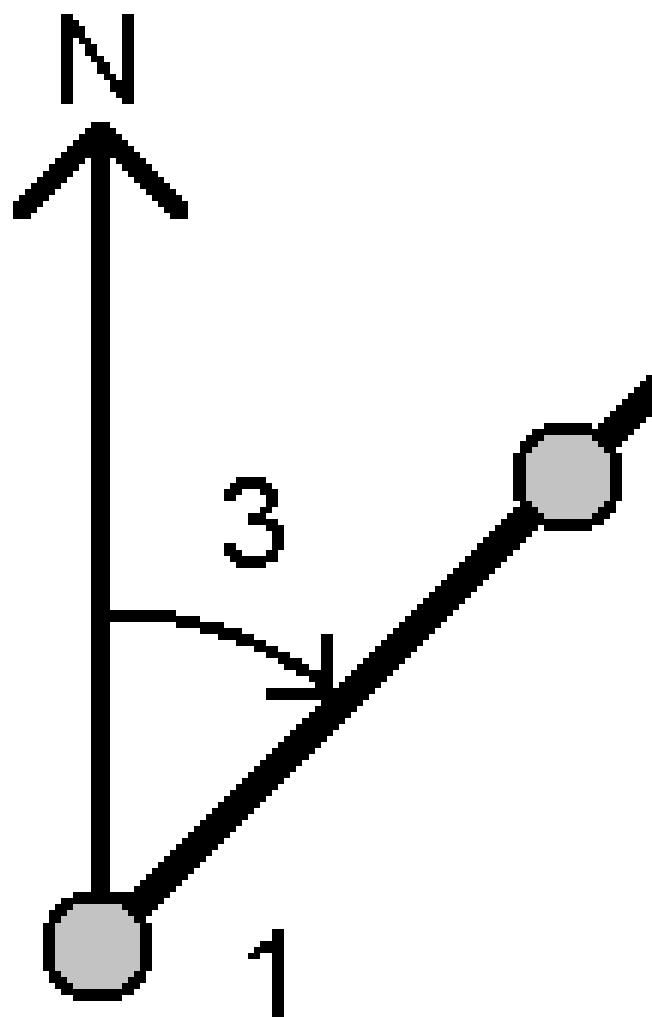
To compute an azimuth using one of the other methods you need to open the **Compute azimuth** form.

1. To open the **Compute azimuth** form, do one of the following:
 - Tap  and select **Cogo / Compute azimuth**.
 - From the [calculator](#), tap **Azimuth**.
2. Calculate an azimuth using one of the methods below.
3. When selecting reference points, select them from the map or tap  for other selection methods. See [To enter a point name, page 163](#).



TIP – You can enter data in different units. For example, you can add an angle in degrees to an angle in radians, the answer is returned in the format you specified in the job properties.

Between two points method

1. In the **Method** field, select **Between two points**.
2. Tap in the **From point (1)** field and then select the point in the map or tap  and select the point from the list.
3. Tap in the **To point (2)** field and then select the point in the map or tap  and select the point from the list.

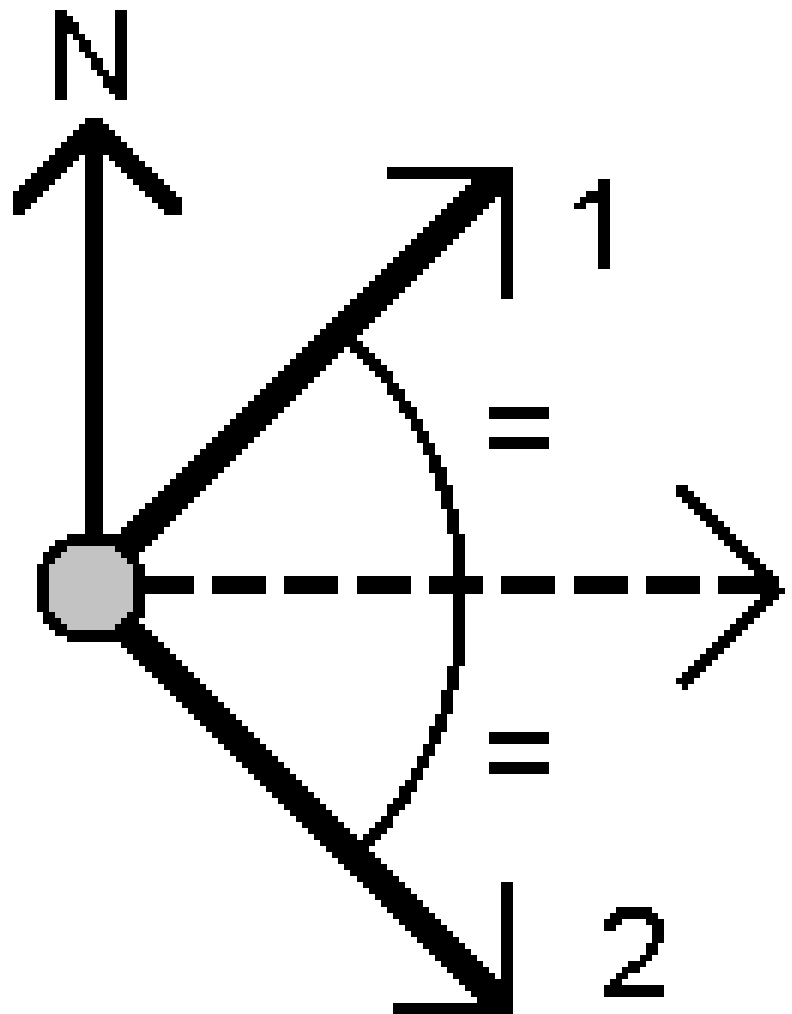


The software calculates the azimuth between the entered values **(3)**.

4. If you need to modify the calculated azimuth:
 - To make it perpendicular, tap  and select -90 or +90.
 - To reverse the azimuth, tap  and select +180.
5. Tap **Store**.

Bisected azimuths method

1. In the **Method** field, select **Bisected azimuths**.
2. Enter values for **Azimuth 1 (1)**, and **Azimuth 2 (2)**.

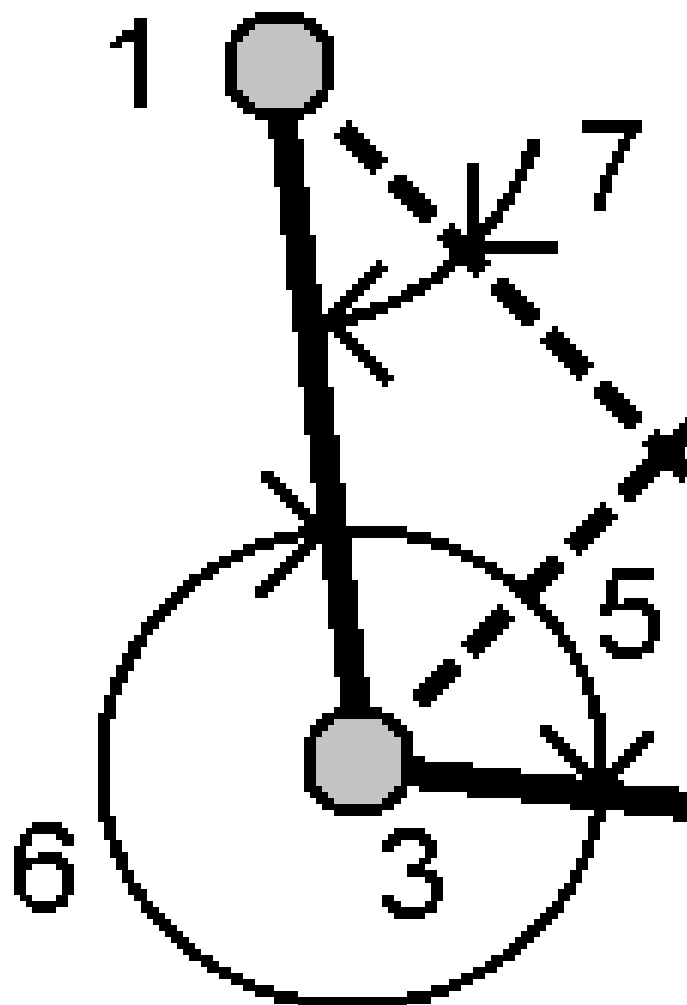


The software calculates the following values: the azimuth halfway between the entered values **(3)** and the computed angle, measured clockwise between azimuth 1, and azimuth 2.

3. Tap **Store**.

Bisected corner method

1. In the **Method** field, select **Bisected corner**.
2. Select the **Side point 1 (1)**, **Corner point (3)**, and **Side point 2 (2)**.



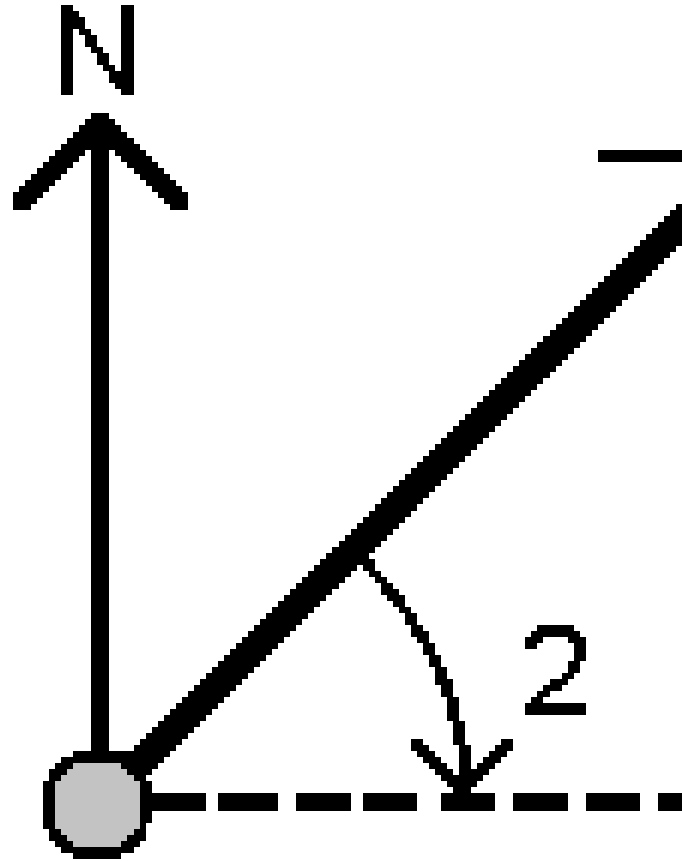
The software calculates the following values:

- azimuth **(4)**, halfway between **Side point 1** and **Side point 2**, from the **Corner point**
- inside angle **(5)** and outside angle **(6)**
- distance from the corner point to the two side points and the distance from one side point to the other
- azimuth from the corner point to the two side points
- angle between the corner point and each side point, as well as the opposite angle **(7)**

3. Tap **Store**.

Azimuth plus angle method

1. In the **Method** field, select **Azimuth plus angle**.
2. Enter the **Azimuth (1)** and the **Turned angle (2)**.




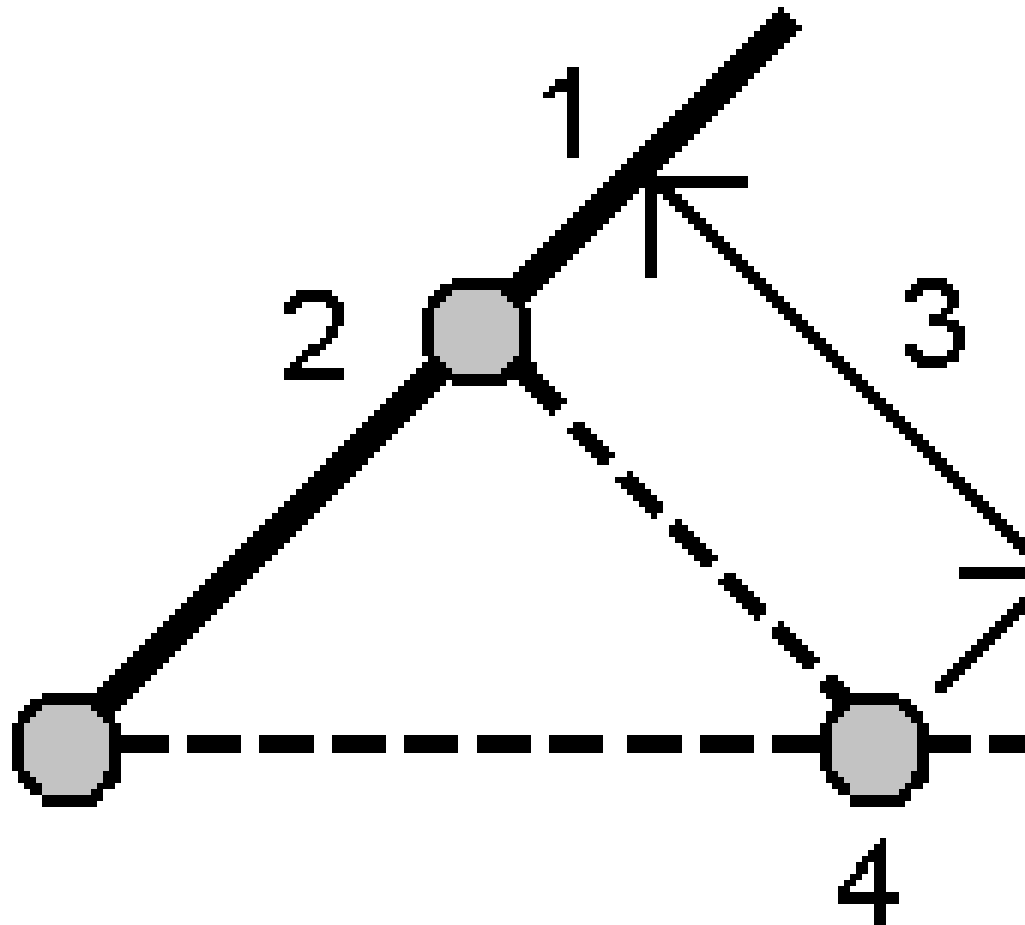
The software calculates the sum of the two values **(3)**.

3. Tap **Store**.

Azimuth to line offset method

1. In the **Method** field, select **Azimuth to line offset**.
2. Select the line **(1)**, and enter the station **(2)** and the horizontal offset **(3)**.

If the line does not already exist, tap  and select **Two points**. Enter the start point and end point to define the line.



The software calculates the following values: computed azimuth (**4**), from the start point of the line to the offset point, and the computed angle, measured clockwise between the line and the azimuth (**4**).

3. Tap **Store**.

Compute average

You can compute and store the averaged position for the same point if it has been measured more than once.

There are two methods available:

- **Points with same name**

Origin allows you to **Store another** when you store a point with the same name as an existing point, and you can average these points.

NOTE – Points stored as control points cannot be used to compute an average using the **Points with the same name** method.

 
TIP – You can average two or more angles-only observations from two different known points only when they are measured and stored **Points with same name**.

- **Map selected points**

If you measure and store points at the same location but give them different names, you can calculate a new averaged point with a new name using the **Map selected points** method.

TIP – To automatically average duplicate points, enable **Auto average** in the **Duplicate point tolerance** section of the survey style.

To compute an average

1. Tap  and select **Cogo / Compute average**, or select the points in the map and then tap and hold in the map and select **Compute average**.
2. Select the **Method**.

- **For the Points with same name method:**

- a. Select the **Point name**.
- b. In the **Code** field, enter the code to use for the averaged point.

The Origin software averages all positions in the job with the same name, except control points. Once computed, the average point grid position appears, along with the standard errors for each ordinate.

NOTE – Any Mean Turned Angle (MTA) observed to the point is ignored and the original observations are used to compute the average position.

- **For the Map selected points method:**

- a. If you have not already selected the points in the map, select them by tapping each point or by drawing a box around them in the map.
- b. In the **Averaged point name** field, enter the name to use for the new averaged point.

- c. In the **Code** field, enter the code to use for the new averaged point.

The software averages the positions and the averaged point appears on the map.

3. To include or exclude specific positions from the average computation, tap **Details**.

The residuals from the average position to each individual position are shown.

4. To change the averaging method, tap **Options**. The default method is **Weighted**.

For more information on the available options and how the averaging is calculated, see [Averaging, page 113](#).

5. Tap **Store**.

If an averaged position for the point already exists in the database, the existing point is automatically deleted when the new average position is stored.

NOTE – An averaged position is not automatically updated if the positions used to compute the average are changed. For example, if the calibration is updated, if observations are transformed or deleted, or if new observations of the same name are added, recompute the averaged position.

Area calculations

You can compute an area defined by points, lines or arcs. If required, you can subdivide the computed area using a parallel line or a hinge point.

NOTE – To compute a **surface area** you must use [Compute volume](#).

1. To compute an area:

From the map:

- a. Select the points, lines, or arcs that define the perimeter of the area to be calculated.

TIP – Select items in the order that they occur on the perimeter. When selecting lines or arcs, select them in the correct direction.

- b. Tap and hold in the map and then select **Area calculations**.

From the menu:

- a. Tap  and select **Cogo / Area calculations**.

- b. Select the points that define the area perimeter, in the order that they occur on the perimeter.

TIP – You can only select points to define the area when you open the **Area calculations** screen from the menu.

- c. Tap **Calc**.

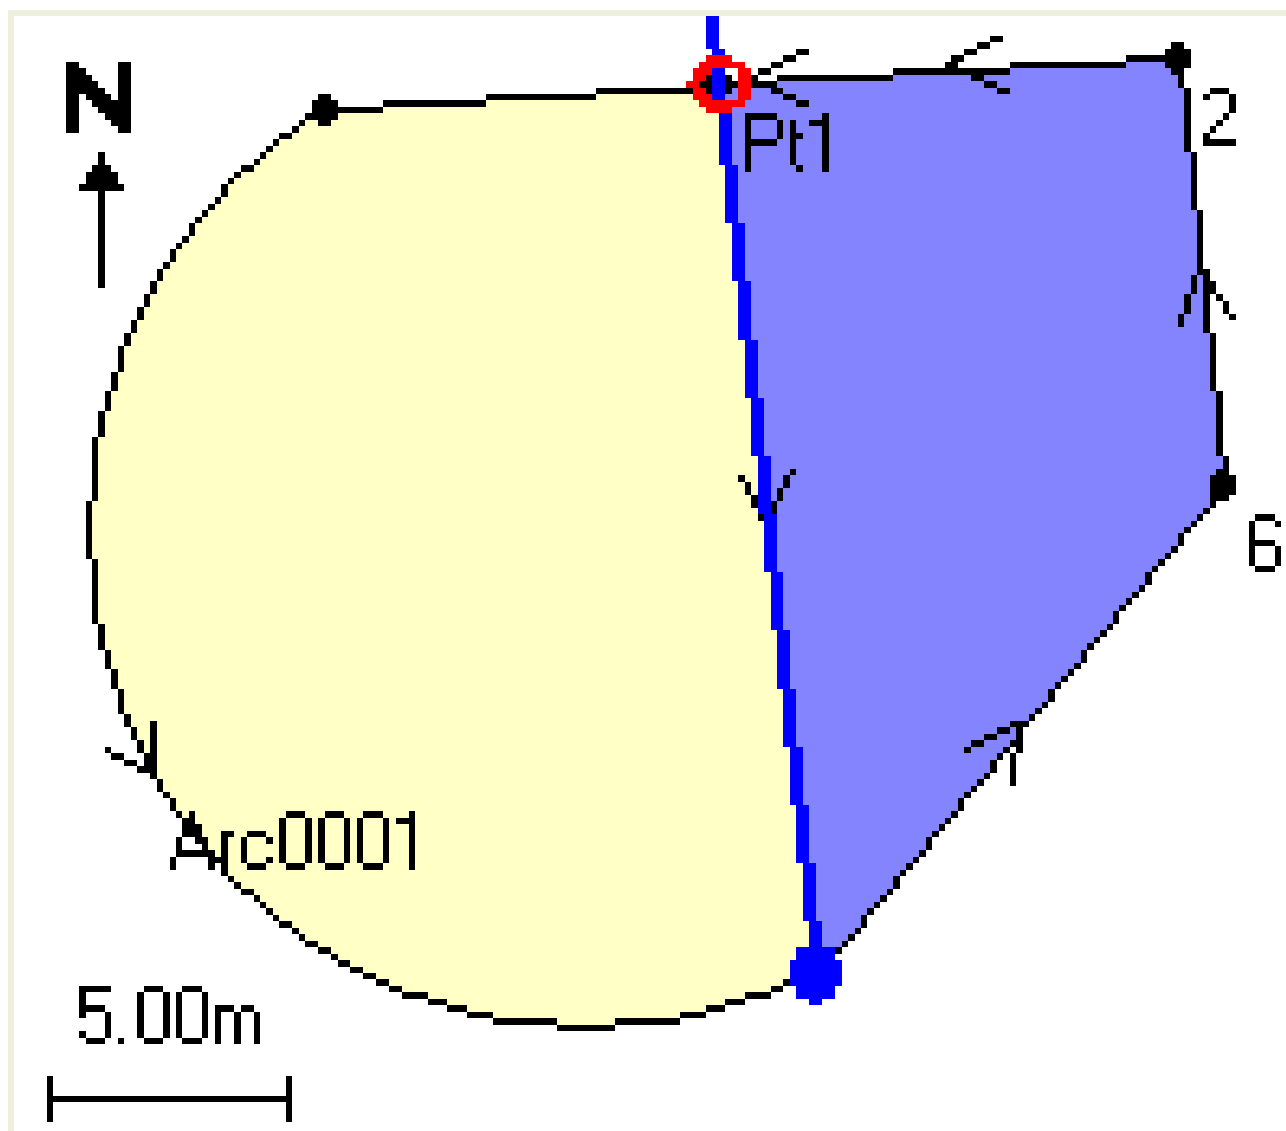
The computed area and perimeter are shown. The arrows on the lines indicate the order in which the points were selected.

2. To change how distances are calculated, tap **Options**. See [Cogo settings, page 107](#).
3. Enter a name for the area in the **Name** field.

4. To store the area without subdividing it, tap **Store**.
5. To subdivide the area:
 - a. Tap the subdivide method – **Parallel** or **Hinge**.
 - b. In the **New area** field, enter the size of the new area, which will be subtracted from the total area.
 - c. If you selected:
 - The **Parallel** method, tap the line that defines the parallel line.
 - The **Hinge** method, tap the point that defines the hinge point.

The **New area** that you entered is shaded blue. New intersection point(s) are displayed with a red circle, and labeled Pt1, Pt2, and so on.

See the example of an area subdivided using the **Hinge** method below:




NOTE - If lines intersect or cross over, the software attempts to compute the correct area and subdivide the area, but in some cases may give the wrong results. Make sure that the graphical representation looks correct and then double-check the results if you have concerns that they may not be correct.

- d. If the subdivided area you require is the complement of the area displayed, tap the **Swap area** button to switch areas.
- e. Tap **Continue**.
- f. To store the intersection point(s), enter their name(s) and then tap **Save**.
- g. If you do not want to save the intersection point(s), do not name them. Tap **Close**.

To view details about the original area and perimeter, new area and perimeter, intersection points, and an image of the area, go to **Review job**.

Arc solutions

To calculate an arc or to compute points on an arc, tap  and select **Cogo / Arc solutions**.

To calculate arc solutions

You can calculate an arc when two parts of the arc are known.

1. In the **Arc values** group, use the two **Method** fields to set the entry type for the arc values you have.

The first known part of the arc is defined by one of the following:

- **Radius** – is the radius of the arc.
- **Delta** – is the delta or deflection angle.
- **Degree arc** – is the deflection angle (delta) that results in an arc length of 100 units.
- **Degree chord** – is the deflection angle (delta) that results in a chord length of 100 units.

The second known part of the arc is defined by one of the following:

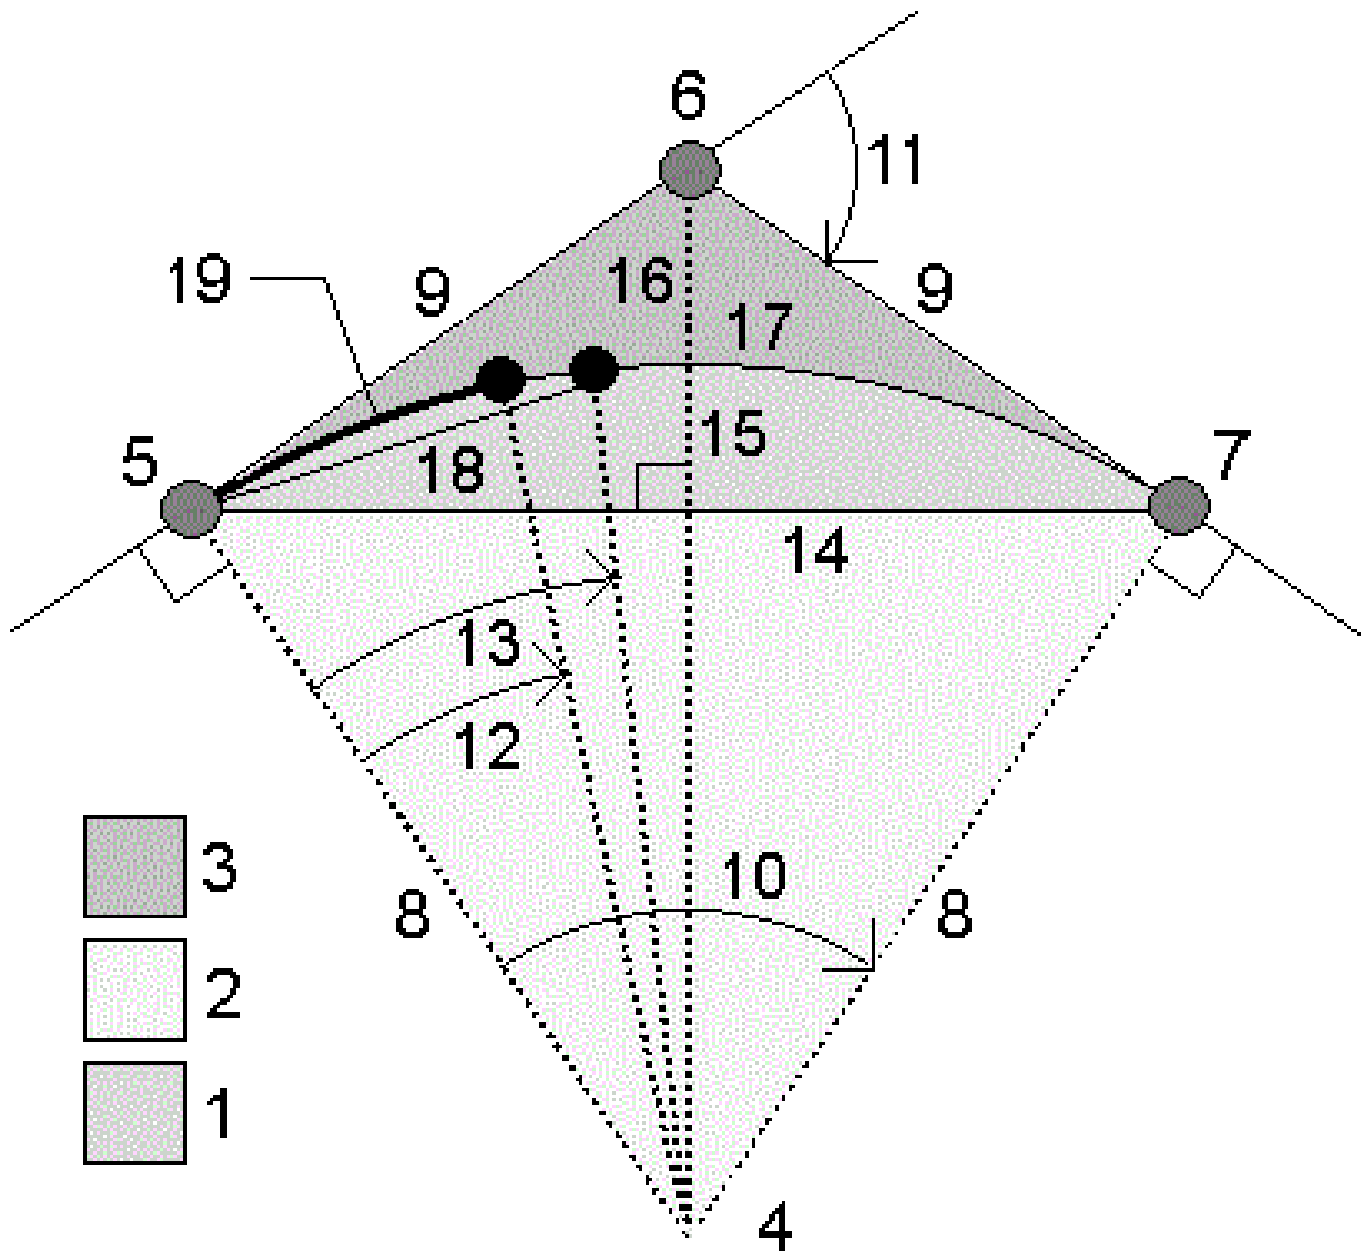
- **Delta** – is the delta or deflection angle.
- **Length** – is the arc length.
- **Chord** – is the chord length.
- **Tangent** – is the distance from the PC or PT to the PI.
- **External** – is the shortest distance between the Point of Intersection (PI) and the arc.
- **Mid ordinate** – is the distance between the arc and the chord at the mid point of the arc.

2. Tap **Calc**.

The results for the horizontal arc, and a graphical representation of the arc are shown. Entered data appears as black text; computed data appears as red text.

Results

The following values are computed for an arc.



Item	Value	Definition
1	Segment area	The area between the arc and the chord.
2	Sector area	The area between the arc and the two edge radii.
3	Fillet area	The area between the arc and the tangents.
4	Center point of the arc	The center point of the arc.
5	Point of curvature (PC)	The start of the arc.
6	Point of Intersection (PI)	The point at which the tangents intersect.
7	Point of tangency (PT)	The end of the arc.
8	Radius	The radius of the arc.
9	Tangent	The distance from the PC or PT to the PI.
10	Delta angle	The delta angle.
11	Deflection angle	The deflection angle.
12	Degree arc	The deflection angle that results in an arc length of 100 units.
13	Degree chord	The deflection angle that results in a chord length of 100 units.
14	Chord length	The chord length.
15	Mid ordinate	The distance between the arc and the chord at the mid point of the arc.
16	External	The minimum distance between the PI and the arc.
17	Arc length	The arc length.

To compute points on the arc

1. Tap **Layout** to compute points on the arc at any station along the arc.
2. Select one of the methods in the **Layout method** field.
3. To save the results to the job, tap **Store**.

TIP – Once you have stored the results, tap **Arc** to hide the **Layout** fields from the screen.

PC deflection method

Provides the deflection angle and distance to each specified station on the arc as if you are occupying the PC point and backsighting the PI point.

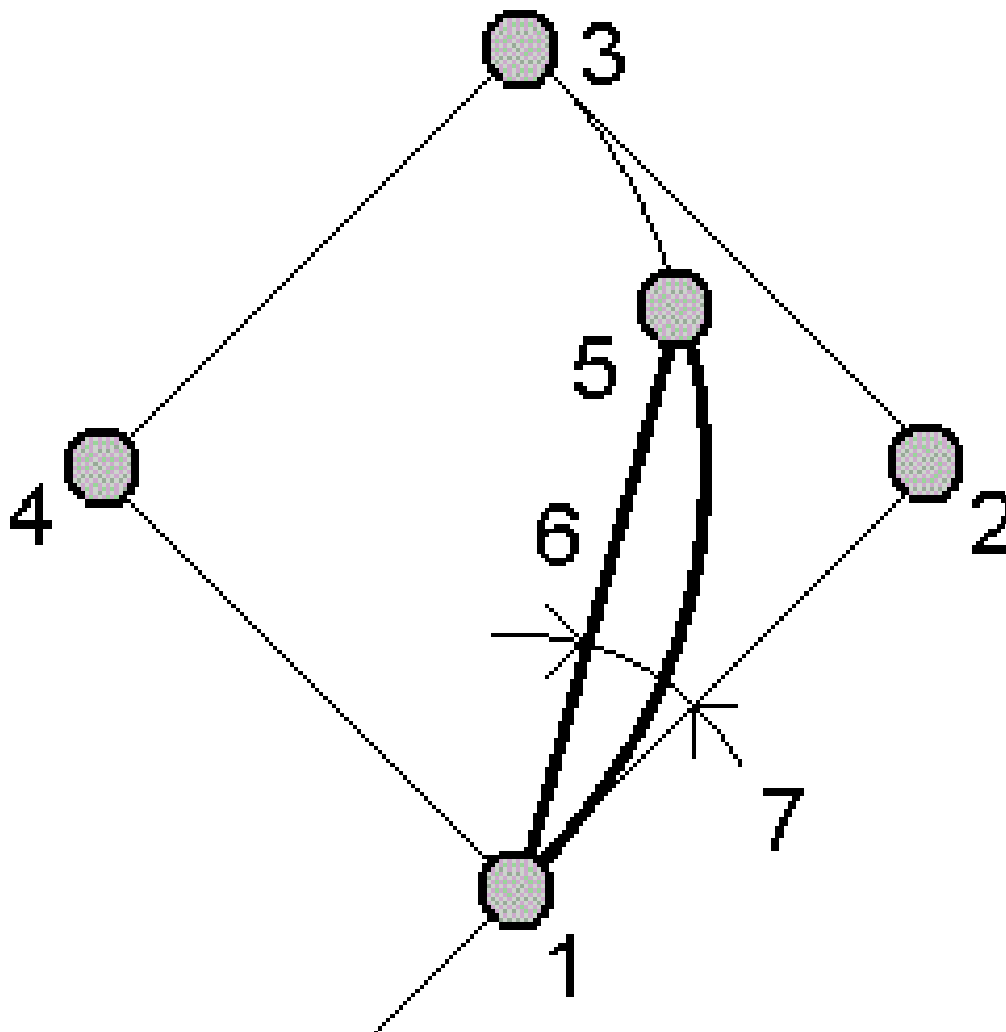
Tap **Calc** to view the computed arc with these additional details:

- **Station** – is the specified station along the arc.
- **Deflection** – is the deflection angle from the tangent line (PC point to PI point) to the current station point on the arc.
- **Chord** – is the distance to the current station point on the arc from the PC point.
- **Previous station** – is the previously specified PC deflection station.

This is available only if the immediately previous point was computed using the PC deflection method.

- **Short chord** – is the chord distance from the current PC deflection point on the arc to the previous PC deflection point on the arc.

This is available only if the immediately previous point was computed using the PC deflection method.



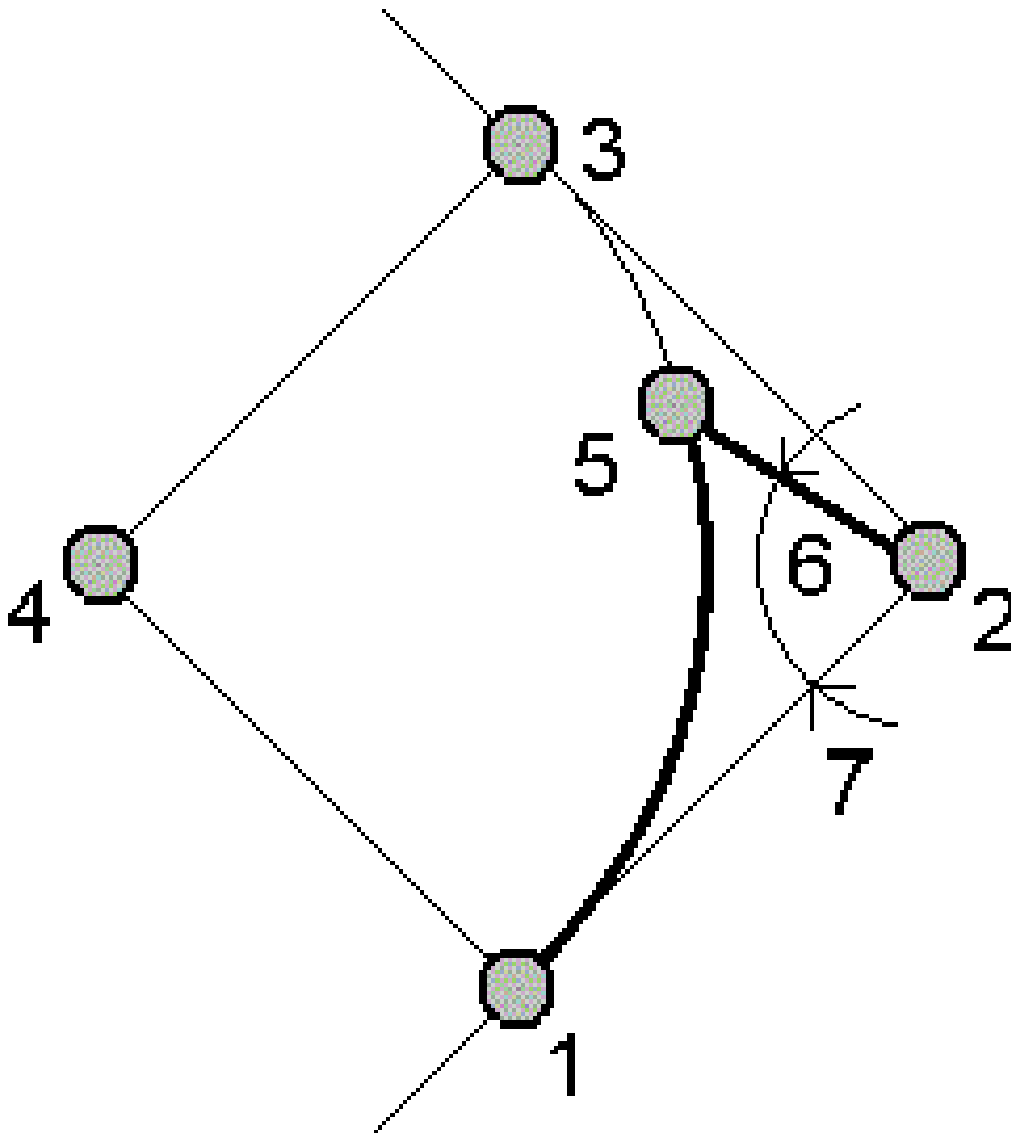
- | | | | |
|---|-------------------------|---|----------------------------|
| 1 | Point of curvature (PC) | 2 | Point of Intersection (PI) |
| 3 | Point of tangency (PT) | 4 | Center point of the arc |
| 5 | Current station | 6 | Chord |
| 7 | Deflection angle | | |

PI deflection method

Provides the deflection angle and distance to each specified station on the arc as if you are occupying the PI point and backsighting the PC point.

Tap **Calc** to view the computed arc with these additional details:

- **Station** – is the specified station along the arc.
- **Deflection** – the deflection angle from the incoming tangent line to the current station point on the arc.
- **PI to station** – the distance to the current station point on the arc from the PI point.



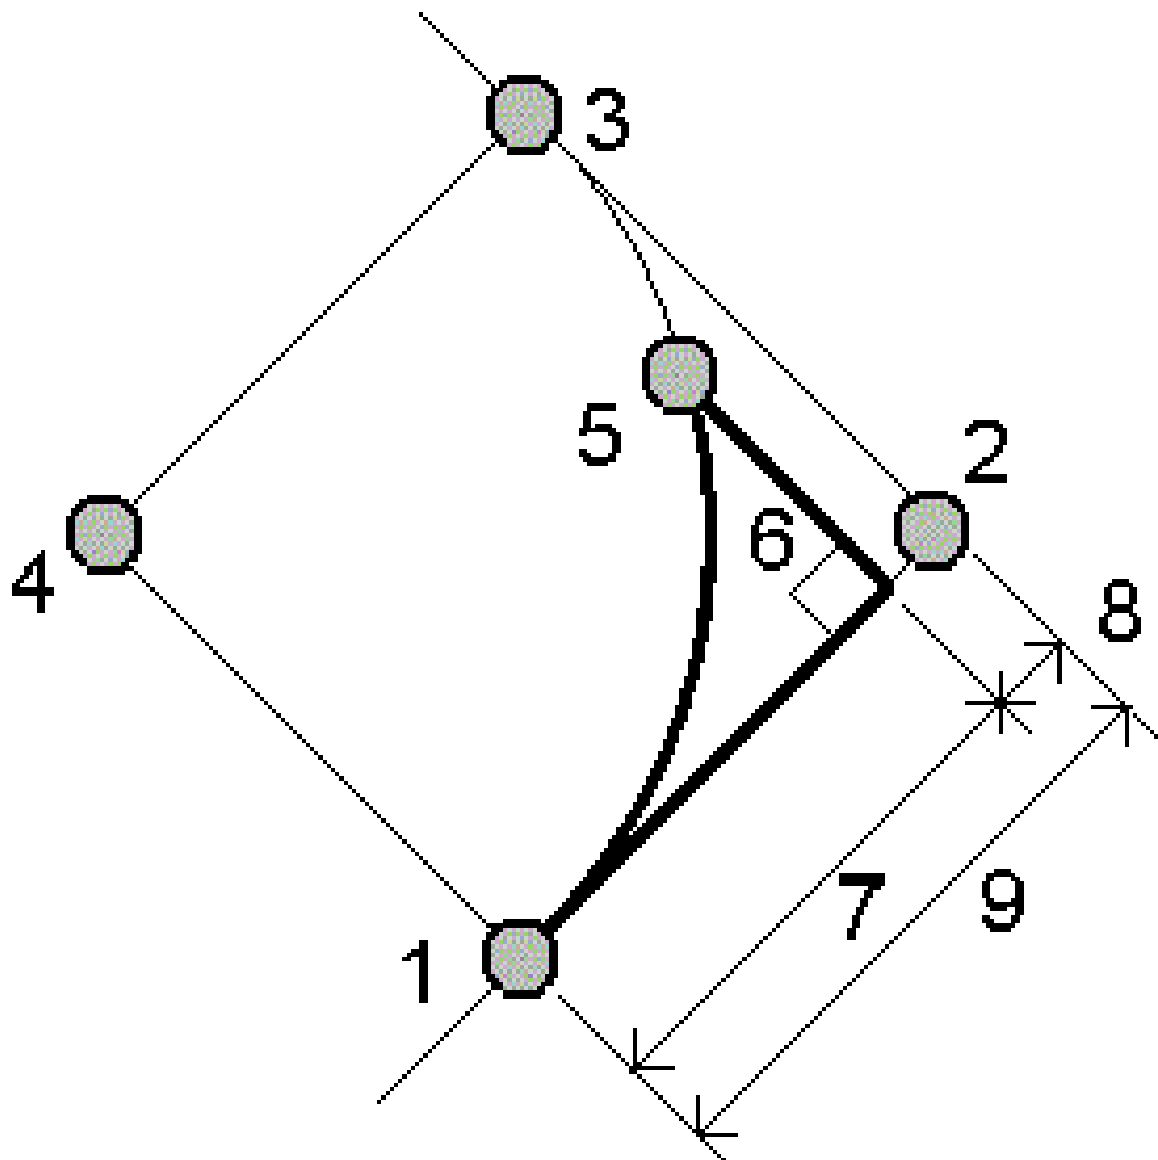
- | | | | |
|---|-------------------------|---|----------------------------|
| 1 | Point of curvature (PC) | 2 | Point of Intersection (PI) |
| 3 | Point of tangency (PT) | 4 | Center point of the arc |
| 5 | Current station | 6 | PI to station |
| 7 | Deflection angle | | |

Tangent offset method

Provides the perpendicular offset information from the tangent line (the line from the PC point to the PI point) to each specified station on the arc.

Tap **Calc** to view the computed arc with these additional details:

- **Station** – is the specified station along the arc.
- **Tangent dist (TD)** – is the distance along the tangent line from the PC point toward the PI point where the perpendicular offset to the arc point occurs.
- **Tangent offset** – is the perpendicular offset distance from the tangent line to the current station point on the arc.
- **Tangent** – is the length of the tangent line (the distance from the PC point to the PI point).
- **Tangent – TD** – is the remainder distance along the tangent line (the distance from the point of the perpendicular offset to the PI point).



- | | | | |
|---|-------------------------|---|----------------------------|
| 1 | Point of curvature (PC) | 2 | Point of Intersection (PI) |
| 3 | Point of tangency (PT) | 4 | Center point of the arc |
| 5 | Current station | 6 | Tan offset |
| 7 | Tan distance (TD) | 8 | Tangent - TD |

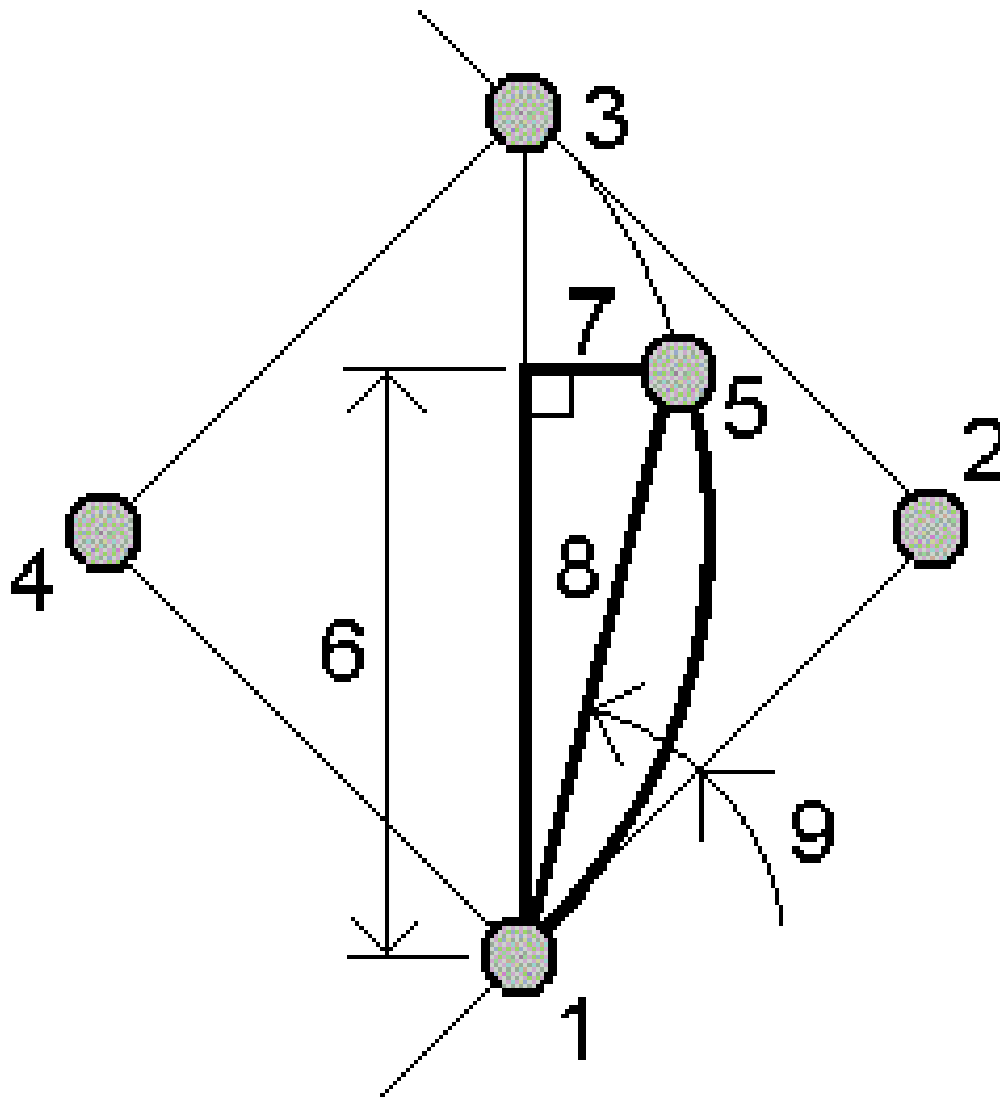
9 Tangent

Chord offset method

Provides the perpendicular offset information from the long chord (the line from the PC point to the PT point) to each specified station on the arc. The PC deflection information is also provided.

Tap **Calc** to view the computed arc with these additional details:

- **Station** – is the specified station along the arc.
- **Chord dist** – is the distance along the long chord from the PC point (toward the PT point) where the perpendicular offset to the arc point occurs.
- **Chord offset** – is the perpendicular offset distance from the long chord to the current station point on the arc.
- **PC deflection** – is the deflection angle from the tangent line (PC point to PI point) to the current station point on the arc.
- **Chord length** – is the distance to the current station point on the arc from the PC point.



- | | | | |
|---|-------------------------|---|----------------------------|
| 1 | Point of curvature (PC) | 2 | Point of Intersection (PI) |
| 3 | Point of tangency (PT) | 4 | Center point of the arc |
| 5 | Current station | 6 | Chord distance |
| 7 | Chord offset | 8 | Chord length |

9 PC deflection

To add the arc and the points defining the arc to the job

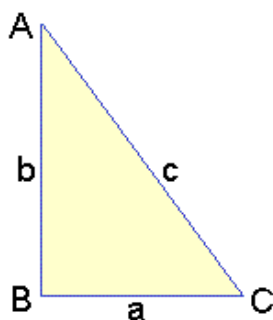
1. Tap **Add**.
2. Select the start point for the arc, back tangent, and the back tangent direction.
3. Tap **Calc**.
4. Tap **Store**.

The following information is added to the job:

- calculated arc
- point defining the end point of the arc
- point defining the center point of the arc

Triangle solutions

1. To calculate a triangle, tap \equiv and select **Cogo / Triangle solutions**.
2. Use keyed in data and select the appropriate method to compute the triangle:



Select...	And then enter...
Side-Side-Side	The distances for sides a, b, and c.
Angle-Side-Angle	Angle A, the distance for side b, and angle C.
Side-Angle-Angle	The distance for side a, angle B, and angle A.
Side-Angle-Side	The distance for side a, angle B, and the distance for side c.
Side-Side-Angle	The distances for sides a and b, and angle A.

3. Tap **Calc**.

The lengths of sides a , b , and c , the angles of A , B , and C , the area of the triangle, and a graphical representation of the triangle are shown.

Entered data is shown as black text; computed data as red text.

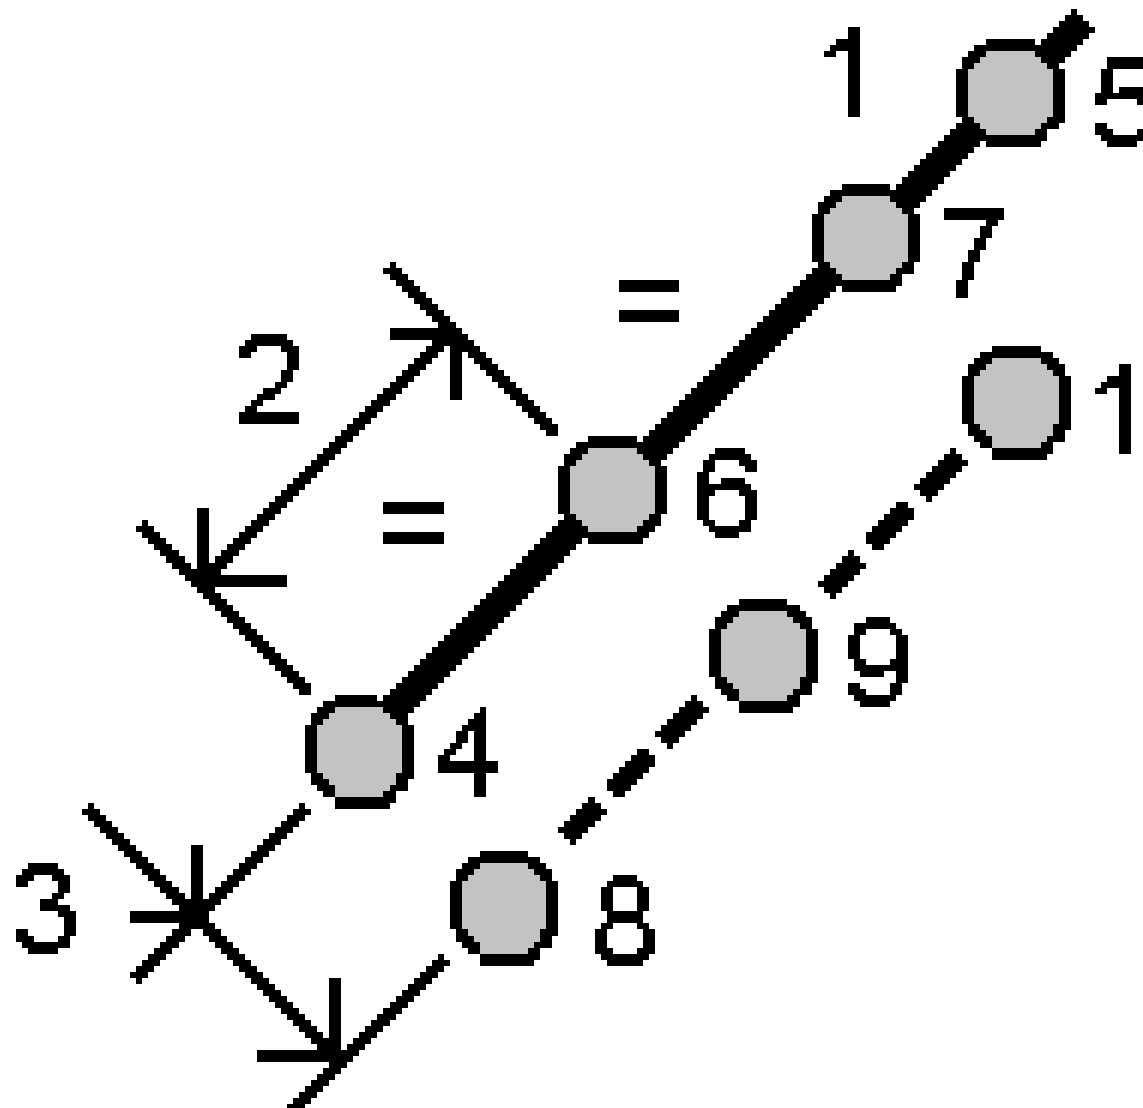
4. If the **Other** softkey appears, there are two solutions to the triangle. Tap **Other** to toggle between the two possible solutions so that you can select the correct one.
5. Tap **Store**.

Subdivide a line

1. To open the **Subdivide a line** form, you can:
 - In the map, select the line to be subdivided. Tap and hold in the map and select **Subdivide a line**.
 - Tap \equiv and select **Cogo / Subdivide a line**. Enter the name of the line.
If the line does not already exist, tap \blacktriangleright and select **Two points**. Enter the start point and end point to define the line.
2. To set the code of the created points, tap **Options** and select the name or code of the line that is to be subdivided in the **Subdivide points code** field.
3. Subdivide the line using one of the following methods.

For the Fixed segment length method:

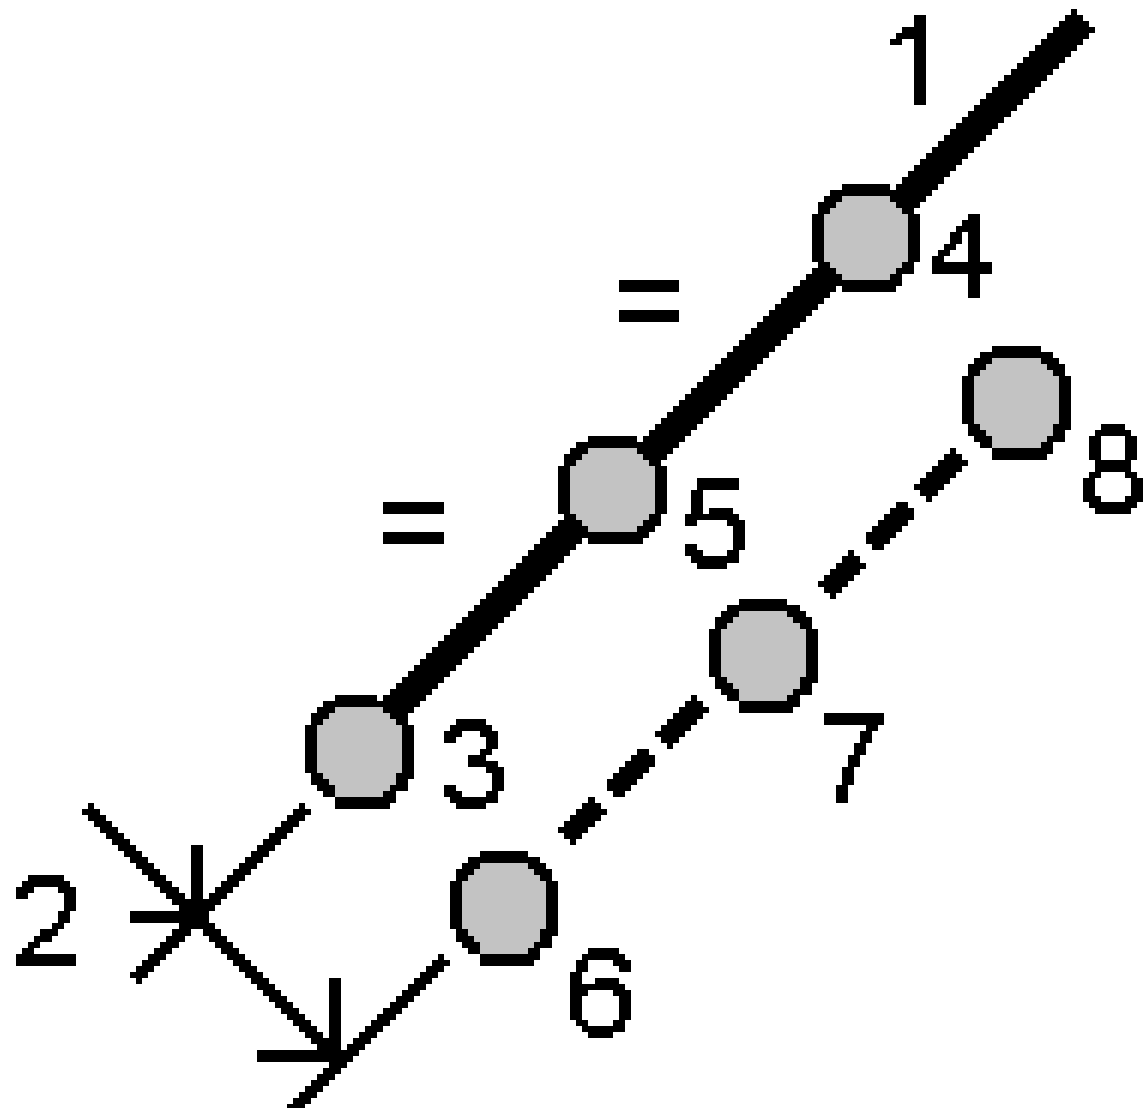
1. In the **Method** field, select **Fixed segment length**.
2. Enter the segment length **(2)**, and any horizontal offset **(3)** and vertical offset from the line.



3. Enter the **Start at station(4)**, the **End at station(5)**, and the **Start point name**.
4. Tap **Start**. The software calculates the new points (**4, 6, 7, or 8, 9, 10**).
The names of the created points are incremented from the **Start point name** and are stored in the job.

For the Fixed number of segments method:

1. In the **Method** field, select **Fixed number of segments**.
2. Enter the number of segments, and any horizontal offset (**2**) and vertical offset from the line.



3. Enter the names of the **Start at station(3)**, the **End at station(4)**, and the **Start point name**.
4. Tap **Start**. The software calculates the new points (**3, 5, 4**, or **6, 7, 8**).
The names of the created points are incremented from the **Start point name** and are stored in the job.

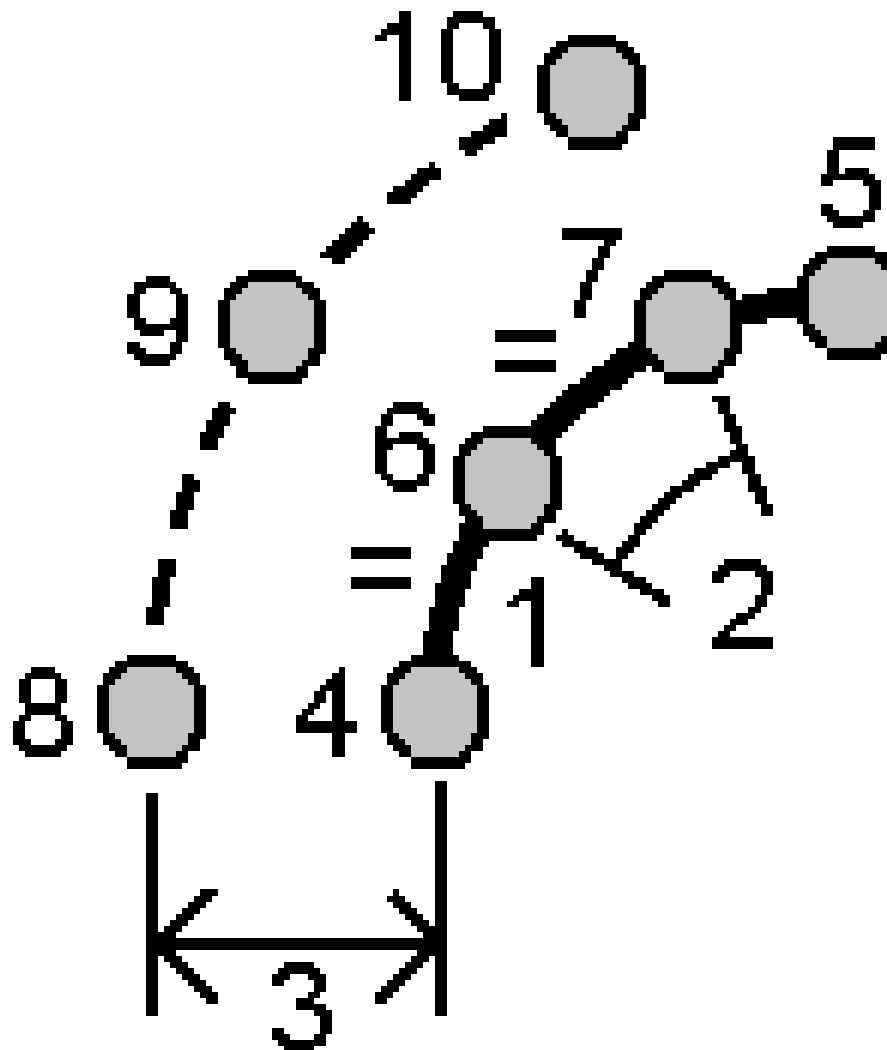
Subdivide an arc

1. To open the **Subdivide an arc** form, you can:
 - In the map, select the arc to be subdivided. Tap and hold in the map and select **Subdivide an arc**.
 - Tap \equiv and select **Cogo / Subdivide an arc**. Enter the name of the arc.

- To set the code of the created points, tap **Options** and select the name or code of the arc that is to be subdivided in the **Subdivide points code** field.
- Subdivide the arc using one of the following methods.

For the Fixed segment length method:

- In the **Method** field, select **Fixed segment length**.
- Enter the segment length **(2)**, and any horizontal offset **(3)** and vertical offset from the arc.

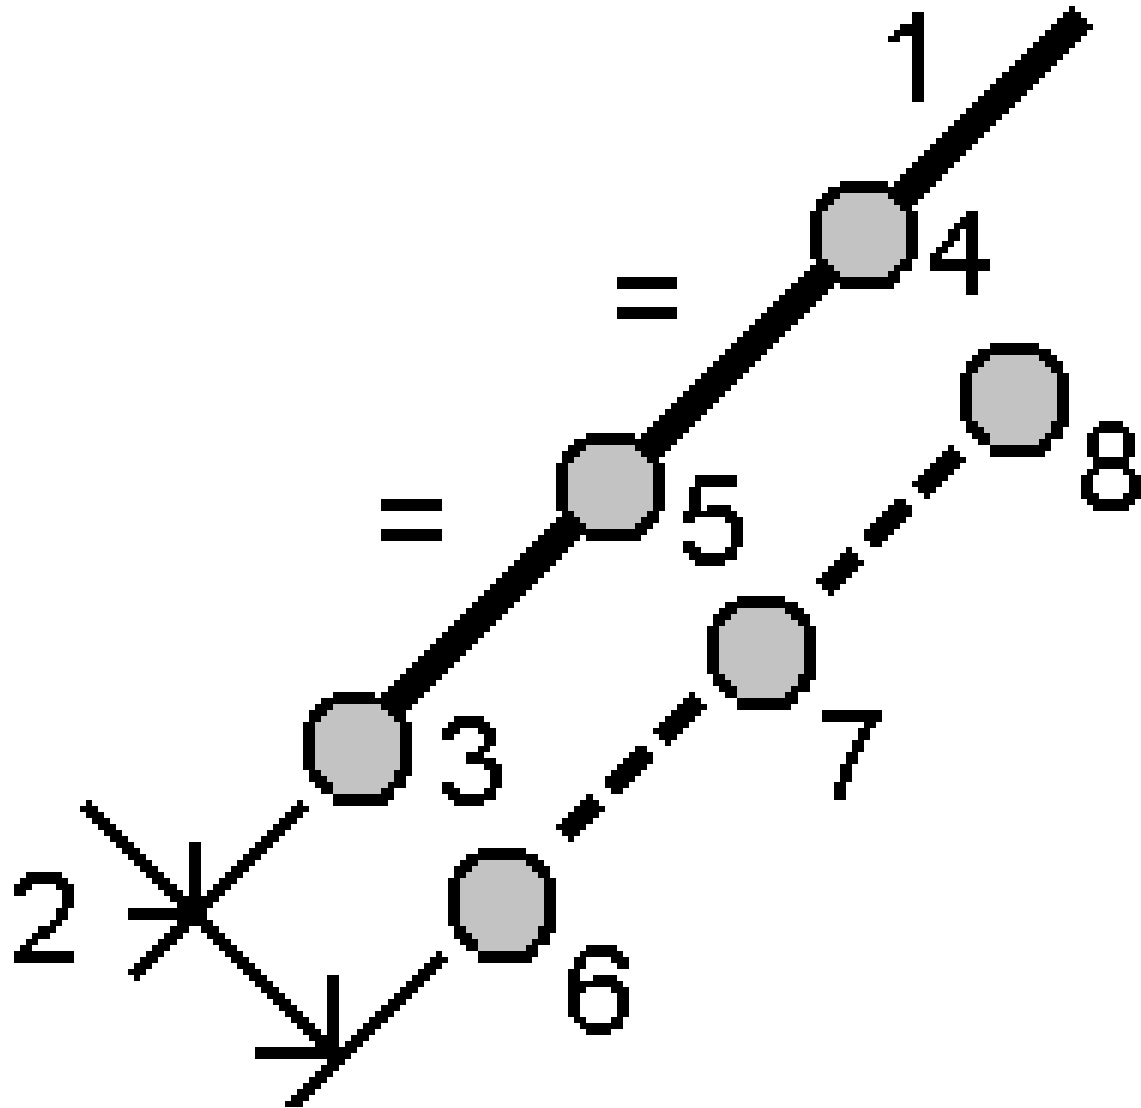


- Enter the **Start at station (4)**, the **End at station (5)**, and the **Start point name**.
- Tap **Start**. The software calculates the new points **(4, 6, 7, or 8, 9, 10)**.

The names of the created points are incremented from the **Start point name** and are stored in the job.

For the Fixed number of segments method:

1. In the **Method** field, select **Fixed number of segments**.
2. Enter the number of segments, and any horizontal offset (**2**) and vertical offset from the arc.

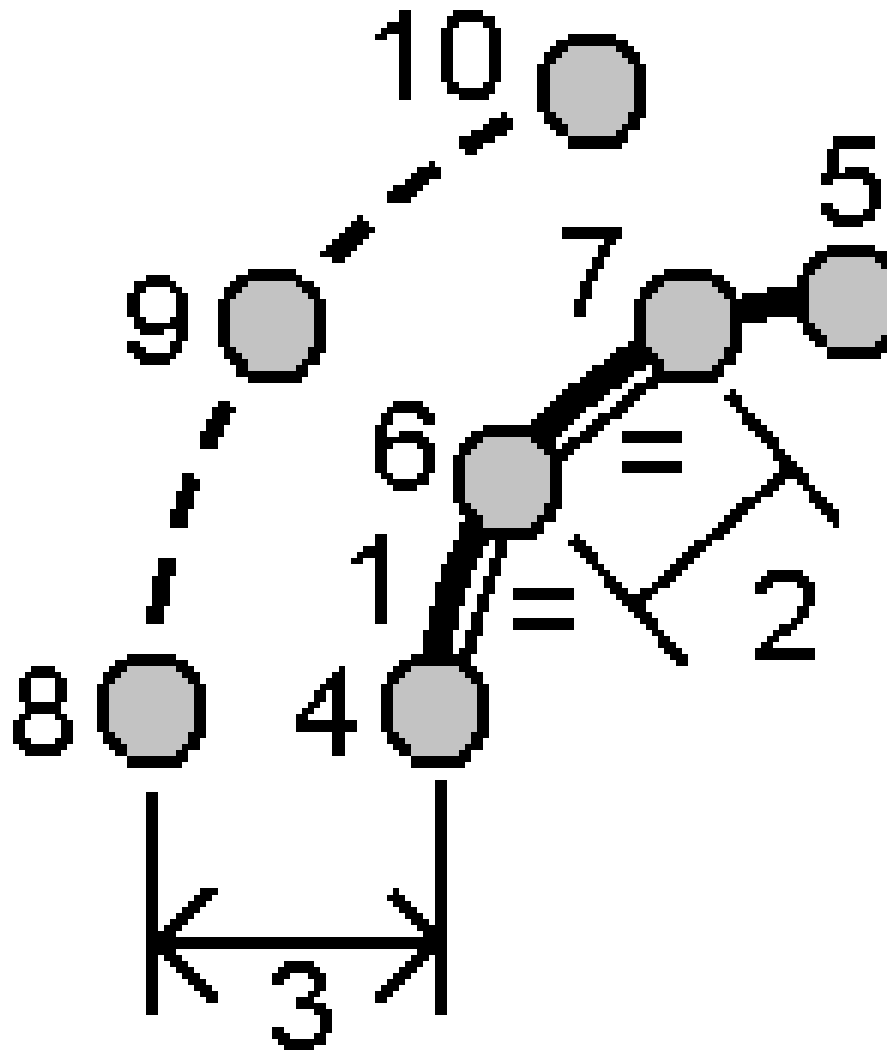


3. Enter the **Start at station (3)**, the **End at station (4)**, and the **Start point name**.
4. Tap **Start**. The software calculates the new points (**3, 5, 4, or 6, 7, 8**).

The names of the created points are incremented from the **Start point name** and are stored in the job.

For the Fixed chord length method:

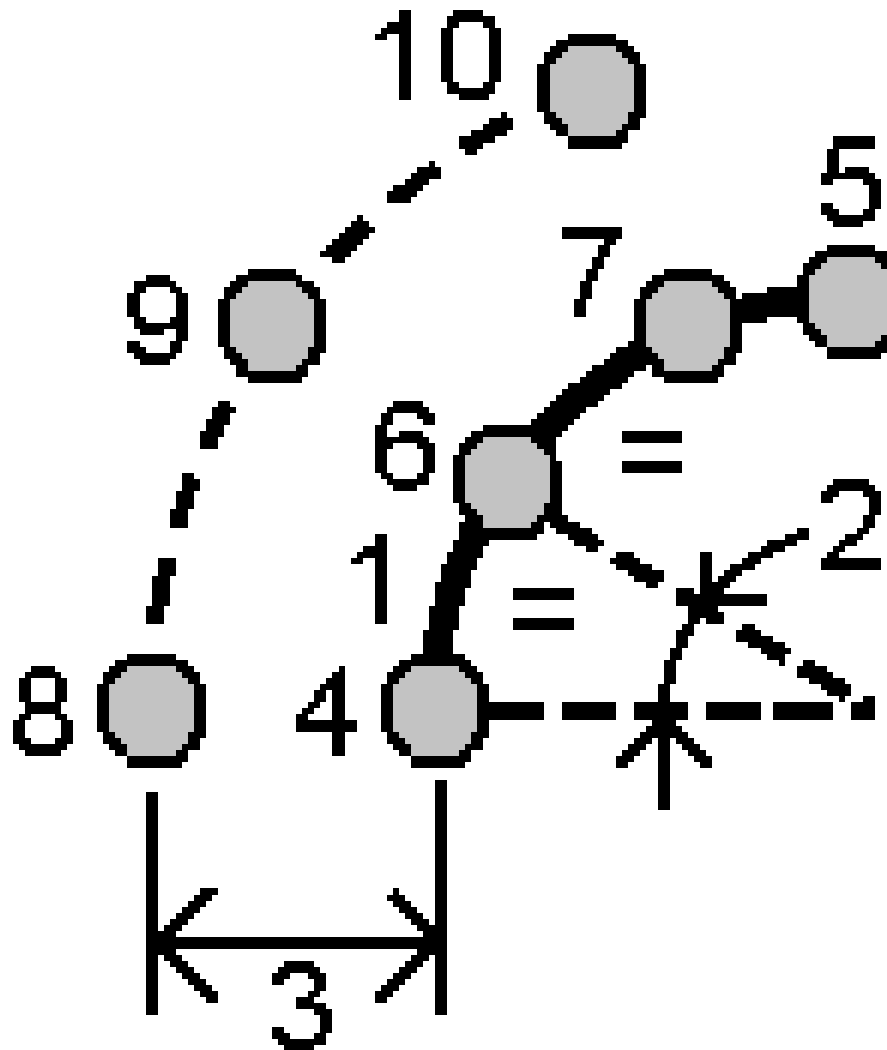
1. In the **Method** field, select **Fixed chord length**.
2. Enter the chord length **(2)**, and any horizontal offset **(3)** and vertical offset from the arc.



3. Enter the **Start at station (4)**, the **End at station (5)**, and the **Start point name**.
4. Tap **Start**. The software calculates the new points **(4, 6, 7, or 8, 9, 10)**.
The names of the created points are incremented from the **Start point name** and are stored in the job.

For the Fixed angle subtended method:

1. In the **Method** field, select **Fixed angle subtended**.
2. Enter the **Angle subtended (2)**, and any horizontal offset (**3**) and vertical offset from the arc.




3. Enter the **Start at station (4)**, the **End at station (5)**, and the **Start point name**.
4. Tap **Start**. The software calculates the new points (**4, 6, 7, or 8, 9, 10**).
The names of the created points are incremented from the **Start point name** and are stored in the job.

Fix station setup

Use the **Fix station setup** Cogo Adjust function if you need to apply corrections to the station setup and all measured points using the same station setup. The **Fix station setup** function can be used to reorient and translate a station setup where temporary or incorrect azimuth or station coordinates have been used.

NOTE – Only station setups with a keyed in azimuth to the backsight can be reoriented or translated. A keyed in azimuth to a backsight is used when the coordinates for the station or backsight point are not known.

1. To open the **Fix station setup** form, tap  and select **Cogo / Adjust / Fix station setup**.
2. From the **Station setup** field, select the point that you want to adjust. Only stations in the job that have a keyed in azimuth to the backsight can be selected.
3. Select the transformation type. Choose one or both of the following:
 - Select **Reorient station setup** to adjust the orientation of the station setup.
 - Select **Translate station** to translate the coordinates of the station to the correct coordinates.
4. Tap **Accept**.
5. If you selected the **Reorient station setup** option:
 - a. From the **Method** field, choose one of the following:
 - Select **Enter new backsight azimuth** and then enter the **New backsight azimuth** value.
 - Select **Enter rotation value** and then enter the new **Rotation** value.
 - b. Tap **Apply**.
The map updates the station and any measured points using the same station setup. The original backsight azimuth is also updated.
 - c. To save the changes to the job, tap **Confirm**. If the changes do not look correct, tap **Esc** to undo the changes.
6. If you selected the **Translate station** option:
 - a. From the **Method** field, choose one of the following:
 - Select **Two points** and then select the **From point** and the **To point**.
 - Select **Deltas** and then enter the delta **Northing**, **Easting**, and/or **Elevation**. The delta is the distance the point must be shifted.
 - Select **Key in coordinates** and then enter the new coordinates for the point.
 - b. Tap **Calc**.
An arrow on the map indicates the point that will shift and where it will move to.
 - c. Tap **Apply**.
The map updates the station and any measured points using the same station setup. The original occupy point is also moved.

- d. To save the changes to the job, tap **Confirm**. If the changes do not look correct, tap **Esc** to undo the changes.

Transformations

You transform point coordinates using cogo transformations or local transformations.

Cogo transformations

Use a cogo transformation to transform a single point, or a selection of points, using one or a combination of rotation, scale or translation.

A cogo transformation deletes the original point(s) and stores new grid points of the same name.

TIP – To reorient and translate a station setup use the **Fix station setup** Cogo Adjust function. [Fix station setup, page 247](#) allows you to update the azimuth to your backsight, or update station coordinates, and retains all observations from the station.

Local transformations

Use a local transformation to transform Grid (local) points to Grid points.

NOTE – Local transformation support is available only when the **Advanced Geodetic** option is enabled in the **Cogo settings** screen of the job properties.

There are often occasions in surveying where existing points to be tied into or staked out have grid coordinates defined in one or more coordinate or reference systems, which are different from the current job's coordinate system. These other coordinate or reference systems may be defined based on old base lines where the coordinates are effectively station and offset values from the base (reference) line. Or they may be referenced to a completely arbitrary reference system. For example, an architect may provide coordinates for a building foundation that needs to be positioned and transferred into a real coordinate system on site.

Unlike a cogo transformation, a local transformation does not change the coordinates of the original points. Instead, points can be created as Grid (local), and a relationship to Grid is defined that provides the transformation to the local coordinate system.

NOTE – Grid (local) points cannot be displayed in the map if a transformation to grid has not been defined.

Applying local transformations

Origin lets you compute and store one or more local transformations that will transform on-the-fly between the grid coordinates and sets of local grid coordinates. Transformations can be applied and used when:

- Keying in points
- Linking files to the job
- Staking out points from a linked CSV or TXT file

- Reviewing the job
- In **Point manager**
- Importing a comma delimited file
- Exporting as Grid (local)

A point stored as a Grid (local) can only ever have one 'input' transformation that defines the relationship to database Grid positions. However, when viewing with **Review job** or **Point manager**, and when exporting as Grid (local), you can select a different local transformation, which changes the displayed computed Grid (local) coordinates.

You can, for example, key in a Grid (local) point referenced to one baseline or reference system, and transform to the database grid, and then, if required, use another 'display' transformation to display the point with computed Grid (local) values referenced to a different baseline or reference system. This is analogous to how any point can be displayed as station and offset to any line, arc, alignment, or road.

TIP –

- To select a different input transformation, use **Point manager**.
- To copy transformations to other jobs, use **Copy between jobs**.

Types of local grid transformations


In Origin you can create and apply the following types of local grid transformation:

- The **Line** transformation type is a 2D transformation that allows you to select or key in two database grid points and match them up with the local grid coordinates for the same positions.
- The **Helmert** transformation type can be a 2D Helmert transformation or a 3D transformation performed as a 2D Helmert transformation and a 1D inclined plane transformation. You can select up to 20 identical point pairs to compute a best fit transformation between the database grid points and the local grid coordinates for the same positions.
- The **Seven parameter** transformation type is a 3D transformation that allows you to select up to 20 identical point pairs to compute a best fit transformation between the database grid points and the local grid coordinates for the same positions.

A Seven parameter transformation will provide a better solution than a Helmert transformation if the two coordinate systems are not defined with respect to the same horizontal plane.

To rotate, scale, or translate points

Rotate, scale, and translate transformations change the stored coordinates of a point. Only points that can be displayed as grid coordinates can be transformed.

1. Tap  and select **Cogo / Adjust / Transformations**.
2. Select **Rotate / scale / translate points**. Tap **Next**.

3. Select the transformation type. Choose one or more of the following:
 - Select **Rotate** to rotate a selection of points about a specified origin point.
 - Select **Scale** to scale the distances between the origin point and the selected points.
 - Select **Translate** to move a selection of points on a grid surface.

NOTE – When performing more than one transformation, the order is always rotate, scale, then translate.

 
4. Tap **Next**.
5. Fill out the fields required for the selected transformation method(s):
 - **To rotate points:**
 - a. Select the **Origin point**.
 - b. Enter the **Rotation** angle or, to compute the rotation as the difference between two azimuths, tap **▲** and select **Two azimuths**.
 - **To scale points:**
 - a. Select the **Origin point**.
When transforming by both rotate and scale, the origin for the scale defaults to the origin for the rotate.
 - b. Enter the **Scale factor**.
 - **To translate points**, from the **Method** field, choose one of the following:
 - Select **Deltas** and then enter the delta **Northing**, **Easting**, and/or **Elevation**. The delta is the distance the point must be shifted.
You can select a single delta, for example a northing, or any combination of deltas for the transformation.
 - Select **Two points** and then select the **From point** and the **To point**.
6. Tap **Next**.
7. Select the point(s) to transform.
Points selected in the map automatically populate the list of points to be transformed. To add points to the list, see [Selecting points, page 163](#).

NOTE – If you select a base point to be transformed, then vectors flowing from this base become null.

8. Tap **Accept**.
9. To start the transformation, tap **OK**.
10. Tap **OK**.

To create a Line transformation

NOTE – Local transformation support is available only when the **Advanced Geodetic** option is enabled in the **Cogo settings** screen of the job properties.

1. Tap  and select **Cogo / Adjust / Transformations**.
1. Select **Manage local transformations**. Tap **Next**.
2. Select **Create new transformation**. Tap **Next**.
3. Set the **Transformation type** to **Line** and then enter the **Transformation name**.
4. Select the **Start point** and then enter the corresponding Grid (local) coordinates in the **North (local)** and **East (local)** fields.
5. Select the **End point** and then enter the corresponding Grid (local) coordinates in the **North (local)** and **East (local)** fields.
6. Tap **Calc**.
7. Check the computed transformation distances and then select a **Scale factor type** to fit the local grid positions to the database grid positions. If you select:

- **Free** – The computed scale factor is applied to the Grid (local) values in both local axes.
- **Fixed to 1.0** – No scaling is applied.

The Grid (local) values are used in the transformation but have no scaling applied to them. The start point is the origin point of the transformation.

- **Along the local northing axis only** – The computed scale factor is applied to the Grid (local) northing values only during the transformation.

 
NOTE – 'Grid points' do not have to be stored as grid points, but the Origin software must be able to compute grid coordinates for the point.

8. Tap **Store**.

The transformation appears in the map as a black dashed line between the start grid point and the end grid point.

To create a Helmert transformation

NOTE – Local transformation support is available only when the **Advanced Geodetic** option is enabled in the **Cogo settings** screen of the job properties.

1. Tap  and select **Cogo / Adjust / Transformations**.
1. Select **Manage local transformations**. Tap **Next**.
2. Select **Create new transformation**. Tap **Next**.
3. Set the **Transformation type** to **Helmert** and then enter the **Transformation name**.
4. Set the **Scale factor type** to one of the following:

- **Free** – The computed best fit scale factor is used in the transformation.
 - **Fixed**– The scale factor you enter is used in the transformation.
5. Set the **Vertical adjustment** to one of the following:
 - **None** – No vertical adjustment is carried out.
 - **Constant adjustment only** – The average vertical correction computed from the elevations of the point pairs is used for vertical adjustment in the transformation.
 - **Inclined plane** – A vertical correction plus a best fit correction plane is used for vertical adjustment in the transformation.
 6. Tap **Next**.
 7. Tap **Add** to select the **Grid point name** and **Local grid point name** pairs of points and then set the **Use** field to one of the following:
 - **Off** – Do not use this point pair in the computation of the transformation parameters.
 - **Vertical only** – Use this point pair only in the computation of the vertical adjustment parameters.
 - **Horizontal only** – Use this point pair only in the computation of the horizontal adjustment parameters.
 - **Horizontal & vertical** – Use this point pair in the computation of both the horizontal and the vertical adjustment parameters.
 8. Tap **Accept** to add the pair to the list and then tap **Add** again to add more pairs of points.
 9. To view the result of the transformation, tap **Results**.
 10. Tap **Store**.

NOTE – If you change the coordinates of a point used to define a Helmert transformation, you must recompute the Helmert transformation the new transformation to use the new coordinates.

To create a Seven parameter transformation

NOTE – Local transformation support is available only when the **Advanced Geodetic** option is enabled in the **Cogo settings** screen of the job properties.

1. Tap **☰** and select **Cogo / Adjust / Transformations**.
1. Select **Manage local transformations**. Tap **Next**.
2. Select **Create new transformation**. Tap **Next**.
3. Set the **Transformation type** to **Seven parameter** and then enter the **Transformation name**.
4. Tap **Next**.
5. Tap **Add** to select the **Grid point name** and **Local grid point name** pairs of points and then set the **Use** field to one of the following:
 - **Off** – Do not use this point pair in the computation of the transformation parameters.
 - **Horizontal & vertical** – Use this point pair in the computation of both the horizontal and the vertical adjustment parameters.
6. Tap **Accept** to add the pair to the list and then tap **Add** again to add more pairs of points.

Residuals will only start to be displayed once 3 point pairs have been defined.

NOTE – The Seven parameter transformation is a three-dimensional transformation only. You cannot use 1D or 2D points in the point pairs used to compute the transformation parameters. If a Seven parameter transformation is applied to 1D or 2D Grid, or Grid (local) point, the transformed position will have null coordinates.

7. To view the result of the transformation, tap **Results**.
8. Tap **Store**.

NOTE – If you change the coordinates of a point used to define a Seven parameter transformation, you must recompute the transformation to use the new coordinates.

Traverse calculations

 
In a conventional survey, if you have surveyed a series of points using traverse stations, then you can use the **Traverse** function to calculate closed-loop traverses or open traverses that start and end on pairs of known points.

A valid traverse station has one or more backsight observations to the previous traverse station, and one or more observations to the next traverse station. To compute a traverse closure, there must be at least one distance measurement between successive points used in the traverse.

If the software calculates a misclosure then you can adjust it using either a Transit or Compass (also known as Bowditch) adjustment. The software calculates an angular adjustment and then a distance adjustment.

NOTE – The **Azimuth** fields do not have to be completed for points used in the traverse. If the foresight azimuth is null in a loop traverse but all angles have been observed, you can compute an angular and distance adjustment. However, if the backsight azimuth is null, the traverse cannot be oriented, adjusted coordinates cannot be stored, and an angular adjustment cannot be computed on an open traverse (you must compute a distance adjustment).

To calculate the traverse closure

1. Tap  and select **Cogo / Adjust / Traverse**.
2. Enter the **Traverse name**.
3. In the **Start station** field, tap **List**.
4. From the list of valid traverse points, select the point to use as the start station. Tap **Enter**.

A valid start station has one or more backsights and one or more observations to the next traverse station.

5. Tap **Add**.
When there is only one valid traverse station, it is added automatically.
6. If there is more than one valid traverse station, select the next station in the traverse.

TIP -

- To view the observed azimuth and distance between two points in the list, select the first point and tap **Info**.
- To remove points from the list, select the point and tap **Remove**. All points after the selected point are also removed.

7. Continue to add points until all points in the traverse have been added.

A valid end station has one or more backsights, and one or more observations to the previous traverse station.

NOTE -

- You cannot add more points after selecting a control point.
- You can use station setup plus type station setups within a traverse. However, the averaged orientation computed as part of the station setup is not used in the traverse computation and the resulting adjusted coordinates for the station means that the station orientation is changed.
- You cannot include a resection station setup (including a standard resection, Helmert resection or Refline station setup) within a traverse, but it can be used as the start or end station in a traverse.

8. Tap **Close** to compute the traverse closure.
9. To store the closure results, tap **Store**.

To adjust the traverse

1. To select the adjustment method, tap **Options**. Select the **Transit** or **Compass** method (also known as Bowditch) then select the error distribution method for angles and elevations.
2. To adjust the angular misclosure, tap **Adj. Ang**.
3. To store the angular adjustment details, tap **Store**.
4. To adjust the distance misclosure, tap **Adj. dist**.
5. To store the distance adjustment details, tap **Store**.

When the adjusted traverse is stored, each point used in the traverse is stored as an adjusted traverse point with a search classification of adjusted. If there are any previously adjusted traverse points of the same name, they are deleted.

Traverse options

Use these options to specify how a traverse calculation is adjusted.

Field	Option	What it does
Adjustment method	Compass	Adjusts the traverse by distributing the errors in proportion to the distance between traverse points
	Transit	Adjusts the traverse by distributing the errors in proportion to the northing and easting ordinates of the traverse points
Error distribution		
Angular	Proportional to distance	Distributes the angular error among the angles in the traverse based on the sum of the inverses of the distances between traverse points
	Equal proportions	Distributes the angular error evenly among the angles in the traverse
	None	Does not distribute the angular error
Elevation	Proportional to distance	Distributes the elevation error in proportion to the distance between traverse points
	Equal proportions	Distributes the elevation error evenly among the traverse points
	None	Does not distribute the elevation error

NOTE - The **Compass** option is the same as the Bowditch method of adjustment.

Georeference map



Use the **Georeference map** Cogo Adjust function to match locations in a map file to points in the job. This is useful when, for example, an architect provides coordinates for a building foundation that needs to be positioned and transferred into a real coordinate system on site. You can use the **Georeference map** to transform the model into the grid coordinate system used by your Origin job.

NOTE – If the first map files you link to the job are BIM models or DXF files in a location coordinate system that are located far from existing job data, then the software warns that the map file is far away from the job data and suggests georeferencing the file. Tap **Yes** to allow the software to perform an approximate georeference by relocating the center of the map file to **the center of the current view**. The **Georeference map** Cogo Adjust form opens, allowing you to fine-tune the georeferencing. If you choose not to adjust the georeferencing, tap **Esc**. The approximate georeference performed by the software is then removed.

The **Georeference map** function uses a combination of translation, rotation and scale to shift the map file so that the selected map file locations match the selected points. If you choose only one point, then the transformation uses a translation only.

Selected map file locations must be something you can select in the map, such as vertices in a BIM model or points or nodes in a DXF file.

TIP – When you open the **Georeference map** form, nodes are automatically shown at the ends of lines and arcs and at all points along a polyline for any DXF files shown in the map, regardless of the **Create nodes** setting in the **Map settings** screen. If the **Create nodes** check box in the **Map settings** screen is not selected, the nodes are automatically hidden when you close the **Georeference map** form.

1. To open the **Georeference map** form, tap  and select **Cogo / Adjust / Georeference map**.
2. In the **Map file** group, select the locations in the map file you want to match to points in the job.
 - a. Tap in the **Point A** field and then tap the point in the map.
 - b. If there are several points close together, the **Please select** list appears. Select the point to use and then tap **Accept**.
 - c. Repeat for **Point B**.
3. In the **Points** group, select the points in the job to match with the map file locations. The points can be in the job or in a linked files, such as a CSV. Select first **Point A** and then **Point B** by tapping the point on the map, entering the point name, or tap  next to the field and then select one of the options to select the point.

Arrows on the map indicate the translation that will be applied to match the map file locations with the selected job points.

4. To select whether transformations are applied and how elevations are translated:
 - a. Tap **Options**.
 - b. Select the **Fix horizontal scale to 1.0** check box to not allow any horizontal scaling.
 - c. Select the **Fix horizontal rotation to 0** check box to not allow any horizontal rotation.
 - d. In the **Translate elevations** field, select how to translate the map vertically. You can translate the map vertically to the elevation of point A, or to point B, or to the average of points A and B. Alternatively, you can choose to perform a 2D translation only, leaving the map at the original elevation.
 - e. Tap **Accept**.
5. Tap **Calc**.

The map updates to show the map locations matched to the points in the job, and the **Georeference map** form shows the details of the rotation, scale and translation applied.

6. If the changes do not look correct, tap **Back** to undo the changes. To save the changes to the job, tap **Store**.

When you tap **Store**, a note is added to the job and a world file containing 3D data about the transformation is created. The world file has the same name as the map file with a "w" appended to the file type extension (for example, filename.ifcw or filename.dxfw) and is stored in the same folder as the map file.

To use the map file in another project or on another controller, copy the world file along with the original map file to retain the georeferencing.

Taped distances

Use the **Taped distances** function to quickly add points that define right-angled structures, such as a building or building foundations. When tying in to a known point, the misclose value is displayed and can be adjusted.

There are two methods to define a structure:

- When using the **Two points** method, enter or measure two known points to establish the location of the first side.
- When using the **One point** method, enter or measure one known point and then tap the screen to set the approximate orientation of the first side.

Subsequent points are created at a 90° angle to or parallel to the first side. Lines are created automatically and stored in the job as points are created.

To tie in to a known point:

 



- When using the **Two points** method, you can close back to the start, or you can tie in to a third known point.
- When using the **One point** method, you must tie in to a second known point.

When you enter the measured distance to a known point, a misclosure value is calculated and a red dashed line displays how the sides will move when you adjust. You can then choose to tap **Adjust** to distribute the error across the measured sides, or you can tap **Add** to tie in to the known point without adjusting the sides. Whether you tap **Adjust** or **Add**, the sides are stored and cannot be edited.

NOTE – To use taped distances the job must use a fully defined coordinate system or use **Scale factor only**. Taped distances cannot be used in a **No projection/no datum** job.

After tying in to a known point, you can select the method to start taped distances again and continue adding sides until you return to the start.

To measure a structure using Taped distances

1. Tap  and select **Cogo / Taped distances**.
 2. Select the method:
 - Use the method **Two points** if you have two points defining the ends of one side.
 - Use the method **One point** if you have only one point to start from.
 3. Define the first side:
 - To define the first side using **Two points**:
 - a. Select or measure the **Start point** and **End point**.
 - b. Enter the elevation. To select the elevation from the **Start point** or **End point**, tap  next to the **Elevation** field.
 - c. Tap **Accept**.
 - To define the first side using **One point**:
 - a. Select or measure the **Start point**.
 - b. Enter the elevation. To select the elevation from the **Start point**, tap  next to the **Elevation** field.
 - c. Tap in the map to set the initial orientation of the first side.
 - d. Tap **Accept**.
 4. To define the next side:
 - a. To set the orientation for the next point, tap in the map approximately 90° to the left or to the right of the red dashed line in the direction you want the side to follow.
The dashed red line shows the current orientation for the next side.
 - b. To set the length of the next side, do one of the following:
 - In the **Length** field, enter the distance to the next point using the orientation defined in the map.
 - If you are using a laser rangefinder, tap  and select **Laser**. Measure the distance with the laser. The measured distance appears in the **Length** field.

TIP – To change the orientation of the line, you can enter + or - in front of the value in the **Length** field:

 - To change the orientation by +90° (clockwise), enter +.
 - To change the orientation by -90° (counter-clockwise), enter -.
 - c. Tap **Add**.
5. To define subsequent sides of the structure, repeat step 4 above for each subsequent side.

TIP –

- If you think you have made a mistake at any time, for example if the shape of the structure does not look right in the map, tap **Edit**. See [To edit the sides of the structure before storage, page 260](#) below.
- You can tap **Store** at any time to store the measurements you have entered without closing or adjusting the structure.

6. To tie in to a known point or to close the structure:

- To tie in to another known point, so that you can add more points and sides to the structure if needed, select the point or enter the point name. The software shows the **Length (computed)** to the known point. Enter the **Length (measured)** to the known point.
- To close the structure back to the start, tap **Close**. The software joins the current point back to the start.

This option is only available if you started from **Two points**.

Once you have tapped **Close**, or you have tied in to the additional known point and entered the measured distance to that point, the software shows the **Misclose** values. The dashed red line on the map shows how the misclose error will be distributed across the sides of the structure if you tap **Adjust** in the next step.

7. Choose whether to adjust the measured distances when tying in to a known point:

- If the **Misclose** value is too high, tap **Edit** and remeasure the sides of the structure. See [To edit the sides of the structure before storage, page 260](#) below.
- If the **Misclose** value is reasonable and you want to distribute the misclose error across the structure, tap **Adjust**. The adjustment is applied and stored.
 - When using the **One point** method, all measurements are rotated and scaled to fit between the start and end points.
 - When using the **Two points** method, the original length between the two known points is fixed, and any **Along** and **Across** error is proportionally distributed in the **Along** and **Across** directions.
 - In both adjustments the 90° internal angles are retained.
 - A **Taped distance** point record is stored with the measured length, and an **Adjusted taped distance** record is stored with the adjusted coordinates.

The adjusted point records have the same name as the original points and have a higher search class which means the lines are drawn between the adjusted taped distance points.

- If you do not want to apply the adjustment, tap **Add** to add the known point to the structure using the existing point name.
8. To add more points and sides to the structure you can start again from two points or one point. Alternatively, tap **Esc** to close the **Taped distances** screen.

To edit the sides of the structure before storage



At any point before storage you can edit the measurement values you have entered. This is useful if you think you have made a mistake, for example either shape doesn't look right in the map or the **Misclose** value seems too high.

1. Tap **Edit** to view the list of each side entered.
2. Tap in the list to select the side, or use the arrow keys to highlight the side in the list and then press **Enter**.
3. Enter the new **Length** value as required.
4. To change the line direction, tap inside the **Length** value and then tap in the map, or enter + or - in front of the value in the **Length** field. You can also tap in the map to change the line direction.
5. Tap **Accept**. The software returns to the **Edit** list.
6. Select another value to edit or tap **Esc** to close the **Edit** list.

Calculator

To use the calculator, tap  and select **Cogo / Calculator**.

To perform a calculation from a numeric field:


1. Tap  and select **Calculator**.
If the numeric field contains a number, that number is automatically pasted into the calculator.
2. Enter the numbers and functions.
3. Tap  to calculate the result.
4. Tap **Accept**.

If you opened the calculator from a numeric field, the calculated result is pasted into that numeric field.

Tap **Azimuth** to open the **Compute azimuth** form. See [Compute azimuth](#).

 




Tap **Distance** to open the **Compute distance** form. See [Compute distance](#).

Tap **V. Dist** to open the **Compute vertical distance** form. Select the **From point** and the **To point**. To copy the calculated value to the calculator for use in other calculations, tap **Accept**.

Tap  to change calculator options:

- Select units (degrees, mils, gons).
- Select **Standard** or **RPN** (Reverse Polish Notation) mode.
- Select **Decimal places** to select the number of decimal places to use.

Calculator functions are described below.

Symbol	Function
+	Add
-	Subtract
x	Multiply
÷	Divide
	Change sign of number being entered
=	Equals
π	Pi
	Enter
	Show all values on the stack
	Back space
	Options Tap to set the angle method, calculator mode (Reverse Polish Notation (RPN) or Standard), and decimal place display.
y^x	Raise Y to the power of X
x^2	Square
\sqrt{x}	Square root
10^x	Raise 10 to the power of X
$E\pm$	Enter exponent or change exponent sign
$1/x$	Reciprocal
$x\leftrightarrow y$	Swap X with Y
sin	Sine
\sin^{-1}	Arc Sin
cos	Cosine

Symbol	Function
\cos°	Arc Cosine
tan	Tangent
\tan°	Arc Tangent
log	Log base 10
shift	Switch Shift state
(Open parenthesis
)	Close parenthesis
C	Clear all
CE	Clear entry
mem	Memory functions
P→R	Polar to rectangular coordinate conversion
R→P	Rectangular to polar coordinate conversion
R↓	Rotate stack down
R↑	Rotate stack up
° ' "	Insert degrees, minutes, or seconds separator
DMS-	Subtract angles of the form DD.MMSSsss
DMS+	Add angles of the form DD.MMSSsss
→D.dd	Convert from DD°MM'SS.sss or DD.MMSSsss to angle units
→DMS	Convert from current angle units to DD°MM'SS.sss


Construction points

Typically, a construction point is used in Cogo functions or when keying in lines, arcs, or polylines.

To quickly measure and automatically store a construction point, tap ► next to the **Point name** field in the Cogo or Key in screen and then select **Fast fix**:

- In a conventional survey, wherever the instrument is pointing, that position is stored.
- In a real-time GNSS survey, **Fast fix** uses the **Rapid point** method.

Construction points are stored in the database with autopoint names that increment from Temp0000. They are classified higher than check points and lower than normal points. For more information, see [Database search rules](#).

To view construction points in a map or list, tap  in the **Map** toolbar to open the **Layer manager**. Select the **Filter** tab and make sure construction points are set to selectable. See [Filtering data by measurement type](#), page 142.

Staking from the map

Select items in the map and then tap **Stakeout** to stake them using position information from the connected GNSS receiver or conventional survey instrument.

1. If you are selecting items from a linked file, make sure the file (and if required, the layer in the file) is selectable. You can do this in the **Layer manager**.
2. Tap the items in the map to select them. You must tap each point or line you want to select. For lines, tap near the end of the line to select the start of the line.
3. Tap **Stakeout** or press **Enter** on the controller keypad.
4. If more than one item is selected, they are added to the **Stakeout** list from where you can select them for stakeout.

When you use an item in a linked file during stakeout, Origin copies the properties of the item from the file and stores them with the point, line or polygon in the job.

For more information on staking different items, navigating to the item you are staking out, and staking relative to a surface, see [Stakeout](#), page 578.

Creating items for staking from a BIM model

When staking from a BIM model, you can use the following Cogo methods to calculate and create the items you need to take out:

- **Creating the center point of a surface**

To compute the center point of a surface in a BIM model, select the surface in the map and then select **Compute center point** from the tap and hold menu. This is useful to find the center point of a bolt or cylinder so you can then stake it out.

For more information, see [Compute center point](#).


- **Creating the centerline of an object**

To compute the centerline of any tube-like item in a BIM model, such as a pipe or cylinder, select it in the map and then select **Compute centerline** from the tap and hold menu. The software computes a polyline that runs along the center of the item.

For more information, see [Compute centerline](#).


Compute center point

You can compute the center point of a surface in a BIM model. This is useful to find the center point of a bolt or cylinder so you can then stake it out.

1. You can choose whether selecting surfaces in the map selects **Individual faces** or selects the **Whole object**. To change the **Surface selection** mode, tap  and select your preferred **Surface selection** mode. See BIM model selection mode, page 171.
2. In the map, tap the surface to select it.
3. Tap and hold in the map and select **Compute center point**.
The coordinates for the computed point are shown.
4. Enter the **Point name**.
5. If required, enter the code for the point in the **Code** field.
6. Tap **Store**.

Compute centerline

You can compute the centerline of a pipe, cylinder or ducting in a BIM model. The software computes a polyline that runs along the center of the surface.

1. You can choose whether selecting surfaces in the map selects **Individual faces** or selects the **Whole object**. To change the **Surface selection** mode, tap  and select your preferred **Surface selection** mode. See BIM model selection mode, page 171.
2. In the map, tap the surface to select it.
3. Tap and hold in the map and select **Compute centerline**.
The computed centerline is shown in the map.
4. Enter the **Polyline name**.
5. If required, enter the code for the line in the **Code** field.
6. Tap **Store**.

NOTE - When the **Surface selection mode** is set to **Whole object**, any hidden parts of the object, such as parts that are used to join the object to another object, are also selected. This may result in a longer centerline for the surface than when the **Surface selection mode** is set to **Individual faces**.

As-built inspection


Use the inspection and comparison tools to check as-built structures against the design.

Compare against a surface

Use the **Measure to surface** function to compare an as-built structure against the surface model. The surface can be a BIM model or a digital terrain model (DTM).

For more information, see [Measure to a surface, page 265](#).

Inspecting and reporting

 
To create a screen capture of the current map view, tap . If required, [annotate the screen capture](#) using the **Draw** tools and tap **Store**. To save the screen capture to the job, tap **Store**.

When you select the **Survey report** file format when you [export the job](#), all screen captures saved to the job are automatically included in the report.


Measure to a surface

Use the **Measure to surface** measurement method to calculate and store the closest distance from the measured point to the selected surface model. The surface model can be a [BIM model](#) or a [digital terrain model \(DTM\)](#).

NOTE - If more than one surface is selected, the nearest surface is used.

1. If the surface is in:
 - a DTM, tap  and select **Measure / Measure to surface**. If there is more than one surface available, select the surface in the **Select surface** field.
 - a BIM model, select the surface in the map and then from the tap and hold menu select **Measure to selected surface**.

NOTE - To select the surface the BIM model must be displayed as a solid object and the layer containing the surface must be selectable.

TIP - You can choose whether selecting surfaces in the map selects **Individual faces** or selects the **Whole object**. To change the **Surface selection** mode, tap  and select your preferred **Surface selection** mode. See [BIM model selection mode, page 171](#).

2. Enter the **Distance to surface limit**.
3. If required, enter a value in the **Antenna height/Target height** field.
4. Tap **Start**.

If the surface is not already visible in the map, it becomes visible.

The software calculates and reports the closest distance from the current position to the selected surface model and displays it in the **Distance to the surface** field. The **Distance to the surface** is only shown if it is within the **Distance to surface limit**.

The position on the surface is highlighted in the map and a line is drawn from the measured position to the position on the surface. Negative distances are reported for positions between you and the model and positive distances are reported for positions on the other side of the model.

TIP – If the software warns **Terrain models disagree**, there are overlapping surfaces with different elevations in the map. Hide any surfaces you are not using in the **Map files** tab of the **Layer manager**. See [Managing map file layers](#).

5. Enter the **Point name** and, if required, the **Code**.
6. Tap **Measure**.
7. Tap **Store**.

The **Distance to surface** value and the coordinates of the closest point on the surface are stored with the measured point and can be viewed in **Review job** and **Point manager**.

Map toolbars

- **Map toolbar**

Use the **Map** toolbar to select items in the map, move around the map, or to change to a different view.

See [Map toolbar, page 267](#).

- **BIM toolbar**

Use the **BIM** toolbar to isolate and view the data you are most interested in from the BIM models currently shown in the map.

See [BIM toolbar, page 270](#).

- **Limit box toolbar**

Use the **Limit box** toolbar to exclude parts of the map to view more clearly the area you are interested in.

See [Limit box toolbar, page 272](#).

- **Snap-to toolbar**



Use the **Snap-to** toolbar to select locations on objects in the map by snapping onto a specific point, even if no point exists.

See [Snap-to toolbar, page 272](#).

- **CAD toolbar**

Use the **CAD toolbar** to use control codes to create line and polygon features in the map as you measure points, or to create features using points and lines already in the job.



 







See [CAD toolbar, page 274](#).




 









TIP - The **Map** toolbar is always shown alongside the map. To display other toolbars in the map, tap  on the map toolbar and then select the toolbar. To hide a toolbar, tap  on the map toolbar and then select the toolbar again.











Map toolbar







The Map toolbar is always shown alongside the map.

Use the **Map** toolbar to select items in the map, move around the map, or to change to a different view.

Button	Function
<p>Select and pan</p> 	<p>Tap  to select items in the map.</p> <p>To clear the current selection, double-tap an empty part of the map.</p> <p>To pan around the map, make sure  is selected in the map toolbar and then tap and drag in the map. Alternatively, place two fingers on the screen and slide in the desired direction to move the view. If you are using a controller that has arrow keys, you can use the arrow keys to pan.</p> <p>To pan to a point in the map, tap  in the Map toolbar and select Pan to point. Enter a point name and scale value.</p> <p>To center the map at the current position, tap  in the Map toolbar and select Pan to here. For more options, such as to change the scale at which to zoom, select Pan to point and configure your settings and then tap the Here softkey in the Pan to point screen.</p>
<p>Rectangle selection</p> 	<p>Tap  and then drag to create a rectangular box around the items you want to select. Items inside or partially inside the rectangle drawn on the map are colored blue to indicate they are selected. To clear the selection, double-tap an empty part of the map.</p> <div style="background-color: #e0f0e0; padding: 5px;"> <p>TIP - If the  button is not shown in the toolbar, tap Polygon selection  to change to Rectangle selection .</p> </div> <p>For more information, see Selecting items in the map, page 161.</p>


Button	Function
<p>Polygon selection</p> 	<p>Tap  and then tap in the map to create a polygon shape around the items you want to select. Keep tapping in the map to add nodes to the polygon.</p> <p>TIP - If the  button is not shown in the toolbar, tap Rectangle selection  to change to Polygon selection .</p> <p>If you need to undo the last node added, tap . To delete the polygon (for example, to start again) tap .</p> <p>When you are done adding nodes, tap  to close the polygon. The polygon shape disappears from the map and items inside or partially inside the polygon are colored blue to indicate they are selected.</p> <p>For more information, see Selecting items in the map, page 161.</p>
<p>Zoom</p> 	<p>Tap  or  to zoom in or out one zoom level at a time.</p> <p>Alternatively, place two fingers on the screen and stretch out to zoom in on the center of the map or pinch in to zoom out. Drag one finger across the screen to pan.</p> <p>To zoom to an area of interest, tap and hold the button and then drag a box around the area of interest.</p>
<p>Zoom extents</p> 	<p>Tap  to zoom to the map extents.</p> <p>You can configure the zoom extents so that part of the map is excluded. This is useful when, for example, you want to exclude a base station position that is several kilometers away. To do this, use the map pan and zoom tools so that the map shows the area of interest and then tap and hold Zoom extents and select Set user zoom extent. This is now the map view shown when you tap Zoom extents. To clear the custom view, tap and hold Zoom extents and select Clear user zoom extent.</p> <p>To create an area of interest, tap and hold Zoom extents and select Set area of interest. This is useful when, for example, you have a large job site and you want to view only the part you are currently working in. To return to this view, tap and hold Zoom extents and select View area of interest.</p>






Button	Function
	<p>NOTE - The area of interest commands are available only when the map is in Plan view. If they are not available, tap  and select Plan.</p> <p>When zooming it is useful to be able to return to the previous view. Tap and hold Zoom extents and select Zoom to previous, or press Ctrl + Z.</p> <p>NOTE - The current position of the GNSS antenna is not considered part of the map extents unless it is currently being used for GPS search.</p>
<p>Orbit</p> 	<p>Tap  and then tap and drag in the map to orbit the 3D map data around an axis. The NE axes icon rotates accordingly, to show the orientation of the North and East elevations. The  icon in the center of the map indicates the point of orbit.</p> <p>When in Orbit mode you can tap individual items in the map to select them, and these remain selected when you orbit the map.</p> <p>TIP - In most cases the orbit function is constrained so that the Z axis remains upward. However, when the job Coordinate order is set to XYZ (CAD), there is no constraint and you can orbit data freely. To change the coordinate order, see Units, page 97.</p>
<p>Predefined view</p> 	<p>Tap Predefined view  to see a plan (two dimensional) view of the map, or tap and hold  to select a predefined three dimensional view.</p> <p>Available three dimensional views are Top, Front, Back, Left, Right or Iso. The Iso view shows an isometric view of the data where each angle is 60 degrees. Select Iso again to rotate the view by 90 degrees.</p> <p>To return to Plan view, tap . When in Plan view, additional options are available from the tap and hold menu. These options are not available in the other predefined views.</p>
<p>Layer manager</p> 	<p>Tap  to link files to the job or to change which points and features are visible and selectable in the map. See Managing layers using the Layer manager, page 137.</p>













Button	Function
<p>More</p> 	<p>Tap  and then select the appropriate menu item.</p> <p>To change the appearance of information shown in the Map screen, and to configure map behavior, tap  and then select Settings. See Map settings, page 181.</p> <p>To pan to a specific point or to pan to your current location, tap  and select the appropriate option.</p>
<p>Augmented reality</p> 	<p>Tap  to switch to the Augmented reality view. See Augmented reality viewer, page 176.</p> <p>This button is available only when the controller is connected to a Trimble GNSS receiver with IMU tilt compensation and you have started a survey.</p>

BIM toolbar

Use the **BIM** toolbar to isolate and view the data you are most interested in from the BIM models currently shown in the map.

TIP – The **BIM** toolbar automatically appears next to the **Map** toolbar when at least one BIM model has at least one layer set to **selectable** in the **Layer manager**. If the BIM toolbar is not shown, tap  on the **Map** toolbar and then select **BIM toolbar**.


 







Button	Function
<p>Hide</p> 	<p>Select items using the selection tools in the Map toolbar or by Organizer group. The selected items do not have to be in the same layer or in the same BIM file.</p> <p>Tap  to hide selected items in the BIM model.</p> <p>For more information, see Hiding and isolating items in BIM models, page 173.</p>
<p>Show only</p> 	<p>Select items using the selection tools in the Map toolbar or by Organizer group. The selected items do not have to be in the same layer or in the same BIM file.</p> <p>Tap  to show only selected items in the BIM model.</p> <p>For more information, see Hiding and isolating items in BIM models, page 173.</p>
<p>Undo</p>	<p>Tap  to undo the previous filtering action (Hide, Show only, or</p>

Button	Function
	selection by Organizer group).
Reset 	Tap  to undo all previous filtering actions and reset the map.
Selection mode 	<p>Tap  to quickly disable or re-enable the selectability of item types when selecting items from a BIM model in the map.</p> <p>Tap  and then select an option to toggle on or toggle off whether those items are selectable. The options are:</p> <ul style="list-style-type: none"> • Point/vertex selection controls whether points or vertices in the model are selectable. • Line/edge selection controls whether lines or edges in the model are selectable. • Surface selection: controls how much of a surface is selectable. Only one surface selection option can be enabled at a time. Choose from: <ul style="list-style-type: none"> • Whole object to select the whole object as a single surface. • Individual faces to select only a single face of the object at a time. <p>The  button changes to  when selection of any item types is disabled. For more information, see BIM model selection mode, page 171.</p>
Organizer 	<p>Tap  to open the Organizer form and select items shown in the BIM model by Organizer group set up in Trimble Connect.</p> <p>For more information, see Selecting from BIM models by Organizer group, page 172.</p>
Property sets 	<p>Tap  to download custom property sets applied to the BIM models shown in the map from Trimble Connect.</p> <p>For more information, see Reviewing custom property sets, page 175.</p>

Limit box toolbar


Use the **Limit box** toolbar to exclude parts of the map to view more clearly the area you are interested in.

TIP – For detailed steps on using the **Limit box**, see [Limit box, page 167](#).


Button	Function
Vertical limits 	Tap  to set vertical limits for the top and bottom faces of the Limit box .
Left and right 	Tap  to set horizontal limits for the left and right faces of the Limit box .
Front and back 	Tap  to set horizontal limits for the front and back faces of the Limit box .
Reset limits 	Tap  to refit the Limit box to the current view. Tap and hold  to reset the Limit box to the extents of the job.

Snap-to toolbar

The **Snap-to** toolbar provides a simple way to select locations on objects in the map by snapping onto a specific point, even if no point exists. For example, you can use the **Snap-to** toolbar to accurately select the end point of a line or the center of an arc from linework in a map file such as a BIM model, web feature service (WFS) file, DXF file, Shapefile, or KML or KMZ file. You can then create points from the created nodes and store the points in the job.

To display the toolbar, tap  on the map toolbar and then select **Snap-to toolbar**. The **Snap-to** toolbar is only available when you are using General Survey.

To "snap" to a location on a feature, tap the appropriate tool in the **Snap-to** toolbar and then select the item in the map. Depending on the **Snap-to** tool you have selected you can select lines (including polylines), arcs, or a point.






To use the same tool multiple times, tap and hold the appropriate tool in the **Snap-to** toolbar to keep the tool selection active and then select the features in the map. For example, to select the end points of multiple lines, tap and hold the **Snap to end** button  and then select each line. To change to a different tool, tap a different button in the **Snap-to** toolbar.




If a point does not already exist at the selected location, Origin calculates a point. You can use calculated points like any other point, for example to stake out or to perform other Cogo functions. To be able to reuse a calculated point in the future, create a point from the calculated point and store it to the job. When you create points from entities in the map file, Origin copies the attributes of the entity from the map file and stores them with the point in the Origin job.

Calculated points are automatically removed when you update the map, such as when changing map settings or linked files. To remove calculated points at any time, tap the **Clear selection** button on the toolbar, or double-tap in the map.

TIP – It is also possible to create calculated points at specific locations using Cogo functions. See [Cogo calculations](#).

Snap-to tools

Select	Function
Snap to midpoint	 <p>Snap to the midpoint of the selected line or arc.</p>
Snap to end	 <p>Snap to the nearest end point of the selected line.</p>
Snap to intersection	 <p>Snap to the real or apparent intersection of two lines.</p> <p>An apparent intersection occurs when two lines do not physically intersect but could be extended to intersect at a projected point. To snap to an apparent intersection you must select two lines.</p> <p>A real intersection occurs at the position where two lines cross (in plan view). To snap to a real intersection you need only select one line close to the crossing point.</p>
Snap to perpendicular	 <p>Snap to the perpendicular intersection of the selected point projected perpendicular to the selected line.</p> <p>The software creates a virtual point at the intersection of the selected point projected perpendicular to the line. If required, the line may be extended to determine the perpendicular intersection.</p>
Snap to PI of arc	 <p>Snap to the point of intersection (PI) of the selected arc.</p>

Select		Function
Snap to center		Snap to the center of the selected arc.
Snap to nearest		Snap to the nearest point of the selected line or arc.
Clear selection		Removes calculated points and lines and clears the selection of any other items in the map. Alternatively, double-tap anywhere in the map.

To create points from calculated points

1. Select the calculated point (or points) in the map.
2. Tap and hold in the map and select **Create point**. This option is not available if you have selected a mix of points and calculated points.
3. Enter the **Point name**.
4. If required, enter the code for the point in the **Code** field.
5. Tap **Store**.

CAD toolbar


The CAD toolbar enables you to easily use **control codes** to create line, arc, and polygon features in the map as you measure points, or by drawing line and arc features using feature coded points already in the job.

To create features as you measure, select the feature code for the point and then select the appropriate control code from the CAD toolbar. See [To create features using control codes in Measure codes](#).

To draw line and arc features between existing points, select the appropriate control code from the CAD toolbar and then select the points in the map. See [Drawing features from existing points](#).

NOTE -


- To create features, the feature library must contain **feature codes defined as lines** for the features you want to create, **and defined control codes** for the required action to create the feature geometry, such as starting or ending a new join sequence. See [Feature code library requirements for control codes, page 553](#).
- The CAD toolbar can only be used to draw or create lines between points in the job. It cannot be used to draw or create lines between points in linked CSV files or map files such as DXF.


To display the toolbar, tap  on the map toolbar and then select **CAD toolbar**. The CAD toolbar is only available when you are using General Survey.

CAD toolbar modes

The CAD toolbar works in two modes: **Measure mode** and **Drawing mode**. The tools available on the CAD toolbar depend on whether the CAD toolbar is in **Measure mode** or **Drawing mode**.

If a **Measure** form is not open, the CAD toolbar opens in **Drawing mode**. You must be in a survey and have a **Measure** form open to use **Measure mode**. **Measure** forms are **Measure points**, **Measure topo**, or **Measure codes**. When you open a **Measure** form, the CAD toolbar automatically switches to **Measure mode**.

To switch between modes, tap  and then select the required mode.

TIP – If lines created using the CAD toolbar are not visible in the map, tap  and select **Filter**. Tap **All** or tap the **CAD linework** list item so that a check mark appears next to it.

CAD toolbar in Measure mode




Use the CAD toolbar in **Measure mode** to create line and polygon features built from points as you measure them. To use Measure mode you must have started a survey and have a **Measure** form open.













In Measure mode, the CAD toolbar displays **8 configurable buttons** for control code functions.

TIP – When using a controller with a smaller landscape screen such as a Ranger 5 controller, if the **Limit box** is open the CAD toolbar shows buttons for only the first 3 control codes. Tap < to access the other 5 control codes.

To swap one of the control codes on the toolbar with another one not already assigned, tap and hold any control code on the toolbar and then select the new control code from the list. The selected control code replaces the one you selected on the toolbar.

The following control codes can be selected and added to the CAD toolbar:

Button	Control code
	Start join sequence
	End join sequence
	Start tangential arc

Button	Control code
	End tangential arc
	Start non-tangential arc
	End non-tangential arc
	Start smooth curve
	End smooth curve
	Start rectangle
	Start circle (center)
	Start circle (edge)
	Join to first (same code)
	Join to named point
	No join
	Horizontal/vertical offset








For more information on using these tools, see:

- [To create features using control codes in Measure codes, page 553](#)
- [Quick reference: CAD toolbar with Measure codes, page 563](#)

- [Quick reference: CAD toolbar with Measure points or Measure topo, page 566](#)

CAD toolbar in Drawing mode



In Drawing mode, the CAD toolbar has the following buttons:

Button	Function
	Draw a line.
	Draw an arc.
	Start a new join sequence.
	Start second arc of a back-to-back arc.
	End join sequence
	Delete a line or arc feature you have created using the CAD toolbar.
	Tap to switch to Measure mode. Measure mode is available only when you have started a survey.

Drawing features from existing points


Use the CAD toolbar in Drawing mode to select existing points in the map and create coded linework between them. You can draw lines, arcs, and back-to-back arcs. You can also delete linework that you have created using the CAD toolbar.

To draw a line feature



1. Tap the **Draw line** button .
2. If required, tap the **Start join sequence** button  and then select the feature code from the list of line feature codes defined in the feature library. The selected feature code is added to the **Code** field.
3. In the map, tap the start point of the line sequence you want to create. The feature codes in the **Code** field are applied only to the start point. The feature code applied to the first point is also applied to the line.

- Continue to tap points until the line sequence is complete.

As you select each subsequent point, a line is drawn between the two selected points and the first point is then deselected.

- To stop drawing lines, tap the **Draw line** button  again.


To draw an arc feature


- Tap the **Draw arc** button .
- If required, tap the **Start join sequence** button  and then select the feature code from the list of line feature codes defined in the feature library. The selected feature code is added to the **Code** field.
- In the map, tap the start point of the arc you want to create.

NOTE – The points comprising the arc must have been observed consecutively. It will therefore not always be possible to join points with arcs.


- Continue to tap points until the arc sequence is complete.

As you select each subsequent point, a red dashed line is drawn between the points until enough points are selected so that an arc can be drawn from the first point. As the arc is drawn the previous point is deselected.

- To stop drawing arcs, tap the **Draw arc** button  again.

TIP – To draw a back-to-back arc, tap the **Back-to-back arc** button  after completing the first arc and before selecting the second point of the second arc. After the first part of the arc is drawn between the first and second points of the arc, the button returns to the unselected state.


To insert a break in a line

If you have joined points in a continuous line but want to break the line, select the point just before the break and tap **End join sequence** .

The **End join sequence** code is added to the **Code** field. The **End join sequence** code ensures the next point that has the same line feature code will not join to this line.

If the selected point was in the middle of a line, then the next point starts a new line.

To delete linework

- In the map, select the lines or arcs that you want to delete.
- Tap the **Delete** button .
- Select the feature(s) to delete from the list and tap **Delete**.

Lines and arcs are deleted, and feature codes are removed from the affected points. However, the points remain in the job.

Map tap and hold functions

Tap and hold in the map area to quickly select a common task. The tasks available depend on the number and type of features selected, and whether the features are in the job or in a linked file.

Key in a point

To key in a point, tap and hold the location for the point in the map and then select **Key in point**.

The **Key in point** option is not available from the tap and hold menu if you are viewing the map in 3D and the map does not include a ground plane or surface.

Store a point from the GNSS receiver

To quickly store a point, such as a waypoint, without having to start a survey, tap and hold an empty space in the map and select **Store a point**.

The software must be connected to an external GNSS receiver or to the controller's internal GPS. See [To store the current receiver position, page 431](#).

Offset a line or polyline

You can create a new line or polyline by offsetting an existing line or polyline. See [Offsetting a line or polyline, page 188](#).

Create a surface

If the job contains three or more 3D points, you can use those points to create a surface and store it as a triangulated terrain model (TTM) file in the current project folder. You can then use the surface to calculate a volume. See [Creating a surface from existing points, page 188](#).

Conventional surveys

In a conventional survey, the controller is connected to a conventional instrument such as a total station or spatial station. For a list of the conventional instruments that can be connected, see [Supported equipment, page 6](#).

The steps for completing measurements using a conventional instrument are:


1. Configure the survey style.
2. Set up the instrument and position your targets at the site.
3. If it is not already connected, connect the Origin software to the instrument.
4. Start the survey.
5. Complete the station setup.
6. Measure or stake out points.
7. End the survey.

All surveys in Spectra Geospatial Origin are controlled by a survey style. Survey styles define the parameters for configuring and communicating with your equipment, and for measuring and staking points. This whole set of information is stored as a template and used each time you start a survey.

Default survey styles are created by Origin when a new installation of the software is started, but only if there are no existing survey styles.

The type of conventional survey you will use will depend on the available equipment and the results required. Configure the style only if the default settings do not suit your needs.

To configure the conventional survey style

1. Tap  and select **Settings/ Survey styles**.
2. Do one of the following:
 - Tap **<Style name>** and then tap **Edit**.
 - Tap **New**. Enter a name for the style and then tap **Accept**.

3. Select each of the options in turn, and set them to suit your equipment and survey preferences.

To...	See...
configure settings for the instrument	Instrument configuration, page 281
set parameters for topo points	Conventional point options, page 285
configure the software to warn when duplicate points are measured	Duplicate point tolerance options, page 385
configure stakeout settings	Stakeout options, page 382
use a laser rangefinder	Laser rangefinders, page 465
use an echo sounder	Echo sounders, page 469
use a utility locator	Utility locators, page 472

4. Tap **Store**.

Instrument configuration

To configure instrument settings, tap  and select **Settings / Survey styles / <Style name> / Instrument**.

The fields shown in the **Instrument** page of the survey style depend on the instrument manufacturer and model selected at the top of the screen. If you are using an instrument from a third-party manufacturer, see [To select a third-party total station, page 285](#).

Baud rate and parity

When you change the instrument type, the baud rate and parity settings automatically change to the default settings for the selected instrument.

Use the **Baud rate** field to configure the software baud rate to match that of the conventional instrument.

Use the **Parity** field to configure the software parity to match that of the conventional instrument.

HA VA status rate

Use the **HA VA status rate** field to set how often the software updates the horizontal and vertical angle display in the status line with information from the conventional instrument.

NOTE – Some instruments beep when communicating with the software. You can turn off the beep in the instrument or set the **HA VA status rate** to Never.

Measurement mode

The **Measurement mode** field appears if the selected instrument type has more than one measurement mode that can be set by the Origin software. Use this mode to specify how the EDM measures distances. Options vary according to the instrument type. To change the measurement mode during the survey, tap the instrument icon in the status bar and then tap the first tile in the **Instrument functions** screen.

If you select:

- **STD**, the instrument is in EDM Standard mode, where it averages the angles while a standard distance measurement is taken.
- **FSTD**, the instrument is in EDM Fast Standard mode, where it averages the angles while a fast standard measurement is taken.
- **TRK**, the instrument is in EDM Tracking mode, where it constantly measures distances and updates them in the status line.

To always use the same setting as set on the instrument, select the **Instr. default**.

Averaged observations

Use the **Averaged observations** method to:

- increase the measurement precision with a predefined number of observations
- view the associated measurement standard deviations

While the instrument is carrying out the measurements, standard deviations are displayed for the horizontal (HA) and vertical (VA) angles, and the slope distance (SD).

Auto face 1 / face 2

When using a servo or robotic instrument, select the **Auto face 1 / face 2** check box to automatically measure a point or stakeout a position on face 2 after the face 1 observation.

When **Auto face 1 / face 2** is selected, once the face 1 measurement is completed, the instrument automatically turns to face 2. The point name does not increment, which allows a face 2 observation to be measured with the same point name as the face 1 observation. Once the face 2 measurement is completed, the instrument returns to face 1.

Auto face 1 / face 2 does not work when starting on face 2, or when the measurement method is set to:

- Angle offset
- H. Angle offset
- V. Angle offset
- Single dist. offset
- Dual-prism offset

- Circular object
- Remote object

Measure distance on face 2

The **Measure distance on face 2** option is used in:

- Measure topo, when **Auto face 1 / face 2** is selected
- Measure rounds, Station setup plus, and Resection, when a distance observation is not required on face 2

When the **Measure distance on face 2** check box is selected, if the face 1 measurement method included a distance measurement, then the measurement method for face 2 is automatically set to **Angles only** after the face 1 measurement. After the face 2 measurement, the instrument returns to the method used on face 1.

Autolock off for offsets

When the **Autolock off for offsets** check box is selected, Autolock technology is automatically disabled for the offset measurement and then re-enabled after the measurement.

Set backsight

The **Set backsight** field appears if you can set the horizontal circle reading on the instrument when the backsight is observed. The options are **No**, **Zero**, and **Azimuth**. If you select the **Azimuth** option, when you observe the backsight the horizontal circle reading is set to the computed azimuth between the instrument point and the backsight point.

Instrument precision

Instrument precisions are used to compute the observation weights as part of the Standard resection and Station Setup Plus computations.

When you use a Spectra Geospatial total station, the instrument precisions are read from the instrument. You can either use the precisions from the instrument, or provide your own values based on your observing techniques by setting the **Edit instrument precisions** switch to **Yes**.

For other types of instrument do one of the following:

- Enter the values provided by the instrument manufacturer
- Leave the instrument precision value fields as null

If you leave the instrument precision value fields as null, the following default values are used:

Observation	Default value
Horizontal angle precision	1"
Vertical angle precision	1"
EDM	3 mm
EDM (ppm)	2 ppm

Centering errors

A centering error can be specified for the instrument and backsight.

The centering error is used to compute the observation weights as part of the Standard resection and Station Setup Plus computations. Set a value appropriate to the estimated accuracy of your instrument/backsight setup.

Servo/Robotic

The **Servo/Robotic** settings control whether the instrument automatically turns to known points, and also controls the perspective used when measuring offsets and performing stakeout. When the **Automatic** switch is set to **Yes**, the software automatically applies servo settings when connected using Bluetooth, cable or a clipped on controller, and automatically applies robotic settings when connected using Wi-Fi or Cirronet radio.

When Automatic is used	Servo setting	Robotic setting
Auto turn	HA & VA	Off
Offset & Stakeout directions	Instrument perspective	Target perspective

Auto turn

- You can set the **Auto turn** field to **HA & VA**, **HA only**, or **Off**. If you select **HA & VA** or **HA only**, the instrument automatically turns to the point during stakeout, and when a known point is entered into a point name field.
- When the **Auto turn** field in the survey style is set to **Off**, the instrument does not turn automatically. This is desirable if you are working robotically and wish the instrument to remain autolocked onto the target. To turn the instrument to the angle indicated on the screen, tap **Turn**.

Offset & Stakeout directions

- **Instrument perspective:** In/out and left/right navigation directions assume you are standing behind the instrument looking toward the target.
- **Target perspective:** In/out and left/right navigation directions assume you are standing at the target looking towards the instrument.

TIP – Measurements are always stored and displayed relative to the instrument position. The perspective cannot be changed in **Review job**.

To select a third-party total station

In addition to supported Spectra Geospatial instruments, you can carry out a conventional survey when connected to a total station made by one of the following manufacturers:

- Leica
- Nikon
- Pentax
- Sokkia
- Topcon

When using third-party instruments, you must disable auto-connect. Some commands used by auto-connect can interfere with the communication of third-party instruments. See [Auto-connect settings, page 485](#).

To key in measurements, select **Manual** in the **Manufacturer** field of the survey style.

Conventional point options

As part of configuring the survey style for a conventional survey, you can configure the settings for topo points measured during the survey.


To configure these settings, tap  and select **Settings / Survey styles / <style name> / Topo point**.

In the **Measure display** field, select how the observations are displayed on the controller. For a list of the available options and the corrections that are applied, see [Instrument corrections, page 291](#).

In the **Auto point step size** field, set the increment size for automatic point numbering. The default is **1**, but you can use larger step sizes and negative steps.

Select the **View before storage** check box to view observations before they are stored.

Stakeout options

To configure stakeout options in the survey style, tap  and select **Settings / Survey styles / <Style name> / Stakeout**.

TIP – To change the stakeout options during stakeout, tap **Options** in the stakeout screen.

As-staked point details

As-staked point details are shown in stakeout reports generated from the **Export** screen, and they are shown on the **Confirm staked deltas** screen that appears when you enable **View before storage**.

To configure **As-staked point details**, see [As-staked point details, page 589](#).

Display

Use the **Display** group to configure the appearance of the navigation display during stakeout.

To configure the display for a conventional survey

Set the **Show stakeout graphics** switch to **Yes** to show the navigation graphics in the navigation screen. Setting the switch to **Yes** enables the other fields in the **Display** group.

TIP – If you are using a controller with a smaller screen, or you want to fit more navigation deltas on the screen, set the **Show stakeout graphics** switch to **No**. The other fields in the **Display** group are hidden when the switch is set to **No**.

The **Display mode** determines what the navigation display shows during navigation. Select from:

- **Direction and distance** – the stakeout navigation display shows a large arrow pointing in the direction you have to move. When you are close to the point, the arrow changes to the in/out and left/right directions, relative to the instrument.
- **In/out and left/right** – the stakeout navigation display shows in/out and left/right directions, with the conventional instrument as a reference point.

TIP – By default the software automatically gives in/out and left/right directions from the **Target perspective** in a robotic survey, and from the **Instrument perspective** when connected to a servo instrument using a face plate or cable. To change this, edit the **Servo/Robotic** settings in the **Instrument** screen of the survey style. See [Instrument configuration, page 281](#).

Use the **Distance tolerance** field to specify the allowable error in distance. If the target is within this distance from the point, the software indicates that the distance is correct.

Use the **Angle tolerance** field to specify the allowable error in angle. If the conventional instrument is turned away from the point by less than this angle, the software indicates that the angle is correct.

Use the **Grade** field to display the grade of a slope as an angle, percent, or ratio. The ratio can be displayed as **Rise:Run** or **Run:Rise**. See [Grade, page 98](#).

To configure the display for a GNSS survey

Set the **Show stakeout graphics** switch to **Yes** to show the navigation graphics in the navigation screen. Setting the switch to **Yes** enables the other fields in the **Display** group.

TIP – If you are using a controller with a smaller screen, or you want to fit more navigation deltas on the screen, set the **Show stakeout graphics** switch to **No**. The other fields in the **Display** group are hidden when the switch is set to **No**.

The **Display mode** determines what remains fixed in the center of the screen during navigation. Select from:

- **Target centered** – the selected point stays fixed in the center of the screen
- **Surveyor centered** – your position stays fixed in the center of the screen

The **Display orientation** determines the reference the software orientates to during navigation. Select from:

- **Direction of travel** – the software will orientate so that the top of the screen points in the direction of travel.
- **North / Sun** – the small orientation arrow shows the location of North or the sun. The software will orientate so that the top of the screen points toward North or the sun. When using the display, tap the **North/Sun** softkey to toggle the orientation between north and the sun.
- **Reference azimuth:**
 - For a point the software will orientate to the **Reference azimuth** for the job. The **Stake** option must be set to **Relative to azimuth**.
 - For a line or road the software will orientate to the azimuth of the line or road.

NOTE – If, when staking a point, the **Display orientation** is set to **Reference azimuth** and the **Stake** option is **not** set to **Relative to azimuth** the display orientation behavior will default to **Direction of travel**. For **Stake** options, see [GNSS stake methods, page 594](#).

Deltas

Deltas are the information fields showing during navigation that indicate the direction and distance you need to travel to the item you want to stake out. To change the deltas shown, tap **Edit**. See [Stakeout navigation deltas, page 585](#).

Surface

To display the cut or fill relative to a surface during stakeout, in the **Surface** group box select the surface file.

Alternatively, if you have selected surfaces from BIM files in the map, the **Surface** field indicates the number of surfaces you have selected. To select a different surface from the map, double-tap in the map to clear the current selection and then select the new surface.

If required, in the **Offset to surface** field, specify an offset to the surface. Tap ► and select whether the offset is to be applied vertical or perpendicular to the surface.

Conventional

In a conventional survey, if you do not want the total station EDM set to **TRK** mode when you enter stakeout, clear the **Use TRK for stakeout** check box.

GNSS

In a GNSS survey, to automatically start measuring when the **Measure** key is tapped, select the **Auto measure** check box.

Compass

If your Spectra Geospatial controller includes an internal compass, you can use it when staking out a position or navigating to a point. To use the internal compass, select the **Compass** check box.

Spectra Geospatial recommends you **disable** the compass when you are near magnetic fields that may cause interference.

NOTE - In a GNSS survey, if you are using IMU tilt compensation and the IMU is aligned, the heading from the receiver is always used to orient the GNSS cursor, the large stakeout navigation arrow and the close up screen. You must be facing the LED panel of the receiver for these to be orientated correctly.

Removed staked point from list

To automatically remove points from the stake out points list after they have been staked, select the **Remove staked point from list** check box at the bottom of the **Options** screen.

Duplicate point tolerance options

The duplicate point tolerance options in the survey style determine what happens if you attempt to store a point with the same name as an existing point, or if you measure a point that is very close to an existing point that has a different name.

When configuring these settings, make sure you are familiar with the database search rules applied by the software when managing points of the same name. See [Managing points with duplicate names, page 673](#).

Same point name options

In the **Same point name** group, enter the maximum horizontal and vertical distances or angles that a new point can be from an existing point of the same name. A duplicate point warning appears only if the new point is outside the tolerance set. To always receive a warning if you measure a point with the same name, enter zero.

Auto average tolerance

To automatically compute and store the average position of points that have the same name, select the **Auto average** within tolerance option. An averaged position has a higher search class than a normal observation.

When the **Auto average** option is selected, and an observation to a duplicate point is within the specified duplicate point tolerance settings, the observation and the computed average position (using all the available point positions of the same name) are stored.

You can select the averaging method in the **Cogo settings** screen.

The Origin software computes an averaged coordinate by averaging the grid coordinates computed from the underlying coordinates or observations. Observations that do not allow a grid coordinate to be resolved (for example, angles only observations) are not included in the average coordinate.

If the new point is further from the original point than the tolerance specified, you can choose what to do with the new point when you store it. The options are:

- **Discard** – discard the observation without storing.
- **Rename** – rename to a different point name.
- **Overwrite** – Overwrite and delete the original point, and all other points of the same name and the same (or lower) search class.
- **Store as check** – Store with a lower classification.
- **Store and reorient** – (This option only appears if you are observing a backsight point.) Store another observation that will provide a new orientation for subsequent points measured in the current station setup. Previous observations are not changed.
- **Store another** – Store the point, which can then be averaged in the office software. The original point is used in preference to this point.

If the Store another option is used with multiple observations to a point with the same name and from the same station setup, then when measuring topo points the software automatically computes and records a Mean Turned Angle (MTA) observation to the point. This MTA observation provides the preferential position for the point.

- **Average** – Store the point and then compute and store the averaged position.

When you select **Average**, the current observation is stored and the computed average position appears, along with the computed standard deviations for the north, east, and elevation ordinates. If there are more than two positions for the point, a **Details** softkey appears. Tap **Details** to view the residuals from the average position to each individual position. You can use the **Residuals** form to include or exclude specific positions from the average computation.

Face 1 and face 2 observation tolerance

In a conventional survey, when you attempt to measure a point on face 2 that already exists as a face 1 measurement, the software does not warn that the point already exists.

When you carry out two-face observations in a conventional survey during **Station setup**, **Station Setup Plus**, **Resection**, or when measuring **Rounds**, the software checks that the face 1 and the face 2 observations to a point are within a preset tolerance.

If the new point is further from the original point than the tolerance specified, you can choose what to do with the new point when you store it. The options are:

- **Discard** – discard the observation without storing.
- **Rename** – rename to a different point name.
- **Overwrite** – Overwrite and delete the original point, and all other points of the same name and the same (or lower) search class.
- **Store as check** – store with a classification of Check.
- **Store another** – store the observation.

Once you have completed the **Station Setup Plus**, **Resection**, or **Round** measurements, the software saves the Mean Turned Angles to each of the observed points. The software does not check for duplicate points at this stage.

Different point name options

To enable proximity check for points with different names, enable the **Proximity check** switch. Enter the horizontal and vertical distance that the new point can be from any existing point.

NOTE –

- The vertical tolerance is only applied when the new observed point is within the horizontal tolerance. Use the vertical tolerance to avoid the proximity check warning when new points are measured above or below existing points but are legitimately at a different elevation, for example the top and bottom of a vertical curb.
- The proximity check is only performed on observations, not on keyed in points. The proximity check is not performed in stakeout, GNSS Continuous measurement, or Calibration Point, and it is not performed in jobs with a No Projection coordinate system.


To set up and connect the instrument

1. Plumb the instrument.
2. Use the tripod legs and the tribrach bubble to roughly level the instrument.
3. Start the instrument.
4. Connect the controller to the instrument. Connection options depend on the instrument you are using.

A cable connection requires no configuration. For other connection types, refer to the appropriate topic:

- [Radio connections, page 483](#)
 - [Bluetooth connections, page 480](#)
5. On the controller, start Origin.
If the Origin software does not automatically connect to the instrument, see [Auto-connect settings, page 485](#).
Use the status bar to confirm the software is connected to the instrument.

To start the conventional survey

1. In Origin, make sure the required job is open.
2. To start the survey, tap  and select **Measure** or **Stakeout**. If there is more than one survey style configured, select a survey style from the list. Select the station setup to use, for example **Station setup**.
When you select a survey style for the first time, the software prompts you to customize the style for your specific hardware.
3. When prompted, use the [electronic level](#) to level the instrument. Tap **Accept**.
4. Set the [corrections](#) associated with the instrument.
If the **Corrections** screen does not appear, tap **Options** and enter the correction information.
For some instruments, the software automatically checks to see if various corrections (PPM, prism constant, and curvature and refraction) are being applied correctly. When you select **Station setup**, messages showing what has or has not been checked are displayed in the status line. If the software finds that the corrections are being applied twice, a warning message appears.
5. Complete the station setup. See [Station setup, page 296](#).
6. Set up targets. See [Targets, page 313](#).
7. Measure or stake out points.

Instrument corrections

You can set the corrections associated with conventional observations. By default the **Corrections** screen appears automatically after the **Electronic level** screen when you start a survey.

If the **Corrections** screen does not appear, tap **Options** and enter the correction information. To reset the default setting so that the **Corrections** screen appears automatically, tap **Options** and then select the **Show corrections on startup** check box.

NOTE – If you intend to perform a network adjustment in the software using data from a conventional survey, make sure that you enter a pressure, temperature and, curvature and refraction correction.

Use the **PPM** (Parts Per Million) field to specify a PPM correction to be applied to electronic distance measurements. Key in the PPM correction, or enter the pressure and temperature of the surrounding environment and let the software compute the correction.

Typical pressure ranges are between 500 mbar–1200 mbar, but when you work in an area with over-pressure (for example, a tunnel), larger pressures up to 3500 mbar are possible.

If you are using a that has an internal pressure sensor, the pressure field is set automatically from the sensor in the instrument. To disable this, tap the advanced pop-up arrow and then clear the **From instrument** check box.

Use the **Curvature** and **Refraction** fields to control curvature and refraction corrections. The earth curvature and refraction corrections are applied to vertical angle observations and therefore have an impact on computed vertical distance values. They also affect the horizontal distance values to a very small extent.

The earth curvature and refraction corrections can be applied independently using the options provided. The earth curvature correction is the most significant correction with a magnitude of approximately 16" per km measured distance (subtracted from the zenith vertical angle).

The magnitude of the refraction correction is affected by the refraction coefficient, which is an estimate of the change in air density along the light path from the instrument to the target. Since this change in air density is affected by factors such as temperature, ground conditions, and the height of the light path over ground, it is very difficult to determine exactly which refraction coefficient to use. If you use typical refraction coefficients such as 0.13, 0.142, or 0.2, the refraction correction results in a correction in the opposite direction to the earth curvature correction with a magnitude of approximately one-seventh of the earth curvature correction.

NOTE –

- The DC file format only supports a curvature and refraction correction that are both off or both on. When they are both on, they have a coefficient of 0.142 or 0.2. When settings other than these are used in the software, the settings exported to the DC file will be a best match.
- Do not set corrections in both devices. To set them in the software, make sure the instrument settings are null.

For some instruments, the software automatically checks to see if various corrections (PPM, prism constant, and curvature and refraction) are being applied correctly. If it finds that the corrections are being applied twice, a warning message appears.

In the following table, the * symbol in a field indicates that the correction at the top of that column is applied. The * symbol applies only to computed coordinates when a station setup has been defined. For an explanation of the correction types, see the definitions below the table.

Displayed/Stored data	Corrections applied										
	C/R	PP M	PC	SL	Orie nt	Ins t ht	Tar ht	Pro j Cor	Stn SF	NA	PO C
Status line	-	-	-	-	-	-	-	-	-	-	-
HA VA SD (raw)	-	-	-	-	-	-	-	-	-	-	-
HA VA SD	*	*	*	-	-	-	-	-	-	-	*
Az VA SD	*	*	*	-	*	-	-	-	-	-	*
Az HD VD	*	*	*	-	*	*	*	*	*	-	*
HA HD VD	*	*	*	-	-	*	*	*	*	-	*
Grid	*	*	*	*	*	*	*	*	*	*	*
delta Grid	*	*	*	*	*	*	*	*	*	*	*
Station and offset	*	*	*	*	*	*	*	*	*	*	*
DC file (observations)	-	-	-	-	-	-	-	-	-	-	*
DC file (reduced coordinates)	*	*	*	*	*	*	*	*	*	*	*
JobXML (observations)	-	-	-	-	-	-	-	-	-	-	*
JobXML (reduced coordinates)	*	*	*	*	*	*	*	*	*	*	*
Survey Basic	*	*	*	*'	*	*	*	*'	*'	*'	*

Correction types

C/R	Curvature and/or Refraction correction.
PPM	Atmospheric parts per million (PPM) correction. PPM is calculated from temperature and pressure.
PC	Prism constant correction.
SL	Sea level (ellipsoid) correction. This correction is applied only if a fully defined coordinate system definition is being used; the correction is not applied in the Scale factor only definition.
Orient	Orientation correction.
Inst ht	Instrument height correction.
Tar ht	Target height correction.
Proj Cor	Projection correction. This includes the application of a scale factor specified in the Scale factor only definition.
Stn SF	Station setup scale factor. In any station setup, a scale factor for this setup can be specified or computed. This scale factor is applied in the reduction of all observations from this station setup.
NA	Neighborhood adjustment. In a station setup defined using station setup plus or resection , a neighborhood adjustment can be applied. The neighborhood adjustment is computed based on the observed residuals to the control points used during the station setup. The adjustment is applied, using the specified exponent value, in the reduction of all observations from this station setup.
POC	Prism offset correction. This is only applied when using a Spectra Geospatial 360° prism or Spectra Precision 360° prism.

To measure points in two faces

You can observe points using face 1 (direct) and face 2 (reverse) measurements during a station setup and when using the **Measure rounds** or **Measure topo** measurement methods. The software creates Mean Turn

Angle (MTA) records for observations to the same point, including paired face 1 and face 2 observations or grouped face 1 only observations.

When measuring points in two faces, consider the station setup method and the new point measurement method together and select the appropriate methods according to how you want to capture and store the data.

To use a single backsight (measured on one or both faces) and measure some topo points (on one or both faces), then use **station setup** and **Measure topo**. When measuring points on both faces, use **Measure topo** to observe the backsight on the other face. Alternatively, use **Measure rounds** and include the observation to the backsight point in the rounds. Otherwise, all foresights on face 2 will be oriented using the face 1 backsight observation.

NOTE -

- MTAs are not created during **Station setup**, but are created later if you make further observations to the backsight using **Measure topo** or **Measure rounds**.
- When you use **Measure topo**, MTAs are calculated and stored on the fly.
- Once an MTA record is written to the job database, you cannot change it. You can delete a face 1 and face 2 observation but the MTA records are not updated. You cannot delete MTA records in review.

To measure multiple backsights, multiple rounds of observations, or to obtain better quality control of your observations, complete the station setup using **Station setup plus** or **Resection**. Either method enables you to:

- measure a single backsight point or multiple backsight points
- measure backsight and foresight points
- pair the face 1 and face 2 observations and create MTA records
- measure face 1 only observations and create MTA records
- measure one or more rounds of observations
- review the quality of the observations and remove bad observations

Use **Resection** if you also need to determine the coordinates of the instrument point by making observations to known backsight points.

After performing the station setup, use **Measure rounds** to:

- measure one or more foresight points
- pair the face 1 and face 2 observations and create MTA records
- measure face 1 only observations and create MTA records
- measure one or more sets of observations per point in one round
- measure one or more rounds of observations
- review the standard deviations of the observations and remove bad observations

If the station setup has:

 
- a single backsight, you can choose whether or not to include the backsight point in the rounds list.
- multiple backsights, the backsight points are not included in the rounds list.

NOTE –

- If you do not measure the backsight on face 2, then the horizontal angle face 2 measurements that were observed using **Measure rounds** will not be used when calculating the MTAs.
- When you use **Measure rounds** after a station setup with a single backsight, and you do not include the backsight point in the rounds list, all turned angles are calculated using the backsight observation(s) made during the station setup.
- When you make topo observations after a **Station setup**, and you subsequently select **Measure rounds**, you must reobserve the backsight to include it in the rounds, generate an MTA to the backsight, and calculate turned angles from the backsight MTA for all foresight points.
- When you use **Station setup plus** or **Resection**, all observations are stored when the station setup is complete. MTAs are stored at the end. When you use **Measure rounds**, the observations are stored at the end of each round. In all three options, the MTAs are stored at the end.
- You can create MTAs during a station setup using **Station setup plus** and **Resection**, and also after a station setup using **Measure rounds** or **Measure topo**. When you measure the same point(s) using **Measure rounds** or **Measure topo** after **Station setup plus** and **Resection**, the software may produce two MTAs for the one point. When more than one MTA exists for the same point in one station setup, the Origin software always uses the first MTA. To avoid having two MTAs for the same point, do not use both methods to measure a point.


To end the survey

If a survey is running, end it before editing the current survey style or changing to a different survey style.

1. Tap  and select **Measure / End conventional survey**.
2. Tap **Yes** to confirm.
3. Turn off the controller.

Station setup

In a conventional survey, you must complete a **station setup** to orientate the instrument. You must have a current station setup before you can use the **Turn to** or **Joystick** functions to turn a servo or robotic instrument.

To complete a new station setup during a conventional survey, tap  and select **Measure / New <station setup>**. To perform a different type of setup to the current setup you must first end the survey.

Select the station setup appropriate to your requirements:

- To complete a standard station setup where the instrument is set up on a known point or if you are performing a traverse type survey, select **Station setup**.

- To measure multiple backsights, measure points using multiple rounds of observations, or to obtain better quality control of your observations, select **Station setup plus** or **Resection**. Both methods enable you to:
 - measure multiple backsight points
 - measure backsight and foresight points
 - measure one or more rounds of observations
 - review the quality of the observations and remove bad observations
- To determine the coordinates of the instrument point by making observations to known backsight points, select **Resection**.
- To determine the position of an occupied point relative to a baseline by taking measurements to two known or unknown baseline definition points, select **Refline**.


This method is often used when setting out buildings parallel to other objects or boundaries. Once this occupation point is defined, all subsequent points are stored relative to the baseline as a station and offset.

- If you are satisfied the last completed station setup in the current job is still valid, and you wish to continue observing points from this station, select **Use last**.
- To use the last completed station setup in a different job, select **Copy last**. This option is useful when, for example, you want to store the topo data in one job and the as-built data in another job, and you don't need to re-observe the station setup in the second job.

NOTE - You should only select **Copy last** if you are satisfied that the last completed station setup is still valid and you wish to continue observing points from this station. When using a previous station setup, it is good practice to always observe a checkshot to the backsight when you start the survey.

To complete a standard station setup

Select **Station setup** to complete a standard station setup to one backsight, or if you are performing a traverse type survey.

1. Tap  and select **Measure** or **Stakeout / <survey style> / Station setup**.
 - a. When prompted, use the electronic level to level the instrument. Tap **Accept**.
 - b. Set the corrections associated with the instrument.
If the **Corrections** screen does not appear, tap **Options** and enter the correction information.
 - c. To configure default instrument coordinates, and default point names, heights, and azimuth settings for the instrument point and backsight point, tap **Options**. See Station setup options, page 301.
 - d. Enter the instrument point name and the instrument height. See Station coordinates and instrument height, page 299.
 - e. Tap **Accept**.

2. Set up the backsight:
 - a. Enter the **Backsight point name** and the **Backsight height**.
 - b. If there are no known coordinates for the point, key in an azimuth. If you do not know the azimuth, you can enter an arbitrary value and then edit the azimuth record later, in review. A null azimuth value will affect the software's ability to perform traverse calculations.

TIP – If your survey practice does not require you to measure to the backsight, tap **Options** and clear the **Measure backsight** check box.

3. Select the measurement method in the **Method** field:
 - **Angles and distance** – measure horizontal and vertical angles and slope distance
 - **Averaged observations** – measure horizontal and vertical angles and slope distance for a predefined number of observations
 - **Angles only** – measure horizontal and vertical angles
 - **H. Angle only** – measure horizontal angle only
 - **Angle offset** – measure the slope distance first, the instrument can then be repointed and then measure the horizontal and vertical angles
 - **H. Angle offset** – measure the vertical angle and slope distance first, the instrument can then be repointed and then measure the horizontal angle
 - **V. Angle offset** – measure the horizontal angle and slope distance first, the instrument can then be repointed and then measure the vertical angle
 - **Distance offset** – enter the left/right, in/out or V.Dist offset from the target to the object when a point is inaccessible and then measure horizontal and vertical angles and slope distance to the offset object
4. If you selected an offset method, tap **Options** and then:
 - To set the perspective from which objects are offset, tap **Options** and change the settings in the **Servo/Robotic** group box. For more information, see [Servo/Robotic, page 284](#).
 - If using Autolock technology, select the **Autolock off for offsets** check box to automatically disable Autolock technology for the offset measurement and then re-enable it after the measurement.

You can also configure these settings in the **Instrument** screen of the survey style. See [Instrument configuration, page 281](#).

5. If you have enabled the **Advanced Geodetic** check box in the **Cogo settings** screen, you can apply an additional scale factor to every conventional station setup. All measured horizontal distances are adjusted by this scale factor. To configure the scale factor settings, tap **Options**.
6. Sight the center of the backsight target and then tap **Measure**.

If the **View before storage** check box is selected in the survey style, the software shows the residuals for the station setup, which shows the difference between the known position and the observed

position of the backsight point. To change the display, tap the view display button on the left of the measurement information.

7. If **Auto face 1/face 2** is enabled in the survey style or **Options** screen:
 - a. Tap **Store** to store the face 1 observation. The instrument changes face.
 - b. Sight the center of the backsight target and then tap **Measure**.
8. Tap **Store**.

Station coordinates and instrument height

When performing a station setup at the start of a survey you are prompted to enter the coordinates of the point (station) where you have set up the instrument and the instrument height.

Station coordinates

If you have set up the instrument on a known point and the point is available from a linked file, select the linked file for the job and then enter the point name in the **Instrument point name** or **Backsight point name** field. The point is automatically copied to the job.

If the coordinates for the instrument point are not known but there are nearby known points, perform a Resection to the known points to obtain the coordinates for the instrument point.


If you cannot determine the coordinates for the instrument point and/or backsight point, you can key them in or measure them later using GNSS (provided that there is a valid GNSS site calibration). The coordinates of any points measured from that station are then computed.

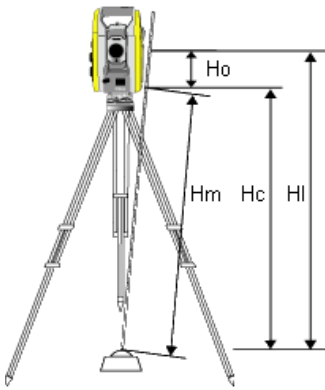
If you enter the instrument point later, make sure that you choose to overwrite the original instrument point in the **Duplicate point** form. The coordinates of any points measured from that station are then computed.

You can use the **Point manager** to edit the coordinates of the instrument point and/or backsight point. If you do, then the positions of all records that are computed from that station setup position may change.

Instrument height

The value you enter in the **Instrument height** field depends on the instrument you are using and whether you are measuring the **true height** of the instrument or to the **Bottom notch** on the instrument. The default method is to measure the true height of the instrument.

When measuring to the notch on a Spectra Geospatial FOCUS instrument, tap  and then select **Bottom notch**. Enter the height measured to the top ridge of the notch on the instrument. The Origin software corrects this measured slope value to true vertical and adds the offset (**Ho**) to calculate true vertical to the trunnion axis.



Value	Definition
Ho	Offset from the Bottom notch to trunnion axis. For a FOCUS instrument this value is 0.158 m (0.518 sft).
Hm	Measured slope distance.
Hc	Hm corrected from slope to true vertical.
Hl	Hc + Ho . True vertical instrument height.

NOTE -

- If you select **Bottom notch**, the minimum slope distance (H_m) that you can enter is 0.300 meters. This is approximately the minimum slope distance that can be physically measured. If the minimum is not low enough, you must measure the true height to the top mark.
- For a 2D or planimetric survey, leave the **Instrument height** field set to null (?). No elevations are calculated. Unless you are using a **Scale only** projection, a project height must be defined in the coordinate system definition. The Origin software needs this information to reduce measured ground distances to ellipsoid distances and to compute 2D coordinates.

Station setup options

Tap **Options** to configure **Station setup** to match the way that you prefer to work.

For other options in this screen, see [To configure the conventional survey style, page 280](#).

Default point names

The **Default point names** option determines the default values for the instrument and the backsight point name fields each time you perform a station setup. If you:

- Always use the same names for your instrument and backsight points, select **Last used**. Use this method if you always use the default instrument coordinates, or if you repeatedly set up on the same known point.
- Are performing a traverse type survey, select **Traversing**. When you start a new station setup, by default, the instrument uses the first foresight point observed from the last station setup for the **Instrument point name**, and the instrument point name used in the last station setup for the **Backsight point name**.
- Want to key in or select the instrument and backsight point names each time you perform a station setup, select **All null**.
- Want the software to automatically increment the instrument point name, select **Auto increment**.

These are only default values. You should select the option that matches your normal workflow. You can override the default values for any particular station setup.

NOTE – Do not confuse the **Last used** option with the **Use last** survey menu option. The **Last used** option applies to a new station setup. The last values are used even across different jobs. The **Use last** menu option reinstates the last station setup. No new station setup is performed.

Default heights

The **Default heights** option determines the default values for the **Instrument height** and **Backsight point height** fields each time you perform a station setup.

- If you always use the same heights for your instrument and backsight points, select **Last used**. This option is available only if you set the **Default point names** option to **Last used**.
- If you are using a traverse kit (so that the last measured foresight and instrument heights can be used as the new instrument and backsight heights), select **Move forward**. This option is available only if you set the **Default point names** option to **Traversing**.
- If you want to key in a new instrument and backsight height for each station setup, select **All null**.

Default instrument coordinates

If the instrument point does not exist, the default instrument coordinates are used. This is particularly useful if you work in a local coordinate system, and always set up your instrument on coordinate (0,0,0) or (1000N, 2000E, 100EI), for example.

If you leave the **Default instrument coordinates** set to null, you can key in coordinates for instrument points that do not exist when you perform a station setup.

NOTE – If you always set up your instrument on a known point then leave the **Default instrument coordinates** field set to null. This ensures that you do not accidentally use the default value if you incorrectly enter the name of the instrument point name.

Default azimuth

This value is used only if an azimuth cannot be computed between the instrument and backsight points.

NOTE – Always set up your instrument on a known point, and use a known azimuth, then leave the **Default instrument coordinates** and **Default azimuth** fields set to null. This ensures that you do not accidentally use default values if you incorrectly enter the name of the instrument and/or the backsight point names.

Measure backsight

The software normally expects you to measure a backsight point to orient your survey. If your survey practice does not require you to measure to the backsight, clear the **Measure backsight** check box. The software automatically creates a virtual backsight, Backsightxxxx (where xxxx is a unique suffix, for example, Backsight0001), using the current instrument orientation as the azimuth.

Station setup scale factor

When you enable the **Advanced Geodetic** check box in the **Cogo settings** screen, you can apply an additional scale factor to every conventional station setup. All measured horizontal distances are adjusted by this scale factor. To configure the scale factor settings, select **Options** during a station setup, station setup plus, or resection.

This station setup scale factor can be Free (computed) or Fixed. If you have chosen to compute a station setup scale factor, you must observe at least one distance to a backsight during the station setup so that a scale factor can be calculated.

You can also apply a **Neighborhood adjustment** to all conventional foresight observations made from a Station setup plus or Resection, and to all GNSS observations made in a job that has a valid site calibration. See [Neighborhood adjustment](#).

Station setup plus, resection, and rounds options

Rounds options control the order in which observations are taken, and how many observations are made when measuring rounds.

To configure these settings, tap **Options** in the **Station setup plus**, **Resection**, or **Measure rounds** screen.

TIP – The software saves these settings separately for **Station setup plus**, **Resection**, and **Measure rounds** measurements, so you can configure them independently. To use the same settings across all measurement types, tap **Options** in each screen and configure the settings per your requirements.

Face order

- **Face 1 only** – observations are taken only on face 1
- **Face1...face 2...** – all face 1 observations are taken to all points and then all face 2 observations are taken to all points
- **Face 1/face 2...** – face 1 and then face 2 observations are taken to the first point, face 1 and then face 2 observations are taken to the next point, and so on

Observation order

When the **Face order** is set to **Face 1...face 2...**, set the **Observation order** to:

- **123...123** – to take observations on face 2 in the same order as the observations on face 1
- **123...321** – to take observations on face 2 in the reverse order to the observations on face 1

When the **Face order** is set to **Face 1 only** or **Face 1/face 2...**, set the **Observation order** to:

- **123...123** – to take each round of observations in the same order
- **123...321** – to take every alternate round of observations in the opposite order

Sets per point

This option is not available during **Station setup plus** or **Resection**.

This option can be used to measure multiple sets of face 1 observations, or face 1 and face 2 observations to a point per round of observations. The maximum number of sets of observations per point per round is 10.

NOTE – Before using this option make sure this data collection technique matches your QA/QC requirements.

If **Face order** is set to collect face 1 and face 2 observations, the **Sets per point** was set to 3, and the **Number of rounds** was set to 1, then the total number of observations to each point would be; $2 \times 3 \times 1 = 6$. Setting the **Sets per point** option to a number greater than 1 enables you to collect more than one set of observations to a point with only one visit to that location.

Number of rounds

Enter the number of times the software works through the rounds list and takes observations to each point in the list.

Automate rounds

The **Automate rounds** option is available for Spectra Geospatial servo total stations. When you select **Automate rounds**, the instrument automatically completes all rounds after the rounds list has been built.

NOTE - Targets observed without Autolock are automatically paused.

When using **Automate rounds** you can configure the software to automatically skip obstructed foresight targets.

Monitoring results between automated rounds

When **Automated rounds** is enabled, monitoring controls are also enabled. Enter a value for the time delay between automated rounds. A 3-second delay between automated rounds enables you to check the standard deviations before the next round starts automatically.

With Spectra Geospatial servo total stations, you can automatically measure to non-active targets. To do this, select the **Auto-measure passive targets** check box.

NOTE - If you select the **Auto-measure passive targets** check box, manually observed targets are automatically measured rather than paused. If you clear this check box, the software prompts you to aim the instrument to non-active targets.

Skipping obstructed points

If a target has been blocked, the instrument tries to measure the point for up to 60 seconds. After 60 seconds has elapsed it skips the observation and moves to the next point in the rounds list.

If the instrument cannot measure the point and **Skip obstructed foresights** is **enabled**, it skips that point and moves onto the next point in the rounds list.

If the instrument cannot measure the point and **Skip obstructed foresights** is **disabled**, a message appears after 60 seconds to indicate that the prism is obstructed. The software continues to try to measure to the target until instructed to skip the point. To do this, tap **OK** for the obstructed prism message, tap **Pause** and then tap **Skip**.


If a point is skipped in one round, all subsequent rounds continue to prompt for observations to that point.

When one observation from a pair of face 1 and face 2 observations has been skipped, the unused observation is automatically deleted. Deleted observations are stored in the job and can be restored ("undeleted"). Restored observations can be processed in the office software, but are not automatically used to recompute Mean Turned Angle (MTA) records in the Origin software.

Backsight observations cannot be skipped using the **Skip obstructed foresights** option.

To complete a station setup plus

Select **Station setup plus** to make observations to one or more backsight points, or to obtain better quality control of your observations.

1. Tap  and select **Measure / <Style name> / Station setup plus**.
 - a. When prompted, use the electronic level to level the instrument. Tap **Accept**.
 - b. Set the corrections associated with the instrument.
If the **Corrections** screen does not appear, tap **Options** and enter the correction information.
 - c. Enter the instrument point name and the instrument height. See Station coordinates and instrument height, page 299.
 - d. Tap **Options** to configure the number of observations to make and the order in which to take them. Make sure the **Face order** setting is correct. You cannot change this setting after you start measuring points. See Station setup plus, resection, and rounds options, page 303.
 - e. Tap **Accept**.
2. To measure the first point:
 - a. Enter the first **Point name** and the **Code**, if required.
 - b. By default the **Backsight** check box is selected.
If the station setup point is a traverse station that you plan to adjust, **do not** measure more than one backsight point. Clear the **Backsight** check box for any additional points so that they are measured as foresights.
 - c. Enter the **Azimuth**.
 - d. Choose an option in the **Method** field.
 - e. Enter the **Target height**.
Make sure the target height and prism constant values are correct as you measure each point. You cannot change these values in subsequent rounds.
 - f. Sight the target and then tap **Measure**.
If you are using a FOCUS 50 and the measurement is likely to be interrupted, for example, when measuring in traffic, select the **Interrupted target measurement** check box in the **Target controls** screen.

The software shows the residual information for the observation.

3. Use the information in the **Residuals** screen to review the quality of the observations and remove poor observations. See To review observation residuals and setup results, page 309.
4. To observe more points, tap **+Point**.

To include foresight points during station setup plus, clear the **Backsight** check box. Foresight points do not contribute to the station setup result.

5. To take further measurements to points already measured (that is, measure rounds of observations):
 - a. Tap **End face**.
 - b. If you are using a servo or robotic instrument to measure a known (coordinated) point, tap **Turn**. Alternatively, to automatically turn a servo instrument to the point, set the **Servo auto turn** field in the survey style to **HA & VA** or **HA only**.

NOTE – When using servo or robotic instruments, check that the instrument has sighted the target accurately. When measuring a DR target with a Spectra Geospatial total station with automated rounds, the software pauses to allow you to sight to the target. You **must** manually sight and measure the point to continue.
 - c. When the end of the rounds list is reached, if points have been skipped the software prompts you to return to observe the points that were skipped during that round. The observations can be skipped again if required.
6. When you have completed all observations, tap **Results** to view the station setup results.
7. Tap **Store**.

To complete a resection


In a conventional survey, the resection function is used to perform a station setup and determine coordinates for an unknown point by making observations to known backsight points. The Origin software uses a least-squares algorithm to compute the resection.

A resection needs at least one of the following:

- Two angles and distance observations to different backsight points
- Three angles-only observations to different backsight points

NOTE – Because the resection calculation is a grid calculation, you can only use backsight points that can be viewed as grid coordinates. Do not compute a resection point and then change the coordinate system or perform a site calibration. If you do, the resection point will be inconsistent with the new coordinate system.

To complete a resection

1. Tap  and select **Measure / <Style name> / Resection**.
 - a. When prompted, use the electronic level to level the instrument. Tap **Accept**.
 - b. Set the corrections associated with the instrument.
If the **Corrections** screen does not appear, tap **Options** and enter the correction information.
 - c. Enter the instrument point name and the instrument height. See Station coordinates and instrument height, page 299.
 - d. To compute the station elevation, select the **Compute station elevation** check box

For a 2D or planimetric survey, clear the **Compute station elevation** check box. No elevations are calculated. To determine the elevation of a point with known 2D coordinates, once you have completed a station setup, see [To determine the station elevation, page 313](#).

- e. Tap **Options** to configure the number of observations to make and the order in which to take them. Make sure the **Face order** setting is correct. You cannot change this setting after you start measuring points. See [Station setup plus, resection, and rounds options, page 303](#).
 - f. Tap **Accept**.
2. To measure the first point:
- a. Enter the first **Point name** and the **Code**, if required.
 - b. By default the **Backsight** check box is selected.

If you perform a resection or station setup plus while running an [integrated survey](#), you can measure backsight points with GNSS. To do this, tap the **Options** softkey and then select **Auto measure GNSS**. Enter an unknown point name in the point name field. The software prompts you to measure the point with GNSS using the specified point name. The **Measure** softkey shows both a prism and a GNSS symbol. The Origin software first measures the point with GNSS and then measures with the conventional instrument. Make sure that you have a site calibration loaded when combining conventional and GNSS measurements.
 - c. Choose an option in the **Method** field.
 - d. Enter the **Target height**.

Make sure the target height and prism constant values are correct as you measure each point. You cannot change these values in subsequent rounds.
 - e. Sight the target and then tap **Measure**.

If you are using a FOCUS 50 and the measurement is likely to be interrupted, for example, when measuring in traffic, select the **Interrupted target measurement** check box in the **Target controls** screen.

The software shows the residual information for the observation.

3. Measure further points.
- To include foresight points during station setup plus, clear the **Backsight** check box. Foresight points do not contribute to the station setup result.
- In a conventional survey, when two measurements are completed, or when connected to a GNSS receiver or using a controller with internal GPS, the Origin software can provide navigation information for further points. Tap **Navigate** to navigate to another point.
- When there is enough data for the software to calculate a resected position, the **Resection residuals** screen appears.
4. Use the information in the **Residuals** screen to review the quality of the observations and remove poor observations. See [To review observation residuals and setup results, page 309](#).
 5. To observe more points, tap **+Point**. Repeat steps 2 and 3 to add more points to the resection.
 6. To take further measurements to points already measured (that is, measure rounds of observations):

- a. Tap **End face**.
- b. If you are using a servo or robotic instrument to measure a known (coordinated) point, tap **Turn**. Alternatively, to automatically turn a servo instrument to the point, set the **Servo auto turn** field in the survey style to **HA & VA** or **HA only**.

NOTE – When using servo or robotic instruments, check that the instrument has sighted the target accurately. When measuring a DR target with a Spectra Geospatial total station with automated rounds, the software pauses to allow you to sight to the target. You **must** manually sight and measure the point to continue.

- c. When the end of the rounds list is reached, if points have been skipped the software prompts you to return to observe the points that were skipped during that round. The observations can be skipped again if required.
7. When you have completed all observations, tap **Results** to view the resection results.
8. Tap **Store**.

TIP – You can use the resection function to perform an **eccentric station setup**, where the station setup is performed in view of a nearby control point and in view of at least one backsight point. For example, use this setup if you cannot set up over the control point, or you cannot see any backsight points from the control point. An eccentric station setup needs at least one angles and distance observation to a nearby control point and one angles-only observation to a backsight point. Additional backsight points can be observed during an eccentric station setup. You can measure backsight points with angles-only observations or with angles and distance observations.

Helmert transformation for resection

When you enable the **Advanced Geodetic** check box in the **Cogo settings** screen, **Resection** has an additional computation method called Helmert transformation. To perform a resection using a Helmert transformation, select **Options** during a **Resection**, and then set the **Resection type** to **Helmert**.

NOTE – The standard resection type is the same as the resection method used when Advanced Geodetic is not enabled.

For a Helmert transformation, you must measure distances to the backsight points. The resection calculation will not use a backsight point without a distance measurement.

For more information on Helmert transformations, refer to the **Resection Computations in Spectra Geospatial Origin Reference Guide**, which can be downloaded from the [PDF guides page](#) of the Trimble Access Help Portal.

To review observation residuals and setup results

Use the observation residual information shown after a station setup plus or resection to review the quality of the observations and remove poor observations. A residual is the difference between the known position and the observed position of the backsight point(s).

NOTE –

- During a station setup plus or resection, no observations are stored to the job until you store the station setup.
- A foresight point that does not yet exist in the database has null residuals in the **Residuals** screen.

To view the standard deviations of the observations for each point, tap **Std Dev**. The **Std Dev** softkey is available only after all rounds are complete.

Station setup and resection results

To view the station setup results, tap **Results**.

To store the station setup, tap **Results** and then tap **Store**.

To view the details of an observation, select it and then tap **Details**.

To observe more points, tap **+ Point**.

To navigate to a point, tap **+ Point** and then tap **Navigate**.

TIP – In a conventional only survey, when one measurement is completed, the Origin software can provide navigation information for further points, and a **Navigate** softkey is available. Tap **Navigate** to navigate to another point. If connected to a GNSS receiver or using a controller with internal GPS, the Origin software can provide navigation information for any point, and a **Navigate** softkey is available. Tap **Navigate** to navigate to another point.

Point residuals

To view the mean observed position and the individual observations for a point in the **Point residuals** screen, tap the point.

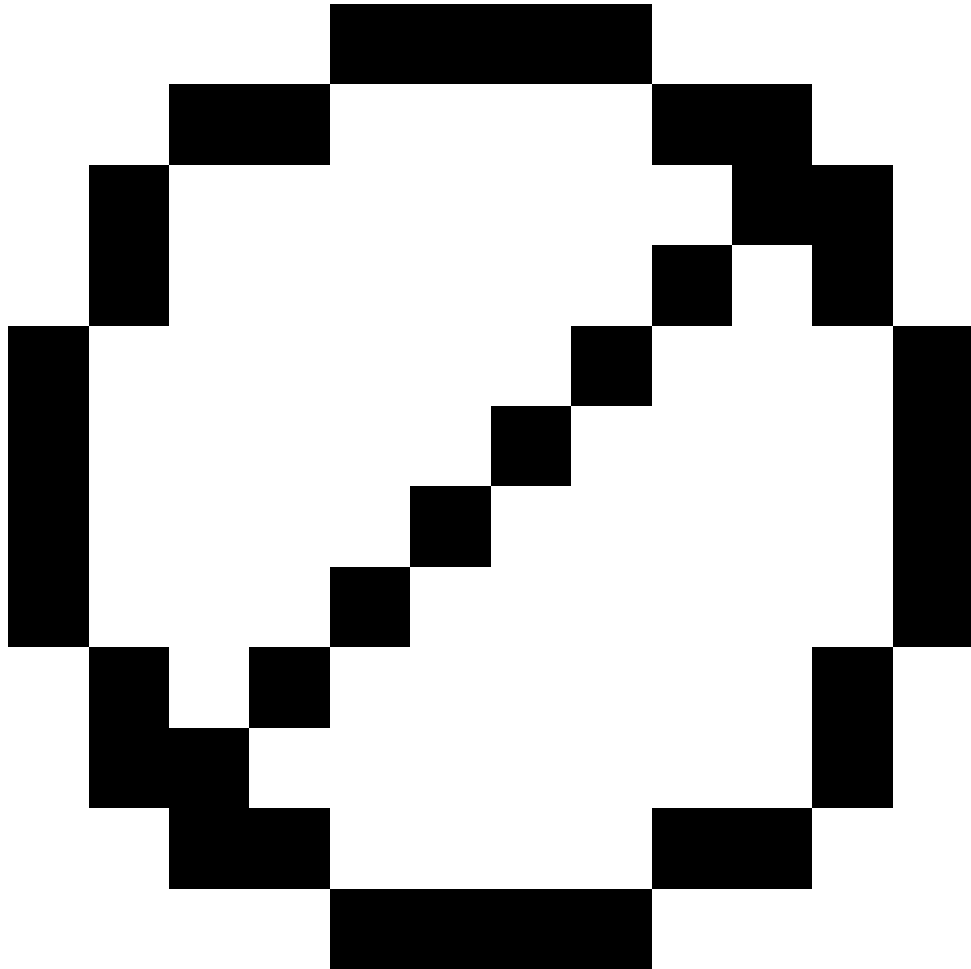
If the residuals for an observation are high, it may be better to disable the observation from the round.

To disable an observation, highlight it and then tap **Use**. Whenever you make a change in the **Point residuals** screen, the mean observations, residuals, and standard deviations are recalculated. If you have measured face 1 and face 2 observations to a point, when you disable the observation for one face, the corresponding observation on the opposite face is automatically disabled.

WARNING – If you turn off some (but not all) of the observations to a backsight point in a resection, the solution for the resection is biased and there is different number of observations to each backsight point.

NOTE – If the current station setup has a single backsight only, the **Use** softkey is not available for observations to the backsight. Observations to the backsight are used to orientate observations and cannot be deleted.

If you remove observations, the



icon appears. If you skipped observations in a round, no icon appears.

Point details

The **Point details** screen shows the mean observation to the point.

If required, you can change the target height and prism constant for all observations to that point.

if you are viewing the residuals for a resection, you can change the components that are used for the resection calculation if you:

- selected the compute station elevation option
- the observed point has a 3D grid position


To do this, tap **Used for** and select:

- H (2D) to use only the horizontal values for that point in the calculation
- V (1D) to use only the vertical values for that point in the calculation
- H,V (3D) to use the horizontal and vertical values for that point in the calculation

To create a reference line

Select **Refline** to create a baseline by taking measurements to two known or unknown baseline definition points. All subsequent points are stored relative to the baseline as a station and offset.

NOTE – Because the refline calculation is a grid calculation, you can only use existing points that can be viewed as grid coordinates. You can use 2D and 3D grid coordinates to define the baseline.

1. Tap  and select **Measure / <Style name> / Refline**.
 - a. When prompted, use the electronic level to level the instrument. Tap **Accept**.
 - b. Set the corrections associated with the instrument.
If the **Corrections** screen does not appear, tap **Options** and enter the correction information.
 - c. Enter an **Instrument point name** and **Instrument height**, if applicable.
 - d. Tap **Accept**.
2. Enter the **Point 1 name**, and **Target height**.
If point 1 does not have known coordinates, default coordinates are used. Tap **Options** to change the default coordinates.
3. Tap **Meas 1** to measure the first point.
4. Enter the **Point 2 name**, and **Target height**.
You can use a point with known coordinates for point 2 only if point 1 has known coordinates. If point 1 does not have known coordinates, default coordinates are used. Tap **Options** to change the default coordinates.
5. Enter the **Refline azimuth**.
If point 1 and point 2 have known coordinates the value shown is the computed refline azimuth, otherwise the value is 0°.
6. Tap **Meas 2** to measure the second point.
The instrument point coordinates are shown.
7. Tap **Store**.


The software creates a baseline between the two points, using the naming scheme "<Point 1 name>-<Point 2 name>". You can enter the **Start station** and **Station interval**.

NOTE – If the line between the two points does already exist, the existing station is used and cannot be modified.

To determine the station elevation

In a conventional survey, use the station elevation function to determine the elevation of the instrument point by making observations to points with known elevations.

NOTE – The station elevation calculation is a grid calculation. Use only points that can be viewed as grid coordinates. To calculate the station elevation you need at least one angles and distance observation to a known point, or two angles only observations to different points.

1. Start a survey and perform a station set up.
2. Tap  and select **Measure / Station elevation**.
The instrument point details entered during the station setup are shown.
3. If you did not enter the instrument height during station setup, enter the instrument height now. Tap **Accept**.
4. Enter the point name, code, and target details for the point with the known elevation.
5. Tap **Measure**. Once the measurement is stored, the **Point residuals** screen appears.
6. In the **Point residuals** screen, tap:
 - **+ Point** to observe additional known points
 - **Details** to view or edit point details
 - **Use** to enable or disable a point
7. To view the station elevation result, tap **Results** in the **Point residuals** screen.
8. Tap **Store**.
Any existing elevation for the instrument point is overwritten.

Targets

You can configure the details of the target at any point during a conventional survey.

Target 1 and **Target DR** are already created for you. These targets can be edited but cannot be deleted.

You can create up to nine non-DR targets.

TIP – Configure settings for searching for, locking onto, and handling obstructed targets in the **Target controls** screen.


To change targets

When connected to a conventional instrument the number next to the target icon in the status bar indicates the target currently in use.

To change targets, tap the target icon in the status bar or press **Ctrl + P** and then tap the target to use or press the number corresponding to the target in the **Targets** screen.


When connected to a DR instrument, **Target DR** is used to define the DR target height and prism constant. To enable DR, select **Target DR**. To disable DR and return the instrument to its last state, select target 1–9.

To change the target height

1. Tap the target icon in the status bar.
2. Tap in the **Target height** field for the target you want to edit.
3. Edit the **Target height**.
4. To change the **Target height** measurement method, tap  and select the appropriate option for your survey setup. See [Target height](#).
5. Tap **Accept**.

If required, you can edit target height records for observations already stored in the job. See [To edit antenna and target height records](#), page 665.

To add a target

1. Tap the target icon in the status bar.
2. In the **Targets** screen, tap **+**. The **Target properties** screen for the selected target appears.
3. Enter the **Target height**.
4. To change the **Target height** measurement method, tap  and select the appropriate option for your survey setup. See [Target height](#).
5. Select the **Prism type**.
6. If required, enter the **Display name** for the target. The number of the target is appended to the display name.
7. Tap **Accept**.

The software returns to the **Targets** screen, with the new target selected as the target in use.

8. Tap **Accept**.

TIP – To edit target properties, you must change to that target. Then open the **Targets** screen and tap **Edit**.

Target height

The value you enter in the **Target height** field depends whether you are measuring:

- the true height of the prism
- to the notch on a traverse prism base

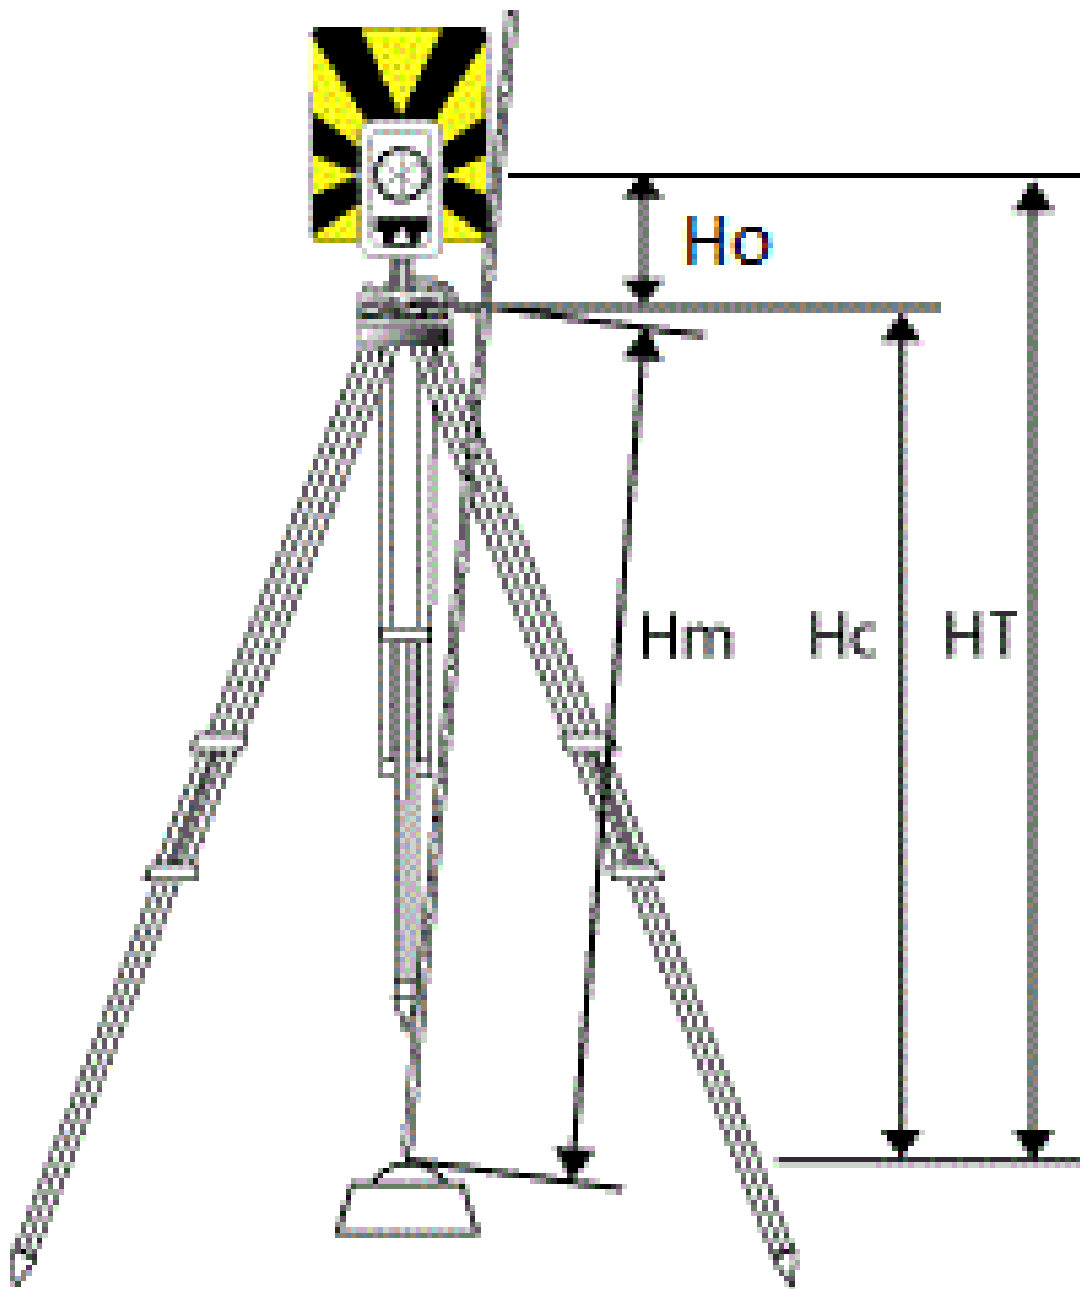
True height

The default **Target height** measurement method is to measure the true height of the prism. Measure to the center of the prism.

Notch on a traverse prism base

When measuring the target height to the notch on a traverse prism base, tap **▶** in the **Targets** screen and select **S notch**. The **S notch** corresponds to the **Bottom notch** on a Spectra Geospatial FOCUS instrument.

The Origin software corrects the measured slope value to true vertical and adds the appropriate offset value to calculate the true vertical height to the center of the prism.



Value	Definition
Ho	Offset from the notch to center of the prism. For the S notch this value is 0.158 m (0.518 sft).
Hm	Measured slope distance.
Hc	Hm corrected from slope to true vertical.
HT	True vertical target height. Hc + Ho .

NOTE – If you select **S notch**, the minimum slope distance (Hm) that you can enter is 0.300 meters. This is approximately the minimum slope distance that can be physically measured. If the minimum is not low enough, you must measure the true height to the center of the prism.

Prism constant

When you select a Spectra Geospatial prism in the **Prism type** field of the **Target properties** screen, the prism constant is automatically defined. If you select **Custom** in the **Prism type** field, you must manually enter the prism constant.

Selecting the correct prism type and entering the correct prism constant ensures that the appropriate correction values are applied to the slope distance and vertical angle for geocentric offset and prism constant. The correction is only significant when observing steep vertical angles.

Enter the **Prism constant** in millimeters (mm). Enter a negative value if the prism constant is to be subtracted from measured distances.

When using a Spectra Geospatial total station, all corrections are applied in the Origin software.

For some third-party instruments, the Origin software checks to see if a prism constant has been applied by the instrument **and** the software. When you select **Station setup**, status line messages show what has or has not been checked.

If the software cannot check the setting on the conventional instrument, but:

- If there is a prism constant set on the instrument, make sure that the prism constant in the software is set to 0.000.
- If there is a prism constant set in the software, make sure that the prism constant in the instrument is set to 0.000.

If required, you can edit prism constant records for observations already stored in the job using **Review job** or **Point manager**.

Target control settings

Configure settings for locking onto targets in the **Target controls** screen.

To access the **Target controls** screen, tap the Instrument icon in the status bar and then tap and hold on the **Autolock** or **Search** button.

The fields shown in the **Target controls** screen depend on the selected **Target lock** method and the connected instrument.

Target lock

Select the method for locking onto the target. See [Enabling Autolock, page 320](#).

Autolock method

Select **Snap to target** to automatically lock on to a remote target if one is detected.

Autosearch

Select **Autosearch** to automatically perform a horizontal search when lock is lost to a remote target.

LaserLock

In normal use the software does not allow both the laser and Autolock to be switched on at the same time. For example, if you switch on the laser when Autolock is switched on then the laser switches off. If you want to use the laser again then when you switch on the laser Autolock switches off.

The LaserLock method enables you to alternate between using the laser and Autolock automatically. This is especially useful when locating a prism in dark environments.

To use LaserLock, enable the **Laserlock** checkbox in the **Target controls** screen and switch on the laser by tapping the **Laser** tile in the **Instrument functions** screen. Use the laser to help you locate the prism. When you measure to the prism the software automatically disables the laser and switches on Autolock. When the measurement is complete the software switches off Autolock, and switches on the laser ready to help locate the next prism.

Predictive tracking time

Use the **Predictive tracking time** setting to pass behind a temporary obstruction and have the instrument continue to turn, based upon the target's horizontal trajectory, when lock to the prism is lost.

Instrument behavior

If the trajectory is consistent and the prism re-appears from behind the obstruction within the defined **Predictive tracking time** interval, the instrument will be aimed directly at the prism and lock is automatically regained.

If the prism does not reappear after the specified time interval, the software reports that the target is lost and then takes corrective actions based on the current settings. The instrument turns to where the target was last seen and then acts as follows:

- If Autosearch is **On** and the **Autolock method** is set to **Snap to target**, the instrument locks on to any target in the field of view.
If there is no target, a search starts based on your search window settings
- If Autosearch is **On** and the **Autolock method** is set to **Snap disabled**, the instrument ignores any visible targets and starts a search based on your search window settings.
- If Autosearch is **Off** and the **Autolock method** is set to **Snap to target**, the instrument locks on to any target in the field of view or waits until a target comes into the field of view and then locks onto it.
- If Autosearch is **Off** and the **Autolock method** is set to **Snap disabled**, the instrument ignores any targets in the field of view and does not start any search until you prompt it to do so.

Recommended interval

- For standard robotic usage, Spectra Geospatial recommends the default setting (1 s).
This enables you to pass behind anything small blocking the line of sight between the instrument and the target (for example, trees, electrical posts, or vehicles) and then automatically regain lock.
- In environments with a number of reflective objects, you could set the predictive tracking time to 0s.
With these settings, you are immediately informed if the line of sight to the correct target is obstructed. You can then ensure that you regain lock to the correct target.
- In environments where your target may be blocked for a few seconds at a time, you can use settings of 2 s or 3 s.
This enables you to pass behind larger objects blocking the line of sight between the instrument and the target (for example, small buildings) and then automatically regain lock.

If the instrument fails to regain lock onto the moving target, it returns to the location where it first lost lock and the predictive tracking began.

Search window

The search window settings control the size and center of the window the software uses when searching for targets.

Configure the tolerance window **Horizontal range** and **Vertical range**.

Autocentered search window

Select **Autocentered search window** to use the current horizontal and vertical angle of the instrument to set the center of the search window, and the horizontal and vertical range to calculate the extents of the

window. These extents are sent to the instrument each time it performs a search.

NOTE – If the **Autocentered search window** check box is not shown, then the software behaves as if the check box is selected.

Custom search window

To configure the top left and bottom right extents of the search window:

1. Clear the **Autocentered search window** check box.
2. Tap **Set win**.
3. Aim the instrument to the top left corner of the search window. Tap **OK**.
4. Aim the instrument to the bottom right corner of the search window. Tap **OK**.

GPS search

To use a GPS/GNSS receiver to help point the instrument when searching for targets, see [GPS Search, page 321](#).

Interrupted target measurement

If the measurement is likely to be interrupted, for example, when measuring in traffic, enable **Interrupted target measurement** and enter the **Interrupt timeout** value. See [Interrupted target measurement, page 323](#).

Enabling Autolock

Spectra Geospatial instruments provide Autolock technology for locking onto and tracking remote moving targets.

To enable Autolock

1. Configure the **Target lock** method and related settings in the **Target controls** screen.
2. Tap the Instrument icon in the status bar to open the **Instrument functions** screen.
3. Tap the button for the configured target lock method to enable it. The **Autolock** button is yellow when enabled.

A search is automatically performed if a measurement is initiated when Autolock is enabled but the instrument is not locked to the target.

When **GPS search** is ready, a GPS-aided search is performed instead of a standard search. To perform a standard search, pause GPS Search, or tap **Search** in the **Joystick** screen.

GPS Search


During a **robotic survey**, if the instrument loses lock to the target and the software is connected to a GNSS receiver, you can use the GPS/GNSS receiver to help point the instrument to the target.

By default, GPS Search is enabled when Origin is:

- connected to a Spectra Geospatial GNSS receiver and running an integrated survey
- running on a controller with internal GPS


NOTE – When using a controller with internal GPS, a connected GNSS receiver is always used in preference to the internal GPS.

TIP – To connect the controller to a third-party auxiliary GNSS receiver, see [Auxiliary GPS settings, page 343](#).

If the total station is set up in terms of the defined projection and datum, then GPS Search is ready as soon as the station setup is complete. When GPS Search is ready, the message **GPS Search ready** appears in the status line, and the target icon displays a satellite icon above the prism .

If you do not have a fully define coordinate system, or if you are using a custom auxiliary GNSS receiver, you will need to configure GPS Search before you can use it. You can use GPS Search when connected to an auxiliary GNSS receiver that is outputting NMEA GGA messages at 1 Hz through a serial or Bluetooth port to the controller.

To configure GPS search settings

1. Start a robotic survey.
2. Tap  and select **Instrument / Target controls**.
3. In the **GPS Search** group, set the **On** switch to **Yes**.
4. Set the **Enable 3D** check box as required.
 - If **3D** is enabled, a 3D GPS Search position is computed, and the instrument can turn to the point both horizontally and vertically.

If the connected GNSS receiver is initialized in an RTK survey, or if SBAS is available, you can enable **3D** because the GNSS heights from the receiver should be accurate enough to turn the instrument's vertical angle.
 - If **3D** is disabled, the instrument can only turn horizontally to the GPS Search position.

If the connected GNSS receiver is producing autonomous positions, or if SBAS is not available, Spectra Geospatial recommends that you disable **3D** to prevent incorrect GNSS heights causing inaccurate turning of the vertical angle.

TIP – In an integrated survey, the **Select data source** is automatically set to **Spectra Geospatial GNSS** and the **3D** check box is selected by default.

5. Make sure the value in the **Select data source** is correct. If the software is connected to:
 - A Spectra Geospatial GNSS receiver, select **Spectra Geospatial GNSS**.
 - The controller's internal GPS receiver, select **Internal GPS**.
 - Another type of GNSS receiver, select **Auxiliary GPS**.
6. Make sure the value in the **Receiver type** field is correct. If it is not, tap the **Aux** softkey and then configure the **Auxiliary GPS** settings for the internal or custom receiver. See [Auxiliary GPS settings, page 343](#).
7. Tap **Accept**.

GPS search is now configured. The [relationship between the GNSS positions and local positions](#) must be resolved before you can use GPS search.

Resolving the relationship between GNSS positions and local positions

If you have a **fully defined coordinate system**, then an accurate relationship between the GNSS positions and local positions already exists using the coordinate system definition. The software assumes that the total station is set up in terms of the defined projection and datum, and GPS Search is ready as soon as the station setup is complete. If your total station is not set up in terms of the defined coordinate system then using GPS Search will cause the total station to turn incorrectly.

If you do **not** have a defined coordinate system, you must resolve the relationship between GNSS positions and local positions before GPS Search is ready. Once a station setup is complete, the Origin software uses the NMEA positions from the GNSS receiver and the angles tracked by the robotic instrument to determine the relationship between the two positioning systems. GPS Search computes the relationship independently of the job's coordinate system settings.

To determine the relationship, make sure that the GNSS receiver has a clear view of the sky and then, with the instrument locked to the prism, move the pole around the instrument until the relationship between the GNSS positions and local positions is resolved. A minimum of five positions at least five meters apart and at least ten meters from the instrument are required. If the geometry and GNSS positional accuracy is poor, you need more than five positions to resolve the relationship. Poor GNSS positional accuracy may result in an inaccurate relationship being computed.



TIP – If you are going into a bad GNSS environment for an extended period of time, tap pause **||** to pause GPS Search and stop new positions being added into the GPS Search solution. Tap play **▶** to resume GPS Search and start adding points into the GPS Search solution again.

NOTE –

- To view the GNSS status, tap **GPS** on the **Target controls** screen. Alternatively, from the GNSS status screen, tap and hold on the target icon.
- When GPS search has good data, it can detect bad data and exclude it from its computations. However, if there are more bad positions than good positions, it is difficult for GPS Search to detect and exclude bad positions. Too much bad data in the computations may prevent GPS Search from becoming ready. If this occurs, move to a better GNSS environment and then tap **Reset** to restart the GPS Search.
- If you perform a calibration or change the coordinate system settings, the existing relationship between the GNSS positions and local positions is lost and must be recomputed.

Using GPS Search

The software automatically uses GPS Search when searching for the target. If GPS Search is ready, the instrument turns to the GPS Search position. With a good GNSS position, for example from a Spectra Geospatial SP85 receiver with an RTK fixed solution, and when snap is enabled, the instrument should snap to the target immediately. If the instrument does not snap immediately, it performs a search before locking to the target.

When using GPS Search with a Spectra Geospatial receiver, a cross indicates the position of the GNSS receiver. When using any other receiver and a GNSS position is available, a satellite icon appears in the map. If a GPS Search solution is available, a black satellite icon appears . If a GPS search solution is not available, a red satellite icon appears . To turn to the GNSS position in a conventional survey, make sure that there is nothing selected in the map and then tap and hold briefly in the map. From the menu that appears, select **Turn to GNSS** to turn the instrument horizontally to the GNSS position.

Tap **Search** in the **Joystick** screen to perform a normal search even when GPS Search is ready. Use this when you need to search for a target without using the GPS Search position, such as searching for a backsight target.

To perform a GPS-aided search from the **Joystick** screen, tap .

NOTE – As soon as the instrument locks on to the target, the **Joystick** screen closes.

To perform a standard search throughout the Origin software, pause GPS Search at any time.

Interrupted target measurement

If the measurement is likely to be interrupted, for example, when measuring in traffic, select the **Interrupted target measurement** check box in the **Target controls** screen. The instrument continues to measure to the target, even if there are prism obstructions, up to the **Interrupt timeout** value.

During an automated measurement, if the instrument fails within the **Interrupt timeout** period the instrument moves back to the target and attempts the measurement again.

Spectra Geospatial recommends enabling this option when:

- performing a station setup plus
- performing a resection
- measuring rounds

NOTE – Target interrupted measurement is optimized for instruments with a DR Plus EDM.

Instrument functions and settings

The **Instrument** menu provides information about the conventional instrument connected to the controller, and is used to configure the settings for the instrument. Available options depend on the type of instrument that is connected.

NOTE – If a GNSS receiver is also connected and you are performing an integrated survey, additional items appear in the **Instrument** menu. For more information, see [Receiver functions and settings, page 424](#).

Instrument functions

To access the **Instrument functions** screen, tap the instrument icon in the status bar.

The functions available depend on the instrument that the controller is connected to. A yellow button indicates the function is enabled.

TIP – When in the **Instrument functions** screen, you can use the controller keypad to enter the keypad character (**1-9, 0, -** or **.**) indicated on the tile to enable/disable the function or open the appropriate screen. If you have configured a function key on the controller as a shortcut to an instrument function, you can press the configured function key when viewing any screen in the software.

EDM and laser pointer controls

To switch EDM measurement mode, tap the first button in the **Instrument functions** screen to cycle through the available modes.

- For most Spectra Geospatial instruments, when you select:
 - **STD**, the instrument is in **EDM Standard mode**, where it averages the angles while a standard distance measurement is taken.
 - **FSTD**, the instrument is in **EDM Fast Standard mode**, where it averages the angles while a fast standard measurement is taken.
 - **TRK**, the instrument is in **EDM Tracking mode**, where it constantly measures distances and updates them in the status line.

To enable or disable the laser pointer, tap **Laser**. To configure EDM settings, tap and hold the **Laser** button.

To enable or disable DR mode, tap **DR**. To configure EDM settings, tap and hold the **DR** button.

For more information, see [EDM settings, page 326](#).

Instrument controls

- To view the **Joystick** screen, tap **Joystick**. See [Joystick, page 329](#).
- To view the **Turn to** screen, tap **Turn to**. See [Turn to, page 329](#).
- To change the instrument face, tap **Change Face**. See [To measure points in two faces, page 294](#).

Target controls


- To enable the tracklight, tap **Tracklight**. To configure Tracklight settings, tap and hold the **Tracklight** button. See [Tracklight, page 328](#).
- To turn on target lock, tap **Autolock**. See [Target control settings, page 317](#).
- To search for the target, tap **Search**. To configure the search window, tap and hold the button. See [Target control settings, page 317](#).

Instrument setup

- To view the **Electronic level** screen, tap **Level**. See [Electronic level, page 325](#).
- If the instrument is a FOCUS 50:
 - To start operating the instrument from the controller, tap **Start Robotic**. Tap and hold the **Start Robotic** button to view the **Radio settings** tab in the **Connections** screen.
 - To end the survey or disconnect from the instrument, tap **End survey** or **Disconnect**.
- To view the **Survey Basic** screen, tap **Survey Basic**. See [Survey Basic, page 331](#).

Electronic level

The **Electronic level** screen appears automatically when you start a conventional survey. To view the screen at any time:

- Tap the instrument icon in the status bar and then tap and hold the **Level** button.
- Tap  and select **Instrument / Electronic level**.

To level the instrument

1. If the instrument is not level enough in the **Electronic level** screen appears, you may get a tilt error. To bring the electronic level into range, use the tripod legs to level the instrument, using the tribrach

circular bubble as a guide.

2. When the instrument appears level in the tribrach circular bubble, use the footscrews to level the instrument using the **Electronic level** screen as a guide.

WARNING – If accuracy is important, do not disable the compensator. If you do disable the compensator, horizontal and vertical angles in the instrument are not corrected for mis-levelment errors.

3. Tap **Accept**.
4. To perform a compensator calibration after leveling the instrument, tap **Calib**. See [Compensator calibration, page 326](#).

Compensator calibration

Spectra Geospatial recommends that you calibrate the compensator periodically, especially before you take precise measurements.

NOTE – If Origin is running on a FOCUS, detach the FOCUS from the instrument before calibrating the compensator.

1. Level the instrument using the **Electronic level** screen.
2. Tap **Calib**.
3. Tap **Next**.

The instrument slowly rotates through 360°.

When the calibration is complete, a success message appears.


4. Tap **OK**.

If the calibration is unsuccessful, the message **Calibration failed** appears. Tap **Esc**. Check the instrument setup, and re-level the instrument. Repeat the calibration. If it still fails, contact your Spectra Geospatial service provider.

EDM settings

Use the **EDM settings** screen to configure settings for the electronic distance meter in the instrument. The available settings depend on the type of instrument that the controller is connected to.

To view the **EDM settings** screen:

- Tap  and select **Instrument/ EDM settings**.
- Tap the instrument icon in the status bar to view the **Instrument functions** screen and then tap and hold the **Laser** or **DR** button.

Direct Reflex

Set the **Direct Reflex** switch to **Yes** to enable DR mode.

When the EDM is in DR mode, it can measure to non-reflective instruments. When you turn on DR, the software automatically switches to **Target DR**. When you turn off DR, the software returns to the last used non-DR target.

You can also enable DR mode by tapping **DR** in the **Instrument functions** screen, or by changing the target to **Target DR**.

Laser pointer

Select the **Laser pointer** check box to enable the laser pointer. You may need to enable the **Direct Reflex** switch in the **EDM settings** screen to enable DR mode and make the **Laser pointer** check box available.

You can also enable or disable the laser by tapping **Laser** in the **Instrument functions** screen.

TIP – To streamline the process of locating a prism in dark environments, enable the **LaserLock** check box in the **Target controls** screen and switch on the laser by tapping the **Laser** tile in the **Instrument functions** screen. See [Target control settings, page 317](#).

Blink laser

To blink the laser and the tracklight when storing a point measured with DR mode, select the number of times the laser will blink in the **Blink laser** field.

Prism standard deviation / DR standard deviation

To define the acceptable accuracy of a measurement, enter a **Prism standard deviation** or **DR standard deviation** value, depending on the mode the instrument is in. When measuring to diffuse targets the standard deviation is displayed on the status line until the standard deviation satisfies the defined value. Once the standard deviation is satisfied, the measurement is accepted. To accept the measurement before the standard deviation is satisfied, tap **Enter** while the standard deviation is displayed on the status line.

DR minimum and maximum distance

Enter a suitable DR minimum and maximum distance for your survey. Increasing the maximum distance will increase the time that it takes for a measurement to complete, even if the distance being measured is less than the specified maximum. The default maximum distance provides a balance between measurement time and range. Increase the maximum distance if you are working at longer ranges. To restrict the DR measurement range, enter a minimum and maximum distance to avoid a result from a distant or intermittent object.

Long range

Use the long range mode when a strong instrument signal is required for measuring to targets more than one kilometer (about 0.6 miles) away.

Weak signal

To accept measurements at a lower accuracy (that is, below the normal instrument specification), enable **Weak signal**.

10 Hz tracking

Use 10 Hz tracking when a faster update rate is required when using **Tracking mode**.

NOTE -

- This option is only available if you are in both Autolock and Tracking mode. If you select DR or turn off Autolock when tracking, the software will default to normal tracking mode.
- Although tracking is faster the precisions will be null for the stored point.

Tracklight

The tracklight is a visible light that guides the prism operator on the correct bearing.

NOTE - When storing a point measured with DR mode, the tracklight and the laser blink for the number of times set in the **Blink laser** field of the **EDM settings** screen. See [EDM settings, page 326](#).

To turn on or turn off the tracklight:

1. Tap the Instrument icon in the status bar to open the **Instrument functions** screen.
2. Tap **Tracklight**.

To set the speed of the tracklight:

1. Tap and hold the **Tracklight** button in the **Instrument functions** screen.
2. Select the **Enable tracklight** check box.
3. In the **Speed** field, select the required speed.

When **Auto** is selected, the Tracklight flashes fast when the target is locked and slow if there is no target.

 
 
Joystick

If you are operating a robotic instrument at the remote end (target), use the **Joystick** softkey to turn the instrument towards the target when lock has been lost.

1. Tap the Instrument icon in the status bar to open the **Instrument functions** screen.
2. Tap **Joystick**.
3. Tap an arrow on the screen or press the up, down, left, or right arrow keys to turn the instrument.
Tapping a diagonal arrow moves the instrument horizontally and vertically. How far the instrument turns depends on how long the arrow is held down.

TIP – To increase or decrease the turning speed, tap the left (decrease) or right (increase) speed arrows.

4. To fine-tune the position of the instrument, tap the inner arrows. The inner arrows always turn at half of the minimum speed setting.
5. To change the direction tap the change direction button (👤➡️, 👤➡️).
 - When the instrument icon is to the left of the prism icon, the instrument turns as if you are standing behind the instrument.
 - When the instrument icon is to the right of the prism icon, the instrument turns as if you are standing at the pole facing the instrument.
6. To make the instrument locate and lock on to the target, tap **Search**. The instrument starts searching for the target.

When GPS Search is ready, the  softkey is available. To perform a GPS-aided search, tap .

The search results are shown in the status line:

- Target Locked – indicates that the target has been located and tracking locked.
- No Target – indicates that the target was not located.

Turn to

If using a servo or robotic instrument, you can use the **Turn to** options to control how the instrument moves.

1. Tap the Instrument icon in the status bar to open the **Instrument functions** screen.
2. Tap **Turn to**.
3. To turn the instrument:
 - horizontally 90° to the right or left, or 180° tap the appropriate softkey at the bottom of the screen.
 - to a horizontal or vertical angle, select **HA** or **VA** in the **Method** field and then enter the angle in the **Turn to** field.

- to a horizontal and vertical angle, select **HA & VA** in the **Method** field and then enter the horizontal angle in the **Turn to HA** field, and the vertical angle in the **Turn to VA** field.
 - to a specified point, select **Point name** in the **Method** field and then enter or select the point in the **Point name** field, or select the point in the map. If more than one point is selected then the instrument will turn to the last selected point.
 - by distance, select **Distance** in the **Method** field and then enter the distance from your current position to the point where the instrument lost lock. This aids the **Search** option to locate the target when you have lost lock.
4. To make the instrument locate and lock on to the target, tap **Search**. The message "Searching..." appears and the instrument starts searching for the target.
 5. Tap **Turn**. The instrument turns to the angle(s) or point you entered.

To navigate to a point


If the controller is connected to a GNSS receiver, or you are using a controller with internal GPS, you can navigate to a point

- during a conventional survey if you lose lock to the target
- before you start a survey.

NOTE – When using a controller with internal GPS, a connected GNSS receiver is always used in preference to the internal GPS.

The **Navigate to point** function uses the settings in the last used GNSS survey style.

NOTE – If you are using a GNSS receiver that can track SBAS signals, when the radio link is down you can use SBAS positions instead of autonomous positions. To use SBAS positions, set the **Satellite differential field** in the survey style to SBAS.

1. To navigate to a point, you can
 - Select the point in the map. Tap and hold in the map and select **Navigate to point**.
 - Tap  and select **Instrument** or **Receiver / Navigate to point**.
2. Fill out the other fields as required.
3. To change the display mode, tap **Options**. The display options are the same as the display options in the **Stakeout options** screen. See [Stakeout navigation display, page 582](#).
4. Tap **Start**.
5. Use the arrow to navigate to the point, which is shown as a cross. When you are close to the point, the arrow disappears and a bull's-eye symbol appears. A grid also appears and changes scale as you move closer to the target.

When you are on the point, the bull's-eye symbol covers the cross.

6. If required, mark the point.
7. To store the point, tap **Position** and then tap **Store**.

Survey Basic

Survey Basic is available when you connect a controller to a Spectra Geospatial instrument.

You can use it as follows:

- If a job was created with a station setup, then Survey Basic can display raw data, and coordinates based on the station setup in the job.
- If a current station setup does not exist, you can:
 - Make simple distance or angular checks.
 - Define the northing and easting coordinates for the instrument point in Survey Basic, set the horizontal circle and then display coordinates for points observed using Survey Basic.
 - Key in the elevation for the instrument point and then display the elevation for points observed using Survey Basic.
 - Observe to a point with a known reference elevation to compute the instrument elevation and then display the elevation for points observed using Survey Basic.

NOTE – You cannot store measurements in Survey Basic.

Survey Basic functions

To view the **Survey Basic** screen, tap the instrument icon in the status bar and then tap **Survey Basic**.

Tap the ...	to ...
Instrument icon on the status bar	access the Instrument functions screen
Target icon	set or modify the target height
Zero softkey	set the instrument horizontal circle to 0
Set softkey	set the horizontal circle
	set the target height
	set the reference elevation, and compute the instrument elevation
	set the instrument point coordinates, and instrument elevation
	set the instrument height
Options softkey	modify the correction values used in Survey Basic
Clear softkey	reset the angles back to live and clear the slope distance after a

Tap the ...	to ...
	measurement
Display view button	switch the display between HA, VA, SD and HA, HD, VD
Press the ...	to ...
Enter key	measure a distance and fix the horizontal and vertical angles

NOTE - When a survey is running you cannot change:

- the instrument's horizontal circle
- the instrument point coordinates
- correction values

To compute the instrument point elevation from a known reference point

1. Ensure that a current station setup does not exist and then start Survey Basic.
2. Tap **Set** and then enter the **Target height**, **Reference elevation**, and **Instrument height**.
3. If required, enter the **Horizontal angle** and instrument point **Northing** and **Easting**.
4. To measure the reference point, tap **Measure**. The instrument point **Elevation** is computed.
5. To return to Survey Basic, tap **Accept**.

To change the view on the data displayed, tap the arrow button.

NOTE -

- If the target height **or** instrument height is null, the software cannot calculate a VD.
- If target height and instrument height are **both** null, the software assumes zero for both and can compute the VD, but cannot compute the elevation.
- If a station setup is computed using Survey Basic, a scale only projection of 1.0 is used to calculate coordinates.

To compute the inverse distance between two measurements

Inverse provides the ability to display inverse calculations between two measurements. You can configure inverse to compute Radial inverses from a single measurement to one or more other measurements, or Sequential inverses between successive measurements.

1. From the Survey Basic front screen tap **Inverse**. (In portrait mode, swipe right to left along the row of softkeys to view the more softkeys.)



2. Set the **Method** to Radial or Sequential.
3. Enter a target height, if required.
4. Tap **Meas 1** to measure to the first point.
5. Enter a target height, if required.
6. Tap **Meas 2** to measure to the next point.
7. The inverse results are displayed.
 - Tap **Continue** to measure subsequent points. The process then continues from step 4.
 - Tap **Reset** to return to step 1.
8. To return to Survey Basic, tap **Esc**.

NOTE -

- If there is a survey running, the azimuth for each computed inverse will be displayed, and you will be able to select whether to display Grid, Ground or Ellipsoidal distances using the **Options** softkey, with the computations based on the settings in the current job.
- Without a survey running, and therefore no orientation, the azimuth is not available for computed inverses and all computations are based on simple cartesian computations with a scale factor of 1.0.
- To configure the format of the grade display, tap **Options**.

AT360 eBubble options

If the active target has built-in tilt sensors and you are performing a conventional survey, an eBubble (electronic bubble) showing tilt information for the target is available. To configure the eBubble, you can:

- Tap  in the **eBubble** window.
- Tap  and select **Instrument / eBubble options**.

You can configure the following settings:

Option	Description
eBubble sensitivity	The bubble moves 2 mm for the specified sensitivity angle. To decrease sensitivity select a large angle.
Tilt tolerance	Defines the maximum radius that the target can tilt and be considered in tolerance. The allowable range is 0.001 m to 1.000 m. The tilt distance shown is calculated using the current target height.

TIP – If you have more than one tilt sensor connected, you can also tap the **AT360** softkey from the **eBubble options** screen for a different sensor. Changing the eBubble settings for one sensor changes the eBubble settings for all connected tilt sensors.

eBubble calibration

To calibrate the eBubble tap the **Calib** softkey and then tap the **Calibrate** button to begin tilt calibration. Level the instrument with the calibrated reference and brace against movement. Tap **Start**. The calibration information is stored in the job.

A well-calibrated eBubble is of vital importance. The accuracy of tilt information used to display the eBubble, and stored with measured points, is totally dependent on the calibration of the tilt sensors inside the active target. Using a poorly-calibrated eBubble will directly degrade the accuracy of the coordinates measured using the eBubble as a level reference. Great care should be taken when you are calibrating the eBubble to ensure the most accurate tilt information is available at all times.

Bubble reference: Calibrate the eBubble against a properly calibrated physical bubble. The accuracy of the eBubble depends totally on the accuracy of the physical bubble used to calibrate it.

Pole stability: When calibrating the eBubble, the pole the active target is on should be as vertical and as stable as possible. In practice this means using at least a bipod to hold the pole as still as possible.

Pole straightness: A bent pole will affect the tilt measured by the sensors in the active target. If you calibrate the eBubble using a bent pole and then change poles, the accuracy of points will be affected. Also, if you calibrate using a straight pole and then change to a bent pole, the target will not be plumb even though the eBubble will say it is, again affecting the accuracy of the measured points.

Abuse: If the active target suffers severe abuse such as a pole drop, you should recalibrate the eBubble.

For more information, refer to the active target documentation.

eBubble display

To display the eBubble, tap the **eBubble** softkey.

Bubble color	Meaning
Green	You are within the defined tilt tolerance.
Red	You are outside the defined tilt tolerance.

TIP –

- To move the eBubble window to a new position on the screen, tap and hold on the eBubble and drag to a new position.
- To show or hide the eBubble from any screen, press **Ctrl + L**.

Instrument settings

To view the **Instrument settings** screen:

- Tap ☰ and select **Instrument / Instrument settings**.
- Tap and hold the instrument icon in the status bar.

Depending on the instrument that the controller is connected to, the following functions may be available:

Instrument details

The available instrument details depend on the connected instrument, but may include:

- **Instrument name, Instrument type, Serial number, and Firmware version.**
These details are stored in the job file, and can be output to a report when exporting job data.
- **Instrument configuration**, which shows information such as the radio variant and the angular accuracy of the connected instrument.

TIP – For some instruments, you can tap **Name** to enter the instrument name.

PIN lock security

To enable PIN lock security on the instrument, tap **PIN** and then enter and confirm the PIN. The PIN can be any 4-digit numeric value except 0000.

When the PIN function is enabled, the **Unlock instrument** screen appears when connecting to the instrument. Enter the PIN and then tap **Accept**.

When the PIN has been set, tap PUK and record the number for the PUK (Personal Unblocking Key). Use this number if you have forgotten your PIN. Ten incorrect attempts to unlock the instrument using a PIN results in the instrument being blocked. If this occurs, you are prompted for the PUK code to unblock the instrument.

If the instrument is locked and you don't know your PIN or PUK, contact your Spectra Geospatial distributor for help.

NOTE – The PUK function is available for FOCUS 50 total stations only.

To change the PIN, tap **Instrument / Instrument settings / PIN**, enter the current PIN and then enter and confirm the new PIN.

To remove PIN lock security, tap **Instrument / Instrument settings / PIN**, enter the current PIN and then tap **None**. The software changes the PIN to 0000, which means that no PIN lock security is set.

TIP – PIN lock security can also be enabled using the **Security** option the face 2 display of the instrument.

Auto focus

When the **Auto focus** check box is selected, the instrument automatically focuses whenever it automatically turns to a point.

NOTE –

- New instruments are shipped with auto focus calibrated in the factory. When upgrading from an older version of the instrument firmware, you must first calibrate auto focus using the **Adjustment / Auto focus calib.** function on the instrument face 2 display.
- If heights are not known, the computed slope distance cannot be determined and the instrument will be focused based on the horizontal distance instead.

Reticule illumination

Use the **Reticule illumination** control to illuminate the crosshair. This is useful when the crosshair is not easily visible, for example when in a tunnel.

Face 2 backlight

To enable the face 2 backlight, select **Face 2 backlight**.

Service information


Conventional instruments should be serviced regularly. To check when the instrument is due for the next service, tap **Instrument / Instrument settings / Service**. For some instruments, a service warning message appears when the instrument is due for service. When this message appears, you can still use the instrument, but you should contact your Spectra Geospatial distributor at your earliest convenience to organize servicing.

Target test

The target test is used primarily in Survey Basic when measuring a distance that is to be displayed as a dead record.

If the instrument is moved more than 30 cm from where the last measurement was observed, the HA and VA are updated but the SD reverts to "?" to avoid mistaking the next target's distance for the previously measured target's distance.

Instrument adjustment

Tap  and select **Instrument / Adjust** to perform instrument adjustments. The procedures available in the **Adjust** screen depend on the connected instrument.


NOTE - The **Adjust** screen is not available during a survey. End the current survey to perform an instrument adjustment.

Spectra Geospatial recommends carrying out instrument adjustment tests in the following situations:

- Whenever the instrument may have been roughly handled during transport.
- When the ambient temperature differs by more than 10°C (18°F) from the previous collimation test.
- Immediately prior to high precision angle measurements in one face.

This help provides instructions for performing the tests using the Origin software running on the controller. Depending on the instrument, you may also be able to perform these tests through the face 2 menu display. For more information, refer to the documentation for your instrument.

To adjust a FOCUS 30/35 total station

1. Set up the instrument on a stable surface.
2. Make sure that the instrument is accurately leveled and that the compensator is enabled.
3. Tap  and select **Instrument / Adjust**.
The procedures available in the **Adjust** screen depend on the connected instrument.
4. Perform each adjustment in turn, using the steps below.

Collimation error

1. Position the instrument so that the angle to the point is less than 4°30' (5 gon) from the horizontal plane.
2. Select **Collimation**.
Current adjustment values for the instrument are shown.
3. Tap **Next**.
4. Aim at the point and take the collimation measurement.

NOTE - Do not use **Autolock** during collimation or trunnion axis tilt tests.

You must take a minimum of one observation on each face. If you take more than one observation, complete all observations on face 1 first. Between each observation, turn the instrument away and then re-aim.

5. To change face, tap **Chg face** and observe the same number of observations on face 2 as you observed on face 1.
6. When the number of observations is the same for both faces, tap **Results**.

The current values and the new instrument values are shown.

7. Tap **Accept**.

Trunnion axis tilt correction

1. Position the instrument so that the angle to the point is less than 13°30' (15 gon) from the horizontal plane.

2. Select **Trunnion axis tilt**.

Current adjustment values for the instrument are shown.

3. Tap **Next**.

4. Aim at the point and take the trunnion axis tilt measurement.

NOTE - Do not use **Autolock** during collimation or trunnion axis tilt tests.

You must take a minimum of one observation on each face. If you take more than one observation, complete all observations on face 1 first. Between each observation, turn the instrument away and then re-aim.

5. To change face, tap **Chg face** and observe the same number of observations on face 2 as you observed on face 1.

6. When the number of observations is the same for both faces, tap **Results**.

The current values and the new instrument values are shown.

7. Tap **Accept**.

Autolock collimation

NOTE - Autolock collimation should be performed after the HA VA Collimation adjustment, if available, has been completed.

1. Select **Autolock collimation**.

2. Follow the prompts.

3. Sight to a target on face 1 with a slope distance between 20 m and 300 m and within 4°30' (5 gon) of horizontal.

Data output

 
You can output measurement data to another device such as an echo sounder or a computer running third-party software.

Data output is supported by any conventional instrument supported with Origin (see [Supported equipment, page 6](#)).

Your equipment setup depends on the equipment you are using. If the instrument is a FOCUS 50 total station it can output data through the foot connector, so you can output measurement data from the instrument or the controller. For other instruments you must connect the controller to the instrument and connect the device to the controller to output data from the controller to the device.

NOTE – Data output via a controller COM port is not available when using Origin on a Spectra Geospatial controller running Android. However, you can output data using a Bluetooth port on a Spectra Geospatial controller running Windows or Android.

To enable data output:

1. Connect to the conventional instrument and perform a station setup. The **Data output** screen is only available once a station setup has been completed.
2. Tap  and select **Instrument / Data output**.
3. Set the **Streamed data** to either **After measurement** or **Continuous**.
4. Select the **Streamed format**.

If you select **GDM user defined**:

- a. Select the GDM data labels to include. See [GDM data output, page 340](#).
 - b. Select the **End of transmission** character.
 - c. Select the **Time output**.
5. Select the **Port** to output data from.

If you are outputting data using Bluetooth, choose whether to operate as a server. Operating as a server is the standard behavior for most connections to a third device.

- When operating as a server, tap **Start** and then use the third-party device to scan and pair to the Origin controller.
- When not operating as a server, use the controller operating system Bluetooth settings to pair to the third-party device and then select the port of the third-party device to output data to.

TIP – If you are struggling to pair the devices, delete any existing pairings and then restart the pairing process.

6. Leaving the **Data output** screen open, tap  to access other functions in the software.

Data output remains enabled as long as the **Data output** screen is open.

To stop data output, tap **Stop in the Data output screen**, or close the **Data output** screen.

GDM data output

If you select **GDM user defined** as the **Streamed format**, you can select from the following labels:

Label	Text	Description
7	HA	Horizontal angle
8	VA	Vertical angle
9	SD	Slope distance
10	VD	Vertical distance
11	HD	Horizontal distance
37	N	Northing
38	E	Easting
39	ELE	Elevation
51	Date	Date
52	Time	Time

Before the system can output northing, easting, and elevation, you must complete a station setup. Otherwise, the system outputs 0, 0, 0.

The northing, easting, elevation, angle and distance units match the Origin software setting.

To set the number of decimal places for the horizontal angle and vertical angle records, in the **Jobs** screen tap **Properties**. Tap the **Units** button and then select the appropriate option in the **Angle display** field.

If streamed output is on and no new distance is available, the HA and VA labels are sent rather than the user defined labels.

When using Autolock mode, the instrument must be locked onto a target for any GDM data to be sent.

NMEA GGA output

Select **NMEA GGA output** from the **Streamed format** field to stream latitude, longitude, and altitude values from the controller to the connected instrument.

This output format is standard for interfacing to other devices, and complies with NMEA-0183 Standard for Interfacing Marine Electronic Devices, Version 4.0, November 1, 2008 as well as the International Electrotechnical Commission (IEC) 61162-1, Edition 4 2010–11 industry-standard-compliant string that is commonly accepted by 3rd party devices.

NOTE – The data string output by Origin exceeds the standard NMEA output message length of 82 characters because it uses the extended GGA format to output high precision position data with a higher number of decimal places.

Use GNSS service profile

Select the **Use GNSS service profile** check box to set up the Bluetooth port to simulate an industry-standard GNSS receiver.

Selecting the **Use GNSS service profile** check box changes the Bluetooth service that Origin provides from the standard serial port profile to the standard GNSS profile. Some devices may require this setting if they are configured to request their GNSS positions from the official GNSS service instead of the more common generic serial port service.

Pseudo NMEA GGA output

Use the **Pseudo NMEA GGA** data output option to stream northing, easting, and elevation values, rather than the standard latitude, longitude, and altitude values, from the controller to the connected instrument. This output format is based on the NMEA (National Marine Electronics Association) standard for interfacing marine electronic devices. A modified version of one of the NMEA 'sentences', the GGA sentence, is generated.

A typical example of an output record is:

```
$GPGGA,023128.00,832518.67,N,452487.66,E,1,05,1.0,37.48,M,0.0,M,0.0,0001*49
```

The fields in this record are as follows:

Field	Description
\$GPGGA	Data type identifier for the NMEA sentence
023128.00	Time field – UTC time of position fix (hhmmss.ss)
832518.67	North coordinate in the currently set units output to 2 decimal places
N	Fixed text indicating preceding value was the north coordinate

Field	Description
452487.66	East coordinate in the currently set units output to 2 decimal places
E	Fixed text indicating preceding value was the east coordinate
1	Fix quality (always output as 1 = GPS fix)
05	Number of satellites (not applicable in this case and always output as 05)
1.0	HDOP value (not applicable in this case and always output as 1.0)
37.48	Elevation value in the currently set units output to 2 decimal places
M	Units identifier for elevation value (also indicates units for north and east values). M or F indicating meters or feet (US survey feet or international feet – both use the F output as there is no means of indicating which feet unit)
0.0	Geoidal separation (always output as 0.0 since an elevation value is being output)
M	Units identifier for the geoidal separation (always output as M)
0.0	Time in seconds since last DGPS update (not applicable in this case and always output as 0.0)
0001	DGPS base station ID (not applicable in this case and always output as 0001)
*49	Record checksum value with * separator.

If there are no coordinate values available for output in the Pseudo NMEA GGA sentence, the north, east, and elevation comma-separated fields in the record are empty.

For information on outputting NMEA from the GNSS receiver, see [NMEA output options, page 387](#).

SD, Hz, V1(mils) output

Use the **SD, Hz, V1(mils)** data output option to stream slope distance, horizontal angle, and vertical angle values.

A typical example of an output record is: **SD 2.76 Hz 253.49 V1 83.47**

The fields in this record are as follows:

 
Field	Description
Column 37 and 38 are label SD	Slope distance comes after SD label, output to 2 decimal places, right justified at column 50.
Column 52 and 53 are label HZ	Horizontal angle comes after Hz label, output to 2 decimal places, right justified at column 66.
Column 68 and 69 are label V1	Vertical angle comes after V1 label, output to 2 decimal places, right justified at column 78.

 
NOTE – Slope distance is always output in meters and horizontal angle and vertical angle in mils, independent of the units selected in the job properties.

Auxiliary GPS settings

Auxiliary GPS devices include GPS devices integrated into tablets or third-party GPS devices connected via Bluetooth. Auxiliary GPS can be used during a conventional survey for GPS search, navigating to a point, and to display the position in the map.


To configure auxiliary GPS settings:

1. Tap  and select **Settings / Connections**.
2. Select the **Auxiliary GPS** tab.
3. Select an auxiliary GPS receiver. Choose from:
 - **None**
 - **Internal GPS** – for supported controllers
 - **Custom** – set the controller port as appropriate
4. To connect the controller to a third-party GPS device connected using Bluetooth, select the **Bluetooth** tab in the **Connections** screen and select the device in the **Connect to auxiliary GPS** field. For more information, see [Bluetooth connections, page 480](#).

To make sure you are getting positions from the internal GPS, tap  and select **Instrument / Position**. Tap **Options** and set the **Coordinate view** to **Global**

Station setup details

To view the instrument type and current station setup information when the controller is connected to a mechanical instrument:

- Tap the instrument icon in the status bar.
- Tap  and select **Instrument / Station setup details**.

GNSS surveys

In a **GNSS survey**, the controller is connected to the rover or base GNSS receiver. For a list of the GNSS receivers that can be connected, see [Supported equipment, page 6](#).

The steps for completing measurements using a GNSS receiver are:

1. Configure the survey style.
2. If you are setting up your own base station, set up your survey equipment at the base and start the base survey.
3. Set up the rover receiver equipment.
4. Start the rover survey.
5. If you need to convert **Global** coordinates into local grid coordinates (NEE), perform a [site calibration](#).
6. Measure or stake out points.
7. End the survey.

GNSS survey styles

All surveys in Spectra Geospatial Origin are controlled by a survey style. Survey styles define the parameters for configuring and communicating with your equipment, and for measuring and staking points. This whole set of information is stored as a template and used each time you start a survey.

The type of GNSS survey you will use will depend on available equipment, field conditions, and the results required.

Default survey styles are created by Origin when a new installation of the software is started, but only if there are no existing survey styles.

When you start the survey, the Origin software checks the settings in the survey style to make sure they are appropriately configured for the equipment you are connected to. For example, if GLONASS is enabled in the survey style it checks if the connected GNSS receiver or antenna also supports GLONASS. If the Origin software detects an incorrect setting, or if it detects that the settings in the survey style have not been checked, it prompts you to confirm or correct the settings. Any changed settings are saved to the survey style.

Real-Time Kinematic surveys

The default GNSS survey style is **RTK (Real-Time Kinematic)**. Real-time kinematic surveys use a [data link](#) to send observations or corrections from the base station to the rover. The rover then calculates its position in real time. Select the required data link type in the **Data link options** screen when you configure the RTK

survey style.

Network RTK surveys

A **Network RTK** survey is a special type of RTK survey that uses a network RTK system to broadcast corrections to the rover. Network RTK systems consist of a distributed network of reference stations communicating with a control center to calculate GNSS error corrections over a wide area. Real-time correction data is transmitted by radio or cellular modem to the rover receiver within the network area. The system improves reliability and operating range by significantly reducing systematic errors in the reference station data. This lets you increase the distance at which the rover receiver can be located from the physical reference stations, while improving on-the-fly (OTF) initialization times.

Select the required **Broadcast format** in the **Rover options** screen when you configure the RTK survey style. Origin supports broadcast formats from the following network RTK solutions:

- FKP (RTCM)
- VRS
- RTCM3Net

To store VRS vectors to the nearest Physical Base Station (PBS) in the VRS network, the VRS system must be configured to output the PBS information. If the VRS system does not output PBS data, VRS data must be stored as positions.

NOTE – If you are using a radio in a VRS system, you must select a two-way radio. You cannot use Spectra Geospatial internal 450 MHz or 900 MHz radios.

RTX (SV) surveys

An RTX (SV) GNSS survey receives centimeter-level positioning information from the Trimble Centerpoint® RTX correction service via satellite.

If needed, you can edit the survey style to change the constellations you want to track.

 
Other GNSS survey types

To use one of the following survey types, you must create your own survey style:

- **FastStatic** – a postprocessed survey using occupations of up to 20 minutes to collect raw GNSS data. The data is postprocessed to achieve subcentimeter precisions.
- **Postprocessed Kinematic** – postprocessed kinematic surveys store raw stop-and-go and continuous observations. The data is postprocessed to achieve centimeter-level precisions.
- **Real-Time Kinematic and Infill** – allows you to continue a kinematic survey when radio contact with the base station is lost. The infill data must be postprocessed.
- **Real-Time Kinematic and Data Logging** – records raw GNSS data during an RTK survey. The raw data can be postprocessed later, if required.

- **Real-Time Differential Survey** – uses the differential corrections transmitted from a land-based receiver or from SBAS or OmniSTAR satellites to achieve submeter positioning at the rover.

To configure the GNSS survey style

1. Tap  and select **Settings/ Survey styles**.
2. Do one of the following:
 - Tap **<Style name>** and then tap **Edit**.
 - Tap **New**. Enter a name for the style and then tap **Accept**.
3. Select each of the options in turn, and set them to suit your equipment and survey preferences.

To...	See...
configure settings for the receiver and survey type	Receiver options and data links, page 346
set parameters for GNSS points	GNSS point options, page 379
configure stakeout settings	Stakeout options, page 382
configure the software to warn when duplicate points are measured	Duplicate point tolerance options, page 385
use a laser rangefinder	Laser rangefinders, page 465
use an echo sounder	Echo sounders, page 469
use a utility locator	Utility locators, page 472
output NMEA messages	NMEA output options, page 387

4. Tap **Store**.

Receiver options and data links

Configure receiver settings in the **Rover options** and **Rover data link** screens in the survey style. Depending on the options you select in the **Rover options** screen, other screens and fields become available in the survey style.

If the receiver will operate in Base mode, configure receiver settings in the **Base options** and **Base data link** screens.

Rover options

This topic describes any field that may appear in the **Rover options** screen.

The fields available in the **Rover options** screen are similar for any survey type selected in the **Survey type** field, but the fields available will change depending on the GNSS receiver selected from the **Type** field in the **Antenna settings** group box.

For best results and simpler configuration, use the same type of receiver at the rover and at the base.

Survey type

Select the type of survey you want to use. The rest of the fields in the screen update to reflect the survey type selected.

Generally, when a GNSS surveying system setup consists of one base and one rover receiver, make sure that the survey type selected in the **Rover options** field and the **Base options** field is the same. However, when there are multiple rovers, you can have various configurations but make sure that if the rover is logging raw data your base station is also logging raw data.

Antenna settings

If the software is not connected to a GNSS receiver, select the antenna from the list of antennas in the **Type** field. The **Part number** field automatically displays the part number.

Select the correct measurement method for the equipment and type of survey. To set the default antenna height, enter a value in the **Antenna height** field. The **Part number** field automatically displays the part number.

Enter the serial number.

Tilt

When using a GNSS receiver with a built-in inertial measurement unit (IMU):

- Select the **IMU tilt compensation** check box to enable "always on" tilt compensation using the internal IMU sensors. For more information, see [IMU tilt compensation, page 443](#).
- Select the **AR viewer** check box to enable the **Augmented reality** viewer. This check box cannot be enabled if the **IMU tilt compensation** check box is not enabled. For more information, see [Augmented reality viewer, page 176](#).
- Select the **eBubble functions** check box to enable use of the GNSS eBubble when using GNSS-only mode such as when measuring an observed control point, or when the IMU is not aligned or IMU tilt compensation is disabled.

The **Tilt** group is shown only when the **Survey type** field is set to **RTK** or **RTK & infill**.

Tilt functions

When using a Spectra Geospatial SP80 or SP85 receiver, select the **Tilt functions** check box so that the **Tilt warnings** and **Auto-measure** options are available in the appropriate point style settings. Enabling this

check box also makes the **Compensated point** measurement method available in the **Measure** screen.

Elevation mask

You must define an elevation mask below which satellites are not considered. For kinematic applications, the default of 10° is ideal for both the base and rover.

For differential surveys where the base and rover are separated by more than 100 kilometers, Spectra Geospatial recommends that the base elevation mask be lower than the rover setting by 1° per 100 kilometers of separation between the base and rover. Generally, the base elevation mask should be no lower than 10°.

PDOP mask

Define a PDOP mask for the rover. When the satellite geometry goes above the set PDOP mask, the software issues high PDOP warnings, pauses the time to initialize counter (PPK surveys), and suspends the measurement of a FastStatic point. Initialization and measurement resumes when the PDOP drops below the mask. The default value is 6.

Real-time survey settings

Broadcast format

The broadcast message format generated by the rover depends on the selected survey type.

- For real-time kinematic surveys, the format of the broadcast message can be CMR, CMR+, CMRx, or RTCM RTK.

The default is CMRx. It is a compressed data format designed to handle the extra load of additional GNSS signals from modernized GPS, GLONASS, Galileo, QZSS, and BeiDou. Only use CMRx if all receivers have the CMRx option installed. To check if this option is installed in the receiver, select **Instrument / Receiver settings** on the controller that is connected to the receiver, see [Operating several base stations on one radio frequency, page 399](#).

NOTE - To operate several base stations on one frequency, use CMR+ or CMRx.

Some receiver firmware produced after 2018 obsoleted the use of RTCM RTK v2.X messages. If you attempt to use such firmware in the rover receiver, then the RTK survey will not start in Origin because the receiver cannot decode incoming RTCM v2.x RTK messages. For more information, refer to the release notes for your receiver firmware.

- For network RTK surveys, the broadcast message format can be from the following network RTK solutions: FKP (RTCM), VRS (CMR), VRS (RTCM).

- Networked single base RTK is also supported in the form of "multi station" surveys with both CMR and RTCM formats. These surveys enable you to connect to a network service provider through the internet, and receive CMR or RTCM data from the nearest physical reference station in the network.
- For RTX surveys, the **Survey type** must be **RTK** and the **Broadcast format** must be **RTX (SV)** or **RTX (internet)**.

If you select **RTX (internet)** as the **Survey type**, in the **Rover data link** screen of the survey style you must create a **GNSS correction source** for the RTX internet service, with the appropriate **Mountpoint name** selected. See [To configure a rover internet data link, page 361](#).

When configured to use **RTX (internet)** the software automatically switches to using **RTX (SV)** if the software cannot connect to the internet or if the internet connection is interrupted. Once the internet connection is restored, the software resumes using **RTX (internet)**.

NOTE – For the survey style to automatically switch from **RTX (internet)** to **RTX (SV)**, the firmware in the connected GNSS receiver must be version 6.28 or later for receivers that have Trimble ProPoint technology or version 5.68 or later if the receiver does not have Trimble ProPoint technology.

- For real-time differential surveys, the **Broadcast format** must be **RTCM** for land-based transmissions. For satellite-based transmissions, select **SBAS** or **OmniSTAR**.

Use station index

To use multiple base stations on one radio frequency, enter the first station index number you want to use in the **Use station index** field. For information about using multiple bases, see [Operating several base stations on one radio frequency, page 399](#).

If you **do not** want to use multiple base stations on one frequency, enter the same station index number that you entered in the **Base options** screen.

To use any base station operating on the frequency set in the rover radio, tap **Any**.

WARNING – If you tap **Any** and there are other base stations operating on the frequency, your rover survey could receive corrections from the wrong base.

Prompt station index

When you use a receiver that supports multiple base stations on one radio frequency, the software asks you to specify the base to use when you start the rover survey. You can stop this question from appearing by clearing the **Prompt for station index** check box. The station index number in the **Use station index** field is used.

In a GNSS survey style, you can set the **Station index** for the base receiver to a number between 0 and 31, and you can set the **Use station index** for the rover receiver to **Any** or to the same number that the base is

transmitting. When the rover station index is set to **Any**, the rover receiver will accept base data from any base. If you set the rover station index to match the same number as the base station index, the rover will accept data only from a base with the same station index.

The rover station default index value is **Any**. If you know your base station index, and you want to connect to only that base, make sure that you set the appropriate station index for the rover.

If the **Prompt for station** check box is selected, a list of base stations on your radio frequency appears when you start the survey.

Satellite differential

When the radio link is down in a real-time survey, the receiver can track and use signals from SBAS or OmniSTAR.

Roving precision

In an RTK survey, set the **Auto tolerance** switch to **Yes** to enable the software to calculate horizontal and vertical precision tolerances that meet the GNSS receiver's RTK specifications for the baseline length you are measuring. To change the precision level at which point storage is acceptable, set the **Auto tolerance** switch to **No** and then enter the required **Horizontal tolerance** and **Vertical tolerance**.

Enable **Store RTK initialized only** to store only initialized RTK solutions that meet the precision tolerances. Uninitialized solutions that meet the precision tolerances cannot be stored.

Disable **Store RTK initialized only** to store both RTK initialized and uninitialized solutions that meet the precision tolerances.

Postprocessed survey settings

Logging device

With survey types that involve postprocessing, if you are using:

- an SP100 receiver, you can set the **Logging device** to the receiver or the controller.
- any other Spectra Geospatial receiver, the logging device is set to the receiver.

NOTE - IMU tilt compensation is available during RTK & infill surveys only when logging to the controller, not to the receiver.

Logging interval

To define the logging interval, enter a value in the **Logging interval** field. The base and rover logging intervals must correspond to (or be multiples of) each other.

When using an RTK and Infill survey type, the **Logging interval** is for the infill session only.

When using an RTK and data logging survey type, the **Logging interval** should be the same for each receiver – typically 1 second. The **RTK interval** remains at 1 second, regardless of the interval selected in the **Logging interval** field.

NOTE – When using the SP100 GNSS receiver, Trimble recommends using a logging interval of 1s. There are many benefits in using this interval: more measurements enable faster convergence, better Ionoguard™ performance, increased redundancy for validation and more robust outlier detection (including cycle slip detection). This is especially important in challenging environments. Even with base data logging at a slower rate, rover data at a faster divisor of that base interval is beneficial.

Auto file names

To define the logging file name, clear the **Auto file names** check box and then enter the file name in the **Logging file name** field.

Log data in RTK mode

Select this option to log raw data in the RTK part of an **RTK & infill** survey type. Use this option if you want postprocessed data stored as a backup to your RTK survey. When this option is selected, switching between Infill and RTK modes does not suspend logging.

The **Log data in RTK mode** option is not available when using IMU tilt compensation in the RTK part of an RTK & infill survey.

GNSS signal tracking

To use observations from a GNSS constellation in a real-time or postprocessed survey, you must enable tracking for each signal type you want to use in both the **Rover options** and the **Base options** screens. See [GNSS signal tracking options, page 354](#).

Base options

This topic describes any field that may appear in the **Base options** screen. The **Base options** screen becomes available when you set the **Broadcast format** in the **Rover options** screen to CMR, CMR+, CMRx, or RTCM RTK for the RTK survey type.

The fields available in the **Base options** screen are similar for any survey type selected in the **Survey type** field, but the fields available will change depending on the GNSS receiver selected from the **Type** field in the **Antenna settings** group box.

Survey type

Select the type of survey you want to use. The rest of the fields in the screen update to reflect the survey type selected.

Generally, when a GNSS surveying system setup consists of one base and one rover receiver, make sure that the survey type selected in the **Rover options** field and the **Base options** field is the same. However, when there are multiple rovers, you can have various configurations but make sure that if the rover is logging raw data your base station is also logging raw data.

Antenna settings

If the software is not connected to a GNSS receiver, select the antenna from the list of antennas in the **Type** field. The **Part number** field automatically displays the part number.

Select the correct measurement method for the equipment and type of survey. To set the default antenna height, enter a value in the **Antenna height** field. The **Part number** field automatically displays the part number.

Enter the serial number.

Elevation mask

You must define an elevation mask below which satellites are not considered. For kinematic applications, the default of 10° is ideal for both the base and rover.

For differential surveys where the base and rover are separated by more than 100 kilometers, Spectra Geospatial recommends that the base elevation mask be lower than the rover setting by 1° per 100 kilometers of separation between the base and rover. Generally, the base elevation mask should be no lower than 10°.

Real-time survey settings

Broadcast format

The broadcast message format generated by the base depends on the selected survey type.

- For real-time kinematic surveys, the format of the broadcast message can be CMR, CMR+, CMRx, or RTCM RTK.

The default is CMRx. It is a compressed data format designed to handle the extra load of additional GNSS signals from modernized GPS, GLONASS, Galileo, QZSS, and BeiDou. Only use CMRx if all receivers have the CMRx option installed. To check if this option is installed in the receiver, select **Instrument / Receiver settings** on the controller that is connected to the receiver, see [Operating several base stations on one radio frequency, page 399](#).

NOTE – To operate several base stations on one frequency, use CMR+ or CMRx.

Some receiver firmware produced after 2018 obsoleted the use of RTCM RTK v2.X messages. If you attempt to use such firmware in the rover receiver, then the RTK survey will not start in Origin because the receiver cannot decode incoming RTCM v2.x RTK messages. For more information, refer to the release notes for your receiver firmware.

Station index

You can set the **Station index** for the base receiver to a number between 0 and 31, and you can set the **Use station index** for the rover receiver to **Any** or to the same number that the base is transmitting.

The base station index number is automatically generated according to the controller serial number. To limit the chance of multiple base receivers transmitting the same station index, different controllers default to different numbers, which means there is less chance that you accidentally receive corrections from the wrong base.

Postprocessed survey settings

Logging device

With survey types that involve postprocessing, if you are using:

- an SP100 receiver, you can set the **Logging device** to the receiver or the controller.
- any other Spectra Geospatial receiver, the logging device is set to the receiver.

Logging interval

To define the logging interval, enter a value in the **Logging interval** field. The base and rover logging intervals must correspond to (or be multiples of) each other.

When using an RTK and Infill survey type, the **Logging interval** is for the infill session only.

When using an RTK and data logging survey type, the **Logging interval** should be the same for each receiver – typically 1 second. The **RTK interval** remains at 1 second, regardless of the interval selected in the **Logging interval** field.

NOTE – When using the SP100 GNSS receiver, Trimble recommends using a logging interval of 1s. There are many benefits in using this interval: more measurements enable faster convergence, better lonoguard™ performance, increased redundancy for validation and more robust outlier detection (including cycle slip detection). This is especially important in challenging environments. Even with base data logging at a slower rate, rover data at a faster divisor of that base interval is beneficial.

GNSS signal tracking

To use observations from a GNSS constellation in a real-time or postprocessed survey, you must enable tracking for each signal type you want to use in both the **Rover options** and the **Base options** screens. See [GNSS signal tracking options, page 354](#).

GNSS signal tracking options

To use observations from a GNSS constellation in a real-time or postprocessed survey, you must enable tracking for each signal type you want to use in both the **Rover options** and the **Base options** screens. In a real-time survey the tracked signals are sent in the RTK data stream. In a postprocessed survey the tracked signals are saved in the logged data.

NOTE –

- GNSS signals tracked by the rover receiver must also be tracked by the base receiver.
- If you enable tracking of satellite signals that are not being tracked by the base or contained in the RTK messages coming from the base, then those signals will not be used in RTK at the rover.
- To save receiver battery power, enable only those signals available in the base data you are going to use.
- GNSS surveys with firmware earlier than version 6.00 must contain either GPS or BeiDou observations, and signal tracking for both GNSS constellations is enabled in new survey styles. If you disable one, then tracking the other constellation is automatically enabled.

GPS

To disable the use of GPS, clear the **GPS** check box. If GPS signal tracking is disabled, BeiDou signal tracking is automatically enabled because surveys must contain either GPS or BeiDou data.

If you disable GPS at the rover for RTK you can use either the CMRx or RTCM v3.2 MSM broadcast format. Disabling GPS at the base can only be done for the RTCM v3.2 MSM broadcast format. For CMRx transmission from the base, GPS must remain enabled even though GPS can be disabled at the rovers that are using that CMRx base.

For real-time surveys where the base data contains L2C observations, select the **GPS L2C** check box. The **Use L2e** setting is read-only.

The **L5** check box is available only when the **Broadcast format** is set to CMRx, RTCM RTK 3.2 (MSM), RTX (SV), or RTX (internet).

GLONASS

The **GLONASS** check box is always available.

In a real-time survey, you can enable GLONASS satellite tracking at the rover even if the base receiver is not tracking GLONASS. However, the satellites will not be used in the RTK processing.

Galileo

If you enable Galileo tracking, the satellites will be used in the solution when they are healthy.

QZSS

To fall back to QZSS SBAS positioning if your RTK radio link goes down, select **SBAS** in the **Satellite differential** field, and select the **QZSS** option. In this case, the **QZSS** option is only available if the **Broadcast format** is set to **CMRx**.

BeiDou

When BeiDou signal tracking is enabled in an SBAS differential survey, the BeiDou SVs are used to augment the solution if their corrections are available.

NavIC

In a real-time kinematic survey where the base and rover receivers can track and use IRNSS/NavIC signals for RTK, select the **NavIC** check box.

In a FastStatic survey where the base and rover receivers and track and log IRNSS/NavIC signals, select the **NavIC** check box.

NOTE – NavIC data logging is available only during a FastStatic survey when logging to the receiver. As NavIC satellites are tracked on L5 only they are not included in the point timers which rely on dual-frequency data.

RTK survey data links

Real-time kinematic surveys can use a data link to send observations or corrections from the base station to the rover. The rover then calculates its position in real time.

To check the status of the data link during an RTK survey, tap the **Real-time correction** icon in the status bar or the **GNSS functions** screen. You can configure the data link from the **Data link** status screen or from the **Rover data link** or **Base data link** screen in the RTK survey style.

To obtain RTK data by:

- Radio connected to the controller and communicating with the radio at the base station, use a **radio data link**. See [RTK radio data link, page 355](#).
- Connecting to an internet server using an IP address, use an **internet data link**. See [RTK internet data link, page 360](#).

RTK radio data link

Use a radio data link if you are sending or receiving RTK data from a radio at the base receiver over a radio channel.

Configure the connection to the radio at the rover or at the base using the data link screen in the survey style. See [To configure a rover radio data link, page 356](#) or [To configure a base radio data link, page 357](#).

To start the survey, see [To start an RTK radio survey at the rover, page 402](#).

Radio considerations

Real-time survey methods rely on trouble-free radio transmission.

To reduce the effects of interference from other base stations operating on the same frequency, use a transmission delay for your base station that does not coincide with others on the same frequency. For more information, see [Operating several base stations on one radio frequency, page 399](#).

Sometimes the conditions or topography of a site adversely affect radio transmission, resulting in limited coverage.

To increase site coverage:

- Move the base stations to prominent points around the site.
- Erect the base radio antenna as high as possible.
- Use radio repeaters.

TIP – Double the height of the broadcast antenna to increase the coverage by approximately 40 %. To achieve the same effect, it would be necessary to quadruple the radio broadcast power.

Radio repeaters

Radio repeaters increase the broadcast range of a base radio by receiving the base transmission and then rebroadcasting it on the same frequency.

You can use one repeater with a radio that has a 12.5 kHz channel spacing, and one or two repeaters with a radio that has a 25 kHz channel spacing.

You can configure the internal radio in a Spectra Geospatial GNSS receiver to repeat base data to other rovers while performing a rover survey. This is known as a roving repeater setup. The internal radio can repeat the base signal over its UHF communication link to other rovers while simultaneously performing a rover survey. This option is available in Spectra Geospatial GNSS receivers with internal radios that have the UHF Transmit option enabled. Select this repeater mode when you connect to the internal radio from the **Rover data link** screen in the survey style.

 
NOTE – To use any of these radios as repeaters, they must be configured as repeaters. To do this, follow the steps above to connect to the radio and then choose a repeater mode, which appears if the radio you are connected to supports being a repeater. Alternatively, if the radio has a front panel, use that to set the repeater mode.

To configure a rover radio data link

To obtain GNSS corrections at the rover using a radio data link, connect the controller running Origin to a Spectra Geospatial GNSS receiver that has an internal radio or EMPOWER RTK Radio module.

TIP – If required, you can use an external radio connected using cables. This is a less common workflow as carrying a separate radio adds more weight to the pole. For information on how to configure the connection to an external radio, see [To configure a base radio data link, page 357](#).



To configure the connection to the receiver's internal radio or EMPOWER RTK Radio:

1. Connect the controller to the receiver using Bluetooth.
2. Tap  and select **Settings / Survey styles**. Select the required survey style. Tap **Edit**.
3. Select **Rover data link**.
4. Set the **Type** field to **Radio**.
5. In the **Radio** field, select the type of radio you are using. Select **Receiver internal** or **EMPOWER RTK Radio**.
6. To connect to and configure the internal settings of the radio you have selected, tap **Connect**.
 - a. If the radio is a dual-band radio, select the frequency **Band** to use.
 - b. If the radio is receive-only, you may be able to change the country of operation. If this setting is available, set it to the country or region you are operating in to change the available frequencies available.

NOTE – In most cases the **Country** is pre-set and you cannot change this setting.

- c. Select the radio **Frequency** to use.

To add a new receive frequency for the rover radio, tap **Add Frq**. Enter the new frequency and tap **Add**. The new frequency is sent to the radio and appears in the list of available frequencies. To use the new frequency, you must select the frequency from the list.
 - d. Select the **Rover radio mode**.
7. Tap **Accept**.

When you start the survey in Origin, the radio signals icon  appears in the status bar. If a red cross is drawn over the radio signals icon , there is a problem with the data link between the base and rover receivers.

TIP – When connected to the radio, you can tap the radio signals icon in the status bar to review the radio configuration and change the radio's internal settings, if required.

To configure a base radio data link

To obtain GNSS corrections at the rover using a radio data link, you can connect the Origin software to a Spectra Geospatial GNSS receiver that has an internal radio or to an external radio.

 
NOTE – The internal radio in a Spectra Geospatial integrated GNSS receiver can operate as a base radio if it is configured as a transceiver, and if the **UHF Transmit** option is on in the receiver. This avoids having to use an external radio solution at the base receiver to broadcast base data. When using Spectra Geospatial GNSS receivers that do not have the UHF Transmit option, use an external radio at the base even if you use the internal radio at the rover.

To configure a Bluetooth connection to a TDL450B/ADL450B radio

To configure a Bluetooth connection to a TDL450B or ADL450B radio in the survey style, you will connect the controller directly to the radio without connecting the receiver and starting a survey.

1. Make sure Bluetooth is enabled on the controller and on the radio.

Bluetooth should be enabled for the TDL450B/ADL450B radio by default. If it is not enabled you can enable it using the menus on the front panel of the radio.

2. Start Origin on the controller.
3. Tap  and select **Settings / Survey styles**. Select the required survey style. Tap **Edit**.
4. Select **Base data link**.
5. Set the **Type** field to **Radio**.
6. In the **Radio** field, select **TDL450B / ADL450B**.
7. In the **Receiver port** field, select **Bluetooth**.
8. Select the name of the specific radio to connect to.
 - If the controller has connected to the radio before, select the radio in the **Device name** field.
 - If this is the first time the controller is connecting to the radio, the **Device name** field is empty. To connect to the radio for the first time:
 - a. Tap **Search**. The **Bluetooth search** screen shows a list of **Discovered devices**.
 - b. Select the device to connect to. Tap **Select**.

The software returns to the **Base data link** screen. The name of the radio you selected is shown in the **Device name** field.
9. To connect to the radio and configure settings for the radio you have selected, tap **Connect**.
 - a. Select the **Radio operating mode**.
 - b. Select the radio **Frequency** to use.
 - c. Select the **Base radio mode**.
 - d. Select other settings as required, for example **Network number**, **Enable call sign**, **Call sign**, **Transmit power level** and **Repeaters supported**.
10. Tap **Accept**.
11. Tap **Store**.

 
TIP – During a survey, the controller is connected to the GNSS receiver and it is the GNSS receiver that connects to the TDL450B/ADL450B radio over Bluetooth. To review the radio configuration settings (for example, TX frequency, power level) tap the receiver icon in the status bar and then tap **Data link**. Unlike other radio connections, you can edit the radio configuration settings for a TDL450B/ADL450B without first ending the survey.

To configure a cable connection to any external radio

To configure a cable connection to any radio that is not inside a GNSS receiver (including the TDL450B radio):

1. Connect the controller, receiver, radio and, if required, the power supply. See step 2 in [GNSS base receiver setup, page 393](#).

NOTE – Some TRIMTALK and Pacific Crest radios must be in command mode before they can be configured. Command mode happens momentarily at power up. Follow the prompts to connect to the radio.

2. Start Origin on the controller.
3. Tap  and select **Settings / Survey styles**. Select the required survey style. Tap **Edit**.
4. Select **Base data link**.
5. Set the **Type** field to **Radio**.
6. Set the **Radio** field to the radio type you are using.
7. If you selected an external radio, select the **Port** on the radio you are using for the connection.
8. If your radio does not appear in the **Radio** list, select **Custom radio** and then define the receiver port, baud rate, and parity.

If required, you can also enable **Clear To Send (CTS)** for a **Custom radio**.

WARNING – Do not enable CTS unless the receiver is connected to a radio that supports CTS. Spectra Geospatial GNSS receivers support RTS/CTS flow control when you enable CTS. For more information on CTS support, refer to the documentation supplied with your receiver.

9. Clear the **Route through controller** check box and specify the receiver port number that the radio is connected to, and the baud rate for communications.

TIP – If you will leave the controller at the base, then you may have connected the radio to the controller. In that case, select the **Route through controller** check box. This enables real-time data between the receiver and the radio to pass through the controller. Specify the controller port number that the radio is connected to, and the baud rate for communications.

10. To connect to the radio and configure settings for the radio you have selected, tap **Connect**.
 - a. If the **Receiver internal** radio is a dual-band radio, select the frequency **Band** to use.
 - b. Select the radio **Frequency** to use.
 - c. Select the **Base radio mode**.
 - d. Select other settings as required, for example **Network number**, **Enable callsign**, **Callsign**, **Transmit power level** and **Repeaters supported**.

11. Tap **Accept**.
12. Tap **Store**.

TIP – To review the radio configuration settings (for example, TX frequency, power level) when connected to the radio, tap the receiver icon in the status bar and then tap **Data link**. To edit the radio configuration settings for any radio except the TDL450B/ADL450B you must first end the survey.

RTK internet data link

Use an internet data link if you are obtaining GNSS corrections for your RTK survey over the internet. RTK data is transferred by connecting to a server using an IP address.

Configuring the RTK survey style for an internet data link has two parts:

- **GNSS corrections source:** where the Origin software will obtain RTK data from
- **GNSS internet source:** how the GNSS rover or the GNSS base will connect to the internet to obtain or transmit RTK data

NOTE – To use an RTK internet data link at the base, you must be using a Spectra Geospatial SP100 GNSS receiver.

GNSS correction sources

At the rover

For the rover, the **GNSS correction source** is where the Origin software will obtain RTK data from.

Depending on the services you have access to and your equipment setup, the options are:

- Trimble CenterPoint RTX correction service
- an NTRIP server
- a broadcast server
- a controller connected to the base receiver (if you have a controller that you can leave at the base)

For more information, see [To configure a rover internet data link, page 361](#).

At the base

For the base, the **GNSS correction source** is where the Origin software will upload RTK data to.

Depending on your equipment setup, the options are:

- an NTRIP server
- a broadcast server

For more information, see [To configure a base internet data link, page 365](#)

GNSS Internet sources

At the rover

For the rover, the most common **GNSS internet source** options are:

- **Controller internet:** use the SIM card in the controller or the controller's connection to a Wi-Fi network to connect to the internet.
- **Receiver internet - Wi-Fi:** connect the SP100 receiver over Wi-Fi to another device that is connected to the internet, such as a cell phone or MiFi device.

TIP – When the **GNSS internet source** is:

- **Controller internet,** you can use the internet for other functions during the RTK survey, not just receiving RTK data. Other functions include downloading projects and jobs or sending email.
- **Receiver internet - Wi-Fi,** you can use the internet only to receive RTK data. You cannot use the internet for other functions.

Less commonly, you might connect to the internet using these **GNSS internet source** options:

- **Receiver modem:** use the modem in an older Spectra Geospatial receiver such as the SP85 to connect to the internet.
- Add your own source, such as a smartphone connected to the controller or a mobile phone that supports the Bluetooth DUN service.

For more information, see [To configure a rover internet data link, page 361](#).

The only **GNSS internet source** option that enables you to disconnect the controller from the SP100 receiver after setup is:

 

- **Receiver internet - Wi-Fi:** connect the receiver over Wi-Fi to another device that is connected to the internet, such as a cell phone or MiFi device.

If you can leave additional equipment connected to the base receiver, you could select the following **GNSS internet source** options:

- **Controller internet:** use the SIM card in the controller or the controller's connection to a Wi-Fi network to connect to the internet. This option is only suitable if you can leave the controller connected to the base receiver.
- **Receiver internet - cable:** connect the receiver to an external device such as a laptop using a USB or ethernet cable.

For more information, see [To configure a base internet data link, page 365](#).

To configure a rover internet data link

1. Tap  and select **Settings / Survey styles**. Select the required survey style. Tap **Edit**.
2. Select **Rover data link**.
3. Set the **Type** field to **Internet connection**.
4. To select the **GNSS correction source** (where the Origin software will obtain RTK corrections from), tap  to open the **GNSS correction source** tab of the **Connections** screen and select the GNSS correction source you have set up and then tap **Accept**.

- To configure settings for a new GNSS correction source, tap **New**.
- To change the settings for an existing GNSS correction source, select the source in the list and tap **Edit**.

For more information, see [GNSS correction source options for the rover, page 362](#).

5. Select the **Prompt for GNSS correction source** check box if you want the software to ask which GNSS correction source to use at the start of each survey.
6. To select the **GNSS internet source** (how the GNSS rover will connect to the internet for GNSS corrections), tap ► to open the **GNSS internet source** screen and select the required **GNSS internet source** and then tap **Accept**.
 - To configure settings for a new GNSS internet source, tap **Add**.
 - To change the settings for an existing GNSS internet source, select the source in the list and tap **Edit**.

For more information, see [GNSS internet source options for the rover, page 364](#) below.

7. Select the **Prompt for GNSS internet source** check box if you want the software to ask which GNSS internet source to use at the start of each survey.
8. Tap **Accept**.
9. Tap **Store** to save your changes to the survey style.

GNSS correction source options for the rover

To use corrections from the Trimble CenterPoint RTX correction service

1. Set the **Use RTX (internet)** switch to **Yes**.
2. In the **Mountpoint name** field, select the mountpoint appropriate for your RTX subscription and region. The **RTXIP** mountpoint is for global RTX corrections, while others are particular to specific network coverage areas.
3. If required, set the **Use proxy server** switch to **Yes** and then enter the proxy server address in the **Proxy server** field and enter the **Proxy server port**.
4. Tap **Store**.

To use corrections from an NTRIP server

1. Set the **Use RTX (internet)** switch to **No**.
2. Set the **Use NTRIP** switch to **Yes**.
3. To force the Origin software to always use NTRIP version 1.0, select the **Use NTRIP v1.0** check box.

4. If the NTRIP server:
 - uses a proxy server, set the **Use proxy server** switch to **Yes** and then enter the proxy server address in the **Proxy server** field and enter the **Proxy server port**.
 - does not use a proxy server, set the **Use proxy server** switch to **No**.
5. To connect to a mountpoint on starting a survey without being prompted for the mountpoint name, set the **Connect directly to Mountpoint** switch to **Yes** and then enter the **Mountpoint name**.

TIP – If a mountpoint name is not specified, the system will prompt you when you start a survey. Your selection will then be stored in the **GNSSCorrectionSource.xml** file in the **Spectra Geospatial Data\System Files** folder. If the specified mountpoint cannot be accessed when you start the survey, a list with available mountpoints appears.

6. If a user name and password are required to use NTRIP server, enter the details in the **NTRIP username** and **NTRIP password** fields.
7. In the **IP Address** and **IP port** fields, enter the information for the NTRIP server that were sent to you from the data provider.
8. If the rover must supply identification information through regular NMEA messages to the base data server, select the **Send user identity info** check box. At the start of the survey, the software asks you to enter this information.
9. If the server Origin is connecting to requires Transport Layer Security (TLS) internet data encryption, set the **Use TLS encryption** switch to **Yes**. This setting supports TLS version 1.2 or later.
10. Tap **Store**.

For more information, see [NTRIP protocol versions, page 371](#).

To use corrections from a broadcast server

1. Set the **Use RTX (internet)** switch to **No**.
2. Set the **Use NTRIP** switch to **No**.
3. In the **IP Address** and **IP port** fields, enter the information for the broadcast server that were sent to you from the data provider.
4. If the rover must supply identification information through regular NMEA messages to the base data server, select the **Send user identity info** check box. At the start of the survey, the software asks you to enter this information.
5. If the server Origin is connecting to requires Transport Layer Security (TLS) internet data encryption, set the **Use TLS encryption** switch to **Yes**. This setting supports TLS version 1.2 or later.
6. Tap **Store**.

To use corrections from a controller connected to the base receiver

1. Set the **Use RTX (internet)** switch to **No**.
2. Set the **Use NTRIP** switch to **No**.
3. In the **IP Address** and **IP port** fields, enter the information displayed in the **IP Settings of this base** field in the **Base** screen displayed on the controller at the base.

NOTE – If the IP address of the base controller appears to be invalid, Spectra Geospatial recommends that you perform a soft reset of the device before you connect to the internet and start the base.

4. If the rover must supply identification information through regular NMEA messages to the base data server, select the **Send user identity info** check box. At the start of the survey, the software asks you to enter this information.
5. Tap **Store**.

GNSS internet source options for the rover

To connect the controller to the internet

When **Controller internet** is the GNSS internet source, you can:

- Connect the controller to the internet using the SIM card in the controller or using a previously configured connection to a Wi-Fi network.
- Connect the controller to the receiver using Bluetooth or a serial cable.
- Use the internet connection for other functions during the RTK survey, not just receiving RTK data. Other functions include downloading projects and jobs or sending email.

To configure **Controller internet** as the GNSS internet source:

1. In the **Rover data link** screen of the survey style, tap ► next to the **GNSS internet source** field and select the connection named **Controller internet**.
2. If you have not yet configured the **Controller internet** connection, tap **Config** in the **GNSS internet source** screen to open the operating system connection settings screen and set up the connection. See [Internet connection setup, page 487](#).
3. In the **GNSS internet source** screen tap **Accept** to return to the **Rover data link** screen.
4. Tap **Store**.

To connect the receiver to the internet

When **Receiver internet - Wi-Fi** is the GNSS internet source, the internet connection can be used only for receiving RTK data. You cannot use the **Receiver internet** connection for other functions, such as

downloading projects and jobs or sending email.

To configure receiver internet as the GNSS internet source:

1. In the **Rover data link** screen of the survey style, tap ► next to the **GNSS internet source** field and select the **Receiver internet** connection that is most appropriate for your equipment setup. Select:
 - **Receiver internet - Wi-Fi** if the receiver can connect over Wi-Fi to another device that is connected to the internet, such as a cell phone or MiFi device.

TIP – In most cases, you will not need to edit the **Receiver internet** connection settings.

2. Tap **Accept** to return to the **Rover data link** screen.
3. Tap **Store**.

To connect the controller to the internet through another device

If you have another device such as an older receiver or a mobile phone that supports the Bluetooth DUN service, you can connect the controller to the internet through that device. You can also connect the controller to the internet through a separate smartphone.

The internet connection is available for other functions during the RTK survey, not just receiving RTK data. Other functions include downloading projects and jobs or sending email.

NOTE – To connect to the internet through a receiver or a mobile phone that is not a smartphone:

- The modem in the device must support the Bluetooth DUN service.
- The receiver must be an SP85 receiver.

If your receiver does not support Bluetooth DUN and you want to be able to use the internet on the controller, you must use a Controller internet connection.

To connect the controller to the internet using:

- a separate smartphone, connect to the smartphone and then select **Controller internet** in the **GNSS internet source** screen. For more information, see Internet setup using a separate smartphone, page 488.
- an older receiver or mobile phone, tap **Add** in the **GNSS internet source** screen. For more information, see Internet connection using another device, page 491.

To configure a base internet data link

1. Tap ☰ and select **Settings / Survey styles**. Select the required survey style. Tap **Edit**.
2. Select **Base data link**.
3. Set the **Type** field to **Internet connection**.
4. To select the **GNSS correction source** (where the Origin software will upload RTK corrections to), tap ► to open the **GNSS correction source** tab of the **Connections** screen and select the GNSS correction source you have set up and then tap **Accept**.

- To configure settings for a new GNSS correction source, tap **New**.
- To change the settings for an existing GNSS correction source, select the source in the list and tap **Edit**.

For more information, see [GNSS correction source options for the base, page 366](#).

5. Select the **Prompt for GNSS correction source** check box if you want the software to ask which GNSS correction source to use at the start of each survey.
6. To select the **GNSS internet source** (how the GNSS base will connect to the internet for GNSS corrections), tap ► to open the **GNSS internet source** screen and select the required **GNSS internet source** and then tap **Accept**.
 - To configure settings for a new GNSS internet source, tap **Add**.
 - To change the settings for an existing GNSS internet source, select the source in the list and tap **Edit**.

For more information, see [GNSS internet source options for the base, page 368](#) below.

7. Select the **Prompt for GNSS internet source** check box if you want the software to ask which GNSS internet source to use at the start of each survey.
8. Tap **Accept**.
9. Tap **Store** to save your changes to the survey style.

GNSS correction source options for the base

1. In the **Base data link** screen of the survey style, tap ► next to the **GNSS correction source** field to open the **GNSS correction source** tab of the **Connections** screen:
 - To configure settings for a new GNSS correction source, tap **New**.
 - To change the settings for an existing GNSS correction source, select the source in the list and tap **Edit**.
2. Select the **Base operation mode**:
 - In most cases, the receiver at the base will upload data to a broadcast server. Select **Upload data to remote server**.
If the receiver is connected to the internet through an external device such as a smartphone or MiFi device then you must leave the device connected to the receiver at the base.
 - If the receiver at the base will operate as the base server, select **Operate as a server** and enter the **IP Port**.
To operate as the base server, you must leave the controller connected to the receiver at the base.

When the receiver at the base will:

- Operate as a server, the base must have a static public IP address.
 - Upload data to a server, the base can have a local IP address.
3. Configure settings for the selected GNSS correction source. See:
 - [To upload corrections to an NTRIP server, page 367](#)
 - [To upload corrections to a broadcast server, page 367](#)

To upload corrections to an NTRIP server

1. Set the **Use NTRIP** switch to **Yes**.
2. To force the Origin software to always use NTRIP version 1.0, select the **Use NTRIP v1.0** check box.
3. To connect to a mountpoint on starting a survey without being prompted for the mountpoint name, enter the **Mountpoint name**.

TIP – If a mountpoint name is not specified, the system will prompt you when you start a survey. Your selection will then be stored in the **GNSSCorrectionSource.xml** file in the **Spectra Geospatial Data\System Files** folder. If the specified mountpoint cannot be accessed when you start the survey, a list with available mountpoints appears.

4. If a user name and password are required to use NTRIP server, enter the details in the **NTRIP username** and **NTRIP password** fields.
5. Enter the **IP Address** and **IP Port** of the NTRIP server you obtained from the operator of the server. If the **GNSS internet source** is **Controller internet**, then the **IP Address** and **IP Port** values are displayed in the **IP Settings of this base** field in the **Base** screen that appears on the controller connected to the base receiver once you start the base survey.

NOTE – If the IP address of the base controller appears to be invalid, Spectra Geospatial recommends that you perform a soft reset of the device before you connect to the internet and start the base.

6. If the server Origin is connecting to requires Transport Layer Security (TLS) internet data encryption, set the **Use TLS encryption** switch to **Yes**. This setting supports TLS version 1.2 or later.
7. Tap **Store**.

For more information, see [NTRIP protocol versions, page 371](#).

To upload corrections to a broadcast server

1. Set the **Use NTRIP** switch to **No**.
2. Enter the **IP Address** and **IP Port** of the server you obtained from the operator of the server.

If the **GNSS internet source** is **Controller internet**, then the **IP Address** and **IP Port** values are displayed in the **IP Settings of this base** field in the **Base** screen that appears on the controller connected to the base receiver once you start the base survey.

NOTE – If the IP address of the base controller appears to be invalid, Spectra Geospatial recommends that you perform a soft reset of the device before you connect to the internet and start the base.

TIP – To connect a rover to the base, you must start a mobile internet base with a public IP address.

3. If the server Origin is connecting to requires Transport Layer Security (TLS) internet data encryption, set the **Use TLS encryption** switch to **Yes**. This setting supports TLS version 1.2 or later.
4. Tap **Store**.

GNSS internet source options for the base

1. In the **Base data link** screen of the survey style, tap ► next to the **GNSS internet source** field to open the **GNSS internet source** screen.
2. Select how you want to connect to the internet and then tap **Config**. See:
 - [To connect the receiver to the internet using a Wi-Fi network, page 368](#)
 - [To connect the receiver to the internet using a cable, page 369](#)
 - [To connect the controller to the internet, page 369](#)
 - [To connect the controller to the internet through another device, page 370](#)

To connect the receiver to the internet using a Wi-Fi network

If you have an external device that has a SIM card in it such as a cell phone or a MiFi device that you can leave at the base station then you can connect the receiver to the internet using a Wi-Fi connection to the external device.

To configure **Receiver internet – Wi-Fi** as the GNSS internet source:

1. In the **GNSS internet source** field, tap ► to open the **GNSS internet source** screen and select the connection named **Receiver internet – Wi-Fi**. Tap **Accept**.
2. To edit the receiver Wi-Fi connection settings, tap **Edit**. The Origin software must be connected to the receiver for you to be able to edit the receiver Wi-Fi connection settings. Alternatively, you can leave the settings as they are for now and edit them when you connect to the receiver when starting the base survey.
3. Tap **Store**.

To configure the receiver Wi-Fi connection settings:

1. Make sure the external phone or MiFi device is on.
2. If the selected survey style has the **GNSS internet source** field set to **Receiver internet – Wi-Fi**, then when Origin connects to the receiver the **Receiver Wi-Fi configuration** screen appears.

NOTE – If the software warns that the receiver must be restarted in **Client** mode, tap **Accept**. Once the receiver restarts, Origin automatically reconnects to the receiver and shows the **Receiver Wi-Fi configuration** screen.

3. Select the **Client** tab.
4. Make sure the **Enabled** check box is selected.
5. To add a Wi-Fi network, tap **Scan**. From the list of available networks, tap the network you want to add. The software returns to the **Receiver Wi-Fi configuration** screen, showing the selected network in the table.
6. To edit connection settings to the network, for example to enter a password, tap **Edit**. Make your changes and tap **Accept**.
7. Tap **Accept**.
8. To confirm that you want to use the first network in the list, tap **Enter** in the **Receiver Wi-Fi configuration** screen.

Origin continues starting the base survey.

To connect the receiver to the internet using a cable

If you are setting up a permanent base station with an external device that will connect to the internet such as a laptop, you can connect the receiver to the external device using an ethernet cable.

To configure **Receiver internet – Cable** as the GNSS internet source:

1. In the **GNSS internet source** field, tap ► to open the **GNSS internet source** screen and select the connection named **Receiver internet – Cable**. Tap **Accept**.
2. Tap **Store**.

To connect the controller to the internet

NOTE – Typically, you will need to disconnect the controller from the base receiver after survey setup so that you can use it at the rover. In that case you must use a **Receiver internet connection**. Only use a **Controller internet** connection if you can leave the controller connected to the base receiver during the survey.

When using a **Controller internet** connection, you can connect the controller to the receiver using Bluetooth or a serial cable.

1. In the **GNSS internet source** field:
 - a. Tap ► to open the **GNSS internet source** screen and select the connection named **Controller internet**.
 - b. If you have not yet configured the **Controller internet** connection, tap **Config** in the **GNSS internet source** screen to open the operating system connection settings screen and set up the connection.
 - c. In the **GNSS internet source** screen tap **Accept**.
2. Tap **Store**.

To connect the controller to the internet through another device

If you have another device such as an older receiver or a mobile phone that supports the Bluetooth DUN service, you can connect the controller to the internet through that device. You can also connect the controller to the internet through a separate smartphone.

NOTE – To connect to the internet through a receiver or a mobile phone that is not a smartphone:

- The modem in the device must support the Bluetooth DUN service.
- The receiver must be an SP85 receiver.

If your receiver does not support Bluetooth DUN and you want to be able to use the internet on the controller, use a Controller internet connection.

To connect the controller to the internet using:

- a separate smartphone, connect to the smartphone and then select **Controller internet** in the **GNSS internet source** screen. For more information, see Internet setup using a separate smartphone, page 488.
- an older receiver or mobile phone, tap **Add** in the **GNSS internet source** screen. For more information, see Internet connection using another device, page 491.

NOTE – Because data is being routed through the controller with this kind of connection, only connect the controller to the internet through another device if you can leave the controller connected to the base receiver during the survey. If you need to disconnect the controller from the base receiver after survey setup so that you can use it at the rover, then you must use a Receiver internet - modem or Receiver internet - Wi-Fi connection.

NTRIP server settings

An NTRIP server is a broadcast internet server that manages authentication and password control for differential correction sources such as VRS networks, and relays corrections from the source that you select.

NTRIP is the acronym for Networked Transport of RTCM via Internet Protocol.

Configure NTRIP settings when you create the GNSS correction source for the internet data link. When you start the survey, a connection is established to the NTRIP server. In addition, a table appears showing the available sources of corrections from the server, referred to as "mountpoints". These can be single station sources, or network sources (for example, VRS). The type of base station data provided by each mountpoint is shown in the source table. To sort the available sources, tap the sort field above the list and choose to sort by **Distance**, **Format**, or **Mountpoint**. Tap a row in the table to view more detailed information for the selected mountpoint.

To use the selected source, tap **Accept**. The base data from the selected mountpoint streams through Origin to the connected GNSS receiver.

If authentication is required to connect to a particular mount point, and this was not configured for the GNSS correction source, the Origin software displays a screen where you can enter your username and password.

NTRIP protocol versions

When the Origin software connects to the NTRIP server, it checks if the server supports NTRIP version 2.0, and if it does then the software communicates using version 2.0 protocols. If it does not, then Origin communicates using NTRIP version 1.0 protocols.

To force the software to always use NTRIP version 1.0, select the **Use NTRIP v1.0** check box when you configure the NTRIP settings for the GNSS correction source.

NTRIP version 2 includes improvements to the original standard. Origin supports the following NTRIP version 2 features:

NTRIP 2.0 feature	Advantages over 1.0
Full HTTP compatibility	Addresses proxy server issues. Supports virtual hosts using the "Host directive".
Chunked transfer encoding	Reduces data processing time. More robust data checking.

Internet Base Station Service (IBSS)

The Trimble IBSS service provides an easy way for you to stream RTK corrections over the internet from a base receiver you have set up to rover receivers. Once you have set up the GNSS receiver as a base station and chosen IBSS as your base data link, RTK corrections are automatically sent to any rover that is also using IBSS in the same Trimble Connect project. No separate configuration for the corrections server is needed.

You can set up multiple IBSS mountpoints in a project, one per base receiver. The base receiver can be in a permanent fixed position or it can be a temporary base that you set up each day. IBSS mountpoints exist until you delete them, regardless of whether a base is broadcasting corrections. This allows you to use the same mountpoint, day after day, even if you are shifting your base to different locations in the project.

 
 
As many rover receivers as required can use the RTK corrections provided by IBSS within the same Trimble Connect project.

NOTE -

- To use IBSS in Origin, the IBSS mountpoint must be created in a project that resides in Trimble Connect. If your organization streams IBSS via Trimble Connected Community (TCC) or Works Manager, those IBSS mountpoints are not available in Origin.
- If you are using a Spectra Geospatial GNSS receiver, only the SP100 GNSS receiver can be used as a rover **or a base receiver** with IBSS. SP60, SP80, SP85 and SP90m GNSS receivers can only be used as **rover receivers** with IBSS.

To configure the survey style to use IBSS

For the rover:

1. Tap  and select **Settings / Survey styles**. Select the required survey style. Tap **Edit**.
2. Tap **Rover data link**.
3. Set the **Type** field to **Internet connection**.
4. Tap  next to the **GNSS correction source** field to open the **GNSS correction source** tab of the **Connections** screen and then tap the **IBSS** GNSS correction source to select it.
5. To set security options for the connection, tap **Edit**.

By default, the connection uses **Enhanced security** and encrypts the data using Transport Layer Security (TLS) internet data encryption on port 2105. If your network firewall does not support TLS encryption, select **Maximum compatibility**. When **Maximum compatibility** is selected, unencrypted data is sent using port 2101. Tap **Store**.

 

6. Tap **Accept**.

When you select the **IBSS** GNSS correction source then the following settings are set automatically:

- **Controller internet** is selected as the **GNSS internet source**. The software will connect to the internet using the controller's internet connection.
- The **Prompt for GNSS internet source** setting is set to **No**.

7. Tap **Accept** to save your changes in the **Rover data link** screen.
8. Tap **Store** to save your changes to the survey style.

For the base:

1. Tap  and select **Settings / Survey styles**. Select the required survey style. Tap **Edit**.
2. Tap **Base data link**.
3. Set the **Type** field to **Internet connection**.
4. Tap  next to the **GNSS correction source** field to open the **GNSS correction source** tab of the **Connections** screen and then tap the **IBSS** GNSS correction source to select it and then tap **Accept**.

5. To set security options for the connection, tap **Edit**.

By default, the connection uses **Enhanced security** and encrypts the data using Transport Layer Security (TLS) internet data encryption on port 2105. If your network firewall does not support TLS encryption, select **Maximum compatibility**. When **Maximum compatibility** is selected, unencrypted data is sent using port 2101. Tap **Store**.

6. Tap **Accept**.

7. To select the **GNSS internet source** (how the GNSS base will connect to the internet for GNSS corrections), tap ► to open the **GNSS internet source** screen and select the required **GNSS internet source**.

When using a Spectra Geospatial SP100 GNSS receiver, typically, you will use **Receiver internet - Wi-Fi** and this option does not usually require further configuration. Otherwise, you might use **Controller internet** if you can leave the controller connected to the receiver at the base.

For more information, see [GNSS internet source options for the base, page 368](#).

8. Tap **Accept**.
9. Tap **Accept** to save your changes in the **Base data link** screen.
10. Tap **Store** to save your changes to the survey style.


To connect a base receiver to the IBSS service

1. Connect the controller to the internet and in Origin sign in using your Trimble ID.
2. Open the Trimble Connect project. To create an IBSS mountpoint in a Trimble Connect project you must be a project administrator.

TIP – If you created the project in Trimble Connect or if you uploaded a local project to the cloud in Origin, you are automatically a project administrator.


3. Open or create a job in the Trimble Connect project.
4. Make sure the survey style has IBSS selected as the **Base data link**.
5. To start a base survey, tap ≡ and select **Measure** and select the survey style you have configured to use IBSS, and then select **Start base receiver**.
6. To add an IBSS mountpoint, tap **Create**, enter the name of the mountpoint and tap **Create**.
7. Select the IBSS mountpoint to use and then tap **Accept**.
8. In the **Start base** screen, enter the base point name, base coordinates, and antenna height. Tap **Start**.
Origin starts the survey, sending the base corrections to rovers using that IBSS mountpoint in the Trimble Connect project.

To connect a rover receiver to the IBSS service

1. Connect the controller to the internet and in Origin sign in using your Trimble ID.
2. Open or create a job in the Trimble Connect project that contains the IBSS mountpoint you want to use.
3. Make sure the survey style has IBSS selected as the **Rover data link**.
4. To start the rover survey, tap  and select **Measure** or **Stakeout**, select the survey style you have configured to use IBSS, and then select the software function to use, for example **Measure points**.
The software shows a list of IBSS mountpoints that are currently sending corrections to the Trimble Connect project.
5. Select the IBSS mountpoint you want to receive corrections from and then tap **Accept**.
The survey starts and the status bar shows corrections are being received.
6. You are now ready to start measuring or staking out.

To manage IBSS mountpoints

To manage IBSS mountpoints:

1. Select the project in the **Projects** screen and then tap  to open the project settings screen.
2. Select the IBSS tab.
 - To add an IBSS mountpoint, tap **Create**, enter the name of the mountpoint and tap **Create**.
 - To delete a mountpoint, select it in the list and then tap **Delete**.

NOTE – Only project administrators can create or delete a mountpoint.

RTX correction service

The Trimble Centerpoint RTX™ correction service is a high-accuracy, precise point positioning (PPP) system that provides real-time centimeter positioning without the need for an RTK base station or VRS network.

Survey using satellite-delivered or internet-delivered Trimble RTX corrections in open areas where terrestrial-based corrections are not available. When surveying over a great distance in a remote area, such as a pipeline or utility right of way, Trimble RTX technology eliminates the need to continuously move the base station or, when using satellite-delivered corrections, to maintain connection to cell coverage.

RTX subscriptions

If you have a Spectra Geospatial receiver that supports Trimble RTX technology and has the appropriate subscription you can use the Trimble Centerpoint® RTX correction service.

The Trimble RTX subscription expiry date is displayed in the **Instrument / Receiver settings** screen.

Trimble RTX subscriptions which have been purchased as blocks of hours operate within a validity window, which is the start date and end date between which the number of hours/minutes purchased must be used.

For more information, go to positioningservices.trimble.com.

Configuring an RTX survey

To configure an RTX survey, create an RTK survey style with the broadcast format set to satellite **RTX (SV)** or an internet connection **RTX (internet)**.

If you select **RTX (internet)** as the **Survey type**, in the **Rover data link** screen of the survey style you must create a **GNSS correction source** for the RTX internet service, with the appropriate **Mountpoint name** selected. See [To configure a rover internet data link, page 361](#).

When configured to use **RTX (internet)** the software automatically switches to using **RTX (SV)** if the software cannot connect to the internet or if the internet connection is interrupted. Once the internet connection is restored, the software resumes using **RTX (internet)**.

NOTE - For the survey style to automatically switch from **RTX (internet)** to **RTX (SV)**, the firmware in the connected GNSS receiver must be version 6.28 or later for receivers that have Trimble ProPoint® technology or version 5.68 or later if the receiver does not have Trimble ProPoint technology.

Convergence times

Typical convergence times depend on the region you are working in and the GNSS receiver you are using:

- If the GNSS receiver has Trimble ProPoint technology, in most cases you should experience convergence in 1-3 minutes in RTX fast regions and 3-10 minutes globally.
- If the GNSS receiver does not have Trimble ProPoint technology, convergence will typically take 5-10 minutes in RTX fast regions and less than 15-30 minutes globally.

To learn more about the RTX service level in your area, visit <https://positioningservices.trimble.com/en/rtx>.

While the convergence times given are true in a majority of cases, the convergence time varies based on GNSS constellation health, level of multipath, and proximity to obstructions, such as large trees and buildings.

Reference frame

Coordinates measured in surveys using the Trimble CenterPoint RTX service are stored in the ITRF 2020 reference frame at the epoch of measurement. When you start an RTX survey, Origin uses the local displacement model, or if no local model is available for your location, the software selects a tectonic plate in the global tectonic plate model, to propagate the ITRF 2020 coordinate from the epoch of measurement to the **Global reference epoch** for the job. Origin then applies a datum transformation to transform the ITRF 2020 coordinate into the **Global reference datum** for the job.

RTX-RTK offsets

As described above, Origin transforms RTX coordinates into the **Global reference datum** for the job. However, there may be times that RTK data does not fit exactly with RTX data. For example:

- There are residual errors between RTX and RTK positions after the transformation.
- The RTK data is based on a **Here** key.
- The RTK data is based on a base station or VRS network that does not use the same **Global reference datum** as the job.
- You are working in an active deformation zone where the global tectonic plate model or the local displacement model does not give good results.

Origin allows RTK data that is not in terms of the **Global reference datum** to be combined with RTX data in the same job by using an **RTX-RTK offset**. These offsets are computed from a precise RTK point and a precise RTX point in the same physical location, and that difference is applied to all measured RTX points to bring them into terms with the RTK data in the job. The raw RTX measurements are stored, and the offset is applied when viewing coordinates or before performing any operations on those RTX measurements such as cogo calculations and stakeout.

When performing a site calibration using RTX measurements when there is an RTX-RTK offset in the job, the offset is applied to bring the RTX measurements into terms with the RTK data before calculating the site calibration. Spectra Geospatial recommends that you finalize a very precise RTX-RTK offset for the job before performing a site calibration using RTX measurements.

When an RTX-RTK offset is applied to a job, the precision estimates of the RTX measurements are inflated by the precision of the RTX-RTK offset using the propagation of variances principle. The precision of the latest offset in the job is applied to all displayed and stored RTX measurements in the job. When the offset is updated, the precision of the new offset is reapplied to all RTX point measurements in the job.

WARNING – Take great care to avoid changing the offset already in a job to a less precise offset, as this action may cause the precision of the points stored in the job to no longer meet the precision tolerances applied when the points were measured.

To compute an RTX-RTK offset, see [To compute an RTX-RTK offset, page 408](#).

SBAS

Satellite-based augmentation system (SBAS) signals provide real-time, differentially corrected positions without the need for a radio link. You can use SBAS in real-time surveys when the ground-based radio link is down.

To use SBAS signals, in the **Rover options** screen of your survey style, set **Satellite differential** to SBAS. In real-time differential surveys, you can set the broadcast format to SBAS to always store SBAS positions without the need for a radio link.

For real-time differential surveys where the rover can track the QZSS signals, select **SBAS** in the **Broadcast format** field, and select the **QZSS** option. This enables the rover receiver to track the QZSS satellite and, if

you are within the valid QZSS differential network, to use the QZSS SBAS differential corrections in the real-time differential survey.

When SBAS signals are being received, the radio icon  changes to an SBAS icon , and in an RTK survey, **RTK:SBAS** is displayed on the status line.

In an SBAS survey, QC1 quality control information is available, while QC2 and QC3 are not available.

The availability of SBAS signals depends on your location. For example:

- WAAS is available in the Americas.
- EGNOS is available in Europe.
- MSAS and QZSS are available in Japan.

OmniSTAR differential correction service

OmniSTAR® is a wide-area differential GPS service provider.

OmniSTAR correction signals are available worldwide, but are only supported by an OmniSTAR-capable GNSS receiver and a subscription must be bought from OmniSTAR to receive a subscription authorization.

NOTE – Only the Spectra Geospatial SP100 receiver can be used with the OmniSTAR differential correction service.

OmniSTAR signals provide real-time, differentially corrected positions without the need for a radio link. You can use OmniSTAR for:

- real-time differential surveys
- fallback in an RTK survey when the ground-based radio link is down

Subscription levels for OmniSTAR corrections include:

- OmniSTAR HP, G2 and XP – all three are displayed in Origin as OmniSTAR HP
- OmniSTAR VBS – displayed in Origin as OmniSTAR VBS

The OmniSTAR subscription expiry date is displayed on the **OmniSTAR initialization** screen or from the **Instrument / Receiver settings** screen.

In an OmniSTAR survey, QC1 quality control information is available, while QC2 and QC3 are not available.

NOTE – To track OmniSTAR satellites, start a survey using a style that specifies OmniSTAR as the **Satellite Differential** service. Once you end that survey, subsequent surveys will track OmniSTAR satellites until you start a new survey with a style that does **not** specify OmniSTAR for the **Satellite differential**.

To start a survey, see [To start an OmniSTAR survey, page 409](#).

PP initialization times

If you have set the **Survey type** field to **PP Kinematic** in the **Rover options** screen, the **PPK initialization times** item appears in the list of configuration screens in the survey style.

To define initialization times, tap **PP initialization times**.

To achieve centimeter-level precisions from a PP kinematic survey when the data is processed, the survey must initialize. With dual-frequency receivers, the on the fly initialization process begins automatically if at least five L1/L2 satellites are being observed.

NOTE - In a postprocessed survey, only rely on the On the fly (automatic) initialization if you are certain that the receiver will observe at least 5 satellites without interruption for the next 15 minutes, or 6 satellites without interruption for the next 8 minutes. Otherwise, initialize on a known point.

During initialization, enough data is collected so that the postprocessing software can successfully process it. Recommended initialization times are:

Initialization method	4 SVs	5 SVs	6+ SVs
L1/L2 on-the-fly initialization	N/A	15 min	8 min
L1/L2 new point initialization	20 min	15 min	8 min
Known Point initialization	At least four epochs		

NOTE -

- Generally the recommended times are appropriate. Reducing any of these times can affect the outcome of a postprocessed survey.
- You cannot initialize if the PDOP is greater than 20.
- The time to initialize counters are paused when the PDOP of the satellites being tracked exceeds the PDOP mask set in the survey style being used. The counters resume when the PDOP falls below the mask.

After initialization, the survey mode changes from **Not initialized** to **Initialized**. The mode remains **Initialized** if the receiver continuously tracks the minimum number of satellites. If the mode changes to **Not initialized**, you must reinitialize the survey.

On-the-fly initialization and new point initialization

If you do an On-The-Fly initialization in a postprocessed kinematic survey, you can measure points before initialization is gained. The Survey Office software can process the data later to give a centimeter-level solution. If you do this but lose lock on the satellites while initializing, remeasure any one of the points that you surveyed before lock was lost.

The number of satellites required depends on whether you are using satellites from only one constellation or a combination of constellations. After initialization, a position can be determined and the initialization can be maintained with one satellite less than the number required to initialize. If the number of satellites drops below this number, the survey must be reinitialized.

Satellite systems	Required satellites for initialization	Required satellites to produce positions
GPS only	5 GPS	4 GPS
GPS + QZSS	4 GPS + 1 QZSS	3 GPS + 1 QZSS
GPS + GLONASS	4 GPS + 2 GLONASS	3 GPS + 2 GLONASS
GPS + BeiDou	4 GPS + 2 BeiDou	3 GPS + 2 BeiDou
GPS + Galileo	4 GPS + 2 Galileo	3 GPS + 2 Galileo
BeiDou only	5 BeiDou	4 BeiDou
BeiDou + GPS	4 BeiDou + 2 GPS	3 BeiDou + 2 GPS
BeiDou + GLONASS	4 BeiDou + 2 GLONASS	3 BeiDou + 2 GLONASS
GLONASS only	-	-
Galileo only	-	-

NOTE - The QZSS system operates in the same time-base as GPS and therefore is included in the counters as another GPS satellite.

GNSS point options

As part of configuring the survey style for a GNSS survey, you can configure the parameters for the points measured during the survey.

To configure these settings, tap  and select **Settings / Survey styles / <style name> / <point type>**.

Auto point step size

Sets the increment size for automatic point numbering. The default is **1**, but you can use larger step sizes and negative steps.

Quality control

You can store quality control information with each point measurement except compensated points. Options may include **QC1**, **QC1 & QC2**, and **QC1 & QC3**, depending on the type of survey. All values at 1 sigma level, except horizontal and vertical precision estimates which are shown at the configured confidence level, set in the **Precision display** field of the [Units, page 97](#) screen.

Quality control 1: SVs, DOP and Time

Number of satellites (minimum for the occupation, number at time of storage, and list of SVs used in the solution), Flag for Relative DOPs (or not, used for legacy firmware that produced RDOP when static), DOP (maximum for duration of occupation), DOP at time of point storage, Number of GPS positions used in the occupation (this is the number of epochs within precision tolerance observed), Horizontal standard deviation and Vertical standard deviation field are unused (set to null), Start GPS week (the GPS week when you hit Measure), Start GPS time in seconds (the GPS second of week when you hit Measure), End GPS Week (the GPS week the point was stored), End GPS time in seconds (the GPS second of week when the point was stored), Monitor Status (not used, will be null or not visible), RTCMAge (age of corrections used in RTK solution), Warnings (which warning messages were issued during the occupation or in effect when the point was stored).

Quality control 2: Variance/Covariance matrix of the RTK solution

Error scale (added trace of covariance matrix divided by PDOP, used to convert DOPs into precisions in legacy systems), VCV xx, VCV xy, VCV xz, VCV yy, VCV yz, VCV zz (these are all a-posteriori variances from the stored epoch of the RTK solution), Unit Variance (standard error of unit weight, always set to 1.0 for HD-GNSS, not available in some legacy systems). All values at 1-sigma level.

Quality control 3: Error ellipse of RTK solution

This is in local tangent plane and is calculated directly from VCVs using standard textbook formulae. Sigma north (standard deviation in the north component), Sigma east (standard deviation in the east component), Sigma up (standard deviation in the Up or height component), Covariance east-north (measure of the correlation between the east error and the north error), Semi major axis length of error ellipse in meters, Semi minor axis length of error ellipse in meters, Orientation from north of error ellipse, Unit variance of solution. All values at 1-sigma level.

Auto-store point

Select the **Auto store point** check box to automatically store the point when the preset occupation time and precisions have been met.

This check box does not appear in the Rapid point measurement options because rapid points are always stored automatically.

Occupation time and number of measurements

The **Occupation time** and **Number of measurements** together define the time that the receiver is static while measuring a point. The criteria for both must be met before the point can be stored. The **Occupation time** defines the length of clock time for the occupation. The **Number of measurements** defines the number of valid sequential GNSS measurement epochs that meet the currently configured precision tolerance that must occur during the period of the occupation time. When the **Occupation time** and **Number of measurements** criteria have been met, **Store** is available. Alternatively, if **Auto store point** is enabled, the point is stored automatically.

NOTE – For compensated points and observed control points measured during an RTK survey, the horizontal and vertical precisions must also be satisfied before the point can be stored.

If a point is stored manually when the precision tolerances are not met, the number of measurements that meet the precision criteria will be zero, and this is what will appear in the point record in **Review job**.

The requirement for sequential epochs that meet the precision criteria means the occupation counters will be reset if the precision goes outside the tolerances at any time during the occupation.

In an RTK survey, the RTK engine in the GNSS receiver converges on a solution during the occupation and it is this converged solution that is saved in the job file when the point is stored.

In a FastStatic survey, the default occupation times are satisfactory for most users. If you change an occupation time, choose a setting according to the number of satellites being tracked by that receiver.

NOTE – Changing the occupation times directly affects the outcome of a FastStatic survey. Any changes should increase this time rather than decrease it. If you do not record enough data, the points may not be successfully postprocessed.

Precision

In an RTK survey, set the **Auto tolerance** switch to **Yes** to enable the software to calculate horizontal and vertical precision tolerances that meet the GNSS receiver's RTK specifications for the baseline length you are measuring. To enter your own precision settings at which point storage is acceptable, set the **Auto tolerance** switch to **No** and then enter the required **Horizontal tolerance** and **Vertical tolerance**.

If the receiver is an older receiver, the **Store RTK initialized only** check box is available. Select the **Store RTK initialized only** check box to store only Initialized RTK solutions that meet the precision tolerances.


Uninitialized solutions that meet the precision tolerances cannot be stored. When **Store RTK initialized only** is not selected, both RTK Initialized and Uninitialized solutions that meet the precision tolerances can be stored.


Auto-measure

If you are using a GNSS receiver that supports [IMU tilt compensation](#) or the [GNSS eBubble](#), you can use **Auto-measure** to automatically initiate a measurement from within the **Measure points** screen.

Enable the **Auto-measure** check box in the survey style, or tap **Options** in the **Measure points** screen.

When using **Auto-measure**, the measurement will begin automatically:

- When using [IMU tilt compensation](#) and the IMU is aligned, and no movement is detected.
The **Status** field shows **Waiting to measure**. You can tilt the pole as required, but make sure the **pole tip** is stationary. When no movement is detected, the status bar shows  and the software automatically begins measuring the point.
- When using GNSS only, and the pole is within tilt tolerance.

If the **Status** field shows **Waiting for level**, use the [GNSS eBubble](#) to level the receiver and make sure the pole is vertical and stationary. When the pole is within tilt tolerance, the status bar shows  and the software automatically begins measuring the point.

Tilt functions

If you have selected the **eBubble functions** or **Tilt functions** check box in the **Rover options** screen of the survey style, select the **Tilt warnings** check box to display warning messages if the antenna tilts more than the threshold value entered in the **Tilt tolerance** field. You can specify a different **Tilt tolerance** value for each measurement type. See [GNSS eBubble tilt warnings, page 440](#).

Auto abandon

To automatically abandon points when the position is compromised, such as where excess movement is detected during the measurement process, select the **Auto abandon** check box.


Store low latency positions

When you select the **Store low latency positions** check box, the measurements are made by the receiver in low latency mode. Low latency is more suitable when using continuous topo with distance based tolerances.

When **Store low latency positions** is not enabled, measurements from the receiver are synchronized on the epoch resulting in slightly more accurate positions, and is more suitable when using continuous topo with time-based tolerances.

TIP – If using Continuous topo as a static test to check the quality of measured positions make sure **Store low latency positions** is not enabled.

Stakeout options

To configure stakeout options in the survey style, tap  and select **Settings / Survey styles / <Style name> / Stakeout**.

TIP – To change the stakeout options during stakeout, tap **Options** in the stakeout screen.

As-staked point details

As-staked point details are shown in stakeout reports generated from the **Export** screen, and they are shown on the **Confirm staked deltas** screen that appears when you enable **View before storage**.

To configure **As-staked point details**, see [As-staked point details, page 589](#).

Display

Use the **Display** group to configure the appearance of the navigation display during stakeout.

To configure the display for a conventional survey

Set the **Show stakeout graphics** switch to **Yes** to show the navigation graphics in the navigation screen. Setting the switch to **Yes** enables the other fields in the **Display** group.

TIP – If you are using a controller with a smaller screen, or you want to fit more navigation deltas on the screen, set the **Show stakeout graphics** switch to **No**. The other fields in the **Display** group are hidden when the switch is set to **No**.

The **Display mode** determines what the navigation display shows during navigation. Select from:

- **Direction and distance** – the stakeout navigation display shows a large arrow pointing in the direction you have to move. When you are close to the point, the arrow changes to the in/out and left/right directions, relative to the instrument.
- **In/out and left/right** – the stakeout navigation display shows in/out and left/right directions, with the conventional instrument as a reference point.

TIP – By default the software automatically gives in/out and left/right directions from the **Target perspective** in a robotic survey, and from the **Instrument perspective** when connected to a servo instrument using a face plate or cable. To change this, edit the **Servo/Robotic** settings in the **Instrument** screen of the survey style. See [Instrument configuration, page 281](#).

Use the **Distance tolerance** field to specify the allowable error in distance. If the target is within this distance from the point, the software indicates that the distance is correct.

Use the **Angle tolerance** field to specify the allowable error in angle. If the conventional instrument is turned away from the point by less than this angle, the software indicates that the angle is correct.

Use the **Grade** field to display the grade of a slope as an angle, percent, or ratio. The ratio can be displayed as **Rise:Run** or **Run:Rise**. See [Grade, page 98](#).

To configure the display for a GNSS survey

Set the **Show stakeout graphics** switch to **Yes** to show the navigation graphics in the navigation screen. Setting the switch to **Yes** enables the other fields in the **Display** group.

TIP – If you are using a controller with a smaller screen, or you want to fit more navigation deltas on the screen, set the **Show stakeout graphics** switch to **No**. The other fields in the **Display** group are hidden when the switch is set to **No**.

The **Display mode** determines what remains fixed in the center of the screen during navigation. Select from:

- **Target centered** – the selected point stays fixed in the center of the screen
- **Surveyor centered** – your position stays fixed in the center of the screen

The **Display orientation** determines the reference the software orientates to during navigation. Select from:

- **Direction of travel** – the software will orientate so that the top of the screen points in the direction of travel.
- **North / Sun** – the small orientation arrow shows the location of North or the sun. The software will orientate so that the top of the screen points toward North or the sun. When using the display, tap the **North/Sun** softkey to toggle the orientation between north and the sun.
- **Reference azimuth:**
 - For a point the software will orientate to the **Reference azimuth** for the job. The **Stake** option must be set to **Relative to azimuth**.
 - For a line or road the software will orientate to the azimuth of the line or road.

NOTE – If, when staking a point, the **Display orientation** is set to **Reference azimuth** and the **Stake** option is **not** set to **Relative to azimuth** the display orientation behavior will default to **Direction of travel**. For **Stake** options, see [GNSS stake methods, page 594](#).

Deltas

Deltas are the information fields showing during navigation that indicate the direction and distance you need to travel to the item you want to stake out. To change the deltas shown, tap **Edit**. See [Stakeout navigation deltas, page 585](#).

Surface

To display the cut or fill relative to a surface during stakeout, in the **Surface** group box select the surface file. Alternatively, if you have selected surfaces from BIM files in the map, the **Surface** field indicates the number of surfaces you have selected. To select a different surface from the map, double-tap in the map to clear the current selection and then select the new surface.

If required, in the **Offset to surface** field, specify an offset to the surface. Tap ► and select whether the offset is to be applied vertical or perpendicular to the surface.

Conventional

In a conventional survey, if you do not want the total station EDM set to **TRK** mode when you enter stakeout, clear the **Use TRK for stakeout** check box.

GNSS

In a GNSS survey, to automatically start measuring when the **Measure** key is tapped, select the **Auto measure** check box.

Compass

If your Spectra Geospatial controller includes an internal compass, you can use it when staking out a position or navigating to a point. To use the internal compass, select the **Compass** check box.

Spectra Geospatial recommends you **disable** the compass when you are near magnetic fields that may cause interference.

NOTE - In a GNSS survey, if you are using IMU tilt compensation and the IMU is aligned, the heading from the receiver is always used to orient the GNSS cursor, the large stakeout navigation arrow and the close up screen. You must be facing the LED panel of the receiver for these to be orientated correctly.

Removed staked point from list

To automatically remove points from the stake out points list after they have been staked, select the **Remove staked point from list** check box at the bottom of the **Options** screen.

Duplicate point tolerance options

The duplicate point tolerance options in the survey style determine what happens if you attempt to store a point with the same name as an existing point, or if you measure a point that is very close to an existing point that has a different name.

When configuring these settings, make sure you are familiar with the database search rules applied by the software when managing points of the same name. See [Managing points with duplicate names, page 673](#).

Same point name options

In the **Same point name** group, enter the maximum horizontal and vertical distances or angles that a new point can be from an existing point of the same name. A duplicate point warning appears only if the new point is outside the tolerance set. To always receive a warning if you measure a point with the same name, enter zero.

Auto average tolerance

To automatically compute and store the average position of points that have the same name, select the **Auto average** within tolerance option. An averaged position has a higher search class than a normal observation.

When the **Auto average** option is selected, and an observation to a duplicate point is within the specified duplicate point tolerance settings, the observation and the computed average position (using all the available point positions of the same name) are stored.

You can select the averaging method in the **Cogo settings** screen.

The Origin software computes an averaged coordinate by averaging the grid coordinates computed from the underlying coordinates or observations. Observations that do not allow a grid coordinate to be resolved (for example, angles only observations) are not included in the average coordinate.

If the new point is further from the original point than the tolerance specified, you can choose what to do with the new point when you store it. The options are:

- **Discard** – discard the observation without storing.
- **Rename** – rename to a different point name.
- **Overwrite** – Overwrite and delete the original point, and all other points of the same name and the same (or lower) search class.
- **Store as check** – Store with a lower classification.
- **Store and reorient** – (This option only appears if you are observing a backsight point.) Store another observation that will provide a new orientation for subsequent points measured in the current station setup. Previous observations are not changed.
- **Store another** – Store the point, which can then be averaged in the office software. The original point is used in preference to this point.

If the Store another option is used with multiple observations to a point with the same name and from the same station setup, then when measuring topo points the software automatically computes and records a Mean Turned Angle (MTA) observation to the point. This MTA observation provides the preferential position for the point.

- **Average** – Store the point and then compute and store the averaged position.

When you select **Average**, the current observation is stored and the computed average position appears, along with the computed standard deviations for the north, east, and elevation ordinates. If there are more than two positions for the point, a **Details** softkey appears. Tap **Details** to view the residuals from the average position to each individual position. You can use the **Residuals** form to include or exclude specific positions from the average computation.

Face 1 and face 2 observation tolerance

In a conventional survey, when you attempt to measure a point on face 2 that already exists as a face 1 measurement, the software does not warn that the point already exists.

When you carry out two-face observations in a conventional survey during **Station setup, Station Setup Plus, Resection**, or when measuring **Rounds**, the software checks that the face 1 and the face 2 observations to a point are within a preset tolerance.

If the new point is further from the original point than the tolerance specified, you can choose what to do with the new point when you store it. The options are:

- **Discard** – discard the observation without storing.
- **Rename** – rename to a different point name.
- **Overwrite** – Overwrite and delete the original point, and all other points of the same name and the same (or lower) search class.
- **Store as check** – store with a classification of Check.
- **Store another** – store the observation.

Once you have completed the **Station Setup Plus**, **Resection**, or **Round** measurements, the software saves the Mean Turned Angles to each of the observed points. The software does not check for duplicate points at this stage.

Different point name options

To enable proximity check for points with different names, enable the **Proximity check** switch. Enter the horizontal and vertical distance that the new point can be from any existing point.

NOTE –

- The vertical tolerance is only applied when the new observed point is within the horizontal tolerance. Use the vertical tolerance to avoid the proximity check warning when new points are measured above or below existing points but are legitimately at a different elevation, for example the top and bottom of a vertical curb.
- The proximity check is only performed on observations, not on keyed in points. The proximity check is not performed in stakeout, GNSS Continuous measurement, or Calibration Point, and it is not performed in jobs with a No Projection coordinate system.

NMEA output options

If your equipment setup includes additional equipment that requires precise positions, such as ground penetrating radar or sonar systems, you can configure Origin to share positions from the connected GNSS receiver as NMEA-0183 messages.

To output NMEA-0183 format messages and send them to the device connected to the GNSS receiver, configure the settings in the **NMEA outputs** screen of your GNSS survey style.

NOTE – The **Use job coordinates** check box and the **Advanced settings** group box are available only when using the Spectra Geospatial SP100 receiver.

Use job coordinates

Select the **Use job coordinates** check box if you want the selected NMEA messages to be generated by the Origin software so that they use the same coordinates and heights as the job.

CAUTION – If you are using a receiver with IMU tilt compensation:

- If IMU tilt compensation is **enabled** and the **Use job coordinates** check box is **selected**, the software outputs pole tip (ground) positions, irrespective of whether the IMU is aligned or if the receiver is operating in GNSS-only mode.
- If IMU tilt compensation is **enabled** and the **Use job coordinates** check box is **not selected**, the receiver applies the antenna height and outputs pole tip (ground) positions.
- If IMU tilt compensation is **disabled**, the receiver outputs antenna phase center (APC) positions.

For GNSS receivers that do not support tilt, heights are output as antenna phase center (APC) heights.

NOTE – If you are using an SP80 or SP85 receiver, NMEA output during a compensated point measurement remains antenna phase center (APC) heights. There is no tilt compensation applied to positions in the NMEA messages output in either receiver or job coordinates.

Selecting the **Use job coordinates** check box limits the available NMEA message types to NMEA GGA, GGK, GLL and PJK messages. Clearing this check box makes more NMEA messages available for output.

Clear the **Use job coordinates** check box if you want the selected NMEA messages to be generated by the receiver so that they use the height reference available in the receiver. For orthometric heights this means the geoid model built into the receiver firmware is used, not the one used by the job.

Messages to output

Select the message types to output, and the rate at which each message type is output. When the **Use job coordinates** check box is selected, rates faster than 1s apply only to positions generated during stakeout.

Serial port settings

1. Select the **Receiver port** that the additional device is using to connect to the GNSS receiver. The Origin software will output NMEA messages to the same port so that they can be used by the additional device.
 - When using a USB port:
 - If you are using cable PN 80751, from the USB lemo port on the receiver to a USB-A connector, select the **USB virtual serial port** option.
 - If you are using cable PN 87144, from the USB lemo port on the receiver to a DB9 serial connector, select the **USB serial port** option.
 - When you select **Bluetooth** in the **Receiver port** field, the Origin software assumes the additional device is connected using Bluetooth port 1 on the GNSS receiver.

NOTE – To use Bluetooth to output NMEA messages when using a controller running Android, a GNSS receiver with Trimble ProPoint technology must have firmware version 6.28 or later. If the GNSS receiver does not have Trimble ProPoint technology, the receiver must have firmware version 5.68 or later.

2. Make sure the **Baud rate** and **Parity** settings match those set in the device that is receiving the NMEA messages.

Advanced settings

The **Advanced settings** group box contains configuration items that affect the format of the NMEA messages that are output.

NOTE – The IEC extensions, and the setting of the GST message to GPGST rather than GLGST or GNGST at all times, are available only when using NMEA generated by the receiver firmware, where the **Use job coordinates** check box is not selected.

Include IEC61162-1:2010 GNSS extensions

This setting selects which standard to use for the compliant messages. When not selected, the NMEA messages comply with NMEA-0183 Standard for Interfacing Marine Electronic Devices, Version 4.0, November 1, 2008. When selected, the messages comply with the International Electrotechnical Commission (IEC) 61162-1, Edition 4 2010–11.

Max. DQI=2 in GGA

When selected, the **Quality Indicator** field in the GGA output message is never greater than 2 (DGPS). This is to support legacy systems that do not fully support the NMEA standard.

Max. age 9s in GGA

When selected, the age of differential data field in the GGA message is never greater than 9 seconds. This is to support legacy systems that do not fully support the NMEA standard.

Extended GGA/RMC

Select this check box to output high precision position data in the NMEA messages. Clear this check box to conform to the NMEA standard message length of 82 characters. If cleared, the precision of the position and height data is reduced by truncating the number of decimal places.

GP always

When selected, the NMEA talker ID is always \$GP for NMEA GST, GGA, and GLL messages regardless of the constellation(s) being tracked. For receiver firmware versions earlier than v5.10, the **GP always** setting applies only to the GST message type.

To start and end the GNSS survey

The steps for starting the GNSS survey depend on the type of GNSS survey you are starting and whether the receiver is in base mode or receiver mode.

NOTE – If you start a survey while the receiver is logging data, logging stops. If you start a survey that specifies data logging, logging restarts to a different file.

GNSS antenna height measurement

This topic describes how to measure the height of an antenna mounted on a range pole or tripod when the **Measured to** field is set to **Bottom of antenna** or **Bottom of antenna mount**, or **Bottom of quick release**.

TIP – In a GNSS survey the software **automatically adds the appropriate offset value** for the **Measurement method** you select when you enter the **Antenna height** value. You can also use the offset values shown as a reference if your local regulations require you to manually calculate the APC height as a check for fieldbook purposes.

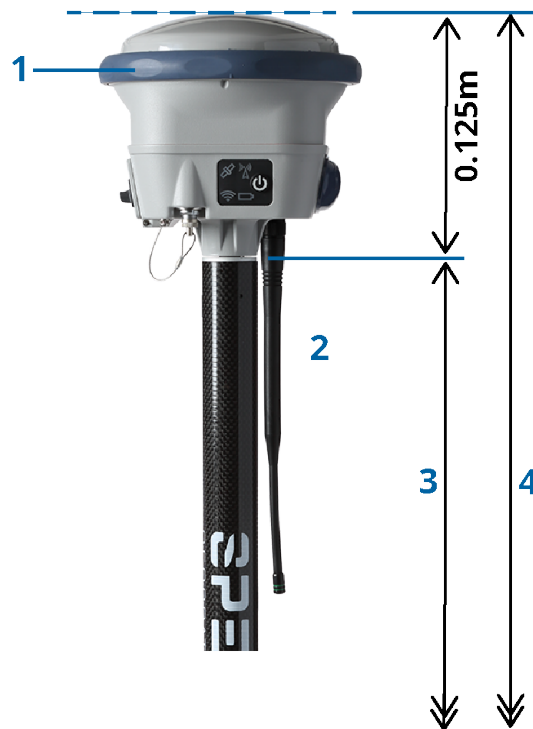
Spectra Geospatial SP100 receiver

CAUTION – When measuring or staking out points using IMU tilt compensation, make very sure the entered antenna height and measurement method is correct. Alignment reliability and pole tip position reliability, especially during movement of the antenna while the pole tip is stationary, relies completely on the antenna height being correct. Residual error in horizontal position caused by antenna motion while measuring when the pole tip is stationary cannot be removed by changing the antenna height after measuring the point.

Receiver mounted on pole

For the offsets automatically applied by the software for each measurement method, refer to the following diagram where:

- (1) is the receiver
- (2) is the bottom of the antenna mount
- (3) is the uncorrected height measured from the pole tip to the bottom of the antenna mount
- (4) is the corrected height to the APC from the bottom of the pole

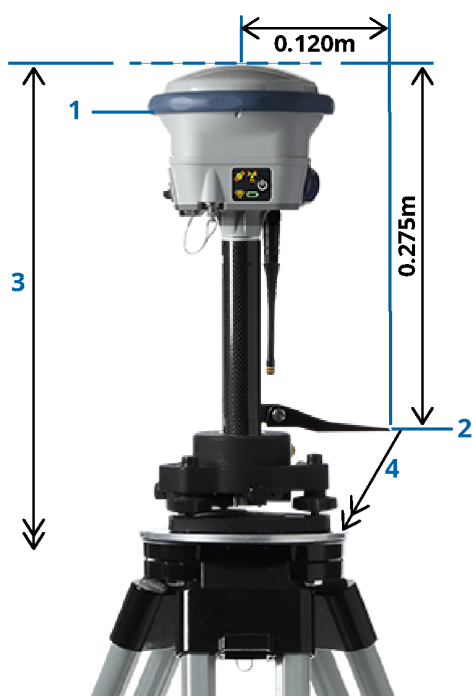


Receiver mounted on tripod

The following describes how to measure the height of a receiver using the lever on the receiver extension, **when the receiver is mounted on a tripod.**

For the offsets automatically applied by the software for each measurement method, refer to the following diagram where:

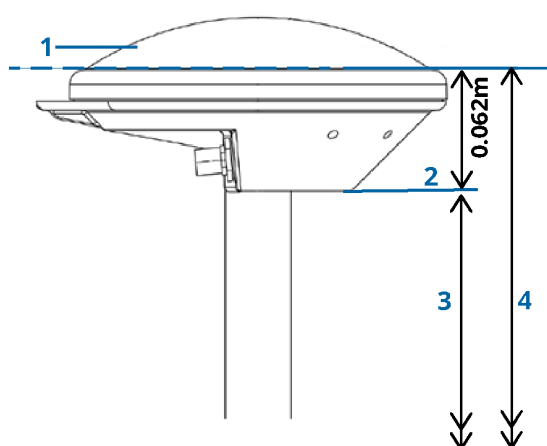
- (1) is the receiver
- (2) is the lever of the extension
- (3) is the corrected height to the APC from the ground mark
- (4) is the uncorrected height, measured using a tape or measuring rod from the ground mark to the tip of the lever (note this is a slope measurement)



Zephyr 3 Rover antenna

For the offsets automatically applied by the software, refer to the following diagram where:

- (1) is the Zephyr 3 Rover antenna
- (2) is the bottom of the antenna mount
- (3) is the uncorrected height measured from the pole tip to the bottom of the antenna
- (4) is the corrected height to APC



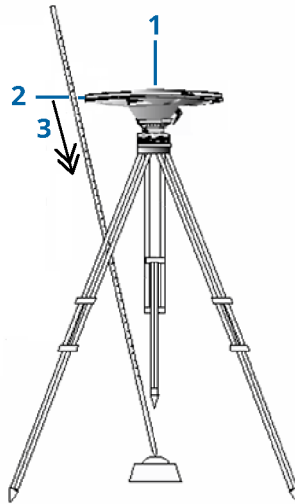
NOTE – If this antenna is mounted on a tripod, measure the height from the ground mark to the top of the notch protruding from the side of the antenna.

Zephyr 3 Base antenna

If the Zephyr 3 Base antenna is mounted on a tripod, measure the height to the bottom of the notch on the side of the antenna.

For the **Bottom of notch** measurement method when the antenna is on a tripod, refer to the following diagram where:

- (1) is the Zephyr 3 Base antenna
- (2) notch on the perimeter of the groundplane
- (3) is the uncorrected height from the ground mark to the bottom (underside) of the notch



NOTE – Measure the height to three different underside notches around the perimeter of the groundplane. Then record the average as the uncorrected antenna height.

GNSS base receiver setup

To set up and connect your surveying equipment when using a Spectra Geospatial integrated GNSS receiver as a base:

1. Assemble and erect the equipment at the base:
 - a. Set the antenna over the ground mark using a tripod, a tribrach, and a tribrach adaptor.
 - b. Use the tripod clip to hang the receiver on the tripod.

Alternatively, place the receiver in its base case. Run the antenna cable out of the portal in the side of the base case to the antenna so that the case can stay closed while the receiver is running.


- c. Assemble and erect the radio antenna.
2. If you are using an **RTK radio data link** using an external radio **connected using a cable**, connect the controller, receiver, radio and, if required, the power supply:
 - a. If you are using a separate GNSS antenna, use the GNSS antenna cable to connect the GNSS antenna to the GNSS receiver port labeled **GPS**.

NOTE – When inserting cables, align the red dot on the plug with the red line on the socket and then insert the plug carefully. Do not force plugs into the receiver ports.

- b. Connect the radio antenna to the radio using the cable attached to the antenna.
- c. Connect the radio to the GNSS receiver port 3 using the appropriate cable.
- d. For some third-party radios, a separate power supply is needed for the radio. If external power is required, connect the power supply with a 0-shell Lemo connection to port 2 or port 3 on the receiver.
- e. Connect the controller to the GNSS receiver port 1 using the 0-shell Lemo-to-Hirose cable.

CAUTION – If you are using a radio to transmit base data to the rover, make sure that the radio antenna is connected to the radio before you connect it to the receiver and start the base survey. If it is not, the radio will be damaged.

To configure the RTK radio data link in Origin, see [To configure a base radio data link, page 357](#).

3. Turn on the receiver.
4. Turn on the controller.
5. If you are using an **RTK internet data link** or an **RTK radio data link** using the receiver's integrated radio or a Bluetooth connection to a TDL450B/ADL450B radio, connect the controller to the receiver using Bluetooth.
 - a. On the controller, start Origin.
 - b. Tap  and select **Settings / Connections**. Select the **Bluetooth** tab.
 - c. In the **Connect to GNSS rover** field, select the receiver.
 - d. Pair with the device.

TIP – If you are using a modem in another device such as a mobile phone, turn on the device and connect it to the controller using Bluetooth or a serial cable before you connect the controller to the receiver.

To configure the RTK data link in Origin, see [To configure a base internet data link, page 365](#) or [To configure a base radio data link, page 357](#).


6. To start the survey, see [To start the base survey, page 395](#).

To start the base survey

To set up and connect your surveying equipment when using a Spectra Geospatial integrated GNSS receiver as a base:

1. Set up and connect the equipment at the base. See [GNSS base receiver setup, page 393](#).
2. On the controller, start Origin. If the Origin software does not automatically connect to the receiver, see [Auto-connect settings, page 485](#).

NOTE – If you are connecting a controller running Android to an SP60 receiver, turn off the **Auto-connect** to GNSS receivers function in Origin, and always power up the receiver and wait until it is **tracking satellites** before attempting to connect the software to the receiver. If you attempt to connect to the SP60 receiver from the controller before the SP60 is ready then the Bluetooth pairing to the receiver can be lost.

3. Tap  and select **Measure** and select the required survey style from the list.
4. From the **Measure** menu, tap **Start base receiver**.
 - If the controller is connected to a receiver that was logging data, the data logging stops.
 - If the base survey requires an internet connection and one doesn't already exist, the connection is established.

TIP –

- You can use a **Custom** radio if the radio you have is not listed.
- When you start a survey, the Origin software automatically negotiates the highest possible baud rate for communicating with the connected receiver.

The **Start base** screen appears.

5. If the receiver is Spectra Geospatial SP100 GNSS receiver, configure settings for the base station:
 - a. In the **Point name** field, enter the base station name and then [enter the base coordinates](#).

The **Observation class** field shows the observation class of the base point.

NOTE – If you carry out a real-time survey using:

- RTCM 2.x corrections and use a base point name that is more than eight characters long, the name will be shortened to eight characters when it is broadcast.
- RTCM 3.0 corrections, you must use a base point name (in upper case) that is within the range RTCM0000 to RTCM4095.

- b. Enter values in the **Code** (optional) and **Antenna height** fields.
- c. Set the **Measured to** field as appropriate.
- d. In the **Station index** field, enter a value.

This value is broadcast in the correction message, and must be in the range 0–31.

TIP – Tap **Scan** to view a list of other base stations operating on the frequency you are using. The list shows the station index numbers of the other bases and the reliability of each. Choose a different station index number to those displayed.

- e. If the receiver you are using supports transmission delays, the **Transmission delay** field appears. Choose a value depending on how many base stations you intend to use. For more information about transmission delays, see [Operating several base stations on one radio frequency, page 399](#)

6. Tap **Start**.

The base receiver starts to record data and transmit corrections in the format selected in the Survey Style.

If you are carrying out a real-time survey, a message confirms the base receiver has started.

NOTE – For a real-time survey, check that the radio is working before leaving the equipment. The data light should be flashing.

If you are logging data in the controller, and/or you are uploading corrections to a remote server, the **Base** screen appears. It shows which point is being surveyed and the time that has elapsed since data logging started. Leave the controller connected to the base receiver and set up the rover using another controller.

If your base is operating as an internet server, the **Base** screen appears and in addition to the above, it shows the IP address that has been assigned to the base, as well as the number of rovers that are currently connected to the base.

Disconnect the controller from the base receiver but **do not** turn off the receiver. You can now set up the rover receiver.

To enter the base station coordinates

For an RTK survey, the base station coordinates must be **Global** coordinates, that is the coordinates must be in the **Global reference datum** at the **Global reference epoch**. The **Global reference datum** and the **Global reference epoch** are shown in the **Select coordinate system** screen of the job properties. See [Coordinate system, page 79](#).

NOTE – You can enter base station coordinates only when using the Spectra Geospatial SP100 GNSS receiver. When using another model of Spectra Geospatial receiver, the software always uses the base station coordinates received from the base station.

For a known point

If you have set up the receiver on a known point:

1. When starting the survey at the base station, enter the base station name in the **Point name** field.
2. Tap **Key in**.
3. Set the **Method** field to **Keyed in coordinates**.

4. Check that the coordinate fields are showing the format you expect. If they do not, tap **Options** and change the **Coordinate view** setting to the required coordinate type.

If the known coordinates are:

- **Global** coordinates, make sure the coordinate fields are **Latitude, Longitude and Height (Global)**.
 - **Grid** coordinates (and projection and datum transformation parameters are defined) make sure the coordinate fields are **Northing, Easting, Elevation**.
 - **Local geodetic** coordinates (and a datum transformation is defined) make sure the coordinate fields are **Latitude, Longitude, and Height (local)**.
5. Key in the known coordinates for the base receiver.
For more information, see [Base station coordinates, page 397](#).
 6. Tap **Store**.


For an unknown point

If you have set up the base station on a point for which you do not know the coordinates:

1. When starting the survey at the base station, enter the base station name in the **Point name** field.
2. Tap **Key in**.
3. Tap **Here**.

The current SBAS position (if tracked), or the current autonomous position derived by the GNSS receiver is displayed.

NOTE -

- If you want an SBAS position, ensure the receiver is tracking an SBAS satellite by checking the SBAS icon  is displayed on the status line when you tap **Here**. The receiver can take 120 seconds to lock on to SBAS. Alternatively, check the **Observation class** field before starting the base.
- Within a job, only use an autonomous position (the **Here** softkey) to start the first base receiver.

4. Tap **Store**.

Base station coordinates

For an RTK survey, the base station coordinates must be **Global** coordinates, that is the coordinates must be in the **Global reference datum** at the **Global reference epoch**. The **Global reference datum** and the **Global reference epoch** are shown in the **Select coordinate system** screen of the job properties. See [Coordinate system, page 79](#).

NOTE - The coordinates you enter should be as accurate as possible. Every 10 m of error in a base station coordinate can introduce a scale error on every measured baseline of up to 1 ppm.

The following recognized methods, listed in descending order of accuracy, are used to determine base station coordinates:

- Published or precisely-determined coordinates.
- Coordinates computed from published or precisely-determined grid coordinates.
- Coordinates derived using a reliable differential (RTCM) broadcast based on published or precisely-determined coordinates.
- An SBAS position generated by the receiver. Use this method if no control exists for the location and you have a receiver that tracks SBAS satellites.
- An autonomous position generated by the receiver. Use this method for real-time surveys in a location where no control exists. Spectra Geospatial strongly recommends that you calibrate any jobs started by this method on a minimum of four local control points.

NOTE – If the keyed in coordinates differ from the current autonomous position generated by the receiver by more than 300 m, a warning message appears.

Survey integrity

To preserve the integrity of a GNSS survey, consider the following:

- When you start subsequent base receivers for a particular job, make sure that each new base coordinate is in the same terms as the initial base coordinate.

NOTE – Within a job, only use an autonomous position to start the **first** base receiver. An autonomous position is equivalent to an assumed coordinate in conventional surveying.

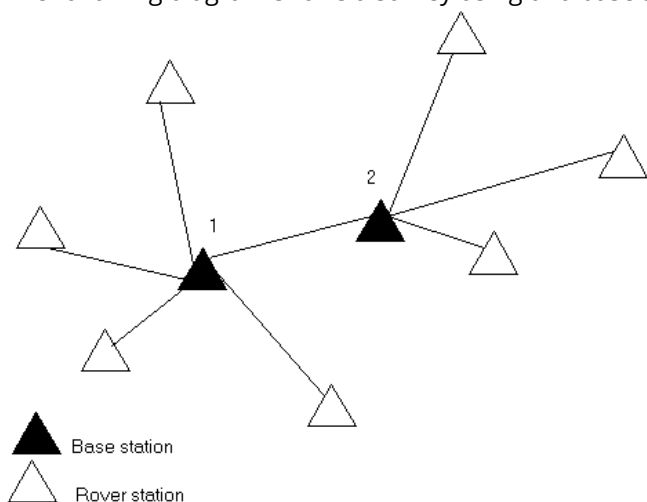
- Coordinates published by a reliable source and coordinates determined by control surveys should be in the same system.
- If subsequent base coordinates are not in the same terms, regard observations from each base as a separate job. Each needs a separate calibration.
- Because measured real-time kinematic points are stored as vectors from the base station, not as absolute positions, the origin of the survey must be an absolute position in the **Global reference datum** from which the vectors radiate. If other base stations are subsequently set up on points measured from the original base station, all vectors are resolved back to the original base station.
- It is possible to start the base on any kind of coordinates, for example, grid or local ellipsoid coordinates. However, in a real-time survey, the Origin software must store a position in the **Global reference datum** for the base when a rover survey is started. It is this position that is held fixed as the origin of the network.

When you start a rover survey, the Origin software compares the position broadcast by the base receiver with points already in the database. If a broadcast point has the same name as a point in the database, but different coordinates, the Origin software uses the coordinates that are in the database. These coordinates were keyed in or transferred by you, so it assumes that you want to use them.

If a point in the database has the same name as the one being broadcast by the base, but the coordinates are NEE or local LLH rather than **Global** coordinates, the Origin software converts this point to **Global** coordinates using the current datum transformation and projection. It then uses these

as the base coordinates. If no datum transformation and projection are defined, the broadcast **Global** point is automatically stored and used as the base.

The following diagram shows a survey using two base stations.



In this survey, Base station 2 was first surveyed as a roving point from Base station 1.

NOTE – Base stations 1 and 2 **must** be linked together by a measured baseline, and Base station 2 **must** be started with the same name that it had when it was surveyed as a roving point from Base station 1.

Operating several base stations on one radio frequency

In an RTK survey you can reduce the effects of radio interference from other base stations on the same frequency by operating your base station with a different transmission delay.

When you use multiple base stations, you set the transmission delay for each base when you start the base survey. Each base must broadcast with a different transmission delay and station index number. The delays allow the rover to receive corrections from all of the base stations at once on one frequency. The station index numbers let you select which base station to use at the rover.

NOTE –

- You can set the base radio transmission delay only when using Trimble GNSS receivers or the Spectra Geospatial SP100 GNSS receiver.
- When you carry out surveys using different base stations in one job, make sure that the coordinates of the base stations are in the same coordinate system and are in terms of each other.

Hardware and firmware requirements

To operate several base stations on one frequency, you must use receivers that support the CMR+ or CMRx correction format.

All other base and rover receivers must be Trimble GNSS receivers.

NOTE – Do not use transmission delays if you intend to use radio repeaters.

To start the base with a transmission delay

Before you start the base receiver, do the following:

1. Select the CMR+ or CMRx correction format. Select this in the survey style for both the base and the rover.
2. Set the over air baud rate in the radio to at least 4800 baud.

NOTE – If you use a 4800 over air baud rate you can only use two base stations on one frequency. Increase the over air baud rate if you want to increase the number of base stations on one frequency.

When you start the base survey, do the following:

1. In the **Station index** field, enter a value within the range 0–31. This number is broadcast in the correction message.

TIP – You can configure the default station index number in the survey style. See [Base options, page 351](#).

2. If the receiver you are using supports transmission delays, the **Transmission delay** field appears. Choose a value in ms, depending on how many base stations you want to use:

	Base 1	Base 2	Base 3	Base 4
One base station	0	–	–	–
Two base stations	0	500	–	–
Three base stations	0	350	700	–
Four base stations	0	250	500	750

To swap bases during a real-time rover survey

If you are using multiple bases on the same frequency, you can swap bases during the rover survey.

To swap bases, from the **Measure** menu, select **Swap base receiver**.

The **Select base station** screen appears. It shows all the base stations operating on the frequency you are using. The list shows the station index numbers of each base and the reliability of each. Tap the base you want to use.

NOTE – When you change to a different base, your OTF receiver automatically starts the initialization.

GNSS rover receiver setup

 
To set up and connect your surveying equipment when using a Spectra Geospatial integrated GNSS receiver as a rover:

1. Assemble and erect the equipment for the rover:
 - a. Mount the receiver onto a range pole. Power for the receiver is supplied by the internal battery in the receiver.

NOTE - In a postprocessed survey you may find it useful to use a bipod to hold the range pole while taking measurements.

- b. Attach the controller to the holder.
 - c. Connect the controller holder to the range pole.
2. Turn on the receiver.
3. Turn on the controller.
4. Connect the controller to the receiver using Bluetooth or a USB serial cable.


To connect the controller to the receiver using Bluetooth:

- a. Tap  and select **Settings / Connections**. Select the **Bluetooth** tab.
 - b. In the **Connect to GNSS rover** field, select the receiver.
 - c. Pair with the device.
5. On the controller, start Origin. If the Origin software does not automatically connect to the receiver, see [Auto-connect settings, page 485](#).

NOTE - If you are connecting a controller running Android to an SP60 receiver, turn off the **Auto-connect** to GNSS receivers function in Origin, and always power up the receiver and wait until it is **tracking satellites** before attempting to connect the software to the receiver. If you attempt to connect to the SP60 receiver from the controller before the SP60 is ready then the Bluetooth pairing to the receiver can be lost.

 
TIP - If you are using a modem in another device such as a mobile phone, turn on the device and connect it to the controller using Bluetooth or a serial cable before you connect the controller to the receiver.

To start an RTK rover survey


1. [Set up and connect the GNSS receiver](#).
2. If you are receiving corrections from a single base station, start the base receiver.
3. In Origin, make sure the required job is open.
4. To start the survey, tap  and select **Measure** or **Stakeout**. If there is more than one survey style configured, select a survey style from the list. Select the software function to use, for example

Measure points.


When you select a survey style for the first time, the software prompts you to customize the style for your specific hardware.

5. If a message warns that an option in the receiver is not available, then your receiver options subscription may have expired. To check the expiry date, tap  and select **Instrument / Receiver settings** and check the values shown in the **Trimble GNSS subscriptions** group.
6. If you have selected any "Prompt for" settings in the RTK survey style, you are prompted to confirm the correction source. Tap **Accept**.
7. Use the status bar to confirm the software is connected and receiving correction data.
If base corrections are being received and there are sufficient satellites, the survey initializes automatically using the on the fly initialization method.
8. If you are using a receiver with IMU tilt compensation, align the IMU.
9. Measure or stake out points.

To start an RTK radio survey at the rover

1. Set up and connect the GNSS receiver.
2. In Origin, make sure the required job is open.
3. To start the survey, tap  and select **Measure** or **Stakeout**. If there is more than one survey style configured, select a survey style from the list. Select the software function to use, for example **Measure points**.

When you select a survey style for the first time, the software prompts you to customize the style for your specific hardware.

4. If a message warns that an option in the receiver is not available, then your receiver options subscription may have expired. To check the expiry date, tap  and select **Instrument / Receiver settings** and check the values shown in the **Trimble GNSS subscriptions** group.
5. If the receiver you are using supports transmission delays and the **Prompt for station index** check box in the **Rover options** option in the survey style is selected, the **Select base station** screen appears. It shows all the base stations operating on the frequency you are using. The list shows the station index numbers of each base and the reliability of each. Select the base you want to use and tap **Enter**.

For more information about using transmission delays, see [Operating several base stations on one radio frequency, page 399](#).


TIP – To check the point name of the base station being used in the rover survey, select **Files / Review current job** and inspect the **Base point record**.

6. Use the status bar to confirm the software is connected and receiving correction data.
If base corrections are being received and there are sufficient satellites, the survey initializes automatically using the on the fly initialization method.


7. If you are using a receiver with IMU tilt compensation, align the IMU.
8. Measure or stake out points.


TIP – To start a survey using VRS or FKP (RTCM), you must send an approximate position for the rover receiver to the control station. When you start the survey, this position is automatically sent through your radio communications link in a standard NMEA position message. It is used to compute the RTK corrections your receiver will use.

To start an RTK internet survey at the rover

1. Set up and connect the GNSS receiver.
2. If you are receiving corrections from a single base station, start the base receiver.
3. In Origin, make sure the required job is open.
4. To start the survey, tap  and select **Measure** or **Stakeout**. If there is more than one survey style configured, select a survey style from the list. Select the software function to use, for example **Measure points**.

When you select a survey style for the first time, the software prompts you to customize the style for your specific hardware.

5. If a message warns that an option in the receiver is not available, then your receiver options subscription may have expired. To check the expiry date, tap  and select **Instrument / Receiver settings** and check the values shown in the **Trimble GNSS subscriptions** group.
6. If you are using the modem in the controller to connect to the internet and it is:
 - already connected, the controller uses the existing internet connection for the base data.
 - not yet connected, the controller opens an internet connection using the connection specified in the survey style.
7. If the **Prompt for GNSS correction source** check box is selected in your survey style, you are prompted to select the GNSS correction source to use.
8. If **Connect directly to Mountpoint** or the **NTRIP Mountpoint** name was not configured for the GNSS correction source, or the defined mountpoint cannot be accessed, you are prompted to select the mountpoint you want to receive corrections from.

The message **Connecting to GNSS internet source** appears. The software connects to the mountpoint and then begins the survey. Once the corrections data link is established, the GNSS internet source icon  appears on the status bar.

NOTE – If you are using the internal modem of an SP80 receiver and the first connection attempt fails, you may need to wait up to a minute for the modem to power up and initialize before you attempt the connection again.


If base corrections are being received and there are sufficient satellites, the survey initializes automatically using the on the fly initialization method.


9. If you are using a receiver with IMU tilt compensation, align the IMU.
10. Measure or stake out points.

Receiving RTK data on demand

If you are using an internet connection to send RTK data from the base to the rover, then you can use the **RTK on demand** functionality to control the amount of data broadcast from the base receiver. You can request the base station to send data only when you require it. This will reduce the amount of data received by your cellular phone and may reduce costs from your cellular network service provider.

The RTK on demand function requires an internet connection at both the GNSS base station and the rover. The Origin software must be at both the GNSS base station and the rover, or you must be connected to the Trimble VRS Now subscription service.

Once the RTK survey is running over an internet connection, you can access the **RTK on demand** controls by tapping the  icon in the status bar.


When the survey is started, the Origin software will default to Play  mode. When in Play mode, RTK data will be streamed continuously.

If you tap the **II** softkey, your survey will go into Pause mode and data will only be streamed when required. The Origin software requests data from the base station when initialization is lost, or when you choose to measure a point, or when you start continuous topo, or when you use the stakeout functionality. As soon as the receiver has regained initialization, or the survey task is complete, then the Origin software requests the base station to stop streaming data.

NOTE - When in Pause mode, you cannot measure rapid points or fast fix points.

If you tap the **■** softkey then your survey will go into Stop mode and no RTK data will be streamed. This can be used in situations where you do not wish to end your survey, but do not require the receiver to stay initialized until you are ready to start surveying again.

To disconnect and reconnect to the GNSS internet source

If you lose the connection to the GNSS internet source when using an internet data link, tap the GNSS internet source icon  in the status bar.

The **Rover data link** screen appears.

If the GNSS internet source is the controller's internal modem, tap **Connect** in the **Rover data link** screen. The operating system **Networks** tab opens from the system tray. Use the **Networks** tab to re-establish the internet connection, and when that connection is re-established Origin will automatically reconnect to the base.

If the internet remains connected, but the link to the base data server is disconnected, tap **Retry** in the "Base station data connection closed unexpectedly" message. Origin will then attempt to reconnect to the base data server. Alternatively, if you wish to reconnect at a later time, tap **OK** in the "Base station data connection closed unexpectedly" message. When you want to reconnect, tap **Connect** in the **Rover data link** screen.

If the GNSS internet source is an external modem, such as the receiver's modem, tap **Redial** to have the external modem re-establish its internet connection. When that connection is established, Origin will automatically reconnect to the base.

When using an external modem, to end the connection at any time, tap **Hang up**. Continue the survey and then reconnect to the internet when required. The connection can be hung up in the **Rover data link** screen

only when the connection was established when you started the survey. However, you can always redial the connection from within the **Rover data link** screen while the survey is running.

RTK initialization

When you start an RTK survey, if base corrections are being received and there are sufficient satellites, the survey initializes automatically using the on the fly initialization method. A survey must be initialized before centimeter-level surveying can begin. If initialization does not occur automatically, see [To initialize on a known point, page 406](#).

After initialization, the survey mode changes from **Not initialized** to **Initialized**. The mode remains **Initialized** if the receiver continuously tracks the minimum number of satellites. If the mode changes to **Not initialized**, you must reinitialize the survey.

NOTE – Initialization reliability depends on the initialization method used and whether multipath occurred during the initialization phase. Multipath occurs when GNSS signals are reflected off objects, such as the ground, a building, or trees. When initializing, always choose a site that has a clear view of the sky and is free of obstructions that could cause multipath. The initialization process in Spectra Geospatial receivers is very reliable, but to reduce the effects of multipath, use good survey practice and periodically check your initialization by measuring previously measured points with a new initialization. To reduce the effects of multipath during an on-the-fly initialization, move around.

To reinitialize an RTK survey while roving

1. In the **RTK Initialization** screen select one of the following from the **Method** field:

- **Reset RTK**
- **Reset SV tracking** to drop all satellite tracking, reacquire satellites and reinitialize the RTK survey

NOTE – Resetting SV tracking in compromised GNSS environments is not recommended.

2. Tap **Reset** or **Start**.

To initialize RTK on independent subsets of satellites

You can initialize an RTK survey using independent subsets of tracked satellites. For more information, see [To use independent subsets of satellites tracked in RTK surveys, page 429](#).

In the **RTK Initialization** screen:

- To initialize on the first independent subset of satellites, select **Reset – track SV set A** from the **Method** field and tap **Reset**.
- To initialize on the second independent subset of satellites, select **Reset – track SV set B** from the **Method** field and tap **Reset**.
- To initialize on all available satellites, select **Reset – track all SVs** from the **Method** field and tap **Reset**.

TIP – The **Reset RTK** and **Reset SV tracking** menu items operate on the currently selected SV tracking subset.

Required satellites for RTK initialization

The number of satellites required depends on whether you are using satellites from only one constellation or a combination of constellations. After initialization, a position can be determined and the initialization can be maintained with one satellite less than the number required to initialize. If the number of satellites drops below this number, the survey must be reinitialized.

The minimum L1/L2 satellites required are:

Satellite systems	Required satellites for initialization	Required satellites to produce positions
GPS only	5 GPS	4 GPS
GPS + QZSS	4 GPS + 1 QZSS	3 GPS + 1 QZSS
GPS + GLONASS	4 GPS + 2 GLONASS	3 GPS + 2 GLONASS
GPS + BeiDou	4 GPS + 2 BeiDou	3 GPS + 2 BeiDou
GPS + Galileo	4 GPS + 2 Galileo	3 GPS + 2 Galileo
BeiDou only	5 BeiDou	4 BeiDou
BeiDou + GPS	4 BeiDou + 2 GPS	3 BeiDou + 2 GPS
BeiDou + GLONASS	4 BeiDou + 2 GLONASS	3 BeiDou + 2 GLONASS
GLONASS only	–	–
Galileo only	–	–

NOTE – You cannot initialize if the PDOP is greater than 7.

To initialize on a known point

NOTE – Initialization on a known point is available only when using an SP100 receiver with the IMU disabled. To initialize on a known point, the receiver must be in GNSS-only mode. To switch to GNSS-only mode, tap the receiver icon in the status bar to view the **GNSS functions** screen and then tap **IMU tilt compensation** to toggle on/toggle off GNSS-only mode.

1. Position the rover antenna over the known point.

In an RTK survey, the known point must be a previously measured point in the current job.

In a postprocessed survey you can initialize on:

- a point measured previously in the current job
- a point that you will provide coordinates for later (before the data is postprocessed)

2. In the **Method** field, select **Known Point**.

3. In the **Point name** field, select the known point from the list of points in the job.

4. Enter values in the **Antenna height** field, and make sure that the setting in the **Measured to** field is correct.

5. When the antenna is centered and vertical over the point, tap **Start**.

The controller starts to record data, and the static icon  appears in the status bar. Keep the antenna vertical and stationary while data is recorded.

TIP – Tap **eBubble** (or press **Ctrl + L**) to display the GNSS eBubble. When the bubble is green, tap **Start** to ensure that the point is measured within the predefined tilt tolerance. The tolerance is that specified for a topo point.

A message confirms when the receiver is initialized, together with the deltas from the current position to the known point.




6. Tap **Accept**.

If the initialization fails, the results are displayed. Tap **Retry** to retry the initialization.

To start an RTX survey

1. Start the survey using the RTK survey style you configured for RTX. See [Configuring an RTX survey, page 375](#).

When data from the RTX correction service is being received via:

- RTX (SV signals), the radio icon  changes to an RTX icon , and RTX appears on the status line.
- RTX (internet), the GNSS internet source icon  appears.


2. Wait for convergence.

Typical convergence times depend on the region you are working in and the GNSS receiver you are using:

- If the GNSS receiver has Trimble ProPoint technology, in most cases you should experience convergence in 1-3 minutes in RTX fast regions and 3-10 minutes globally.
- If the GNSS receiver does not have Trimble ProPoint technology, convergence will typically take 5-10 minutes in RTX fast regions and less than 15-30 minutes globally.

For more information on convergence times, see [RTX correction service, page 374](#).

When the message **Convergence has been gained** appears, you can begin surveying

TIP – To view the **RTX status** screen, in an RTX (SV) survey, tap . In an RTX (internet) survey, tap **RTX status** in the Instrument menu.

 
3. If you are using a receiver with IMU tilt compensation, align the IMU.
4. Measure or stake out points.

NOTE –

- Although the RTX rover solution may have converged, it may not yet meet the precision tolerances for point measurement. You may need to remain at a point longer to meet the precision tolerances specified, as the RTX rover solution should converge more when the rover is in static mode. Precisions for surveys using the Trimble Centerpoint RTX service are very sensitive to environmental conditions such as multipath, ionosphere scintillation, and particularly tropospheric conditions and tree canopy.
- To change the precision level at which convergence is acceptable, clear the **Auto tolerance** check box in the **Rover options** screen and enter the values that you want to use.

To compute an RTX-RTK offset


WARNING – Take great care to avoid changing the offset already in a job to a less precise offset, as this action may cause the precision of the points stored in the job to no longer meet the precision tolerances applied when the points were measured. See [RTX-RTK offsets, page 376](#).

1. Tap  and select **Measure**. Tap **RTX-RTK offset**.
2. In the **RTK point** field, select a point. This must be a point measured using RTK.
3. In the **RTX point** field, select or measure an RTX point. This must be a point measured using the CenterPoint RTX correction service.
The offset is computed immediately when the two point fields are completed.
4. Review the results of the offset computation. If acceptable, tap **Store** to commit the offset to the job.

NOTE – The precision of the offset and therefore the precision of the RTX points reduced into the RTK reference frame depends on the precision of the measured RTK and RTX points used to compute that offset. You **must** use the most precise point measurements possible to compute the offset.

To remove an RTX-RTK offset, view the offset in the **RTX-RTK offset** screen and then tap **None**. Tap **Yes** to confirm. The value of the offset is changed to zero.

To view RTX status

To view the **RTX status** screen, in an RTX (SV) survey, tap . In an RTX (internet) survey, tap **RTX status** in the Instrument menu.

The **RTX status** screen shows the current **Correction satellite name**. To select a different satellite, tap **Options** and then select the required satellite from the list. You can change the correction satellite at any time; changing the correction satellite does not require restarting the survey. Alternatively, select **Custom** and then enter the frequency and bit rate to use. Changes you make to the settings are used the next time you start a survey.

In an RTX survey, the **Reset** button on the satellite plot/list screen resets SV tracking as well as RTX convergence. The **Reset** button on the **RTX status** screen resets the RTX convergence but not the satellite tracking.

To start an OmniSTAR survey

The steps for starting a survey using the OmniSTAR differential correction service depend on whether you are using OmniSTAR as part of an RTK survey, in a real-time differential survey, or on its own.

NOTE – Only the Spectra Geospatial SP100 receiver can be used with the OmniSTAR differential correction service.

For more information on OmniSTAR, see [OmniSTAR differential correction service, page 377](#).

To start an RTK OmniSTAR survey

1. Create an RTK survey style with the satellite differential set to OmniSTAR. See [Rover options, page 346](#).
2. Start an RTK survey using this survey style.

The **Select OmniSTAR Offset** screen appears.

To relate the OmniSTAR positions to the RTK positions, you must measure the **OmniSTAR offset** between an RTK measured point and the same position measured using OmniSTAR. Before the offset can be measured, you must wait for the OmniSTAR survey to converge.



TIP – To survey without the convergence delay, you can:

- Measure the **OmniSTAR offset** later when the OmniSTAR system has converged. To do this:
 - a. Tap **Esc** and continue surveying using RTK.
 - b. To check to see if the OmniSTAR survey has converged tap **≡** and select **Measure / OmniSTAR initialization**.
 - c. When the OmniSTAR survey has converged, tap **Offset** and then measure the **OmniSTAR offset**. See steps 4 to 10 below.
- Initialize your OmniSTAR survey enabling you to continue surveying using the OmniSTAR signals if the ground-based radio link goes down during an RTK survey. See [Initializing an OmniSTAR survey](#).


3. Tap **New**.

4. From the **Initialization point** field select a previously measured point. Spectra Geospatial recommends selecting the highest quality, most convenient RTK point.
5. Define the antenna.
6. With the survey receiver positioned at the **Initialization point** tap **Start** to measure the point.

When the measurement is complete, the Origin software computes the offset between the OmniSTAR position and the initialization point and applies this offset to the subsequent OmniSTAR corrected positions from the GNSS receiver, ensuring that the OmniSTAR positions are in terms of the RTK points.

When OmniSTAR signals are being received, the radio icon  changes to an SBAS/OmniSTAR icon , and RTK:OmniSTAR appears on the status line.

TIP –

- Tap  to see the SBAS status. From the **SBAS status** screen, tap the **Info** softkey to see the OmniSTAR initialization details. The **Info** softkey is only available when you are in a survey.
- Tap the **Data link** softkey from the **SBAS status** screen to access the **Rover radio** screen.
- If the OmniSTAR solution is not converging as expected, you may need to wait longer for this to happen. If you measured an OmniSTAR offset when the precision estimates were high, or chose to use an offset with high precision estimates, then the OmniSTAR solution may not converge as expected.

7. Continue surveying.

If the ground-based radio link goes down during an RTK survey you can continue surveying using the OmniSTAR signals.




For subsequent RTK surveys using OmniSTAR and the same RTK base as before, you do not need to measure a new **OmniSTAR offset**. When you start the survey you will be presented with a list of previously measured offsets for the current base. Select an appropriate offset.

TIP – Tap **All** to see all previously measured offsets for all bases and then **Filter** to filter the list to display the offsets for the current base. You must select an offset for the current RTK base, or for another base that is in the same calibration. Tap **Delete** to delete an offset. Tap **Clear** to clear a previously selected offset.

To start a real-time differential OmniSTAR survey

To survey using real-time differential and OmniSTAR do this:

1. Create a real-time differential survey style with the broadcast format set to OmniSTAR. See [Rover options, page 346](#).
2. Start a real-time differential survey using this survey style.

When OmniSTAR signals are being received (and not RTK), the radio icon  changes to an SBAS/OmniSTAR icon . Tap the SBAS/OmniSTAR icon  to see the SBAS status.

TIP – If you subscribed for OmniSTAR HP, G2, or XP, the accuracy of your position after convergence will improve as the system converges.

To start a survey using OmniSTAR when RTK is unavailable

If you can't start an RTK survey you can start an OmniSTAR survey on its own. To do this:

1. Attempt to start an RTK survey configured to use the OmniSTAR system when RTK is unavailable.
2. Tap **Esc**. You will be asked if you want to cancel the survey or start an OmniSTAR survey without waiting for RTK.
3. Tap **Continue** to start an OmniSTAR survey.
4. Select an OmniSTAR offset. The selected offset is indicated by a tick.

 
NOTE – Because you have not yet received an RTK base, the offset list can not be filtered. You must select an offset with the appropriate base.

5. Continue surveying

Later, if you are within radio range and the RTK base is detected, a **New base detected** message appears, enabling you to select the base and continue surveying using RTK.

To initialize an OmniSTAR survey


If you start a survey without RTK, or if the ground-based radio link goes down during an RTK survey and you lose lock on satellites resulting in OmniSTAR losing convergence, you can manually initialize the OmniSTAR system. To do this:

1. Tap  and select **Measure / OmniSTAR initialization**.
2. If you have not already done so, select an offset. The selected offset is indicated by a tick.
3. Tap **Init**.
4. From the **Initialization point** field, select a previously measured point.

TIP – Spectra Geospatial recommends that you select the highest quality, most convenient RTK point.


5. Define the antenna.
6. With the survey receiver positioned at the **Initialization point**, tap **Start** to measure the point. The OmniSTAR system will converge.

NOTE -

- This procedure is only available for OmniSTAR HP, G2 and XP subscription levels.
- If your RTK survey is running and an OmniSTAR offset is selected, OmniSTAR can initialize from the RTK survey automatically and this procedure is not necessary.
- Tap  to see the SBAS status. From the SBAS status screen, tap the **Info** softkey to see the OmniSTAR initialization details. The **Info** softkey is only available when you are in a survey.
- The **SBAS status** screen shows the current **Correction satellite name**. To select a different satellite, tap **Options** and then select the required satellite from the list. You can change the correction satellite at any time; changing the correction satellite does not require restarting the survey. Alternatively, select **Custom** and then enter the frequency and bit rate to use. Changes you make to the settings are used the next time you start a survey.

To switch to postprocessed infill

During periods when no base corrections are received, the **Radio link down** message flashes in the status line.

To continue surveying, tap  and select **Measure** and then select **Start PP infill**. When postprocessing infill starts, raw data is logged at the rover. For successful baseline resolution, you must use postprocessed kinematic observation techniques.


NOTE - Initialization cannot be transferred between the RTK survey and the PP infill survey. Initialize the PP infill survey like any other postprocessed kinematic survey. In a postprocessed survey, only rely on the On the fly (automatic) initialization if you are certain that the receiver will observe at least 5 satellites without interruption for the next 15 minutes, or 6 satellites without interruption for the next 8 minutes. Otherwise, initialize on a known point.

When base corrections are received again, the **Radio link up** message appears in the status line. This message also shows the initialization mode of the RTK survey.

 
To stop data logging at the rover, tap  and select **Measure** and then select **Stop PP infill**. Real-time measurements are resumed.

When postprocessed infill is started IMU tilt compensation is disabled, and then re-enabled when RTK is resumed.

To start a postprocessed rover survey

1. Set up and connect the GNSS receiver.
2. In Origin, make sure the required job is open.
3. To start the survey, tap  and select **Measure**. If there is more than one survey style configured, select a survey style from the list. Select the software function to use, for example **Measure points**.

When you select a survey style for the first time, the software prompts you to customize the style for your specific hardware.

4. If a message warns that an option in the receiver is not available, then your receiver options subscription may have expired. To check the expiry date, tap  and select **Instrument / Receiver settings** and check the values shown in the **Trimble GNSS subscriptions** group.
5. If you have selected any "Prompt for" settings in the RTK survey style, you are prompted to confirm the correction source. Tap **Accept**.
6. Use the status bar to confirm the software is connected and receiving correction data.

In a FastStatic survey you can begin surveying immediately.

To achieve centimeter-level precisions from a PP kinematic survey when the data is processed, the survey must initialize. With dual-frequency receivers, the initialization process begins automatically if at least five L1/L2 satellites are being observed. See [PP initialization times, page 377](#).

NOTE - In a postprocessed survey, only rely on the On the fly (automatic) initialization if you are certain that the receiver will observe at least 5 satellites without interruption for the next 15 minutes, or 6 satellites without interruption for the next 8 minutes. Otherwise, [initialize on a known point](#).

If you do **not** require centimeter-level results and want to start surveying immediately, select **Measure / PPK initialization**. Tap **Init** and set the **Method** field to **No initialization**.

7. Measure points.

NOTE - You cannot stake out points during a postprocessed survey.


GNSS survey status

When the controller is connected to a receiver, the status line displays the current GNSS survey mode:

No Survey	The receiver is connected but a survey has not been started.
RTK+IMU	The current survey type is RTK and IMU tilt compensation is enabled.
RTK:Fixed	The current RTK survey is initialized, and the solution type is L1 fixed-centimeter-level.
RTK:Float	The current RTK survey is not initialized, and the solution type is L1 float.
RTK:Check	The current RTK survey is verifying the initialization.
RTK:Auton	The radio link is down in the current RTK survey, and the solution is an autonomous position.

RTK:SBAS	The radio link is down in the current RTK survey, and the solution is an SBAS position.
RTX+IMU	The current survey type is RTX and IMU tilt compensation is enabled.
RTX	The current survey type is RTX.
OmniSTAR HP	The current survey type is OmniSTAR HP (high-precision).
OmniSTAR VBS	The current survey type is OmniSTAR VBS (differentially corrected).
SBAS	The current survey type is differential, and using signals from an SBAS.
FastStatic	The current survey type is FastStatic.
PPK:Initialized	The current postprocessed kinematic survey is initialized. When postprocessed, it should yield a centimeter-level solution.
PPK:Not initialized	The current postprocessed kinematic survey is not initialized. When postprocessed, it may not yield a centimeter-level solution.
Infill:Initialized	The current postprocessed kinematic infill survey is initialized. When postprocessed, it should yield a centimeter-level solution.
Infill:Not initialized	The current postprocessed kinematic infill survey is not initialized. When postprocessed, it may not yield a centimeter-level solution.
Infill	The current survey type is differential, and you are doing an infill session.

If the controller is connected to a receiver equipped with HD-GNSS technology:

 in the status line indicates the precision tolerances have been met.

 in the status line indicates the precision tolerances have not been met

GNSS survey error messages

The following messages indicate a problem during a GNSS survey or when you attempt to start one.

Error: Outside usage region

If this message appears when starting a survey, the connected receiver is unable to be used in the current geographic location. For more information, contact your Spectra Geospatial distributor.

Receiver supports Location RTK precisions, set style tolerances accordingly

If this message appears when starting an RTK survey, the connected receiver supports Location RTK, which limits the precision of the RTK solution in the receiver. Tap **Yes** to change the survey style precision settings to match the Location RTK precision limit of the receiver. If the survey style is already set to a higher precision than the Location RTK precision limit of the receiver, then the survey style is not updated.

When the receiver has Location RTK enabled, the status line shows RTK: Float. You cannot store fixed positions when Location RTK is enabled in the receiver.

Tap **No** to keep the current survey style precision settings.

Cannot start streamed corrections

If this message appears during an RTK survey, make sure that the internet connection you are using works outside of the Origin software. Connect to the internet and make sure you can connect to a frequently updated web page such as a news web page. Leave that connection open and start a survey in the Origin software. If the survey still fails to start correctly, there may be a problem with the IP address or port number in the style, or the base station providing the data may not be operational.

No Base Data

If you start an RTK survey and the **No base data** message appears, check the broadcast format, the initialization string for your modem, the IP address, and the port number of the base.

 
Warning: Base coordinates different. Coordinates of base point <Point name> in job differ from received coordinates

If this message appears when receiving RTK corrections, it means that the point name of the base received from the base data link is the same as a point name already in the job file, and the two points have different coordinates. If you are certain that the base is set up on the same point as the one already in the job database, then tap **Job** to use the job database coordinates for the point. If the base is in a different location to the point already in the job database, then you must change the point name. Tap **Received** to use the coordinates received from the data link and rename the new base point. Tap **Cancel** to cancel the survey.

NOTE - If you have an RTX-RTK offset in the job, you will not be given the choice of using the received coordinates for the base. Correct use of the offset relies on all RTK being in the same terms, and if the point with different coordinates to those already in the job comes from the base this could mean the RTK is not in the same terms.

To end the survey

When you have measured or staked out all points required, do the following:

1. Tap  and select **Measure** or **Stakeout** and then tap **End GNSS survey**.
2. If the survey was an RTK Internet survey then the software may ask whether to disconnect the internet connection:

- Tap **Yes** to end the connection to the modem, which also ends the corrections stream.
- Tap **No** to end the corrections stream but leave the receiver online ready for the next survey.

TIP – To avoid unintentional use of cellular data and VRS hours, the software always ends the corrections stream when the survey ends, regardless of whether the message is shown or not shown, or whether you select **Yes** or **No** in response to the message.

3. When prompted to power down the receiver, tap **Yes**.
4. Turn off the controller **before** disconnecting the equipment.
5. If you set up your own base station for the survey:
 - a. Return to the base station.
 - b. If required, reconnect the controller to the base receiver.
 - c. Tap ☰ and select **Measure** or **Stakeout** and then tap **End GNSS base survey**.
 - d. If the controller was logging base data, in the **Base** screen tap **End**.

Site calibration

Calibration is the process of adjusting projected (grid) coordinates to fit the local control. A calibration calculates parameters for transforming Global coordinates into local grid coordinates (NEE).

You should calculate and apply a calibration before:

- staking out points
- computing offset or intersection points

If you calibrate a project and then survey in real time, the General Survey software gives real-time solutions in terms of the local coordinate system and control points.

Local control for calibration

Spectra Geospatial recommends that you observe and use **a minimum of four local control points** for the calibration calculation. The maximum number of points you can have in a calibration is 200. For best results, local control points should be evenly distributed over the job area as well as extending beyond the perimeter of the site (assuming that the control is free of errors).

TIP – Apply the same principles as you would when placing control for photogrammetric jobs. Make sure that the local control points are evenly distributed to the extent of the job area.

Reusing a calibration

You can reuse the calibration from a previous job if the new job is completely encompassed by the initial calibration. If a portion of the new job lies outside the initial project area, introduce additional control points to cover the unknown area. Survey these new points and compute a new calibration, and then use this as the

calibration for the job.

To copy the calibration from an existing job to a new job, select the existing job as the current job and then create a new job and in the **Template** field select **Last used job**. Alternatively, use the **Copy between jobs** function to copy the calibration from one job to another.

Software calibration calculations

Use Origin to perform a calibration using a least squares computation and calculate either a horizontal and vertical adjustment, or a Transverse Mercator projection and a 3-parameter datum transformation, depending on what the coordinate system settings that have already been defined in the job. Each method results in the computation of different components, but the overall result is the same if enough reliable control points (coordinates in your local system) are used. The two methods are:

- If you used published datum transformation parameters and map projection details when you created a job, and if you provide enough control points during the calibration, then during calibration the software calculates horizontal and vertical adjustments. Horizontal control points allow scale error anomalies in the map projection to be removed. Vertical control allows local ellipsoid heights to be transformed into useful orthometric heights.

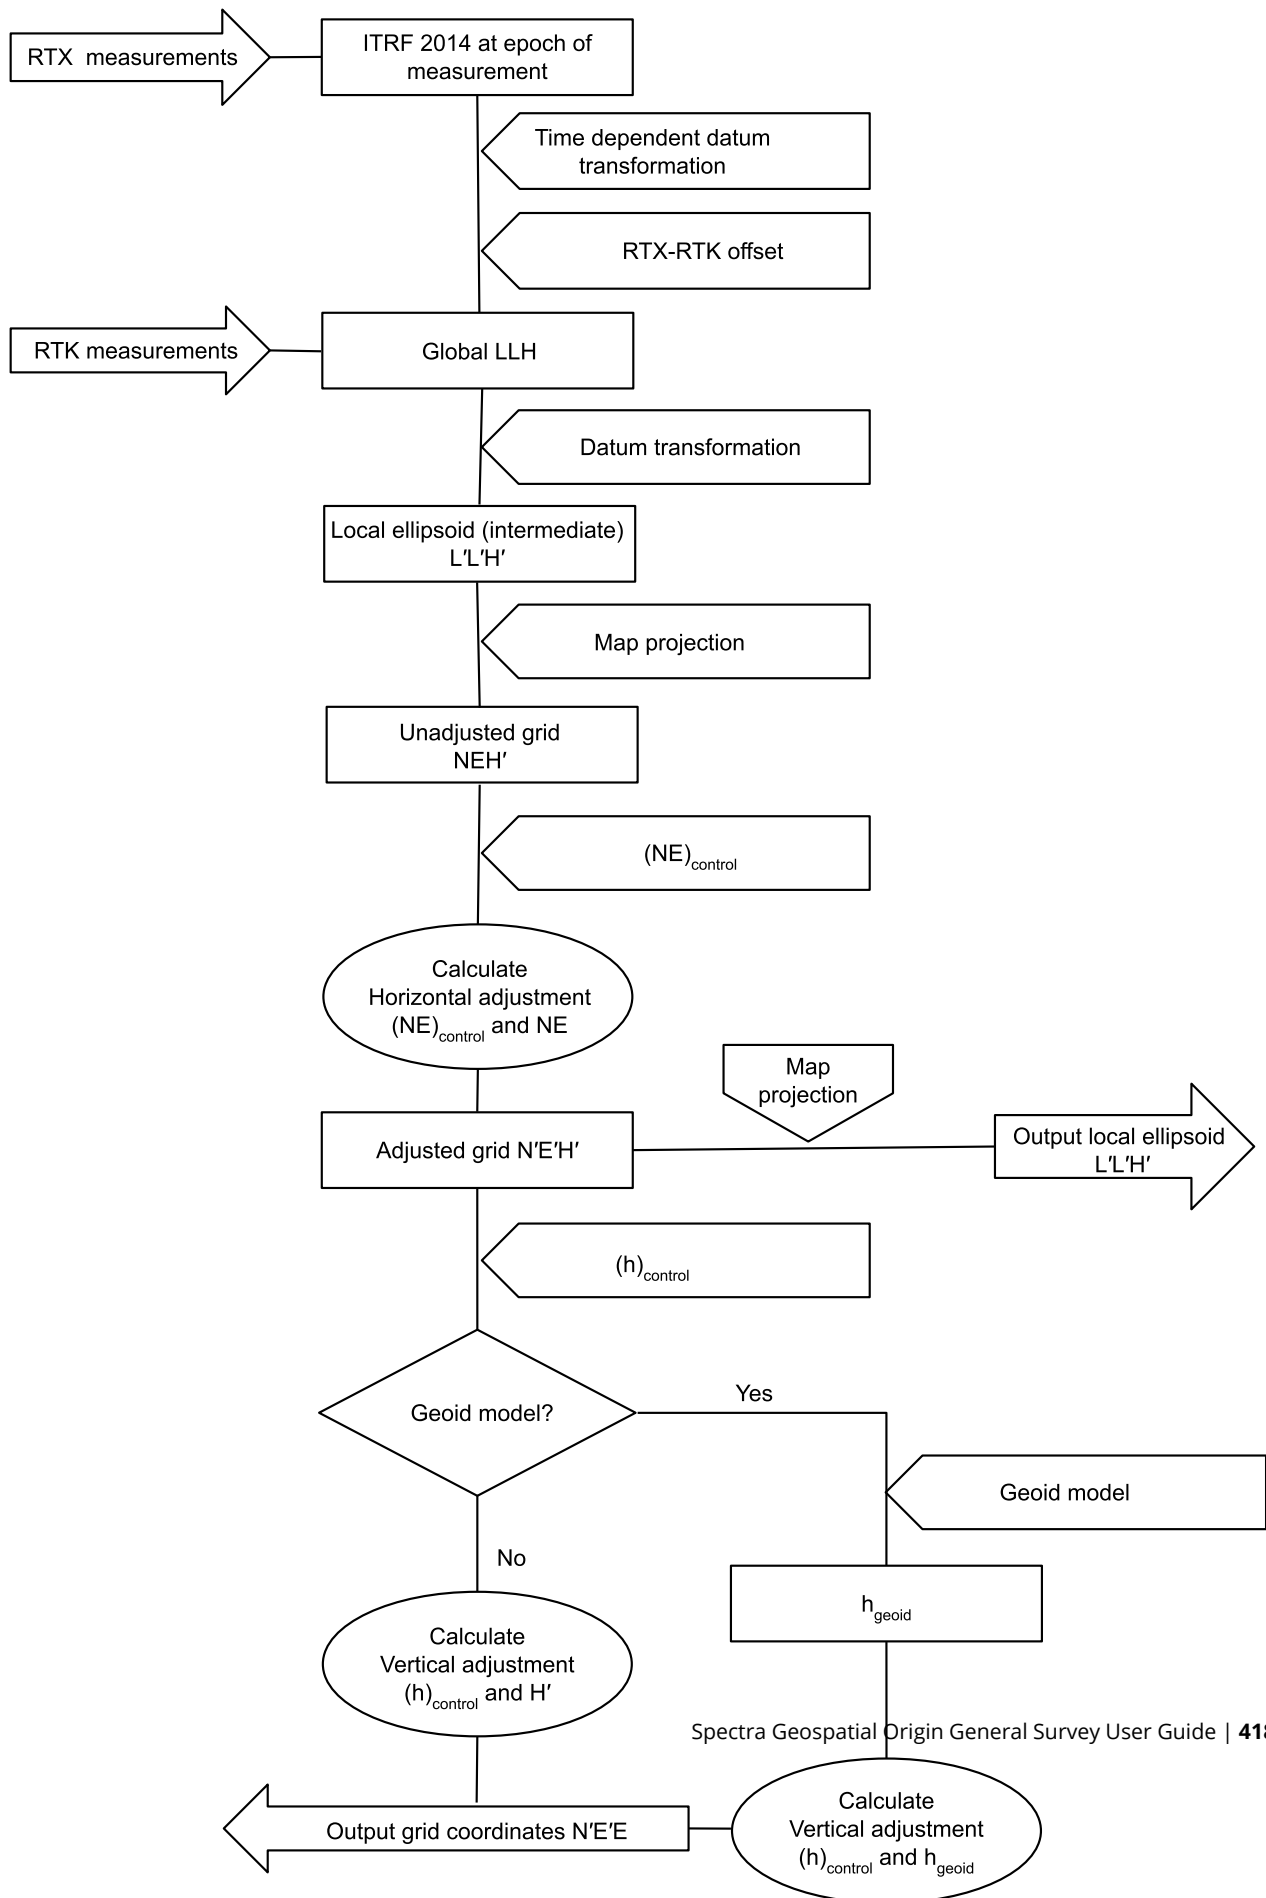
TIP – Always use published parameters if they exist.

- If you did not know the map projection and datum transformation parameters when you created the job and so you selected **No projection / no datum** and if you specified that ground coordinates were required, then during calibration the software calculates a Transverse Mercator projection and a Molodensky three-parameter datum transformation using the supplied control points. The project height you specified when creating the job is used to compute a ground scale factor for the projection so that ground coordinates are computed at that height.

The following table shows the output of a calibration when various data is supplied.

Projection	Datum transformation	Calibration output
Yes	Yes	Horizontal and vertical adjustment
Yes	No	Datum transformation, horizontal and vertical adjustment
No	Yes	Transverse Mercator projection, horizontal and vertical adjustment
No	No	Transverse Mercator projection, zero datum transformation, horizontal and vertical adjustment

The following diagram shows the order of calculations performed when a calibration is calculated.



To calibrate point coordinates

1. Enter the grid coordinates of your control points. Key these in, transfer them from your office computer, or measure them using a conventional total station.

Be careful when naming points that are to be used in a calibration. Before you begin, familiarize yourself with the [Database search rules](#).

2. Place the calibration points around the perimeter of the site. Do not survey outside of the area enclosed by the calibration points, as the calibration is not valid beyond this perimeter.
3. Measure the points with GNSS.

You can use up to 200 points for a calibration. Spectra Geospatial strongly recommends that you use a minimum of four 3D points in local grid coordinates (N, E, E) and four observed GNSS points in **Global** coordinates. This should provide enough redundancy. If you do not specify the coordinate system, the Origin software calculates a Transverse Mercator projection and a three-parameter datum transformation.

You can use a combination of 1D, 2D, and 3D local grid coordinates. If no projection and no datum transformation are defined, you must have at least one 2D grid point.

4. Perform an [automatic](#) or a [manual](#) calibration.

If all the points have been measured, you do not need to connect the controller to a receiver during a manual calibration.

Multiple calibrations can be performed in one job. The last calibration performed and applied is used to convert the coordinates of all previously surveyed points in the database.

5. To obtain the current list of points being used in the calibration, select **Measure / Site calibration**.

Notes and recommendations

- The set of **Global** coordinates must be independent of the set of grid coordinates.
- You select the grid coordinates. Select the vertical coordinates (elevation), the horizontal coordinates (northing and easting values), or all of these together.
- The origin of the horizontal adjustment is the first point in the calibration when using one or two calibration point pairs. When there are more than two calibration point pairs, the computed centroid position is used for the origin.
- The origin of the vertical adjustment is the first point in the calibration with an elevation.
- When reviewing a calibration point in the database, notice that the **Global** values are the *measured* coordinates. The grid values are derived from these, using the current calibration.

 
The original keyed-in coordinates remain unchanged. (They are stored elsewhere in the database as a point with the **Type** field showing **Keyed in coordinates** and the **As stored** field showing **Grid**.)

- When you are calibrating a no projection, no datum job, (where ground coordinates are required after calibration) you must define the project height (average site height). When the job is calibrated, the project height is used to compute a ground scale factor for the projection, using the inverse of the ellipsoid correction.

- When you start a Scale Factor Only job and then introduce GNSS data, you must perform a site calibration to relate the GNSS data to the Scale Factor Only point coordinates.

When you select **Site Calibration**, you must specify whether the Scale Factor Only coordinates in the job represent grid coordinates or ground coordinates. The site calibration computations then set up a grid coordinate system or a ground-based coordinate system, that best fits the existing data in the job to the GNSS data.

To configure the survey style for a site calibration

1. Tap  and select **Settings / Survey styles**. Select the required survey style.
2. Tap **Site calibration**.
3. Select whether the calibration computation should fix or compute the horizontal scale factor and the horizontal rotation.

To fix the values, select the **Fix horizontal scale to 1.0** check box and the **Fix horizontal rotation to 0** check box. To compute the values, clear the check boxes.

NOTE – Selecting these check boxes is recommended if you are working in a modern well-defined coordinate system with a reliable transformation from the global reference frame and using a high quality local control within that coordinate system. You should clear these check boxes if GNSS measurements need to be scaled and/or rotated to fit the local control.

4. Select the type of **Vertical adjustment** to be computed and applied:
 - The **Constant adjustment only** option will compute a vertical shift value to best fit the calibration point measured elevations to the control elevations. This setting is recommended if you have an accurate geoid model.
 - The **Inclined plane** option will compute a vertical shift plus north and east inclinations to best fit the calibration point measured elevations to the control elevations. Use this model if you do not have an accurate geoid model, or if the geoid model is not a good fit to your vertical control.

NOTE – Clearing the **Fix horizontal scale to 1.0** and **Fix horizontal rotation to 0** check boxes and selecting the **Inclined plane** option will generally result in smaller residuals. However, unless you have high quality control, precise measurements, and a large project area, these smaller residuals are a result of **overfitting** your measurements rather than being a true indication of the quality of your site calibration.

5. For the Origin software to automatically perform a calibration when you measure a calibration point, select the **Auto calibrate** check box. To switch automatic calibration off, clear the check box.
6. Select an observation type appropriate to a calibration point. The options for a calibration point are topo point or observed control point.

NOTE – If you set the observation type to **Topo point**, all settings are defined in the survey style for a topo point.

7. If necessary, set the tolerances for maximum horizontal and vertical residuals, and maximum and minimum horizontal scale settings. These settings only apply to automatic calibration and do not affect manual calibration.

You can also specify the maximum slope of the vertical adjustment plane. The software warns you if the slope in the north direction or the slope in the east direction exceeds this. Generally the default settings are appropriate.

8. Specify how the calibration points you measure will be named:
- In the **Method** field, choose one of the following options: **Add prefix**, **Add suffix**, or **Add constant**.
 - In the **Add** field, enter the prefix, suffix, or constant.

The table below shows the different options and gives an example of each.

Option	What the software does	Example value in the Add field	Grid point name	Calibration point name
Same	Gives the calibration point the same name as the grid point	-	100	100
Add prefix	Inserts a prefix before the grid point name	GNSS_	100	GNSS_100
Add suffix	Inserts a suffix after the grid point name	_GNSS	100	100_GNSS
Add constant	Adds a value to the grid point name	10	100	110

NOTE – When a site calibration is computed in a job where a site calibration has not been computed previously, the settings from the currently selected survey style are used. You can change these settings by tapping **Options** in the **Site calibration** screen, making the necessary adjustments, and then tapping **Accept**. These changes are used for the job but are not written to the current survey style. When a site calibration is computed and stored in the job, the settings used in that computation are stored in the job along with the site calibration details. If you return to the site calibration function later in the same job, the settings from the job database used for the previous site calibration computation are used in preference to the settings in the current survey style, which may differ. To restore the settings from the current survey style, tap **Options** and then tap the **Default** softkey. This populates the options from the current survey style. Tap **Accept** to use the survey style settings in the recomputation of the site calibration.

To automatically calibrate points

When you use this function to measure calibration points, the calibration calculations are performed and stored automatically.

NOTE – If you do not define a projection and datum transformation, a transverse mercator projection will be used.

1. Set your automatic calibration settings in the **Site calibration** screen.
 - a. To view the **Site calibration** screen, do one of the following:
 - Tap **☰** and select **Settings / Survey styles**. Select the required survey style. Tap **Site calibration**.
 - When you measure a calibration point, tap **Options**.
 - b. Select the **Auto calibrate** check box to display calibration residuals only if the calibration tolerances are exceeded.
 - c. Configure the naming relationship between the grid and **Global** coordinates.
 - d. Tap **Accept**.
2. Enter the grid coordinates of your calibration points. Key these in, transfer them from your office computer, or measure them using a conventional total station.

For keyed in coordinates check that the coordinate fields are **North**, **East**, and **Elevation**. If they are not, tap **Options** and change the **Coordinate view** to Grid. See [Coordinate view settings, page 683](#). Key in the known grid coordinates and tap **Enter**.

Select the **Control point** check box. (This ensures that the point is not overwritten by a measured point.)

For transferred coordinates make sure that these coordinates are:

- transferred as grid coordinates (N, E, E), not as **Global** coordinates (L, L, H)
- control class points

3. Measure each point as a calibration point.

- a. In the **Method** field, select **Calibration point**.
- b. Enter the grid point name. The software names the GNSS point automatically, using the naming relationship that you configured earlier.

Once the point has been measured, the Auto-calibrate function matches the points (grid and Global coordinates), and calculates and stores the calibration. The calibration is applied to all previously measured points in the database.

4. When you measure the next calibration point, a new calibration is calculated using all of the calibration points. It is stored and applied to all previously measured points.

When one point has been calibrated, or a projection and datum transformation have been defined, the **Find** softkey appears. You can use this to navigate to the next point.

 
If the calibration residuals are exceeded, consider removing the point with the most extreme residuals. Do one of the following:

- If at least four points are left after removing that point, recalibrate using the remaining points.
- If not enough points are left after removing that point, measure it again and recalibrate.

It may be necessary to remove (remeasure) more than one point. To remove a point from the calibration calculations:

 
1. Highlight the point name and tap **Enter**.
2. In the **Use** field, select **Off** and tap **Enter**. The calibration is recalculated and the new residuals are displayed.
3. Tap **Apply** to accept the calibration.

To view the results of an automatic calibration:

1. Tap  and select **Measure / Site calibration**. The **Site calibration** screen appears.
2. Tap **Results** to see the **Calibration results**.

To manually calibrate points

Key in the grid coordinates of your control points. Alternatively, transfer them from your office computer, or use a conventional instrument to measure them. Then measure the points with GNSS.

1. Tap  and select **Measure / Site calibration**.
2. For **Scale factor only** jobs:
 - If the job uses ground coordinates, select **Ground**.
 - If the job uses grid coordinates, select **Grid**.
3. To add a point to the calibration, tap **Add**.
4. Enter the name of the grid point and the GNSS point in the appropriate fields.

The two point names do not have to be the same, but they should correspond to the same physical point.

 
5. Change the **Use** field as required and tap **Accept**.

The calibration residuals screen appears.

6. Tap **Results** to see the horizontal and vertical shifts that the calibration has calculated.
7. To add more points, tap **Esc** to return to the calibration screen.
8. Repeat steps 3 through 6 until all the points are added.
9. Do one of the following:
 - If the residuals are acceptable, tap **Apply** to store the calibration.
 - If the residuals are not acceptable, recalculate the calibration.

To recalculate the calibration

Recalculate a calibration if the residuals are not acceptable, or to add or remove points.

1. Tap  and select **Measure / Site calibration**.
2. Do one of the following:
 - To remove (exclude) a point, highlight the point name and then tap **Remove**.
 - To add a point, tap **Add**.
 - To change the components used for a point, highlight the point name and tap **Edit**. In the **Use** field, choose whether to use the vertical coordinate of the grid point, the horizontal coordinates, or both horizontal and vertical coordinates.
3. Tap **Apply** to apply the new calibration.

NOTE – Each calibration calculation is independent of the previous one. When a new calibration is applied, it overwrites any previously calculated calibration.

Receiver functions and settings

The **GNSS Instrument** menu provides information about the GNSS receiver connected to the controller, and is used to configure the settings for the GNSS receiver. Available options depend on the type of receiver that is connected.

NOTE – If a conventional instrument is also connected and you are performing an integrated survey, additional items appear in the **Instrument** menu. For more information, see [Instrument functions and settings, page 324](#).

GNSS functions

To access the **GNSS functions** screen, tap the receiver icon in the status bar.

Use the **GNSS functions** screen to control commonly-used functions for the connected GNSS receiver, such as switching Bluetooth connections between the configured base and rover receivers, starting or ending the survey, or powering down the receiver. The **GNSS functions** screen also provides fast access to detailed information including receiver status, position details, and available satellites.

The functions available depend on the receiver that the controller is connected to, and the mode the receiver is operating in. A yellow button indicates the function is enabled.

TIP – When in the **GNSS functions** screen, you can use the controller keypad to enter the keypad character (**1-9, 0, -** or **.**) indicated on the tile to enable/disable the function or open the appropriate screen. If you have configured a function key on the controller as a shortcut to a GNSS function, you can press the configured function key when viewing any screen in the software.

Base mode

When **Base** mode is enabled, when you start the software Origin attempts to connect to the receiver configured in the **Connect to GNSS base** field in the **Bluetooth** tab of the **Connections** screen. The receiver icon in the status bar indicates if the software is in **Base** mode.

If there is no receiver configured, the software checks if there is a receiver connected to the controller's serial port. When the software is in **Base** mode, if a receiver is found on the serial port it is treated as the base receiver.

In **Base** mode the **Start survey** and **End survey** buttons in **GNSS functions** start or end a base survey using the current survey style.

Rover mode

When **Rover** mode is enabled, when you start the software Origin attempts to connect to the receiver configured in the **Connect to GNSS rover** field in the **Bluetooth** tab of the **Connections** screen. The receiver icon in the status bar shows if the software is in **Rover** mode.

If there is no receiver configured, the software checks if there is a receiver connected to the controller's serial port. When the software is in **Rover** mode, if a receiver is found on the serial port it is treated as the rover receiver.

In **Rover** mode the **Start survey** and **End survey** buttons in **GNSS functions** start or end a rover survey using the current survey style.

Bluetooth

Tap **Bluetooth** to view the **Bluetooth** tab of the **Connections** screen and configure separate Bluetooth connections to the base and rover receivers. Then use the **Base mode** and **Rover mode** buttons in the **GNSS functions** screen to switch between and connect to the receivers.

Data link

You can tap the **Data link** button to connect to and configure the radio you are using for your RTK data link.

When the instrument is in **Rover** mode, tap **Data link** to go to the **Rover data link** settings screen.

When the instrument is in **Base** mode, tap **Data link** to go to the **Base data link** settings screen.

If the softkey displays **>Rover** or **>Base** tap the softkey to switch to the appropriate mode and then tap **Connect**.

If there is an RTK survey running, the radio screen shows the radio currently in use, and you may not be able to connect to an external radio.

When a survey is not running, you can select the type of RTK radio you are using and then tap **Connect** (if it is available) to connect to and configure the communication settings in the radio. You can review and set the radio frequency, baud rate, and other settings if they are available to change in the radio device that the instrument is connected to. See [Configuring a radio data link](#).

NOTE – You cannot edit survey style settings in this screen. If you start a survey with a **different** type of radio set in the survey style, the system uses that radio – not the radio that you set in **GNSS functions**.

Start survey, end survey, power down receiver

To start a GNSS survey, tap **Start survey**.

To end the survey, tap **End survey**. You are prompted to power down the receiver. Tap **Yes** or **No**, as required.

To power down the receiver after ending a survey, tap **Power down receiver**.

Satellites

To view information about the satellites being tracked, tap **Satellites**. See [Satellite information, page 427](#).

Position

To view and store the current position, tap **Position**. See [Current position information, page 430](#).

Navigate to point

To navigate to a point, tap **Navigate to a point**. See [Navigate to a point, page 431](#).

IMU tilt compensation

This button is shown only if the connected receiver has an inertial measurement unit (IMU).

To disable IMU tilt compensation and switch to using GNSS-only mode during a survey, for example when using a bipod in heavy canopy and the receiver needs to remain stationary for a period., tap **IMU tilt compensation**. In good RTK environments where movement is happening constantly, tap **IMU tilt compensation** to re-enable it. See [IMU tilt compensation, page 443](#).

Import from receiver and export to receiver


To import files from or export files to the receiver, tap **Import from receiver** or **Export to receiver**. See [Transfer receiver files, page 432](#).

This button is not shown if the **IMU tilt compensation** button is shown.

Receiver status

To view the status of the receiver, tap **Receiver status**. See [Receiver status, page 455](#).

Satellite information

To view information about the satellites currently being tracked by the receiver, tap the satellite icon  in the status bar.

In the **Satellites** screen, you can select the following options:

- To stop the receiver tracking a satellite, tap the satellite to display the satellite information and then tap **Disable**.
- To change the elevation mask and the PDOP mask for the current survey, tap **Options**. See [Rover options, page 346](#).
- To enable SBAS outside of a survey, tap **Options** and then select **Enable SBAS**.
- In a real-time survey, tap **Base** to see which satellites are being tracked by the base receiver. No values appear in the **Az** and **Elev** columns, as this information is not included in the correction message broadcast by the base.
- In a postprocessed survey, the **L1** softkey appears in the **Satellites** dialog. Tap **L1** to display a list of cycles tracked on the L1 frequency for each satellite.

The value in the **CntL1** column is the number of cycles on the L1 frequency that have been tracked continuously for that satellite. The value in the **TotL1** column is the total number of cycles that have been tracked for that satellite since the start of the survey.

- With a dual-frequency receiver, the **L2** softkey appears in the **Satellites** dialog. Tap **L2** to display a list of cycles tracked on the L2 frequency for each satellite.

The **SNR** softkey appears. Tap **SNR** to return to the original screen and view information about the signal-to-noise ratio for each satellite.

Satellite identification

A satellite is identified by the space vehicle (SV) number.

- GPS satellite numbers are prefixed with a "G".
- GLONASS satellite numbers are prefixed with an "R".
- Galileo satellite numbers are prefixed with an "E".

- QZSS satellite numbers are prefixed with a "J".
- BeiDou satellite numbers are prefixed with a "C".
- OmniSTAR satellites are identified as "OS".
- RTX satellites are identified as "RTX".

Skyplot

To view a graphical representation of the position of satellites, tap **Plot**.

- Tap **Sun** to see the plot oriented towards the sun.
- Tap **North** to see the plot oriented towards north.
- The outside circle represents the horizon or 0° elevation.
- The inner, solid green, circle represents the elevation mask setting.
- The SV numbers on the diagram are placed in the position of that particular satellite.
- Satellites that are tracked but not used in the position solution appear in blue.
- The zenith (90° elevation) is the center of the circle.

NOTE – An unhealthy satellite is shown in red.

If a satellite is not being tracked and you expect that it should be:

- Check that there are no obstructions – look at the azimuth and elevation of the SV in the skyplot.
- Tap the SV number and make sure the satellite is not disabled.
- Make sure there are no transmitting antennas nearby. If there are, reposition the GNSS antenna.

Satellite list

To view the list of satellites, tap **List**.

- In the list of satellites, each horizontal line of data relates to one satellite.
- Azimuth (**Az**) and elevation (**Elev**) define a satellite's position in the sky.
- The arrow displayed next to the elevation indicates whether the elevation is increasing or decreasing.
- The signal-to-noise ratios (SNR) indicate the strength of the respective satellite signals. The greater the number, the better the signal.
- If a signal is not being tracked, then a dashed line (-----) appears in the appropriate column.
- The check mark on the left of the screen indicates whether that satellite is in the current solution, as shown in the following table.

Situation	A check mark indicates the satellite
No survey is running	Is being used in the current position solution
RTK survey is running	Is common to the base and rover receivers
Postprocessed survey is running	Is one for which one or more epochs of data have been collected

To see more information about a particular satellite, tap the appropriate line.

To use independent subsets of satellites tracked in RTK surveys

Some regulatory authorities require "independent" measurements of points in RTK surveys. This can include making repeated occupations at different times of day to ensure a change in satellite constellation. The **SV subset** function divides all tracked satellites into two subsets with an even spread throughout the sky, and can be used to measure and then remeasure the point using independent occupations without having to return at another time.

NOTE - Spectra Geospatial recommends only using SV subsets when tracking the most available satellites and constellations at your location. This helps ensure each subset has enough satellites to ensure good DOP for each independent occupation.

In the **Satellites** screen:

- To switch SV tracking to the first subset, tap the **SV set A** softkey.
- To switch SV tracking to the second subset, tap the **SV set B** softkey.
- To re-enable all SVs tap the **All** softkey.

When starting or ending a survey, all satellite tracking for the constellations selected in the survey style are re-enabled.

NOTE - Use of the SV subset function takes full control over enabling and disabling SVs and overrides any custom enabling or disabling of satellites.

TIP - The SV subset functions can also be selected from the **Method** field in the **RTK Initialization** screen.

To change which satellites are being tracked

To enable or disable the tracking of entire constellations such as all GLONASS or all BeiDou satellites, use the check boxes in the **GNSS Signal Tracking** group box. Ensure you have enough SVs enabled for RTK to operate optimally, as disabling entire constellations can compromise GNSS receiver performance.

NOTE -

- If you disable a satellite, it remains disabled until you enable it again. Even when the receiver is switched off, it stores that a satellite is disabled.
- Individually disabled satellites are not affected by changes to the check boxes in the **GNSS Signal Tracking** group. If an SV is already disabled it remains disabled when the constellation it belongs to is disabled or enabled.

To enable or disable tracking of SBAS satellites

When you start a survey configured to use SBAS with Origin, the appropriate satellites are enabled in the receiver so that they can be tracked. To use a different SBAS satellite

1. Start the survey with the SBAS enabled style.
2. Tap the satellite icon in the status bar.
3. Tap the SV number of the satellite.
4. Tap **Enable** or **Disable**.

The SBAS satellites remain enabled or disabled until the next time that you start a new survey.

Current position information

If the controller is connected to a GNSS receiver, or you are using a controller with internal GPS, you can view or quickly store the current position of the receiver without having to start a survey. This is especially useful for storing waypoints so that you can easily return to locations of interest.

NOTE - When using a controller with internal GPS, a connected GNSS receiver is always used in preference to the internal GPS.

To view the current position of the receiver

1. Tap the receiver icon in the status bar and select **Position**.
 - If the antenna height is defined, the software calculates the position of the pole tip.
 - If a GNSS receiver with a built-in tilt sensor is being used, the current tilt distance is shown.

NOTE - The **Position** screen does not apply the tilt correction to positions, therefore the position displayed is the uncorrected position.

- The position is shown in the coordinates selected in the **Coordinate view** field.
2. To change the [Coordinate view settings, page 683](#), tap **Options**.
 3. To view the position of the base antenna, tap **Base**.

To store the current receiver position

1. Do one of the following:
 - Tap the receiver icon in the status bar and select **Position**. To store the position, tap **Store**. See [Current position information](#).
 - When navigating to a location, in the **Navigate to point** screen tap **Position**.
 - Make sure no features are selected in the map and then tap and hold an empty space in the map and select **Store a point**.
2. Make sure the value in the **Antenna height** field is correct.
3. Tap **Store**.

Navigate to a point


If the controller is connected to a GNSS receiver, or you are using a controller with internal GPS, you can navigate to a point

- during a conventional survey if you lose lock to the target
- before you start a survey.

NOTE – When using a controller with internal GPS, a connected GNSS receiver is always used in preference to the internal GPS.

The **Navigate to point** function uses the settings in the last used GNSS survey style.

NOTE – If you are using a GNSS receiver that can track SBAS signals, when the radio link is down you can use SBAS positions instead of autonomous positions. To use SBAS positions, set the **Satellite differential field** in the survey style to SBAS.

1. To navigate to a point, you can
 - Select the point in the map. Tap and hold in the map and select **Navigate to point**.
 - Tap  and select **Instrument** or **Receiver / Navigate to point**.
2. Fill out the other fields as required.
3. To change the display mode, tap **Options**. The display options are the same as the display options in the **Stakeout options** screen. See [Stakeout navigation display, page 582](#).
4. Tap **Start**.
5. Use the arrow to navigate to the point, which is shown as a cross. When you are close to the point, the arrow disappears and a bull's-eye symbol appears. A grid also appears and changes scale as you move closer to the target.

When you are on the point, the bull's-eye symbol covers the cross.
6. If required, mark the point.
7. To store the point, tap **Position** and then tap **Store**.

Transfer receiver files

If the controller is connected to a receiver that supports the transfer of receiver files, you can transfer files to and from the controller to the receiver.

The **Import from receiver** option is available when a Spectra Geospatial GNSS receiver is in use. Use it to delete files in the connected receiver, or to copy files from the connected receiver to the controller.

NOTE –

- To access the external memory of a receiver that supports both internal and external memory, tap on the **Parent** folder from the Internal directory and then tap on **External**.
- You cannot restore deleted receiver files.

The **Export to receiver** option is available when a Spectra Geospatial GNSS receiver is in use that has a compact flash card inserted. Use it to copy files from the controller to the connected receiver.

You can transfer files only to and from the **current project folder** on the controller.

To import files from the receiver to the controller

1. Tap  and select **Instrument / Receiver files / Import from receiver**.

All files stored in the receiver are shown.

2. Tap the file(s) to transfer.

NOTE – To see more information about a file, select it and tap **Info**. To delete a file, select it and tap **Delete**. To select all files in the current directory, tap **All**.

3. Tap **Import**. The **Copy file to Spectra Geospatial Controller** screen appears.
4. Tap **Start**.

To export files from the controller to the receiver

1. Tap  and select **Instrument / Receiver files / Export to receiver**.

All files in the current project folder on the controller are shown.

2. Tap the file(s) to transfer.
3. Tap **Export**.
4. Tap **Start**.

Receiver settings

To view the configuration of the connected GNSS receiver, tap and hold on the receiver icon in the status bar.

The **Receiver settings** screen shows information about the type, firmware version, and capabilities of the connected receiver.

Receiver capabilities

Receiver capabilities shown in the **Receiver settings** screen may include the following:

Tracking

The **Tracking** group shows information about the GNSS satellite constellations that can be tracked using the connected GNSS receiver.

RTK

The **RTK** group shows the RTK capabilities of the connected GNSS receiver, including:

- Broadcast message formats supported by the receiver (for example, CMR+ and CMRx).
- Support for Trimble IonoGuard™ technology for ionospheric disturbance mitigation.

RTCM

The **RTCM** group shows the RTCM broadcast message formats supported by the connected GNSS receiver.

RTX

The **RTX** group shows RTX subscription information, including the subscription expiry date, for the connected GNSS receiver.

OmniSTAR

The **OmniSTAR** group shows OmniSTAR subscription information, including the subscription expiry date, for the connected GNSS receiver.

Spectra Geospatial GNSS Subscriptions

The **Spectra Geospatial GNSS Subscriptions** group shows information for the GNSS receiver subscription, including the subscription expiry date.

This group is shown only for receivers that have configurable options provided by subscription, for example when connected to an SP100 receiver.

Receiver configuration softkeys

Use the softkeys at the bottom of the screen to configure additional settings.

To configure:

- GNSS eBubble options, tap **eBubble**. See [GNSS eBubble tilt sensor, page 435](#).
- the RTX satellites that are being used, tap RTX SV. See [To view RTX status, page 408](#).
- Wi-Fi settings for the receiver, tap **Wi-Fi**. See [Receiver Wi-Fi settings, page 484](#).
- a Bluetooth connection to the receiver, tap **Bluetooth**.

GNSS tilt sensors

NOTE – This topic applies to Spectra Geospatial receivers with built-in tilt sensors, including inertial measurement unit (IMU).

Spectra Geospatial receivers with built-in tilt sensors contain accelerometers that are used to calculate the degree of tilt of the receiver. These tilt sensors enable you to make sure the pole is vertical and stable, so that **the receiver is level**, or is within tilt tolerance.

The Spectra Geospatial SP80 and SP85 receivers have built-in tilt sensors that contain accelerometers that are used to calculate the degree of tilt of the receiver. These tilt sensors enable you to make sure the pole is vertical and stable, so that **the receiver is level**, or is within tilt tolerance.

The Spectra Geospatial SP100 receiver has a built-in IMU that also provides IMU tilt compensation, which allows you to measure points when the **pole is tilted and the receiver is not level**.

TIP – Well-calibrated tilt sensors are essential for accurate results. Origin provides a number of calibration routines for your receiver. To view the **Sensor calibration** screen, tap ☰ and select **Instrument / Tilt sensor options** and then tap the **Calib.** softkey.

GNSS eBubble

The GNSS eBubble is an electronic representation of the degree of tilt of the receiver. Use the GNSS eBubble to ensure the pole is vertical, still and stable when measuring a point.

The GNSS eBubble appears automatically when you are using a:

- Spectra Geospatial SP80 or SP85 receiver and **Tilt functions** are enabled in the survey style.
- Spectra Geospatial SP100 receiver with IMU tilt compensation where **eBubble functions** are enabled in the survey style **and** the receiver is operating in **GNSS-only mode**.

For more information, see [GNSS eBubble tilt sensor, page 435](#).

IMU tilt compensation

IMU sensors continuously determine the orientation and degree of tilt of the receiver. When combined with GNSS the receiver can continuously determine its position and correct for any amount of tilt.

IMU tilt compensation does not require a particular measurement method. When IMU tilt compensation is enabled and the IMU is aligned, IMU tilt compensation is "always on" while roving, navigating, or when measuring points using any measurement method except observed control point.

For more information, see [IMU tilt compensation, page 443](#).

GNSS eBubble tilt sensor

NOTE – This topic applies to Spectra Geospatial receivers with built-in tilt sensors, including inertial measurement unit (IMU).

The GNSS eBubble uses the accelerometers in the receiver to provide an electronic representation of the degree of tilt of the receiver.

TIP – The GNSS eBubble operates independently of any IMU sensors in the receiver. For receivers that support IMU tilt compensation, the GNSS eBubble appears in the software only when the receiver is operating in **GNSS-only mode**.

The GNSS eBubble appears automatically when you are using a:

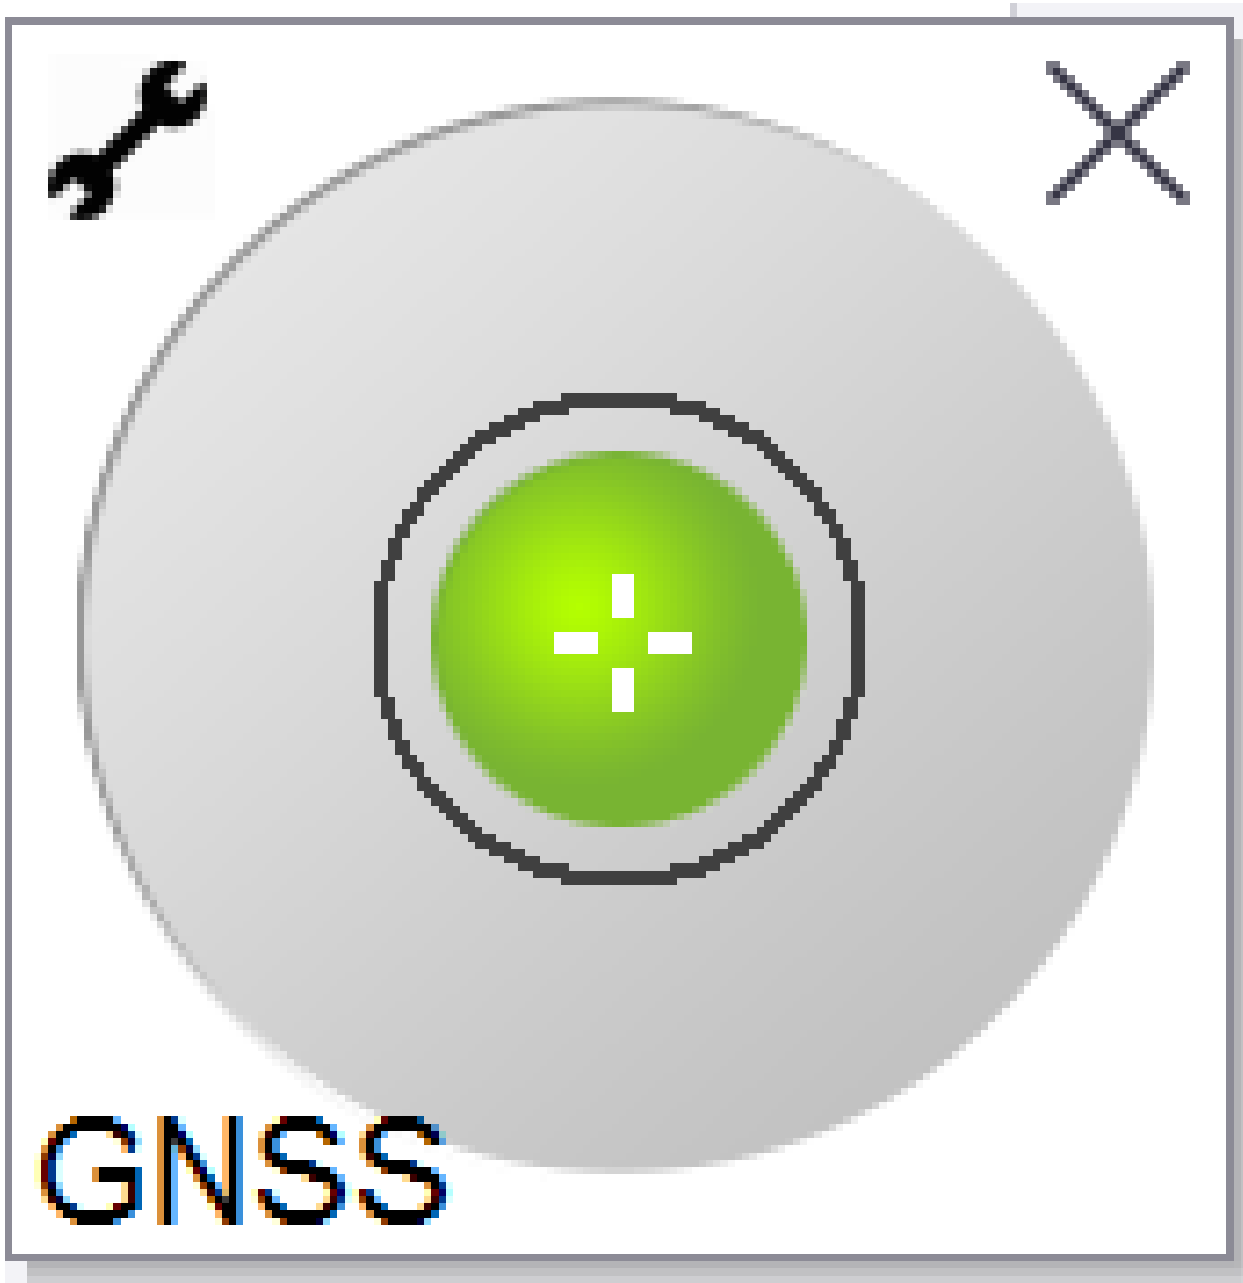
- Spectra Geospatial SP80 or SP85 receiver and **Tilt functions** are enabled in the survey style.
- Spectra Geospatial SP100 receiver that supports IMU tilt compensation where **eBubble functions** are enabled in the survey style **and** the receiver is operating in **GNSS-only mode**.

TIP – If you have previously chosen to hide the GNSS eBubble for the current measurement method, it does not appear automatically. To show or hide the GNSS eBubble:

- In the Measure screen, tap the **eBubble** softkey.
- To show or hide the eBubble from any screen, press **Ctrl + L**.
- To move the eBubble window to a new position on the screen, tap and hold on the eBubble and drag to a new position.

To make sure the antenna is level

Use the eBubble to ensure the pole is vertical, still and stable when measuring a point, or that the receiver is within the required tilt tolerance. For example:



The circle on the **eBubble** vial represents the configured tilt tolerance. **Tilt tolerance** is defined as the distance on the ground (**tilt distance**) that the tilt represents given the antenna height:

- A green bubble indicates the receiver is within the defined tilt tolerance and the point can be measured.
- A red bubble indicates the receiver is outside the defined tilt tolerance. Depending on the configured tilt warnings, a warning message may also appear if the eBubble is red. See [GNSS eBubble tilt warnings, page 440](#).

If the antenna is outside the tilt tolerance, adjust the pole angle to be within the tilt tolerance.

Alternatively, increase the tilt tolerance.

To store a position that is outside the configured tilt tolerance, tap



. A warning record is associated with the point.



Configure the **Tilt tolerance** for each point type in the survey style, or tap options in the **Measure** screen. See [GNSS point options, page 379](#).

NOTE – For best results, when using the GNSS eBubble make sure that:

- You are looking directly at the receiver LED panel. This is because the GNSS eBubble is aligned to the receiver LED panel.
- The GNSS eBubble is properly calibrated. The accuracy of tilt information used to display the GNSS eBubble and stored with measured points depends on the quality of the eBubble calibration. Using a poorly-calibrated GNSS eBubble degrades the accuracy of the coordinates measured using the eBubble as a level reference.

GNSS eBubble options

You can configure the sensitivity and responsiveness of the GNSS eBubble in the **GNSS eBubble options** screen. To view this screen you can:

- Tap  in the **eBubble** window.
- Tap and hold the receiver icon in the status bar to view the **Receiver settings** screen and then tap **eBubble**.
- Tap  and select **Instrument / Tilt sensor options**.

TIP – If you have more than one tilt sensor connected, you can also tap the **GNSS** softkey from the **eBubble options** screen for a different sensor. Changing the eBubble settings for one sensor changes the eBubble settings for all connected tilt sensors.

You can configure the following settings:

Option	Description
eBubble sensitivity	The eBubble moves 2 mm for the specified sensitivity angle. To decrease sensitivity select a large angle.
Tilt tolerance	Defines the maximum radius that the receiver can tilt and be considered in tolerance. The allowable range is 0.001 m to 1.000 m.
eBubble response	Controls the eBubble's responsiveness to movement.
Tilt distance	The tilt distance shown is calculated using the current antenna height.
eBubble calibration status	Current calibration status. To recalibrate the eBubble, tap Calib .
Calibration expires in	The date that the current calibration will expire. The

Option	Description
	eBubble must then be recalibrated.
Calibration age limit	Displays the time period between calibrations. At the end of the time period the software will prompt you to recalibrate the eBubble. To edit the default value tap the pop-up arrow.

GNSS eBubble tilt warnings

You can configure the software to warn if, during point measurement, the receiver tilts more than the required tilt tolerance.

When tilt warnings are enabled a measurement can only be stored when the **eBubble** is green and within the tolerance circle.

Tilt warnings apply only when the GNSS eBubble tilt sensor is being used. Specifically, when you are using a

- Spectra Geospatial SP80 or SP85 receiver and **Tilt functions** are enabled in the survey style.
- Spectra Geospatial SP100 receiver that supports IMU tilt compensation where **eBubble functions** are enabled in the survey style **and** the receiver is operating in **GNSS-only mode**.

To configure required tilt tolerance and tilt warnings

1. Enter the tilt threshold value in the **Tilt tolerance** field in the point method screen of the survey style. You can enter a different value for each point method.

If the **Tilt warnings** check box is not selected, the GNSS **eBubble** indicates when the receiver is outside the specified tolerance but no warnings are displayed.

2. Select the **Tilt warnings** check box to display warnings when the antenna tilts more than the value entered in the **Tilt tolerance** field.

If tilt warnings are configured:

- If the GNSS eBubble is red to indicate the receiver is outside the tilt tolerance when you start to measure a topo or observed control point, a warning message appears. Tap **Yes** to continue measuring the position.
 - An **Excess tilt detected while measuring** message appears if you have had excess tilt at any time during the measurement process.
 - An **Excess tilt** message appears if you have had excess tilt at the time of storage.
3. Use the **Auto-abandon** and **Auto-measure** check boxes to control what happens if **excess tilt** or **excess movement** is detected when measuring a topo point or observed control point:
 - Select the **Auto abandon** check box to automatically abandon the point if excess tilt or excess movement is detected. If the **Auto abandon** check box is not selected and excess tilt or excess movement is detected, you must choose whether to accept the point, abandon it, or remeasure it.

- Select the **Auto-measure** check box to automatically start measuring a topo point when the precisions and tilt are within tolerance, and no excess movement is detected.
- Select both the **Auto abandon** and **Auto-measure** check boxes to automate the re-measure of points that do not meet your requirements. If excess tilt or excess movement is detected when both check boxes are selected, the point is automatically abandoned and the software shows **Waiting for level**, indicating the measurement will start as soon as the receiver is level and stationary.

GNSS eBubble calibration

NOTE – This topic applies to Spectra Geospatial receivers with built-in tilt sensors, including inertial measurement unit (IMU).

The GNSS eBubble uses the accelerometers in the receiver to provide an electronic representation of the degree of tilt of the receiver.

TIP – The GNSS eBubble operates independently of any IMU sensors in the receiver. For receivers that support IMU tilt compensation, the GNSS eBubble appears in the software only when the receiver is operating in **GNSS-only mode**.

GNSS eBubble calibration aligns the accelerometers in the receiver to the physical sensor used to measure tilt:

- When connected to a receiver that supports IMU tilt compensation, you can calibrate the GNSS eBubble to one of the following:
 - Select **Calibrate to vial** if you have a well-calibrated physical spirit level vial to calibrate to, and the pole setup is known to be straight and optimal.
 - Select **Calibrate to IMU** if you **do not** have a well-calibrated physical spirit level vial to calibrate to, or if the pole being used is in less than excellent condition (for example the pole is not perfectly straight or the pole tip is misaligned). Spectra Geospatial recommends using the **Calibrate to IMU** option when the pole setup requires a pole bias adjustment. Perform the **Calibrate to IMU** eBubble calibration immediately after you have applied a new pole bias adjustment.
- When connected to a receiver that does not support IMU tilt compensation, the only GNSS eBubble calibration option is **Calibrate to vial**.

When to calibrate the GNSS eBubble

The GNSS eBubble calibration takes 30 seconds to complete. You must perform the GNSS eBubble calibration:

- The first time you use the receiver. (Or the first time you use the receiver in GNSS-only mode, if you are using a receiver that supports IMU tilt compensation.)
- When the previous calibration expires.
- After completing a pole bias adjustment.

- If the GNSS receiver suffers severe abuse such as a pole drop.
- If the temperature inside the receiver is more than 30° Celsius different to when the eBubble calibration was performed, the calibration is invalidated.
- If the Origin software detects the GNSS eBubble is not calibrated and displays the warning message **Calibration required to use eBubble tilt functions. Calibrate now?**

Before performing the GNSS eBubble calibration

Take great care when calibrating the eBubble to make sure the most accurate tilt information is available at all times, including:

 
- **Bubble reference:** Calibrate the GNSS eBubble against a properly calibrated reference, such as the physical vial. If the receiver has a built-in IMU, you can use the IMU as the reference. The accuracy of the eBubble depends totally on the accuracy of the reference used to calibrate it.
- **Pole stability:** When calibrating the GNSS eBubble, the pole the GNSS receiver is on should be as vertical and as stable as possible. In practice this means using at least a bipod to hold the pole as still as possible.
- **Pole straightness:** The straightness of the pole affects the tilt measured by the sensors in the GNSS receiver. If you change poles, and the poles are not both in excellent condition, you should recalibrate the GNSS eBubble. When using IMU tilt compensation, you should perform a pole bias adjustment after changing poles and then recalibrate the GNSS eBubble.

To calibrate the eBubble

NOTE – Calibration routines should not be left incomplete. You should not need to navigate to a different screen during the calibration, but if you choose to navigate to a different screen, Spectra Geospatial recommends that you first complete the calibration process, or tap **Cancel** to cancel the calibration.

1. Set up the receiver so that the pole the GNSS receiver is on is as vertical and as stable as possible, and the receiver has a clear view of the sky.

NOTE – If the receiver supports IMU tilt compensation, then to calibrate to the IMU, IMU tilt compensation must be enabled, and the IMU must be aligned.

2. Make sure the receiver LED panel is facing you.
3. Tap  and select **Instrument / Tilt sensor options**.
4. Tap the **Calib.** softkey to open the **Sensor calibration** screen.
5. In the **GNSS eBubble** group box, select the physical reference that the eBubble will be calibrated against:
 - Select **Calibrate to vial** if you have a well-calibrated physical spirit level vial to calibrate to, and the pole setup is known to be straight and optimal.

- Select **Calibrate to IMU** if you do not have a well-calibrated physical spirit level vial to calibrate to, or if the pole being used is in less than excellent condition (for example the pole is not perfectly straight or the pole tip is misaligned). Spectra Geospatial recommends using the **Calibrate to IMU** option when the pole setup requires a pole bias adjustment. Perform the **Calibrate to IMU** eBubble calibration immediately after you have applied a new pole bias adjustment.

When connected to a receiver that does not support IMU tilt compensation, the only GNSS eBubble calibration option is **Calibrate to vial**.

6. Tap **Calibrate**.
7. If calibrating to the vial, use the vial to make sure the pole is vertical. If calibrating to the IMU, use the IMU eBubble to make sure the pole is vertical. Hold the pole still and stable. Tap **Start**.
8. Keep the pole stable and vertical until the progress bar completes.
Once complete, the software returns to the **Sensor calibration** screen.
9. To close the **Sensor calibration** screen, tap **Accept**.

The details of the calibration are stored in the job. To review them, tap \equiv and then select **Job data / Review job**.

IMU tilt compensation

NOTE – This topic applies only to the Spectra Geospatial SP100 receiver, which has a built-in IMU sensor.

Using a Spectra Geospatial receiver with IMU tilt compensation allows points to be measured or staked out while the survey rod is tilted or tipped. This enables accurate measurements to be taken without having to level the antenna, allowing for faster, more efficient work in the field.

The inertial measurement unit (IMU) in the receiver uses information from acceleration sensors (accelerometers) and rotational sensors (gyroscopes) as well as GNSS to continuously determine its position, rotation, and degree of tilt, and correct for any amount of tilt. With IMU tilt compensation, the pole can be tilted at any angle and the software is able to calculate the tilt angle and the tilt distance to determine the position of the pole tip on the ground.

When enabled, IMU tilt compensation is **"always on"** and can be used for any measurement method except observed control point. When measuring an observed control point, the receiver automatically switches to GNSS-only mode, and the GNSS eBubble appears automatically if it is enabled.

IMU tilt compensation offers a completely different way of working because you can:

- Measure accurate points quickly while standing or walking without having to level the pole.
- Concentrate on where the pole tip needs to go, which is especially useful during stakeout.
- Easily survey hard-to-reach locations such as building corners and pipe inverts.
- No longer worry about movement of the pole when measuring, because the receiver automatically corrects for "pole wobble" when the pole tip is stationary.

Because performance is unaffected by magnetic interference, IMU tilt compensation can be used in environments susceptible to magnetic disturbance such as around vehicles, heavy machinery, or steel reinforced buildings.

NOTE – In situations where IMU tilt compensation may not be able to be used, such as in very difficult RTK environments, you can manually switch to GNSS-only mode. To do this, tap the receiver icon in the status bar to view the **GNSS functions** screen and then tap **IMU tilt compensation** to toggle on/toggle off GNSS-only mode.

Available survey types

IMU tilt compensation can be used in an RTK or RTX survey.

Correction methods available with IMU tilt compensation:

- **RTK** surveys with any type of real-time data link (internet, radio)
- **RTX** surveys (satellite or internet)

CAUTION – When measuring or staking out points using IMU tilt compensation, make very sure the entered antenna height and measurement method is correct. Alignment reliability and pole tip position reliability, especially during movement of the antenna while the pole tip is stationary, relies completely on the antenna height being correct. Residual error in horizontal position caused by antenna motion while measuring when the pole tip is stationary cannot be removed by changing the antenna height after measuring the point.

Enabling IMU tilt compensation

Enable **IMU tilt compensation** in the **Rover options** screen of the survey style to enable "always on" tilt compensation using the internal IMU sensors while roving, navigating, or when measuring points using any measurement method except observed control point. See [IMU tilt survey style settings, page 449](#).

Enable **eBubble functions** in the survey style so that you can use the GNSS eBubble to help you keep the receiver's integrated antenna level when measuring a point if you are working in GNSS-only mode. The GNSS eBubble is not shown when the IMU is aligned.

IMU alignment

To use IMU tilt compensation, the IMU in the receiver must be aligned. Align the IMU after you start the survey, or during the survey when alignment is lost. The alignment process is simple and straightforward, and mimics normal use of the receiver. In good RTK environments the IMU reliably realigns itself automatically during natural pole movement. See [Aligning the IMU, page 450](#).

NOTE – When the IMU is aligned, the **Position** screen shows the position of the pole tip. This applies during and outside of a survey.

Sensor calibration

Once the IMU is aligned, IMU tilt compensation can be used “out of the box” without further calibration of the receiver. A number of calibration routines are available to calibrate the sensors in the receiver for normal maintenance. Calibrations should be performed as required. In particular, Spectra Geospatial recommends performing the pole bias adjustment whenever you are using a different pole that is not in excellent condition.

When using a receiver that has IMU-based tilt compensation, the following sensor calibration routines are available:

- [GNSS eBubble calibration, page 441](#)
- [Pole bias adjustment, page 451](#)
- [IMU bias calibration](#)

Calibrations should be performed as required. In summary, Spectra Geospatial recommends that you:

- Perform an **eBubble calibration** if the GNSS eBubble does not seem to align with the level reference you are using.
- Perform a **pole bias adjustment** whenever you are using a different sub-optimal pole or quick release.
- Perform an **IMU bias calibration** rarely, and only when the **Excessive IMU bias** warning appears.

In general, the sensor calibration routines are independent of one another. However, in a well-used pole (or with a badly calibrated vial), the vial may not be exactly perpendicular to the axis from the APC to the pole tip, and the IMU reference point may not be exactly in line with the pole tip. After completing a pole bias adjustment you should consider calibrating the GNSS eBubble to the IMU.

For more information, refer to the section for each calibration.

IMU status

During a survey using a receiver with IMU-based tilt compensation, the GNSS survey mode shown in the status line is:

- **RTK+IMU** in an RTK survey
- **RTX+IMU** in an RTX survey

When IMU tilt compensation is enabled, the receiver icon in the status bar is shown as:



The IMU alignment status is shown next to the receiver icon. A green check mark indicates the IMU is aligned





. A red cross indicates the IMU is not aligned



Precision values shown account for the number of GNSS satellites, current DOP, the quality of the IMU alignment and the tilt of the receiver. When the IMU is aligned, precision values displayed are at the pole tip. If IMU tilt compensation is enabled but the IMU is not aligned, no precision values are shown. Generally, the more the receiver is tilted, the larger the precision values become.

When IMU tilt compensation is disabled the receiver operates in GNSS-only mode, and precisions are calculated at the Antenna Phase Center.

In the map, the GNSS cursor indicates the IMU status. When the IMU is aligned, the cursor indicates the direction the receiver is facing.

GNSS cursor	Indicates
	<p>IMU tilt compensation is enabled and the IMU is aligned. The arrowhead displays the direction the receiver is facing in relation to North or the Reference azimuth, depending on your map orientation settings.</p> <p>NOTE - You must be facing the LED panel of the receiver for the GNSS cursor to be orientated correctly.</p>
	<p>IMU tilt compensation is not enabled, or IMU tilt compensation is enabled but the IMU is not aligned. The software does not know the direction the receiver is orientated.</p>

Measurement methods

Measuring a point using IMU tilt compensation does not require a specific measurement method. When IMU tilt compensation is enabled and the IMU is properly aligned, most measurement methods can be used to measure a tilt compensated point including:


- **Topo point**
- **Continuous topo**
- **Rapid point**
- **Measure to surface**
- **Horizontal tilt offset**

Measuring a horizontal tilt offset is useful to measure locations that cannot be occupied by the tip of the pole, for example when measuring the center of a tree or post.

- **Observed control point**

The receiver automatically switches to GNSS-only mode because a vertical pole is required


Measuring points


When measuring points when the IMU is aligned, you do not need to level the pole before measuring. The tilted measuring mode icon  in the status bar indicates the point can be measured without leveling the pole and without having to hold it very still.

When **Auto-measure** is enabled, the software starts measuring occupations as soon as the pole tip is stable on the point to be measured. When **Auto-store** is enabled, the point is automatically stored when the required occupation time and precisions have been reached. Simply pick up the pole and move to the next point.

Observed control points


When measuring an observed control point, the Origin software automatically switches to GNSS-only mode so the point can be measured in static mode. The eBubble automatically appears, unless you have previously chosen to hide it for that measurement method. Use the GNSS eBubble to level the receiver before measuring.

In GNSS-only mode, the status bar shows RTK and the static measuring mode icon  in the status bar indicates the pole should be vertical before you measure the point.

Once you have measured the observed control point, if you then select the topo point method and the IMU is still aligned then the software returns to using IMU tilt compensation. The GNSS eBubble automatically disappears, the status bar shows **RTK+IMU** and the tilted measuring mode icon  in the status bar indicates that the point can be measured without leveling the pole and without having to hold it very still.

You can seamlessly switch between point measurement methods that use IMU tilt compensation and the observed control point method (RTK only) without having to realign the IMU as long as the IMU alignment is maintained throughout the measurements. If IMU alignment is lost while in GNSS-only mode then you must realign the IMU before you can measure a point using IMU tilt compensation.

Continuous topo points

When measuring points in continuous mode with IMU tilt compensation, you do not need to hold the receiver level while measuring. The tilted continuous mode icon  in the status bar indicates points can be measured without leveling the receiver. You should closely follow the feature you are measuring with the tip of the pole. Stop and Go continuous points are stored when the software detects the pole tip has stopped.

Stakeout

Using IMU tilt compensation in stakeout provides large productivity gains, as you do not need to level the pole while moving it to minimize the stakeout deltas. Simply move the pole tip to minimize the deltas. IMU tilt compensation also allows the stakeout navigation feature to know the direction you are facing when you are stationary, which is an advantage when close to the point being staked.

NOTE – You must be facing the LED panel of the receiver for stakeout navigation features to provide the correct information.

Stored IMU tilt information

When points are measured using IMU tilt compensation, device orientation information is stored with the point, including the tilt angle, tilt distance, azimuth, and the state of the IMU. This information can be viewed in the **Store point** form, or the **Review job** or **Point manager** screens.

When reviewing a point measured using IMU tilt compensation, the following additional information is provided.

Device orientation

Field	Description
Tilt angle	The tilt of the receiver based on the IMU.
Tilt distance	The horizontal distance from the position of the pole tip to the position of the APC projected vertically to the ground.
σ Tilt	Estimated tilt error (sigma tilt).
Azimuth	The azimuth (direction) of the tilt.
σ Azimuth	Estimated azimuth error (sigma azimuth).
IMU state	Shows that the IMU was aligned when measuring.

Occupation warnings

 
Field	Description
Poor IMU alignment	A value of Yes may be seen during the measurement if the IMU temporarily loses alignment and then regains it during the measurement.
Excess movement	With IMU tilt compensation the pole tip has moved during measurement. For GNSS-only mode, the APC has moved during measurement.
Poor precision	The precision estimates have exceeded the configured tolerances. With IMU tilt compensation the precision is calculated at the pole tip position. For GNSS-only mode, the precision is calculated at the APC position.

Field	Description
Position compromised	This can happen while static if the position moves by more than the 3-sigma precision estimate. With IMU tilt compensation this is the pole tip position. For GNSS-only mode this is the APC position.

IMU tilt survey style settings

When using the SP100 receiver, you can configure the survey style to use IMU tilt compensation and, if required, to use the GNSS eBubble when using GNSS-only mode.

NOTE – IMU tilt compensation is available only in an RTK survey style. In a **postprocessed** survey style, select the **Tilt functions** check box to enable use of the GNSS eBubble when measuring points and to make the **Tilt warnings** and **Auto-measure** options available in the appropriate point style settings.

1. Tap  and select **Settings / Survey styles / Rover options**.
2. In the **Survey type** field, select **RTK**.
3. In the **Antenna** group box, select **SP100** in the **Type** field.
4. In the **Tilt** group box:
 - a. Select the **IMU tilt compensation** check box to enable "always on" tilt compensation using the internal IMU sensors while roving, navigating, or when measuring points using any measurement method except observed control point.

TIP – To disable IMU tilt compensation and switch to using GNSS-only mode during a survey, for example when using a bipod in heavy canopy and the receiver needs to remain stationary for a period, tap the receiver icon in the status bar and then tap the **IMU tilt compensation** button in the **GNSS functions** screen. In good RTK environments where movement is happening constantly, tap **IMU tilt compensation** to re-enable it.

- b. Select the **eBubble functions** check box to enable use of the GNSS eBubble when using GNSS-only mode such as when measuring an observed control point, or when the IMU is not aligned or IMU tilt compensation is disabled.

NOTE – The GNSS eBubble uses only the accelerometers in the receiver and operates independently of the IMU sensors. The GNSS eBubble is only shown when in GNSS-only mode.

- c. Tap **Accept**.
5. To configure point measurement settings:
 - a. In the survey style screen, select the point type.
 - b. Set the **Auto tolerance** switch to **Yes** to enable the software to calculate horizontal and vertical precision tolerances that meet the GNSS receiver's RTK specifications for the baseline length and tilt you are measuring. To enter your own precision tolerances, set the **Auto tolerance** switch to **No** and then enter the required **Horizontal tolerance** and **Vertical tolerance**.

- c. If the **eBubble functions** check box is enabled in the **Rover options** screen of the survey style, select the **Tilt warnings** check box to display warning messages if the antenna tilts more than the threshold value entered in the **Tilt tolerance** field. You can specify a different **Tilt tolerance** value for each measurement type.
- d. To enable automatic measurement of points when the required conditions are met, select the **Auto-measure** check box. Required conditions depend on the survey mode, for example in RTK+IMU mode the pole tip must be stationary, and in GNSS-only mode the pole must be within tilt tolerance.

The **Auto-measure** check box is not available for observed control points.



- e. To automatically abandon points when the position is compromised, such as where excess movement is detected during the measurement process, select the **Auto abandon** check box.
- f. Tap **Accept**.

6. Tap **Store**.

Aligning the IMU

To use IMU tilt compensation, you must align the IMU in the receiver. The alignment process is simple and straightforward, and mimics normal use of the receiver.

1. Attach the receiver to the survey pole.
2. Make sure you correctly enter the antenna height in the GNSS antenna form in the Origin software.
3. Move the pole so that the receiver experiences acceleration and changes in position. This can range from rocking the survey pole back and forth while keeping the pole tip on the ground, to walking a short distance (generally less than 3 meters) while changing direction a few times.

When the IMU is aligned, the receiver icon in the status bar changes from  to  and the status line shows **IMU aligned**. The precision of the current position is calculated at the pole tip.

Align the IMU when you start the survey, or during the survey when alignment is lost. You can also align the IMU without starting a survey, as long as the receiver is in a good GNSS environment so enough satellites can be tracked. When you end a survey with IMU tilt compensation enabled and the IMU aligned, IMU tilt compensation remains in use.

TIP – If you are working in a very difficult RTK environment, you may need to switch to GNSS-only mode. To switch to GNSS-only mode, tap the receiver icon in the status bar to view the **GNSS functions** screen and then tap **IMU tilt compensation** to toggle on/toggle off GNSS-only mode.

IMU tilt compensation uses the antenna height to accurately compute the pole tip position. Whenever the antenna height is changed, the IMU is reset to an unaligned state. You must realign the IMU with the updated antenna height before measuring.

CAUTION – When measuring or staking out points using IMU tilt compensation, make very sure the entered antenna height and measurement method is correct. Alignment reliability and pole tip position reliability, especially during movement of the antenna while the pole tip is stationary, relies completely on the antenna height being correct. Residual error in horizontal position caused by antenna motion while measuring when the pole tip is stationary cannot be removed by changing the antenna height after measuring the point.

In good RTK environments the IMU reliably realigns itself automatically during natural pole movement. To realign the IMU during the survey, repeat step 3 from the **Aligning the IMU** section above.

Pole bias adjustment

Pole bias adjustment may be required to correct small errors introduced when the reference point of the tilt sensor being used is not aligned with the point of measurement. The point of measurement is the pole tip (when the IMU is aligned) or the antenna phase center (GNSS-only mode).

When using IMU tilt compensation, Spectra Geospatial recommends using an undamaged carbon fiber range pole in excellent condition. The quick release should also be in optimal condition with no damage to the mating surface between the receiver and the quick release.

The **pole bias adjustment** corrects errors introduced when using a pole that may have become damaged during normal use and is no longer perfectly straight, or if the pole tip is no longer true and perfectly aligned with the center of the pole. Pole bias adjustment should be performed in optimal RTK environment with a good IMU alignment.

When to perform the pole bias adjustment

Spectra Geospatial recommends that you perform the pole bias adjustment:

- When the receiver is using a pole and quick release in sub-optimal condition.
- Each time you change to a different sub-optimal pole.

NOTE – The pole bias adjustment affects IMU tilt compensation measurements only. In GNSS-only mode, make sure the pole is straight, has a calibrated physical spirit level vial and an accurately calibrated GNSS eBubble.

If a pole bias adjustment has already been performed with the current receiver, the software displays a **Pole bias adjustment applied** message when you start an RTK survey with IMU tilt compensation enabled. To dismiss the message:

- If you are using the same pole and quick release, and receiver as previously used, tap **OK** to use the current adjustment.
- If you always use the same pole, quick release, and receiver, tap **Ignore** to use the current adjustment and not show the message again when starting a survey with the same receiver. The message will appear if a new adjustment is applied.

- If you are using a different sub-optimal pole or quick release, tap **Adjust** to perform a new pole bias adjustment.
- If you are using a different pole that is in excellent condition, tap **Adjust** then press **Clear** to clear the current pole bias adjustment from the receiver.

Before performing the pole bias adjustment

To set up the receiver:

1. Attach the receiver to the pole.
2. Turn on the receiver and align the IMU well. The more movement involving changes of direction during the alignment process, the better the quality of the alignment.
3. Set up the receiver on a well defined point, with or without a bipod. The pole tip cannot move during the routine so it is best to place it on a control point or other stable and indented point where the tip of the rod can positively rest throughout the routine.
4. Determine if you need to run the routine by checking the horizontal accuracy of the receiver and pole pairing as described below.


To check the horizontal accuracy of IMU tilt compensation

1. Make sure the IMU is aligned and the pole tip is on a stable point that prevents pole tip movement.
2. Holding the receiver approximately level, take a single **Topo point** measurement facing North, East, South, and West.
3. Measure the distance between the opposite points (for example, North and South) to get an estimate of the horizontal accuracy of the receiver (use the **Cogo** menu to compute an inverse between them). If the distance between the two points is outside of the horizontal tolerance needed for the task, Spectra Geospatial recommends that you run the pole bias adjustment.

To perform the pole bias adjustment

The pole bias adjustment takes one set of measurements while facing one direction, and then a second set of measurements after rotating the receiver 180 degrees. It then calculates the corrections to correct for any errors introduced by the pole.

NOTE – Calibration routines should not be left incomplete. You should not need to navigate to a different screen during the adjustment, but if you choose to navigate to a different screen, Spectra Geospatial recommends that you first complete the adjustment process, or tap **Cancel** to cancel the adjustment.

- To open the **Pole bias adjustment** screen, do one of the following:
 - Tap **Adjust** in the **Pole bias adjustment applied** message.
 - Tap  and select **Instrument / Tilt sensor options**. Tap the **Calib.** softkey to open the **Sensor calibration** screen. In the **Pole bias** group box, tap **Adjust**.
- Follow the instructions for each step very carefully. Tap **Start**.

NOTE – If the adjustment routine fails to run when you tap **Start**, for example if you get an out-of-tilt warning when you know the receiver is level, tap the **Reset** button. This button removes any values calculated during a previous routine and may decrease your horizontal accuracy. Once the reset is complete, immediately run the pole bias adjustment.

- If the IMU is not aligned, you are prompted to align it. Because the pole bias adjustment requires the pole tip to be stable on the ground, you must **keep the pole tip stationary on the ground** while you tilt the pole in different directions to realign the IMU.
- Phase one of the adjustment begins when you tap **Start**. Keep the pole vertical and stationary and the pole tip in the same location while the measurements are recorded. If you are not using a bipod make sure you hold the receiver as stable as possible.

During the routine, values are constantly checked to ensure accurate measurements. If they go out of tolerance, the measurements stop. Some of these checks include:

- The receiver must be kept at the same rotation/heading.
 - The receiver must be kept approximately level.
 - The receiver must stay aligned.
 - The precision values must stay in tolerance of 0.021 m horizontal, 0.030 m vertical. You cannot change these precision values, and if you are not in a survey they are not displayed.
- When phase one is complete, rotate the receiver 180° **without moving the pole tip**.

Once rotated within tolerance and level, phase two begins automatically.

At the end of the routine, the calculated correction values are displayed. Spectra Geospatial recommends applying the values if they are **above** 5 mm when using a 2 m pole.

If the computed adjustment is more than 10 mm different to the previous adjustment or more than 10 mm from zero, a message warns that the adjustment appears to be excessive, which indicates a sub-optimal pole setup. If you accept the large adjustment, you are prompted to perform a **Calibrate to IMU eBubble calibration**, as this will improve the GNSS-only position results using the GNSS eBubble with a sub-optimal pole setup.

- Tap **Yes** to apply the correction values.

NOTE – The IMU loses alignment when the pole bias correction is applied. To use IMU tilt compensation you must realign the IMU. See [Aligning the IMU, page 450](#).

IMU integrity monitoring

The receiver firmware constantly monitors the IMU sensors for data quality and indicates the current quality status in the **IMU bias** group box in the **Sensor calibration** screen.

The **IMU integrity monitoring** field can contain the following values:

- **IMU OK**
- **IMU error detected**
- **IMU excessive bias detected**

IMU error detection

If the IMU integrity monitoring feature detects the IMU sensors have become **temporarily** saturated due to an impact such as a pole drop, Origin displays the warning message **IMU error detected**. When this happens, you must restart the receiver to reset the sensors.

Actions to deal with the warning are provided with the warning message. To immediately restart the receiver, tap **Restart**. To continue surveying without IMU tilt compensation, tap **Disable IMU** and proceed with using the receiver in GNSS-only mode.

If the **IMU error detected** message persists after restarting the receiver, contact your Spectra Geospatial distributor for further advice.

IMU excessive bias detection

If poor quality data is detected, such as excessive IMU bias, Origin displays the warning message **Excessive IMU biases detected. Perform IMU bias calibration or disable IMU tilt compensation**. You should perform an IMU bias calibration **only** when you have received this error message.

Actions to deal with the warning are provided with the warning message. To perform the IMU bias calibration when the warning appears, tap **Calibrate**. To continue surveying without IMU tilt compensation, tap **Disable IMU** and proceed with using the receiver in GNSS-only mode.

Causes of excessive IMU bias

Excessive IMU bias can be caused by any of the following:

- The receiver may have been dropped or suffered from some other form of physical abuse.
- The receiver has experienced a large temperature variation since the last time an IMU bias calibration was carried out, or the temperature is very different (many tens of degrees Celcius) from the time of the previous calibration.
- The internal biases inside the IMU increase as the sensors age over a long period of time.

To perform an IMU bias calibration

The IMU bias calibration should **only** be performed if the **Excessive IMU biases detected** warning message appears. The IMU bias calibration procedure enables the receiver firmware to measure and correct for excessive IMU biases. This affects the fundamental operation of the IMU sensor and so must be performed with utmost care, at **approximately the average temperature** that the receiver will operate in, and following the on-screen instructions as closely as possible.

NOTE – Calibration routines should not be left incomplete. You should not need to navigate to a different screen during the calibration, but if you choose to navigate to a different screen, Spectra Geospatial recommends that you first complete the calibration process, or tap **Cancel** to cancel the calibration.

1. Remove the radio antenna and quick release from the receiver.
2. To open the **IMU bias calibration** screen, do one of the following:
 - Tap **Calibrate** in the warning message **Excessive IMU biases detected**.
 - Tap **☰** and select **Instrument / Tilt sensor options**. Tap the **Calib.** softkey and then in the **IMU bias** group box, tap **Calibrate**.
3. Place the receiver on a very stable surface free of all vibration and any movement (it does not need to be level). Tap **Start**.

TIP – When the progress bar for the first step has completed, instructions and a picture of the receiver laid on the side appears and the eBubble is shown. For the remaining steps, the eBubble will operate as if the instructions are being followed and the side of the receiver facing upward is to be leveled.

4. Lay the receiver on the side with the battery door facing up and the LED panel facing towards you. Level the side with the battery door using the eBubble. When the battery door side of the receiver is level, hold the receiver as still as possible while keeping the eBubble centered. The progress bar will start when the receiver is leveled appropriately, and will continue as long as the eBubble remains level. If the eBubble goes out of level, the progress suspends until the eBubble is leveled correctly again, then continues from where it was paused.
5. As the progress bar for each step completes, a new set of instructions and a new guide picture appears. Follow the instructions for each step very carefully, holding the receiver as still as possible for each step. The receiver automatically starts the process when the receiver is leveled in the correct pose, and automatically progresses to the next step when each step is completed satisfactorily. If the receiver detects a step has already been completed satisfactorily then that step will be skipped in the process.
6. A confirmation message appears when the process is completed. Tap **OK** to set the new IMU bias correction in the receiver. An **Excessive bias calibration** record is written to the job.

Receiver status

To view the receiver status, tap the receiver icon in the status bar and then tap **Receiver status**.

The **Status** group shows the GPS time and GPS week, the current temperature and the amount of memory in the receiver.

The **Battery** section shows the power level of the receiver battery.

The **External power** section shows the status of the external connectors in the receiver.

GSM status

To view the GSM status, tap ☰ and select **Instrument / GSM Status**. The GSM status is available only when connected to a receiver that has an internal modem.

NOTE – The GSM status is not available when the receiver's internal modem is connected to the internet.

The **GSM status** screen shows the status reported by the modem at the time you select **GSM status**, or when you tap **Refresh**.

If you set a PIN on the SIM card and the modem is in a locked state, you must key in the SIM PIN to be sent to the modem. The PIN is not stored, but the receiver remains unlocked with the correct PIN until you turn off the power and then turn it on again.

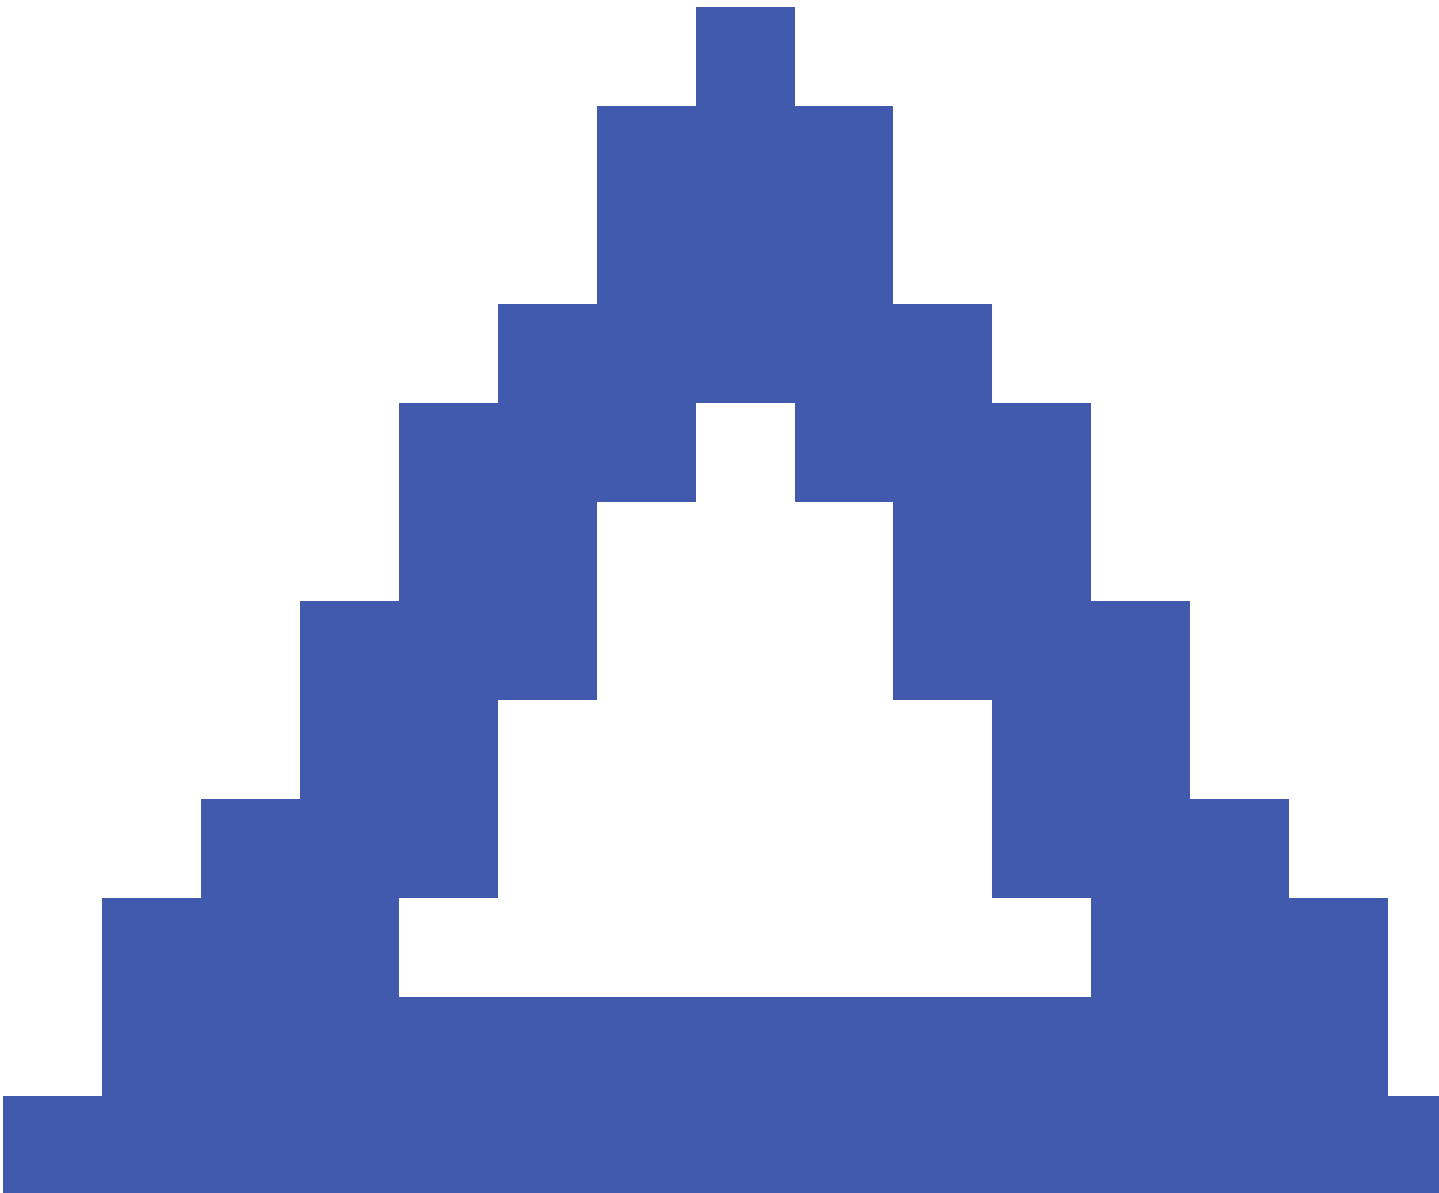
NOTE – After three attempts to unlock the SIM card using an incorrect PIN, the SIM card is blocked, except for emergency calls. You are prompted to enter a PUK (Personal Unblocking Key) code. If you do not know the PUK for your modem, contact the supplier of the modem SIM card. After ten unsuccessful attempts to enter the PUK, the SIM card is invalidated and is no longer operable. When this occurs, you must replace the card.

Network operator shows the current network operator. The home network icon



shows that the current network operator is the home network for the active SIM card. The roaming network

icon



shows that the current network operator is not the home network.

Select network shows a list of network operators obtained from the mobile network after performing a scan for available networks. To populate the list, tap **Scan**.

When you tap **Scan**, the modem queries the mobile network for the list of network operators. Poor reception can result in fewer networks being returned by the network when the modem queries it for the list.

Some SIM cards are locked to specific networks. If you select a network operator that is forbidden by the host network, the system shows one of the following messages: **Failed to select network operator** or **Network not allowed – emergency calls only**.

Select **Automatic** to put the modem into 'automatic' network selection mode. The modem then searches for all network operators and tries to connect to the most appropriate network operator, which may or may not be the home network.

If you select any other network operator from **Select network**, the modem goes into 'manual' selection mode and tries to connect with the selected network operator.

 
If you select **GSM status** or tap **Refresh** while in 'manual' mode, the modem searches only for the last manually-selected network operator.

For a list of network operators that you can connect to, contact your subscribed network operator.

Signal strength shows the GSM signal strength.

Firmware version shows the modem firmware version.

RTK network status

If you are performing an RTK survey and the reference station or network server that you receive base station data from supports status messaging, tap  and select **Instrument / RTK network status** to view the reported status of the reference station server, and the options the reference station supports, such as **RTK on Demand**.

Use the options in the **RTK network status** screen to configure whether notifications should pop up on screen and/or be stored in the job.

The reference station message, shown in the **Latest Reference Station message** field, is typically transmitted in an RTCM type 1029 text message.

Integrated surveys

In an *integrated survey*, the controller is connected to both a conventional survey instrument and a GNSS receiver at the same time. The Origin software can quickly switch between the two instruments as needed, within the same job. For example:

- If you move out of line of sight from the instrument then you can choose to measure positions using the GNSS receiver.
- If you move under heavy tree canopy or close to buildings then you can choose to measure positions using the conventional instrument.

NOTE – If the controller has the Origin Roads software installed, you can enable the **Precise elevation** option to always use the horizontal position from the GNSS receiver combined with the station elevation from the conventional survey instrument when staking a road using the **Precise elevation** stakeout method.

To use an integrated survey you must:

 
 
- Configure the conventional and RTK survey styles you will use, and then configure an integrated survey style which references the conventional survey style and the RTK survey style. The default integrated survey style is called **IS Rover**.
- Fit the GNSS receiver and the prism to the same pole.
- Set up the conventional survey instrument at a known location or, if you do not have a control point for the location you can start the survey by performing a resection station setup using positions measured from the GNSS receiver on site.

When measuring during an integrated survey:

- To switch between the GNSS receiver and the conventional instrument, tap the status line in the status bar.
- When switching to the conventional instrument, if the instrument is no longer pointing at the prism, use GPS search to search for and locate the prism. In an integrated survey GPS search uses the current GNSS position as the starting point to speed up the search for the target.

CAUTION – If you are using [IMU tilt compensation, page 443](#) for the RTK part of the integrated survey, the tilt compensation is not applied to the conventional observations. Be sure to level the pole when using conventional total station measurements or when using the **Precise elevation** stakeout method when surveying a road.

To configure the integrated survey style

 
1. Tap  and select **Settings / Survey styles**.
2. Tap **New**.
3. Enter the **Style name** and set the **Style type** to **Integrated Surveying**. Tap **Accept**.
4. Select the **Conventional** and **GNSS** styles you want to reference for the integrated style. Tap **Accept**.
5. In the **Prism to antenna offset** field, tap  and select the prism type. The **Prism to antenna offset** field is automatically populated with the correct offset value for the selected prism. For details on the prism to antenna offset value for each prism type see [Prism to antenna offset values for standard prisms, page 461](#).

NOTE – If an incorrect antenna measurement method is set, the incorrect offset is applied to the GNSS antenna heights. Make sure the correct position is selected in the **Measured to** field for the antenna in the **Rover options** form of the GNSS survey style referenced by the integrated survey style.

TIP – To change the GNSS antenna height during an integrated survey you must change the current target height. See [To change the antenna or prism height during an integrated survey, page 464](#).

6. If the controller has the Origin Roads software installed, the **Precise elevation** option is available. To combine the GNSS horizontal position with the elevation from a conventional setup, enable **Precise elevation**. For information, refer to the topic **Precise elevations** in the *Spectra Geospatial Origin Roads User Guide*.
7. Tap **Accept**.
8. Tap **Store**.

Prism to antenna offset values for standard prisms

TIP – In an integrated survey the software automatically adds the appropriate **Prism to antenna offset** value in the integrated survey style when you tap  next to the **Prism to antenna offset** field and select the prism type. For reference purposes the offset values and measurement method used for the offset value are provided below.

When performing an integrated survey, the prism to antenna offset value for Spectra Geospatial receivers is from the center of the prism to the bottom of the **antenna mount**.

Prism type	Offset value
Spectra Geospatial 360°	0.034 m
Spectra Precision 360°	0.057 m

To start and end an integrated survey

To start the integrated survey

There are a number of ways to start an integrated survey. Use the method that best suits the way you work:

- Start a conventional survey and then start a GNSS survey at a later time.
- Start a GNSS survey and then start a conventional survey at a later time.
- Start an integrated survey. This starts a conventional survey and a GNSS survey at the same time.

You must have created an [integrated survey style](#) before you can start an integrated survey.

To start an integrated survey, tap  and select **Measure** or **Stakeout** and then select **<integrated survey style name>**.

NOTE - Only the conventional and GNSS survey styles that are referenced in the integrated survey style are available in the integrated survey.

To end the integrated survey

You can end each survey individually, or select **End integrated survey** to end the GNSS survey and the conventional survey at the same time.

To switch between instruments

In an integrated survey, the controller is connected to both devices at the same time. This makes switching between instruments very quick.

To switch from one instrument to another, do one of the following:

- Tap the status line in the status bar.
- Select **Measure / Switch to <survey style type>**.
- Tap **Switch to** and then select **Switch to <survey style type>**.
- Configure one of the controller function keys to **Switch to TS/GNSS** and then press that key. See [Favorite screens and functions, page 35](#).

In an integrated survey, identify the instrument that is currently 'active' by looking at the icons shown in the status bar or the information shown in the status line of the status bar.

If you are using a GNSS receiver with a built-in tilt sensor or an active target, the **eBubble** can be displayed, but for all conventional measurements **Tilt auto-measure** is not supported and no tilt warnings will be issued.

CAUTION – If you are using IMU tilt compensation, page 443 for the RTK part of the integrated survey, the tilt compensation is not applied to the conventional observations. Be sure to level the pole when using conventional total station measurements or when using **Precise elevation** when surveying a road.

There are some Origin screens where you cannot switch instruments, for example **Continuous topo**.

Measure topo / Measure points

If you switch instruments during an integrated survey when you are using Measure topo (conventional), the software automatically switches you to the Measure points (GNSS) screen (and vice versa).

The point name defaults to the next available name.

The code defaults to the last stored code.

Switch instruments before you change the point name and code. If you enter a point name or code before switching instruments, they will not be the default after the switch.

Measure codes

When you switch instruments, the active instrument is used for the next observation.

Continuous topo

Only one Continuous topo survey is possible at one time.

You cannot switch the instrument used in Continuous topo while Continuous topo is running.

To change the instrument that is being used in Continuous topo, tap **Esc** to exit Continuous topo and then restart Continuous topo.

You can switch instruments if the Continuous topo screen is open but running in the background. If you switch instruments when the Continuous topo screen is running in the background, and you later make the Continuous topo screen the active screen, the software automatically switches to the instrument with which you started Continuous topo.

Stakeout


When you switch instruments, the graphical stakeout display changes.

If you switch instruments when the Stakeout graphics screen is running in the background, and you later make the Stakeout graphics screen the active screen, the software automatically switches to the instrument you last used.

If you switch instruments and a vertical offset to a surface is specified in the survey style, the vertical offset from the survey style that was last added to the job is used (unless you manually change the vertical offset in the **Offset to DTM (Vertical)** field of the map settings screen or by tapping **Options** in a stakeout screen).

To change the antenna or prism height during an integrated survey

To change the GNSS antenna height during an integrated survey you must change the current target height. The GNSS antenna height is computed automatically using the **Prism to antenna offset** configured in the IS style.

1. Make sure you have selected the correct prism type. In the **Prism to antenna offset** field, tap  and select the prism type. The **Prism to antenna offset** field is automatically populated with the correct offset value for the selected prism. For details on the prism to antenna offset value for each prism type see [Prism to antenna offset values for standard prisms, page 461](#).

NOTE - If an incorrect antenna measurement method is set, the incorrect offset is applied to the GNSS antenna heights. Make sure the correct position is selected in the **Measured to** field for the antenna in the **Rover options** form of the GNSS survey style referenced by the integrated survey style.

2. Tap the target icon in the status bar and select the appropriate target.
3. Enter the **Target height** (the height to the center of the prism).
The updated height is not displayed in the status bar until the target form is closed.
4. To see the entered target height, the prism to antenna offset configured in the survey style, and computed antenna height, tap **Antenna**.
5. Tap **Accept**.

Additional survey equipment

Sometimes you may need additional equipment to help you locate or measure the point or feature you need to measure during the survey. You can connect the Origin software to:

- A laser rangefinder to remotely measure points or assets that you are unable to get close to safely.
- An echo sounder to measure points or assets under water.
- A utility locator to locate and measure assets such as cables and pipes that are buried underground.

Laser rangefinders

You can connect Origin to a laser rangefinder to measure the position of points or assets that you are unable to get close to. Use the laser rangefinder to measure the distance to the feature from your current position. Origin stores the distance as an offset position.

To configure the laser rangefinder

The configuration for each laser that is supported by Origin is detailed below.

NOTE - Origin may support other models of laser rangefinder than the ones listed here, as the protocols used by the manufacturer are often the same or very similar between models.

Trimble LaserAce 1000

There is no Bluetooth configuration on the LaserAce 1000, it is always enabled.

When the Trimble LaserAce 1000 is detected during the scan for Bluetooth devices, an authentication request dialog appears. You must enter the PIN number set in the laser rangefinder (default PIN = 1234).

Bosch DLE 150 or Bosch GLM 50c

When the laser rangefinder is detected, an authentication request dialog appears. You must enter the PIN number set in the laser rangefinder.

LTI Criterion 300 or LTI Criterion 400

From the main menu, press the down arrow or up arrow key until the *Survey* menu appears and then tap *Enter*. Select *Basic measurements* and tap *Enter*. A screen showing the fields *HD* and *AZ* appears.

LTI Impulse	Set up the laser to operate in CR 400D format. Make sure that a small "d" is displayed on the screen. (If necessary, press the Fire2 button on the laser).
LTI TruPulse 200B or LTI TruPulse 360B	Set the TruPulse mode to either Slope Distance , Vertical Distance , or Horizontal Distance .
Laser Atlanta Advantage	<p>Set the <i>Range/Mode</i> option to <i>Standard (Averaged)</i> and the <i>Serial/Format</i> option to <i>Trimble Pro XL</i>.</p> <p>Set <i>Serial / Remote / Trigger Character</i> to 7 (37h). (The remote trigger works only when connected via a cable, not when using Bluetooth wireless technology.)</p> <p>Set <i>Fire Time</i> to the delay required (not zero or infinity).</p> <p>Set <i>Serial T-Mode</i> to <i>Off</i>.</p>
LaserCraft Contour XLR	Set the LaserCraft mode in the laser. If you connect through Bluetooth wireless technology, you also need to change the baud rate setting on the laser rangefinder to 4800.
Leica Disto Memo or Leica Disto Pro	Set the unit to meters or feet, not feet and inches.
Leica Disto Plus	<p>You must enable Bluetooth wireless technology on the Leica Disto Plus before you run a Bluetooth scan. To do this, set <i>System / Power / Bluetooth</i> to <i>On</i>.</p> <p>If automeasure is switched off:</p> <ol style="list-style-type: none"> 1. To take the measurement, press the Dist key on the laser rangefinder. 2. Press the [2nd] key. 3. To transfer the measurement to the controller, press one of the eight direction arrow keys.
MDL Generation II	No special settings are required.

MDL LaserAce

 
Set the *Data record* format to *Mode 1*. When you use the angle encoder, set the magnetic declination to zero in the [Cogo settings, page 107](#) screen of the Origin software. The angle encoder in the MDL LaserAce laser corrects for the magnetic declination.

Set the baud rate to 4800.

There is no Bluetooth wireless technology configuration on the MDL LaserAce, it is always enabled.

When the MDL LaserAce is detected during the scan for Bluetooth devices, an authentication request dialog appears. You must enter the PIN number set in the laser rangefinder (default PIN = 1234).

To configure laser rangefinder settings in the survey style


1. Tap  and select **Settings / Survey styles**. Select the required survey style. Tap **Edit**.
2. Select **Laser rangefinder**.
3. Select one of the instruments in the **Type** field.
4. If necessary, configure the **Controller port** and **Baud rate** fields.

The default value in the **Baud rate** field is the manufacturer's recommended setting. If the laser is a model with which the Origin software can automatically take a measurement when you tap **Measure**, select the **Auto measure** check box.

5. If required, select the **Auto store** point check box.
6. If the **Low quality targets** check box is available, clear the check box to reject measurements that are flagged by the laser rangefinder as low quality. When this happens you will need to take another measurement.
7. Tap **Enter**. The precision fields contain the manufacturer's precision values for the laser. They are for information only.

TIP - Laser measurements can be displayed as vertical angles measured from the zenith or inclinations measured from horizontal. Select a display option in the **Laser VA display** field of the **Units** screen. See [Units](#).

To connect to the laser rangefinder

To connect to the utility locator, enable Bluetooth on the laser rangefinder. In Origin, tap  and select **Settings / Connections** and then select the **Bluetooth** tab to scan for devices and pair with the laser rangefinder. The default PIN to pair with the Trimble LaserAce 1000 or MDL LaserAce laser rangefinder is **1234**. For more information, see [Bluetooth connections, page 480](#).

To measure points using a laser rangefinder

Before measuring distances with the laser rangefinder, connect it to the controller and configure the laser rangefinder settings in the laser and in the survey style.

TIP – Measuring distances using a laser rangefinder is especially useful when entering the offset when measuring a point, computing a point, or using the taped distances function to measure the points defining a rectangular shape. To insert a distance into a **Distance**, **H.Distance** or an **Offset** field, tap ► next to the **Laser** field and then measure the distance with the laser.

To measure points using a laser range finder:

1. Tap ☰ and select **Measure**.
2. Tap **Measure laser points**.
3. Enter the point name and a code for the point.
4. Select the **Start point** you are measuring the laser point from, or measure a new point using the connected GNSS receiver.

To measure a new point:

- a. Tap ► next to the **Start point** field.
- b. Enter the details for the point and then tap **Measure**.
- c. Tap **Store**.

The software returns to the **Measure laser points** screen with the new point selected in the **Start point** field.

5. Enter the laser height and the target height.

NOTE – Allow the laser to settle for a few seconds before you take a measurement with it.

6. Tap **Measure**.
7. Use the laser rangefinder to measure the distance to the target.

The details for the measurement appear in the **Measure laser points** screen.

If the software receives only a distance measurement from the laser, another screen is displayed with the measured distance in a **Slope distance** field. Enter a vertical angle if the measured distance is not horizontal.

8. Tap **Store**.

NOTE – If you are using a laser without a compass, you must key in a magnetic azimuth before the software can store the point. If you enter a value for magnetic declination in the laser, make sure the **Magnetic declination** field in the **Cogo settings** screen is set to zero.

Echo sounders

You can connect Origin to an echo sounder and use it to measure the depth of positions on the sea floor or objects under water. The depth information is stored with the point. You can generate reports of continuous topo points stored in Origin with the depth applied.

NOTE – Storing depth measurements from the echo sounder is supported only when using the **Continuous topo** measurement method during a conventional or GNSS survey.

To configure the echo sounder

Origin supports a number of echo sounder models as standard. An ESD file for each supported echo sounder is installed in the **C:\ProgramData\Spectra Geospatial Data\System Files** folder when you install the Origin software. Alternatively, you can download them from the [Template files page](#) of the Trimble Access Help Portal.

To edit the ESD file, edit the file in a text editor. The name of the ESD file appears in the **Type** field in the **Echo Sounder** screen.

Origin supports as standard the following models of bathymetric echo sounders:

- **CeeStar Basic High Freq**

CeeStar Dual Frequency echo sounders, BASIC output format, when the High Frequency depth is to be stored. The unit must be set to output 'prefixes' and not 'commas' in the output data Menu / Advanced / Prefix / Comma outfm set to [Use prefix].

- **CeeStar Basic Low Freq**

CeeStar Dual Frequency echo sounders, BASIC output format, when the Low Frequency depth is to be stored. The unit must be set to output 'prefixes' and not 'commas' in the output data Menu / Advanced / Prefix / Comma outfm set to [Use prefix].

- **NMEA SDDBT device**

Any generic echo sounder device that can output the NMEA DBT (Depth Below Transducer) sentence. The "talker ID" must send the standard "SD" identifier (so that output lines all begin with "\$SDDBT,..". Origin will accept the data in feet, meters, or fathoms and will convert values as appropriate.

- **SonarMite**

Any SonarMite device. The unit will be switched into 'Engineering mode' (output format 0) and other settings may be adjusted by Origin.

NOTE – When using an echo sounder to record depths that equal zero, you need to add the allowZero="True" flag immediately after the isDepth="True" flag. For example: "<Field name... isDepth="True" allowZero="True" />"

NMEA strings for echo sounders

Echo sounders may output one of several NMEA 0183 sentences. The most common sentences are described below for reference.

NMEA DBT – Depth Below Transducer

The NMEA DBT sentence reports water depth referenced to the transducer's position. The depth value is expressed in feet, meters, and fathoms.

For example: `$xxDBT,DATA_FEET,f,DATA_METRES,M,DATA_FATHOMS,F*hh<CR><LF>`

NMEA DBS – Depth Below Surface

The NMEA DBS sentence reports water depth referenced to the surface. The depth value is expressed in feet, meters, and fathoms.

 
For example: `$xxDBS,DATA_FEET,f,DATA_METRES,M,DATA_FATHOMS,F*hh<CR><LF>`

To add support for another model of echo sounder

The Origin software uses XML Echosounder protocol description (*.esd) files and so may support bathymetric echo sounders that are not supported as standard, provided that their communications protocols are similar to the protocols currently supported. To do this, download one of the additional ESD templates provided or use one of the ESD files installed with the software and use it as a template. You will need to find out the format for your echo sounder and modify the ESD file accordingly.

You can download additional ESD templates from the [Template files page](#) of the Trimble Access Help Portal.

To configure echo sounder settings in the survey style

1. Tap  and select **Settings / Survey styles / <Style name>**.
2. Tap **Echo sounder**.
3. Select an instrument from the **Type** field.
4. Configure the **Controller port**:
 - If you set the **Controller port** to Bluetooth, you must configure the echo sounder [Bluetooth](#) settings.
 - If you set the **Controller port** to COM1 or COM2, you must configure the port settings.
5. If required, enter the **Latency** value.

The latency caters for echo sounders where the depth is received by the controller after the position. The Origin software uses the latency to match and store the depth when it is received with continuous topo points that were saved previously.


CAUTION – There are many factors involved in correctly pairing positions with accurate depths. These include sound velocity – which varies with water temperature and salinity, hardware processing time, and the speed at which the boat is moving. Make sure that you use the appropriate techniques to achieve the required results.

6. If required, enter the **Draft** value.

NOTE – The **Draft** affects how the antenna height is measured. If the **Draft** is 0.00 then the antenna height is the distance from the transducer to the antenna. If a **Draft** is specified, then the antenna height is the distance from the transducer to the antenna, minus the draft.

7. Tap **Accept**.
8. Tap **Store**.

To connect to the echo sounder

To connect to the echo sounder, enable Bluetooth on the echo sounder. In Origin, tap  and select **Settings** / **Connections** and then select the **Bluetooth** tab to scan for devices and pair with the echo sounder. The default PIN to pair with the Ohmex SonarMite echo sounder is **1111**. For more information, see [Bluetooth connections, page 480](#).

To store depths using an echo sounder

1. Connect the echo sounder to the controller using a cable or Bluetooth.
2. Configure the **Echo sounder** settings in the survey style.
3. To store depths with measured points, use the continuous topo method for your survey type.
The depth is displayed in the **Continuous topo** screen and in the map. If you have configured a **Latency** value in the survey style, the continuous topo points are initially stored without depths and later updated. When a latency has been configured, the depth that is displayed is an indicator that depths are being received but it may not be the depth that is stored with the point name that is displayed at the same time.
4. To change **Latency** and **Draft** values, tap **Options**. For more information, see [To configure echo sounder settings in the survey style, page 470](#).
5. To disable storing depths with continuous topo points during the survey, tap **Options** and then clear the **Use echo sounder** check box.

To generate reports that include depths

The elevations of continuous topo points stored in Origin do not have the depth applied to them. Use **Export custom format** files to generate reports with depths applied.

The following report stylesheets are available for download:

- **Comma Delimited with elevation and depths.xml**
- **Comma Delimited with depth applied.xml**

These stylesheets can be downloaded from the [Stylesheets page](#) of the Trimble Access Help Portal.

NOTE – If a Sonarmite instrument is connected, Origin configures it to use the correct output format and mode. For an instrument from another manufacturer, you must manually configure it to use the correct output format.

Utility locators

You can connect Origin to a utility locator and measure the location of underground assets such as cables and pipes.

Use Origin to measure a ground point using a GNSS receiver or conventional instrument, and use the connected utility locator to measure the depth of the cable or pipe and send the depth information to Origin. Origin stores a pair of points: a ground point measurement and a vector from the ground point measurement to the utility using the depth received from the connected utility locator.

The **GlobalFeatures.fxl** feature code library file and the following Utility Location Definition (ULD) files are provided in the **C:\ProgramData\Spectra Geospatial Data\System Files** folder when you install the Origin software:

- **RD8100.uld** file for the **Radio Detection RD8100** cable and pipe locator
- **vLoc3.uld** file for the **Vivax Metrotech vLoc3-Pro** receiver, when fitted with the **vLoc3 Series Bluetooth Module**

Use the appropriate ULD file for your locator with the **GlobalFeatures.fxl** file to set up your job for measuring points using the utility locator. The basic steps are:

1. Create a job that uses a feature library file containing utility feature codes with attributes that match the names of the attributes in the ULD file.
2. Configure utility locator settings in the survey style.
3. Start a survey.
4. Pair with the utility locator using Bluetooth.
5. Measure points using the code configured with attributes to record the depth information from the utility locator.

More information about these steps is provided below.

TIP – In addition the ULD file includes examples and tips for pairing with and using that locator. For more information, see [Utility locator file setup, page 475](#).

To set up attributes for the utility locator data

1. Use the appropriate ULD file provided in the **Spectra Geospatial Data\System Files** folder on the controller.

Alternatively, download the ULD file from the [Template files page](#) of the Trimble Access Help Portal.

2. Use a text editor to view ULD file and identify the attributes you want to store with points in the job. If required, edit the attribute names.

 
For information on how the ULD file is structured, see [Utility locator file setup, page 475](#).

3. Using the Feature Definition Manager in Survey Office.
 - a. Set up feature codes for each type of utility you want to locate.
 - b. For each utility feature code, create a **Number** or **Text** attribute with the same name as one of the attribute names in the ULD file.
 - c. Create a **Number** or **Text** attribute for any other attributes in the ULD file you want to store with the point. Make sure the name of each **Number** attribute in the FXL file matches the corresponding attribute name in the ULD file.

For more information, including how to download an FXL file that includes an example ULD feature code see [Setting up the FXL file for ULD attributes, page 478](#) in [Utility locator file setup, page 475](#).

4. Copy the edited ULD file and the FXL file to the **Spectra Geospatial Data\System Files** folder on all required controllers.

To configure utility locator settings in the survey style

1. Tap  and select **Settings / Survey styles**. Select the required survey style. Tap **Edit**.
2. Select **Utility locator**.
3. Select one of the instruments in the **Type** field.

The instrument list is created from the ULD file (or files) in the **System Files** folder.

The **Controller port** is set to Bluetooth.

4. Select the **Method** used to name ground points measured in Origin and then in the **Add** field enter the ground point identifier. You can choose to name ground points using:

- a **prefix** added to the point name, for example **GND_**.
- a **suffix** added to the point name, for example **_GND**.
- a **constant** added to the point name if point names use numerical values.

For example, if you enter 1000 in the **Add** field, if the point name is 1, then the corresponding ground point is 1001.

5. To automatically measure the point when the depth is received from the utility locator, select the **Auto measure on received depth** check box.

6. Tap **Accept**.
7. Tap **Store**.

To connect to the utility locator

NOTE – Before connecting to the **Radio Detection RD8100** cable and pipe locator, set the communication protocol in the locator to **ASCII format - Version 1**.

To connect to the utility locator, enable Bluetooth on the utility locator. In Origin, tap ☰ and select **Settings / Connections** and then select the **Bluetooth** tab to scan for devices and pair with the utility locator. For more information, see [Bluetooth connections, page 480](#).

TIP – The default PIN to pair with the RD8100 is **1234**. There is no default pin set for the vLoc3-Pro. For more information on Bluetooth connections with the:

- RD8100, refer to the [RD8100 Operation Manual](#)
- vLoc3-Pro, refer to the [vLoc3 Series Receiver's User Handbook](#)

To measure points using the utility locator

You can store a point at the measured elevation of an underground asset using most point measurement methods, except:

- when measuring continuous topo points, calibration points, or observed control points during a GNSS survey.
- when measuring continuous topo points or a remote object during a conventional survey.

To measure points using the utility locator:

1. Create a job and in the job properties screen, select the feature library file you have set up to match the ULD file.
2. Select the survey style with your configured utility locator settings and start the survey.
3. Connect to the utility locator using Bluetooth.

If you have previously paired to the utility locator, then if Bluetooth is enabled on both devices Origin will connect to it automatically.
4. Tap ☰ and select **Measure**.
5. Enter the point name and the code for the point.
6. Select the **Method** for the point you are measuring.
7. To adjust the measured depth, define a **Depth offset**. Set a positive or negative depth offset so that the depth stored is at the elevation of interest: the top, middle or bottom of the detected utility.

To be able to set the **Depth offset** value, you will need to know the size of the utility and whether the utility locator is measuring to the top, middle, or bottom of the detected utility (and this may change depending on the type of utility).

8. Use the utility locator to measure the depth of the underground asset. The measurement information is automatically sent to Origin, and the depth value received from the utility locator is shown in the **Depth** field in the **Measure** screen.

If the **Auto measure on received depth** check box is selected in the survey style, then Origin automatically measures the point.

9. If you have not enabled **Auto measure on received depth**, tap **Measure** to measure the point using the connected GNSS receiver or conventional instrument.
10. Tap **Store**.
If the **Prompt for attributes** check box is selected in the measure **Options** screen, then the software shows the other attribute information sent from the utility locator. The attributes recorded with the point depend on the data sent by the utility locator and how you have set up the attributes in the FXL file and the ULD file.
11. Edit the attribute information as required. Tap **Store**.

Ground points are shown on the map as construction points. Ground points are matched with the corresponding measured point in the **Review job** screen. The code entered is assigned to the utility measurement and any linework configured will be drawn for the utility measurements only; the code is not assigned to the ground point.

Utility locator file setup

To store a point at the measured elevation of an underground asset, the job must use a feature library FXL file that contains a code with at least one **Number** or **Text** attribute that matches the name of one of the attributes defined in the ULD file. Connecting the FXL file to the ULD file in this way causes the **Depth** value to appear in the Measure screen when measurement information is received from the underground locator.

Add additional attributes to the code in the FXL file to store other attribute information received from the utility locator that you want to store with the point, for example frequency, gain, phase, current and signal.

TIP – In addition the ULD file includes examples and tips for pairing with and using that locator.

Template ULD files

Use the appropriate ULD file provided in the **Spectra Geospatial Data\System Files** folder on the controller. Alternatively, download the ULD file from the [Template files page](#) of the Trimble Access Help Portal.

Structure of the ULD file

The format of each ULD file provided with Origin is shown below, and the following table describes each parameter.

The structure of the RD8100.uld file is:

```
<?xml version="1.0" encoding="UTF-8"?>
<ExternalDeviceProtocol version="1.0" >
<Device name="Radiodetection RD8100 & RD8200" >
<Protocol type="Delimited" delimiter="2C" startsWith="$RD8" >
<Field name="Depth" fieldNumber="8" type="Number" multiplier="1.0" attribute="Depth" />
<Field name="Frequency" fieldNumber="5" type="Number" multiplier="1.0" attribute="Frequency" />
<Field name="Gain" fieldNumber="13" type="Number" multiplier="1.0" attribute="Gain" />
<Field name="Phase" fieldNumber="11" type="Number" multiplier="1.0" attribute="Phase" />
<Field name="Current" fieldNumber="10" type="Number" multiplier="1.0" attribute="Current" />
<Field name="Signal" fieldNumber="12" type="Number" multiplier="1.0" attribute="Signal" />
</Protocol>
</Device>
</ExternalDeviceProtocol>
```

The structure of the vLoc3.uld file is:

```
<?xml version="1.0" encoding="UTF-8"?>
<ExternalDeviceProtocol version="1.0" >
<Device name="Vivax vLoc3" >
<Protocol type="Delimited" delimiter="2C" startsWith="LOG" >
<Field name="Depth" fieldNumber="5" type="Number" multiplier="0.001" attribute="Depth"/>
<Field name="Frequency" fieldNumber="4" type="Number" multiplier="1.0" attribute="Frequency"/>
<Field name="Gain" fieldNumber="9" type="Number" multiplier="1.0" attribute="Gain"/>
<Field name="Current" fieldNumber="6" type="Number" multiplier="1.0" attribute="Current"/>
</Protocol>
</Device>
</ExternalDeviceProtocol>
```

Parameter	Notes
Protocol	
type="Delimited" or "FixedWidth"	Specifies if the ULD data is output as a data string separated by an ASCII character such as a space or a comma (delimited), or if each field has a fixed number of characters (fixed width).
delimiter="2C"	Specifies the delimiter as two hex digits which specify the ASCII delimiter character (field separator). For example, space="20",

Parameter	Notes
	comma="2C", tab="09".
startsWith=""	An optional string that can be used to specify the text that identifies the start of a line. This string can be left blank. For this string, any leading, trailing, and double spaces are trimmed by XML. Use underscore ("_") as a substitute for space characters. For example, startsWith="_A".
Fields	
name=""	Specifies the name for the data in that field. Do not edit this name. To change the attribute name stored with the point, edit the attribute name at the end of the line.
fieldNumber=""	Specifies the number of the field in the data string that contains the data for this field. Specify the fieldNumber as a decimal number, starting at 0. For example, fieldNumber="1".
type="Number" or "Text"	Specifies the type of data in this field. If the type in the ULD file does not match the type in the FXL file, Origin will automatically convert the attribute type received from the ULD file to match the attribute type specified in the FXL file.
multiplier=""	Usually you can leave the multiplier set to "1.0" because you will have set the utility locator to use the same units of measurement as set in the Origin job. If for some reason the utility locator is using different units, enter the appropriate multiplier value to convert the measurement value from the locator units to the units used in the job.
attribute=""	The name of the attribute that is stored with the point in Origin. You can modify this name if you wish, for example to translate the name to your preferred language. Make sure the attribute name for this attribute in the FXL file matches the attribute name.

TIP – The provided ULD files are designed specifically to work with the Radio Detection RD8100 locator or the Vivax Metrotech vLoc3-Pro receiver. You may be able to use the Origin software with a different model of utility locator, provided that the communications protocols are similar to the protocols supported by the RD8100 or the vLoc3-Pro. You will need to find out the format for your utility locator and modify one of the provided ULD files to meet your requirements. The utility locator:

- must provide a single measurement NMEA string rather than a NMEA stream containing multiple measurements.
- must be connected using Bluetooth.

Editing the ULD file

To edit the ULD file, open the ULD file in an ASCII text editor such as Notepad++.

If you edit any **attribute** name (the text after **attribute=**), for example to translate it to your preferred language, make sure attribute name assigned in the FXL file matches the new name.

NOTE – Attribute names are case sensitive, so make sure the case used for each attribute name in the ULD file matches the case used in the FXL file.

Usually you can leave the multiplier set to "1.0" because you will have set the utility locator to use the same units of measurement as set in the Origin job. If the utility locator is using different units to those used in the Origin job, enter the appropriate multiplier value to convert measurement value from the locator units to the units used in the job.

Setting up the FXL file for ULD attributes

You can set up the FXL file using the Feature Definition Manager in Survey Office. Create a feature code for each utility type you will locate, and add attributes for each of the attribute values received from the utility locator you wish to store with that utility feature code.

For an example, refer to the UtilityLocator feature code in the **GlobalFeatures.fxl** example feature library file that you can install with the Origin software using Spectra Geospatial Installation Manager. See [Example feature library file for installation, page 103](#). Alternatively, download the the **GlobalFeatures.fxl** example feature library file from the [Template files page](#) of the Trimble Access Help Portal.

You will need to create your own FXL file and set up feature codes and attributes as required. For example, you might create a feature code ELC with a number attribute named "Depth" to match the line in the ULD file where **attribute="Depth"**:

```
<Field name="Depth" fieldNumber="8" type="Number" multiplier="1.0" attribute="Depth"/>
```

To record more than just depth, add extra attributes to the code in the FXL file as required. For example, you could add **Frequency** and **Gain** by referring to the appropriate lines in the ULD file:

```
<Field name="Frequency" fieldNumber="5" type="Number" multiplier="1.0"
attribute="Frequency"/>
```

```
<Field name="Gain" fieldNumber="13" type="Number" multiplier="1.0" attribute="Gain"/>
```

To use the FXL file in Origin, transfer the FXL file to the **System Files** folder on the controller.

Connections

Use the **Connections** screen to configure connections to other devices.

To view the **Connections** screen, tap ☰ and select **Settings / Connections**.

Select the appropriate tab:

- [Bluetooth](#) to configure a Bluetooth connection to an instrument, GNSS receiver, or other device.
- [Radio settings](#) to configure a radio connection to a conventional instrument.
- [Auto-connect](#) to configure the instruments or receivers that the controller will automatically connect to.
- [GNSS correction source](#) to configure the source of real-time corrections for a GNSS RTK survey.
- [Auxiliary GPS](#) to configure auxiliary GPS from a GPS device integrated into the controller or third-party GPS devices connected via Bluetooth. Auxiliary GPS can be used during a conventional survey for GPS search, navigating to a point, and to display the position in the map.

TIP – To configure how the controller connects to the internet, select the **GNSS contacts** tab and then tap the **Internet setup** softkey at the bottom of the screen. See [Internet connection setup, page 487](#).

Bluetooth connections

The steps for connecting the controller to another device using Bluetooth wireless technology are outlined below.

NOTE – The devices you can connect to may depend on your Origin software license.

Devices you can connect

As long as your device supports Bluetooth, you can connect the controller to any:

- Spectra Geospatial GNSS receiver
- Spectra Geospatial conventional instrument
- Spectra Geospatial FOCUS 50 total station
- SPDL Radio Bridge/SEDB10 Data Bridge
- [auxiliary GPS receiver](#)
- [laser rangefinder](#)
- [echo sounder](#)

- [utility locator](#)
- external radio

You can also connect the controller to a mobile phone or external modem and use the connected device to connect to the internet. To create those connections, see [Internet connection setup, page 487](#).

Enable Bluetooth on the device

To enable the controller to find the device when it scans for nearby Bluetooth devices, make sure Bluetooth is enabled on the device and the discoverable setting is enabled. For more information, refer to the documentation provided with your device.

When using a SPDL Radio Bridge, press the Radio button for **2** seconds to make it **discoverable**. The blue and red LEDs will blink, indicating the radio is ready to be paired with. If you press and hold the radio button for longer than 10 seconds then **all** stored Bluetooth pairings in the SPDL Radio Bridge are cleared. You will need to recreate any Bluetooth pairings between the SPDL Radio Bridge and your controller(s).

To enable Bluetooth on the controller

- If the controller is running **Windows**:
 - a. Swipe in from the right to display the Windows **Action Center** panel.
 - b. If the **Bluetooth connections** tile is gray, tap the tile to enable Bluetooth. The tile changes to blue.
- If the controller running **Android**:
 - a. Swipe down from the notifications area at the top of the screen.
 - b. If required, tap the icon to expand the settings area and then swipe right to view page 2.
 - c. If the Bluetooth icon is gray, tap the icon to enable Bluetooth.

To pair with and connect to a Bluetooth device

TIP – If you are connecting a controller to another controller, complete these steps on **one** controller.

1. Tap  and select **Settings / Connections**. Select the **Bluetooth** tab.

The Bluetooth tab shows a list of device types. For each option you can select from the list of paired Bluetooth devices. If there are no paired devices, the software opens the **Bluetooth search** screen.

2. Tap **Search**. The **Bluetooth search** screen shows a list of **Discovered devices** and **Paired devices**.

NOTE – A device cannot respond to a scan if the Bluetooth radio is already in use. You must end the existing Bluetooth connection on the device and restart the scan. To restart the scan, tap **Clear**. The list of **Discovered devices** clears and the scan restarts automatically.

3. Select the device to connect to. Tap **Pair**.

4. If your device operating system shows a **Pair with** pop-up dialog, confirm the pairing.
5. If the controller is not already paired with the device, you are prompted to enter the PIN. You may also need to enter the same PIN on the device.

The **default PIN** for a:

- Spectra Geospatial SP100 GNSS receiver is **0000**, although this can be changed in the receiver web interface used to configure the receiver settings.
- Other Spectra Geospatial receivers do not require a PIN by default.
- The default PIN for a Spectra Geospatial FOCUS 50 total station is the last 4 digits of the instrument serial number.

For PINs for other devices, refer to the documentation provided with the device.

 
TIP – The **Pair with** pop-up dialog is provided by the operating system. If additional settings such as the **PIN contains letters or symbols** check box or the **Enable access to your contacts and call history** check box appear you can leave the check boxes unchecked.

6. Tap **OK**.
7. The Origin software displays a pop-up dialog for the newly paired device. From the device type list, select how you want to use the Bluetooth device. Tap **Accept**.

TIP – If you paired with a cellular modem, the controller now appears as a paired device on the cellular modem.

8. In the **Bluetooth** tab, tap **Accept**.

To connect to a paired device

1. Tap  and select **Settings / Connections**. Select the **Bluetooth** tab.
2. Select the device to connect to from the appropriate device type field and then tap **Accept**.
If Auto-connect is enabled, the Origin software connects to the device within a few seconds. Otherwise, start a survey to connect to the device.
3. Tap **Accept**.

TIP – The controller automatically connects to the selected device the next time you turn on both devices.

NOTE – If you attempt to reconnect to a Spectra Geospatial GNSS receiver and the software shows **Bluetooth error 10051**, then the GNSS firmware on the receiver has been updated and the settings have been restored to the default settings. You must unpair from the device and then re-pair with the device.

To unpair from a device, in the **Bluetooth** tab tap **Search** to open the **Bluetooth search** screen. Select the paired device and then tap **Config** to open the operating system Bluetooth devices screen, where you can manage paired devices.

Radio connections

To connect the controller to the instrument using a radio, you must configure the instrument radio settings to the same values as used on the controller.

NOTE - In some countries, you must obtain a radio license before using your system on a working site. Make sure that you check the regulations for your country.

To use the controller's internal radio

1. To configure the instrument radio settings, connect the controller to the instrument using a cable or Bluetooth. Alternatively, configure radio settings using the **Face 2** display on the instrument.
2. Tap **☰** and select **Settings / Connections**. Select the **Radio settings** tab.
3. To avoid conflicting with another user, enter a unique radio channel and network ID.
4. Tap **Accept**.
5. If the controller is already connected to the instrument, the radio settings in the instrument are automatically synchronized to match the controller settings. To start the robotic connection, tap the instrument icon in the status bar and then tap **Start robotic** or tap **Connections** and then tap **Switch to LR radio**.
6. If the controller is not yet connected to the instrument:
 - a. Use the **Face 2** display to navigate to the **Radio settings** and enter the same radio channel and network ID as you entered on the controller.
 - b. On the instrument, select **Exit** from the **Setup** menu to return to the **Waiting for connection** menu.

NOTE - Because Origin cannot communicate with the total station when the instrument's onboard software is in use, the instrument must be in the **Waiting for connection** state.

The controller automatically connects to the instrument when both devices are on and within range.

When the instrument is suspended ready for robotic operation, it switches off to conserve power. The internal radio remains switched on so that the rover radio can communicate with the instrument.

 
To use an external radio

You can connect a controller to an external radio and then use the external radio to connect to the Spectra Geospatial FOCUS 50 or FOCUS 30/35 total station.

To obtain a robotic connection to the instrument through an external radio you must reconfigure the radio port setting on the controller:

 
1. Connect the controller to the external radio using Bluetooth or a serial cable.

NOTE – If the radio is a SPDL Radio Bridge or SEDB10 Data Bridge, you must use Bluetooth.

2. Tap  and select **Settings / Connections**. Select the **Radio settings** tab.
3. Tap **Options**.
4. Select the controller port that the radio is connected to. If you are using a Bluetooth connection, select **Bluetooth**.
5. Tap **Accept**.
6. Configure the **Radio channel** and **Network ID** to the same values as those set on the instrument.
7. Tap **Accept**.

Receiver Wi-Fi settings

To configure the Wi-Fi settings in a receiver that is Wi-Fi enabled:

1. Connect to the receiver but do not start a survey.
2. Tap  and select **Instrument / Receiver settings** and tap **Wi-Fi**. The **Receiver Wi-Fi configuration** screen appears.

If the **Wi-Fi** softkey is not shown, make sure you have not started a survey.

3. Select the required tab:
 - Select the **Access point** tab and select the **Enabled** check box to enable the receiver as an access point so that many clients can connect to it.
Access point mode also enables you to use the receiver as a mobile hotspot.
 - Select the **Client** tab and select the **Enabled** check box to enable the receiver to connect to an existing network.
Client mode enables you to connect to the internet and receive GNSS base data corrections during an RTK internet survey. For more information, see [To configure a base internet data link, page 365](#).

NOTE – Some receiver models allow you to have both **Access Point** and **Client** mode enabled, or only one mode on, or both modes off. For receivers that support only one mode at a time, enabling one mode in the **Receiver Wi-Fi configuration** screen automatically disables the other mode. Using receiver Wi-Fi will shorten the run time of the receiver battery.


4. Configure the settings as required.
5. If prompted, restart the receiver to apply the new settings. Some receiver models do not require a restart.

Auto-connect settings


When auto-connect is enabled, the Origin software automatically attempts to connect to the GNSS receiver or conventional instrument connected to the controller as soon as you start the software. For a list of supported instruments and receivers, see [Supported equipment, page 6](#).

When the software is attempting to connect to a device, the auto-connect icon in the status bar flashes. If the software is configured to automatically connect to different types of devices, the status bar shows a different icon as the software attempts to connect to each type of device.

TIP – You do not have to wait for the software to auto-connect. To force the software to connect to the device connected to the controller at any time, select the survey style and start the survey.

NOTE – If the auto-connect icon displays multiple icons and a red x  , then auto-connect has been disabled for all device types.

To configure auto-connect

1. To open the **Auto-connect** settings:
 - Tap the auto-connect icon in the status bar **before** you connect to a device.
 - Tap  and select **Settings / Connections**. Select the **Auto-connect** tab.
2. To speed up the automatic connection time, clear the check boxes in the **Auto-connect** tab to disable auto-connect for devices you do not usually connect to.

NOTE – The options in this screen depend on your Origin software license.

3. If you are connecting to the instrument using any connection method except a cable, select the appropriate tab in the **Connections** screen for your connection method and configure the connection.

Using auto-connect with an instrument

When you use **Instrument functions** to disconnect from the total station, auto-connect is temporarily disabled.

To re-enable auto-connect, tap the auto-connect icon in the status bar. When auto-connect has been temporarily disabled, a single tap re-enables auto-connect, and a second tap is required to display the **Auto-connect** tab of the **Connections** screen.


NOTE – To connect to a third-party instrument, you must force a connection by starting the survey. When using third-party instruments, **disable** auto-connect. Some commands used by auto-connect can interfere with the communication of third-party instruments.

Using auto-connect with a receiver

NOTE – For improved connection reliability, auto-connect to a GNSS receiver is now automatically disabled for all controllers when the software connects to any conventional instrument. Auto-connect is automatically re-enabled when the connection to the instrument ends, or when an integrated survey is started.

If the software is configured for **Rover mode** or **Base mode**, the software attempts to auto-connect to the receiver configured in the **Bluetooth** tab of the **Connections** screen:

- If the software is in **Rover mode**, it attempts to connect to the receiver configured in the **Connect to GNSS rover** field.
- If the software is in **Base mode**, it attempts to connect to the receiver configured in the **Connect to GNSS base** field.

To view or set the current mode, tap  and select **Receiver settings / GNSS functions**.

If there is no receiver configured in the appropriate field in the **Bluetooth** tab, then the software attempts to connect to the GNSS receiver on the serial port of the controller; and if a receiver is detected it assumes it is the receiver for the current mode.

NOTE – If you are connecting a controller running Android to an SP60 receiver, turn off the **Auto-connect** to GNSS receivers function in Origin, and always power up the receiver and wait until it is **tracking satellites** before attempting to connect the software to the receiver. If you attempt to connect to the SP60 receiver from the controller before the SP60 is ready then the Bluetooth pairing to the receiver can be lost.

GNSS correction source

Use the **GNSS correction source** tab in the **Connections** screen to configure the source of real-time corrections for a GNSS RTK survey.

For steps on configuring the GNSS corrections settings, see [To configure a rover internet data link, page 361](#).

When you start an RTK survey that uses an internet data link, the Origin software automatically connects to the GNSS correction source using the settings configured in the survey style.

Internet connection setup

The most common ways to connect to the internet are to use mobile broadband on the controller or to use the controller's Wi-Fi radio. How to connect to the internet using these options are described below.

Alternatively, if the SIM card you want to use is in another device, you can connect the controller to the other device and use that device to connect to the internet. See:

- [Internet setup using a separate smartphone, page 488](#)
- [Internet connection using another device, page 491](#)

NOTE – To use the internet connection for an internet RTK data link, in the data link page of the survey style, tap ► next to the **GNSS internet source** field and select **Controller internet**. See [To configure a rover internet data link, page 361](#).

To use mobile broadband on the controller

To use the cellular modem and the SIM card in the controller to connect to a 3G or 4G mobile broadband network, **make sure a SIM card is inserted** in the controller. For information on how to do this, refer to the documentation for your Spectra Geospatial controller.

NOTE – If the controller is running **Android** and there is a SIM card inserted, the device automatically connects to the cellular network. If more than one SIM card is inserted in the controller, navigate to the operating system settings screen and search for **SIM cards** and then select your preferred SIM card.


If the controller is running Windows:

1. Swipe in from the right to display the Windows **Action Center** panel.
2. If the **Cellular** tile is gray, tap the tile to enable it. The tile changes to blue.
3. To configure options for the cellular connection, tap and hold the **Cellular** tile and select **Go to Settings**.
 - a. To automatically connect to the cellular network whenever the controller is in range, select **Let Windows manage this connection**.
 - b. Select whether Windows can automatically switch to the cellular network if the Wi-Fi connection is poor.

For more information, refer to the documentation for your controller.

To connect the controller to a Wi-Fi network

To use the Wi-Fi radio in the controller to connect to a Wi-Fi network:

1. Enable Wi-Fi on the controller.
 - If the controller is running **Windows**:
 - a. Swipe in from the right to display the Windows **Action Center** panel.
 - b. If the **Network** tile  is gray, tap the tile to enable it. The tile changes to blue.
 - c. Select the network from the list.
 - If the controller is running **Android**:
 - a. Swipe down from the notifications area at the top of the screen.
 - b. If the Wi-Fi icon is gray, tap the icon to enable it and then set the **Wi-Fi** switch to **On**.
 - c. Select the network from the list.
2. If required, enter the appropriate login details.
3. Tap **Connect**.
4. Open your internet browser and enter a URL to confirm the controller can connect to the internet.
5. To use this internet connection for an internet RTK data link, in the data link page of the survey style, tap ► next to the **GNSS internet source** field and select **Controller internet**. See [To configure a rover internet data link, page 361](#).

Internet setup using a separate smartphone

You can connect the controller to the internet using a separate smartphone. Connect the smartphone to the controller using a Wi-Fi or Bluetooth connection. The controller then uses the smartphone's connection to the 3G or 4G mobile broadband network to connect to the internet.




In general, Wi-Fi connections have faster data connections but use more battery power on both devices than Bluetooth connections.

To connect to the smartphone using Wi-Fi

1. On the phone, enable the **Mobile hotspot** or **Portable hotspot** setting.

This turns off Wi-Fi on your phone so that the phone is now in **Access Point** mode. A notification shows the name of the created AP and the required passkey.



TIP – To locate this setting on your phone, open the main **Settings** app and enter **hotspot** in the **Search** field.

2. Connect the controller to the phone.
 - If the controller is running **Windows**:
 - a. Press the Windows key  to display the Windows taskbar and tap the **Wireless network icon** .
 - b. If the **Wi-Fi** tile is gray, tap it to enable it. The tile changes to blue.
 - c. In the list of Wi-Fi networks, select the name of your phone's Access Point and enter the required passkey.
 - d. Tap **Connect**.
 - If the controller is running **Android**:
 - a. Swipe down from the notifications area at the top of the screen.
 - b. If the Wi-Fi icon is gray, tap the icon to enable it and then set the **Wi-Fi** switch to **On**.
 - c. In the list of Wi-Fi networks, select Android AP and enter the required passkey.
 - d. Tap **Connect**.
3. Open your internet browser and enter a URL to confirm the controller can connect to the internet.
4. To use this internet connection for an internet RTK data link, in the data link page of the survey style, tap ► next to the **GNSS internet source** field and select **Controller internet**. See [To configure a rover internet data link, page 361](#).
5. To disconnect the controller from your smartphone, tap the **Wireless network icon**  in the Windows taskbar, select the phone access point and tap **Disconnect**.

TIP – The next time you want to use the phone's internet connection, re-enable the **Mobile hotspot** or **Portable hotspot** setting on the phone and then on the controller select the wireless network and tap **Connect**.

To connect to the smartphone using Bluetooth

If the controller is running Windows:


1. Pair the smartphone with the controller. To do this:
 - a. Enable Bluetooth on the phone.
 - b. On the controller, press the Windows key  to display the Windows taskbar and tap the system tray arrow. Tap the **Bluetooth** icon  and select **Add a Bluetooth Device**. Make sure **Bluetooth** is set to **On**.

TIP – The name of the controller is shown just below the **Bluetooth On** switch.
 - c. On the controller, tap **Add Bluetooth or other device**. Select **Bluetooth** as the device type. In the list of devices on the controller, select the name of your phone.
 - d. When prompted, tap **OK** or **Connect** on each device to confirm the passkey is correct.

NOTE – If there is a long list of Bluetooth devices on the controller, swipe down (scroll) to see the passkey confirmation prompt and buttons. The prompt times out after a few seconds, so if you miss it, tap **Cancel** and repeat steps (c) and (d).

- e. On the controller, tap **Done**.
2. On the phone, enable the **Bluetooth tethering** or **Internet tethering** setting to allow your phone's internet connection to be shared with another device.

TIP – To locate this setting on your phone, open the main **Settings** app and enter **tethering** in the **Search** field.

3. To use the phone's internet connection on the controller:
 - a. Press the Windows key  to display the Windows taskbar and tap the arrow to display the system tray. Tap the **Bluetooth** icon and select **Join a Personal Area Network**.
The Windows **Devices and Printers** window opens. Wait for a moment for the connected phone to appear.
 - b. Tap the phone and from the options at the top of the window, select **Connect using / Access point**.
4. On the controller, open your internet browser and enter a URL to confirm the controller can connect to the internet.
5. To use this internet connection for an internet RTK data link, in the data link page of the survey style, tap ► next to the **GNSS internet source** field and select **Controller internet**. See [To configure a rover internet data link, page 361](#).
6. To stop using the phone's internet connection, return to the Windows **Devices and Printers** window, select the phone and tap **Disconnect from device network**.

TIP – The next time you want to use the phone's internet connection, connect the devices using Bluetooth and then repeat the steps in step (3) above.

If the controller is running Android:

1. Pair the smartphone with the controller. To do this:
 - a. Enable Bluetooth on the phone.
 - b. On the controller, swipe down from the notifications area at the top of the screen and tap the Bluetooth icon.
 - c. On the controller, tap **Pair with new device**. In the list of devices on the controller, select the name of your phone.
 - d. When prompted, tap **OK** or **Pair** on each device to confirm the passkey is correct.
 - e. On the controller, tap **Done**.

2. On the phone, when prompted to allow **Bluetooth tethering**, tap **Allow**. If this notification does not appear automatically, enable the setting on your phone.

TIP – To locate this setting on your phone, open the main **Settings** app and enter **tethering** in the **Search** field.

3. On the controller, open your internet browser and enter a URL to confirm the controller can connect to the internet.
4. To use this internet connection for an internet RTK data link, in the data link page of the survey style, tap ► next to the **GNSS internet source** field and select **Controller internet**. See [To configure a rover internet data link, page 361](#).
5. To stop using the phone's internet connection, return to the Windows **Devices and Printers** window, select the phone and tap **Disconnect from device network**.

Internet connection using another device

NOTE – This feature is not supported if the controller is running Android. To connect a controller running Android to the internet you must use a Wi-Fi or cellular connection on the controller, or use Bluetooth internet tethering. See [Internet connection setup, page 487](#) and [Internet setup using a separate smartphone, page 488](#).

If you have another device such as a GNSS receiver or a mobile phone, you can connect the controller to the internet through that device. This is especially useful for an RTK internet data link if the SIM card you want to use is in the receiver or if you want to be able to use the internet on the controller for other functions during the RTK survey.

NOTE – To connect to the internet through a receiver or a mobile phone:

- The modem in the device must support the Bluetooth DUN service.
- The receiver must be an SP85 receiver.
- Modems used with Origin must support Hayes compatible AT commands.

To configure the connection:

1. In Origin, tap ≡ and select **Settings/ Survey styles**.
2. In the **Rover data link** screen of the survey style, select **Internet connection** from the **Type** field.
3. Tap ► next to the **GNSS internet source** field to open the **GNSS internet source** screen.
4. Tap **Add**. The **Create new GNSS internet source** screen appears.
 - a. Enter a **Name** for the GNSS internet source.
 - b. If you have not yet connected the controller to the device, you can do it now:
 - i. Tap **Config**. The Windows **Bluetooth** settings screen opens.
 - ii. Make sure **Bluetooth** is set to **On**, and then tap **Add Bluetooth or other device**.

- iii. Select **Bluetooth** as the device type. In the list of devices on the controller, select the name of your phone.
- iv. When prompted, tap **OK** or **Connect** on each device to confirm the passkey is correct.

NOTE – If there is a long list of Bluetooth devices on the controller, swipe down (scroll) to see the passkey confirmation prompt and buttons. The prompt times out after a few seconds, so if you miss it, tap **Cancel** and repeat steps (c) and (d).

- v. On the controller, tap **Done**.
 - vi. Return to the **Create new GNSS internet source** screen and configure the connection settings for the connected modem.
- c. In the **Bluetooth modem** field, select the device the controller is connected to.
 - d. In the **APN** field, tap ► to choose the method for selecting the Access Point Name (APN) for the internet service provider. This is the service provider that provided the SIM card in the device:
 - Choose **SIM default** to load the APN profile directly from the SIM card in the device.
 - Choose **Select Access Point Name (APN)** to select your **Location** and your **Provider and plan** from the APN wizard in Origin. Tap **Accept**.
 - e. In the **Number to dial** field, enter *99***1#. The *99***1# is a standard access code for mobile internet. If you are unable to connect using *99***1#, contact your mobile internet provider.
 - f. If required, enter a **Username** and **Password**. By default these fields are both set to **guest**
 - g. Tap **Accept**.


NOTE – If a message appears warning that details of the Bluetooth DUN service for the connected device could not be resolved, then the device may not support Bluetooth DUN. Try connecting creating a connection to the phone using the steps for a [smartphone](#).

5. In the **GNSS internet source** screen:
 - a. Select the GNSS internet source you just created.
 - b. If a PIN is required, enter the PIN in the **Modem pin** field.
 - c. Tap **Accept**.

The GNSS internet source you just created is shown in the **GNSS internet source** field in the **Rover data link** or **Base data link** screen of the survey style.

6. Configure the **GNSS correction source** settings in the survey style as required. See [To configure a rover internet data link, page 361](#).
7. Tap **Store**.

Conventional survey measure methods

To measure points using data from the connected conventional instrument, complete the station setup and then tap  and select **Measure** and then select the measurement method to use:


- Use **Measure topo** to measure a topographic point.
- Use **Measure codes** to measure and code observations in one step.
- Use **Measure rounds** to measure multiple sets of observations.
- Use **Measure to surface** to calculate and store the closest distance from the measured point to the selected surface.
- Use **Measure points on a plane** to define a plane and then measure points relative to the plane.
- Use **Measure 3D axes** to measure a point relative to a 3D axis.
- Use **Continuous topo** to measure a line of points at a fixed interval.
- Use **Surface scanning** to define a surface and then scan points on the surface.

See also:

- [To measure points using a laser rangefinder, page 468](#)
- [To store depths using an echo sounder, page 471](#)
- [To measure points using the utility locator, page 474](#)
- [To measure a check point, page 501](#)
- [Construction points, page 262](#)

To measure a topo point

To configure settings for points measured in a conventional survey, tap **Options** in the **Measure topo** form. (In portrait mode, swipe right to left along the row of softkeys to view the **Options** softkey.)

1. Tap  and select **Measure / Measure topo**.
2. Enter the **Point name** and **Code**. See [To select feature codes in Measure points or Measure topo, page 549](#).

If the selected code has attributes, the **Attrib** softkey appears. Tap **Attrib** and fill out the attribute fields. See [To enter attribute values when measuring a point, page 546](#). Tap **Store**.

3. In the **Method** field, select a measurement method.

4. Enter a value in the **Target height** field. See [Target height, page 315](#).
5. Aim the instrument at the target, prism or, if using DR mode, at the object to be measured.
To turn the instrument to the angle indicated on the screen, tap **Turn**.

6. Tap **Measure**.

If you did not select the **View before storage** check box, the point is stored automatically and the point name increments (based on the **Auto point step size** setting). The software stores the raw observations (HA, VA, and SD).

If you selected the **View before storage** check box in the survey style, information about the measurement appears on the screen. To view the available information, tap the arrow to the left.

7. Tap **Store**.

 
If you selected the **Auto average** option in the survey style, and you are measuring an observation to a duplicate point that is within the specified duplicate point tolerances, the observation and the computed average position (using all the available point positions), are automatically stored.

TIP –

- To search for the next available point name, tap **Find**. Enter the point name you want to start searching from (for example, 2000) and tap **Enter**. The software searches for the next available point name after 2000 and inserts it in the **Point name** field.
- When the instrument EDM is in tracking mode, you can turn the instrument to the next point and then tap **Read**. The last point is stored and a measurement is made to the next point.
- To add topo points to a CSV file, for example to create a list of control points, enable the **Add to CSV file** option in the job. See [Additional settings, page 114](#).
- When measuring a point in DR mode with a defined standard deviation, to accept the measurement before the standard deviation has been satisfied, tap **Enter**.

To measure by averaging observations

In a conventional survey, increase the measurement precision by averaging a predefined number of observations.

1. Tap  and select **Measure / Measure topo**.
2. Enter the **Point name** and **Code**. See [To select feature codes in Measure points or Measure topo, page 549](#).

If the selected code has attributes, the **Attrib** softkey appears. Tap **Attrib** and fill out the attribute fields. See [To enter attribute values when measuring a point, page 546](#). Tap **Store**.

3. In the **Method** field, select **Averaged observations**.
4. To set the number of observations taken by the instrument, tap **Options**.
5. Enter a value in the **Target height** field. See [Target height, page 315](#).
6. Aim the instrument at the target, prism or, if using DR mode, at the object to be measured.

7. Tap **Measure**.

 
While the instrument is carrying out the measurements, standard deviations are displayed for the horizontal (HA) and vertical (VA) angles, and the slope distance (SD).

8. Tap **Store**.**TIP -**

- To search for the next available point name, tap **Find**. Enter the point name you want to start searching from (for example, 2000) and tap **Enter**. The software searches for the next available point name after 2000 and inserts it in the **Point name** field.
- When measuring an **Averaged observation** tap **Enter** to accept the measurement before the required number of observations has been completed.

To measure by angles only or angles and distance

In a conventional survey, you can measure a point using a horizontal and a vertical angle or by a horizontal angle only. Alternatively, measure a point by angles and a distance.

1. Tap  and select **Measure / Measure topo**.
2. Enter the **Point name** and, if required, the **Code**.
3. In the **Method** field, select **Angles only**, **H. Angle only** or **Angles and distance**.
4. In the **Target height** field, enter the height of the target.
5. To set the perspective from which objects are offset, tap **Options** and change the settings in the **Servo/Robotic** group box. For more information, see [Servo/Robotic, page 284](#).
6. When using the **Angles and distance** measurement method, tap **Dist** to measure and fix the horizontal distance, then turn the instrument. The horizontal distance will remain fixed but the horizontal and vertical angles will change.

NOTE - The distance reverts to ? if the **Target test** setting is enabled in the **Instrument settings** screen and the instrument is turned more than 30 cm from the target. See [Target test, page 336](#).

7. Tap **Measure**.

8. If you selected the **View before storage** check box in the survey style, the observation adjusted for the offset distance appears. Tap **Store**.

 
NOTE - Two angles only observations from two different known points can be 'averaged' to compute the coordinates of the intersection point. To average the observations, they must be stored with the same point name. When the **Duplicate point: Out of tolerance** message appears, select **Average**. Alternatively, average the observations using **Compute average**. Select the averaging method in the **Cogo settings** screen..

To measure by angle offset

In a conventional survey, there are three angle offset methods that you can use to observe a point that is inaccessible:

- The **Angle offset** method holds the horizontal distance from the first observation, and combines this with the horizontal angle and vertical angle from the second observation to create an observation to the offset location.
- The **V.Angle offset** method holds the horizontal distance and horizontal angle from the first observation, and combines this with the vertical angle from the second observation to create an observation to the offset location.
- The **H.Angle offset** method holds the slope distance and vertical angle from the first observation, and combines this with the horizontal angle from the second observation to create an observation to the offset location.

All raw observables from the first and second observations are stored in the job file as HA, VA, and SD records and can be exported.

1. Tap  and select **Measure / Measure topo**.
2. Enter the **Point name** and, if required, the **Code**.
3. In the **Method** field, select **Angle offset**, **H. Angle Offset**, or **V. Angle Offset**.

 
When using the **H.Angle offset** measurement method, the target height from the first observation is applied to the horizontal angle offset observation.


When using **Angle offset** or **V.Angle offset** measurement methods you do not need to enter the **Target height**. The offset measurements are to the offset location and the target height is not used in any computations. To ensure that a target height is not applied to the observation, a target height of 0 (zero) is automatically stored to the software database.

 
4. If you are using Autolock technology, tap **Options** and select the **Autolock off for offsets** check box to automatically disable Autolock for the offset measurement and then re-enable it after the measurement.
5. Aim the instrument at the target, prism or, if using DR mode, at the object to be measured.
6. Tap **Measure**.
The first observation is displayed.
7. Turn to the offset location and then tap **Measure**. The two observations are combined into one.
8. If you selected the **View before storage** check box in the survey style, the observation adjusted for the offset distance appears. Tap **Store**.

To measure by distance offset

In a conventional survey, use this observation method when a point is inaccessible but a horizontal distance from the target point to the object can be measured. Distance offset allows you to offset in one, two, or three distances in one step.

1. Tap  and select **Measure / Measure topo**.
2. Enter the **Point name** and, if required, the **Code**.
3. In the **Method** field, select **Distance offset**.
4. In the **Target height** field, enter the height of the target.
5. Tap **Options** to:
 - Set the perspective from which objects are offset. Change the settings in the **Servo/Robotic** group box. For more information, see [Servo/Robotic, page 284](#).
 - Automatically reset the distance offset values to 0 after storing a measurement. Select the **Reset offsets after store** check box.

This option is useful when you typically measure only one offset. If you typically repeat measurements, leave the **Reset offsets after store** check box unselected so that the software remembers the offset values for the next measurement.
 - Preconfigure two values for the **L/R offset**. Enter values in the **Custom L/R offset 1** and **Custom L/R offset 2** fields.
6. In the **L/R offset** field, enter the left or right offset from the target to the object, if applicable. If you have configured custom offsets in the **Options** screen, tap  and select the offset.

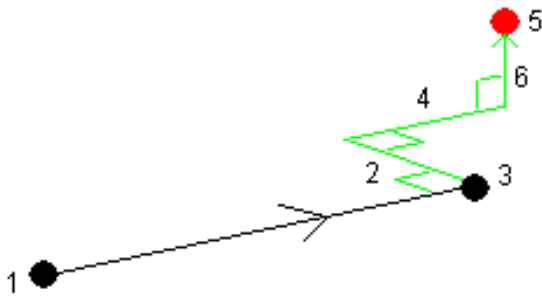
TIP – To set all three offset values to 0, tap  and select **Set offsets to 0**. If all three fields are set to 0 the measurement will be treated as an **Angles and distance** measurement. The **Set offsets to 0** option is also available from the **In/Out offset** and **V.Distance offset** fields.

7. Enter the **In/Out offset** from the target to the object, if applicable.
8. Enter the **V.Distance offset** from the target to the object, if applicable.
9. Tap **Measure**.
10. If you selected the **View before storage** check box in the survey style, the observation adjusted for the offset distance appears. Tap **Store**.

The software stores the adjusted horizontal angle, vertical angle, and slope distance in the point record, as well as an offset record with the offset measurement details.

The following figure shows an example where point 5 is measured with the **Offset & Stakeout directions** set to **Instrument perspective**:

- offset to the left (2) of the target (3)
- offset out (4) from the instrument station (1)
- offset vertically (6)

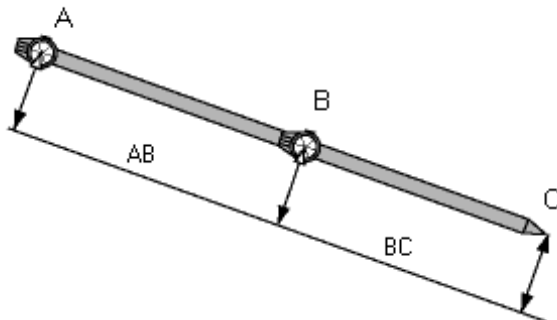


 
 
To measure by dual-prism offset

In a conventional survey, use this measurement method to coordinate a point that cannot be observed directly with a pole in a plumb position.

NOTE - The use of a tiltable prism with the appropriate nodal offset will give accurate results regardless of the direction of pole tilt. Prisms that should not be tilted do not correct the vertical angle and slope distance for the difference between the optical center of the prism and the centerline of the pole.

1. As shown in the following diagram, space two prisms (A and B) apart on the range pole. The distance BC is known.



2. Tap  and select **Measure** and then perform a station setup. See [Station setup, page 296](#).
3. Tap  and select **Measure / Measure topo**.
4. Enter the **Point name** and, if required, the **Code**.
5. In the **Method** field, select **Dual-prism offset**.
6. Complete the fields as required.

 
TIP - Enter a suitable **Tolerance AB** to generate a warning if there is a difference between the keyed-in distance AB between the two prisms and the measured distance AB between the two prisms. Exceeding the tolerance could indicate that the entered distance AB is incorrect, or it could indicate pole movement between the measurement to prism A and the measurement to prism B.

7. Tap **Measure**. Take two measurements.

The software calculates the obscured position (C) and then stores it as a raw HA VA SD observation. All raw observations are stored in the job file and are available for export.

To measure a circular object

In a conventional survey, use this measurement method to calculate the center point of a circular object, such as a water tank or silo.

1. Tap  and select **Measure / Measure topo**.
2. Enter the **Point name** and, if required, the **Code**.
3. In the **Method** field, select **Circular object**.
4. To select the calculation method, tap **Options**. See [calculation methods](#).
5. If you are using a non-motorized total station and you selected the bisect tangent method, turn the total station to the half angle so that it can complete the measurements.

For motorized total stations using the bisect tangent method, or when using the center + tangent method, the instrument automatically takes the measurements.

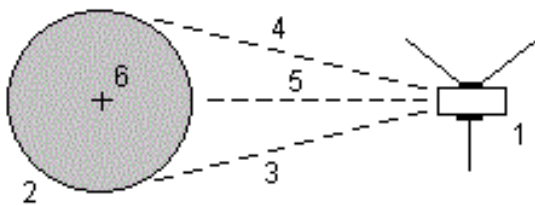
Calculation methods

When measuring a circular object, you can select one of the following calculation methods.

Bisect tangent method

The bisect tangent method measures an angles-only measurement to the visible edges of the left and right sides of the circular object and then measures a DR measurement to a point on the circumference of the circular object.

The software uses the three measurements to calculate the radius of the circular object. It adds the radius distance to the DR measurement and stores a raw HA VA SD observation to the center of the object.

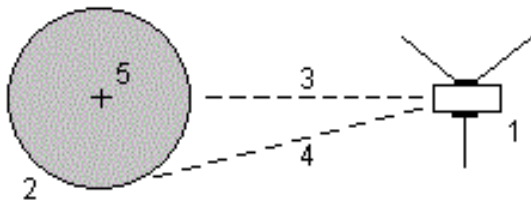


- | | |
|--|--|
| <p>1 Total station</p> <p>3 and 4 Angle and distance measurements</p> <p>6 Center of object</p> | <p>2 Circular object</p> <p>5 DR measurement</p> |
|--|--|

Center + tangent method

The center + tangent method measures an angle and distance measurement to the front center face of the circular object, and then observes an angles only measurement to the side of the circular object.

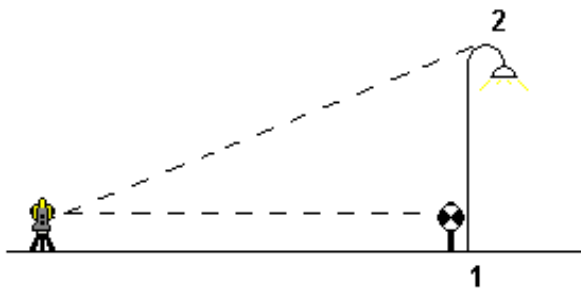
From these two measurements, the software calculates the center point of the circular object and stores it as a raw HA VA SD observation. It also calculates the radius and stores it with the observation.



- | | | | |
|---|--------------------------------|---|-------------------------|
| 1 | Total station | 2 | Circular object |
| 3 | Angle and distance measurement | 4 | Angles only measurement |
| 5 | Center of object | | |

To measure a remote object

In a conventional survey, if the instrument does not support DR mode, or if you cannot measure a distance, use this method to calculate the height and/or width of a remote object. See the following diagram.



1. Tap \equiv and select **Measure / Measure topo**.
2. Enter the **Point name** and, if required, the **Code**.
3. In the **Method** field, select **Remote object**.
4. Measure an angle and distance to the bottom of the remote object (1).
5. Set the method as required.
6. Sight to the remote point (2).
7. Tap **Store**.
8. To make multiple remote object observations, repeat steps 6 and 7.

Using the first measurement and continuous HA VA angles, the Origin software calculates the position of the remote object, showing the width and elevation difference from the base point. The observation to the base of the remote object is stored as an HA, VA, SD. The Remote point is stored as an HA, VA with a computed SD, including the object height and object width.

To measure a check point

In a conventional survey, measure a check class point to check the station setup and make sure the instrument is oriented correctly.

1. To open the **Check shot** screen:
 - From the **Measure topo** screen, tap **Check**.
 - In the map, tap and hold the point to measure to and then select **Check shot**.
 - From anywhere in the software, press **Ctrl + K**.


The **Check shot** screen appears, ready to take a check measurement to a general point.

TIP – To take a check measurement to a backsight point, tap **Chk BS** in the **Check shot** screen, or tap and hold in the map without selecting a point and then select **Check backsight**. The **Check backsight** screen appears.

2. Enter the name of the point to check.

If you are using a servo or robotic instrument, it turns to the point to be checked.

If the point is a backsight point, the backsight target is automatically selected. Make sure the details are correct.
3. Select a measurement method and enter the required information for the selected method.
4. Enter the height of the target.

When measuring to the notch on a Spectra Geospatial traverse prism base, tap  and then select **S notch**.
5. Tap **Measure**.

If you selected **View before storage** in the **Topo point** settings screen, the check shot deltas are shown.

If the station setup is:

 
- the same as when you originally measured the point, the deltas are the difference in values between the original observation and the check observation. The deltas displayed are horizontal angle, vertical distance, horizontal distance, and slope distance.
- different from when you originally measured the point, the deltas are in terms of the best coordinates from the original point to the check point. The deltas displayed are azimuth, vertical distance, horizontal distance, and slope distance.

NOTE – If the point is out of tolerance, you can **Store as check**, or **Store and reorient**. Store and reorient will store another observation that will provide a new orientation for subsequent points measured in the current station setup. In a multiple backsight station setup (station setup plus or resection), a check backsight measurement checks the first backsight. Storing and reorienting effectively changes the multiple backsight station setup into a single station setup.

6. Tap **Enter**. The point is stored with a classification of **Check**. See [Managing points with duplicate names, page 673](#).

To measure rounds of observations

This topic describes how to measure multiple sets (rounds) of observations with a conventional instrument. You can measure one or more rounds of observations, and also one or more sets of observations per point per round.

1. Tap  and select **Measure / Measure rounds**.
2. Tap **Options** to configure the rounds options. See [Station setup plus, resection, and rounds options, page 303](#).

Before you start measuring points, make sure that the **Face order** and **Sets per point** settings are correct. You cannot change these settings after you start measuring points.

3. Build the rounds list by observing each point to include in the round on the first face. Follow the same procedure as for measuring a topo point.

Make sure you enter the correct target height and prism height as you measure each point. You cannot change these values in subsequent rounds.

4. To start measuring rounds:
 - a. Tap **End face**.
 - b. If you are using a servo or robotic instrument to measure a known (coordinated) point, tap **Turn**. Alternatively, to automatically turn a servo instrument to the point, set the **Servo auto turn** field in the survey style to **HA & VA** or **HA only**.

NOTE – When using servo or robotic instruments, check that the instrument has sighted the target accurately. When measuring a DR target with a Spectra Geospatial total station with automated rounds, the software pauses to allow you to sight to the target. You **must** manually sight and measure the point to continue.

- c. When the end of the rounds list is reached, if points have been skipped the software prompts you to return to observe the points that were skipped during that round. The observations can be skipped again if required.

As you measure rounds, the software:

- Defaults to the correct point details for each observed point.
- Shows the current face observations, the number of the current set and the total number of sets to be measured (shown in brackets) and the number of the current round the total number of rounds to be measured (shown in brackets).

For example, "Face 1 (2/2) (1/3)" shows that the instrument is on face 1 of the second set of two sets and the first of three rounds.

- Directs you to change face when required. With a servo instrument, this happens automatically.
 - Automatically turns and measures when using Autolock technology, and **Automated rounds** is enabled.
5. When all observations are complete, the **Standard deviations** screen appears. To review the standard deviations of the observations and remove bad observations, see [Reviewing standard deviations after rounds, page 504](#).
 6. To save and exit rounds, tap **Close**. Tap **Yes** to confirm.

Measuring rounds

During a **Station setup plus** or **Resection**, or when using the **Measure rounds** measurement method, you can measure multiple sets (rounds) of observations.

A round is a set of either:

- single face 1 observations
- matched face 1 and face 2 observations

Rounds can be used in a number of different ways depending on your equipment, the accessibility of points, and the procedures to observe the points, such as the order in which the observations are made.

Building a rounds list

The **rounds list** contains the points used in the rounds observations.

The software automatically builds the rounds list as each point is added to a **Station setup plus** or **Resection**, or as you measure each point for the first time when using the **Measure rounds** measurement method.

The rounds list contains information about each point including point name, code, target height, prism constant, and target ID. You cannot alter the prism constant or the target height for subsequent rounds.

NOTE - Because the Origin software uses the target height and prism constant values stored when building the rounds list, you must enter the correct target height and prism constant as each point is added to the rounds list.

The maximum number of points in the rounds list when:

- Using the **Measure rounds** measurement method is 200
- During **Station setup plus** or **Resection** is 25.

To complete the rounds list, tap **End face**.

NOTE – You cannot edit the rounds list. Before you tap **End face**, be sure to observe all points to include in the rounds observations.

Including/excluding the backsight from a set of rounds

Spectra Geospatial recommends observing the backsight on both faces if you are taking foresight observations on both faces. If you exclude the backsight:

- The backsight observation(s) taken during the station setup is used to compute the MTA.
- if you do not measure the backsight on face 2 and there is only one single face observation to the backsight, and the rounds include observations on both faces, then the horizontal angle face 2 measurements observed using **Measure rounds** will not be used when calculating the MTAs.

Reviewing standard deviations after rounds

When measuring rounds, use the standard deviation information shown after each round to review the quality of the observations and remove poor observations.

NOTE – Each individual round is stored to the job only when you tap **Close** or **+ Round** to exit the **Standard deviations** screen.

To observe another round, tap **+ Round**.

To store the current rounds session, tap **Close**. Tap **Yes** to confirm.

To view more information about a point, select it and then tap **Details**.

To view or edit the residuals of each individual observation to a point, tap the point in the list once.

If you have enabled a measured point to be added to a CSV file, select the **Add to CSV file** option.

To exit from rounds and delete all rounds observations, tap **Esc**.

If you tap **+Round** after the instrument has completed the required number of rounds, the instrument performs one more round of observations. If you want the instrument to perform more than one extra round, enter the total number of required rounds **before** you tap **+Round**.

For example, to measure three rounds automatically, and then measure another three rounds:


1. Enter 3 in the **Number of rounds** field.
2. Once the instrument has measured 3 rounds, enter 6 in the **Number of rounds** field.
3. Tap **+Round**. The instrument measures the second group of 3 rounds.

To measure to a surface


Use the **Measure to surface** measurement method to calculate and store the closest distance from the measured point to the selected surface model. The surface model can be a BIM model or a digital terrain

model (DTM).

NOTE - If more than one surface is selected, the nearest surface is used.

1. If the surface is in:
 - a DTM, tap  and select **Measure / Measure to surface**. If there is more than one surface available, select the surface in the **Select surface** field.
 - a BIM model, select the surface in the map and then from the tap and hold menu select **Measure to selected surface**.

NOTE - To select the surface the BIM model must be displayed as a solid object and the layer containing the surface must be selectable.

TIP - You can choose whether selecting surfaces in the map selects **Individual faces** or selects the **Whole object**. To change the **Surface selection** mode, tap  and select your preferred **Surface selection** mode. See [BIM model selection mode](#), page 171.

2. Enter the **Distance to surface limit**.
3. If required, enter a value in the **Antenna height/Target height** field.
4. Tap **Start**.

If the surface is not already visible in the map, it becomes visible.

The software calculates and reports the closest distance from the current position to the selected surface model and displays it in the **Distance to the surface** field. The **Distance to the surface** is only shown if it is within the **Distance to surface limit**.

The position on the surface is highlighted in the map and a line is drawn from the measured position to the position on the surface. Negative distances are reported for positions between you and the model and positive distances are reported for positions on the other side of the model.

TIP - If the software warns **Terrain models disagree**, there are overlapping surfaces with different elevations in the map. Hide any surfaces you are not using in the **Map files** tab of the **Layer manager**. See [Managing map file layers](#).

5. Enter the **Point name** and, if required, the **Code**.
6. Tap **Measure**.
7. Tap **Store**.

The **Distance to surface** value and the coordinates of the closest point on the surface are stored with the measured point and can be viewed in **Review job** and **Point manager**.

To measure points on a plane


In a conventional survey, use the Measure points on a plane measurement method to define a plane and then measure points relative to the plane.

To define a horizontal plane, vertical plane, or tilted plane you can select points in the job or measure new points. After defining the plane, measure an:

- **Angle only** measurement to the plane to create an angles and computed distance observation onto the plane.
- **Angles and distance** measurement to the plane to compute the perpendicular offset to the plane.

The type of plane calculated by the software depends on the number of points selected:


No. of points	Plane type
1	Horizontal
2	Vertical through 2 points
3 or more	Plane with residuals (for 3 points, the residuals will be 0). The plane can be a "Free" plane created as a best fit (typically tilted) plane through all points, or a "Vertical" plane constrained to a best fit vertical plane through all points. Tap the Free / Vertical softkey to toggle between the two modes.

1. Tap  and select **Measure / Measure points on plane**.
2. To define the plane:
 - a. Tap **Add** to select the point selection method and then select the point(s) to use to define the plane, or tap **Measure** to go to the **Measure point** screen and measure a new point to use in the plane definition. Add or measure at least enough points to define the required plane.
 - b. Tap **Calculate** to calculate the plane.
 - c. If the plane uses 3 or more points, you can tap **Vertical** to calculate a vertically constrained plane. If required, tap **Free** to recalculate the plane using the best fit through all points.
 - d. Use the values in the **Residuals** column to identify any points that you want to exclude. Tap a row in the table to exclude or include a point and automatically recalculate the plane. The values in the **Residuals** column are updated.
3. Tap **Continue** to measure points relative to the plane.
4. Enter the **Point name**.
5. Select the **Method** to use for calculating the point:
 - **Angle and distance** calculates coordinates for the measured point as well as the distance from the point to the plane.
 - **Angle only** calculates coordinates for the observed point using the intersection of measured angles and the plane.

TIP – When measuring with **Angles and distance**, configure the instrument EDM settings to turn on tracking mode to see the delta distance to the plane field update in real time.

6. Tap **Measure**.
7. Tap **Store**.

To measure a point relative to a 3D axis

1. Tap  and select **Measure / Measure 3D axes**.
2. Key in or measure the two points that define a 3D axis.
3. Tap **Options** to select the format of the delta display for the points measured relative to the axis.
4. Tap **Next**.

The instrument is automatically put into TRK mode. When the Origin software receives a distance, the deltas fields are automatically updated.

If you are not measuring to a prism, use Instrument functions to set DR mode.

You can accept the TRK measurement, or tap **Measure** to take an STD measurement.

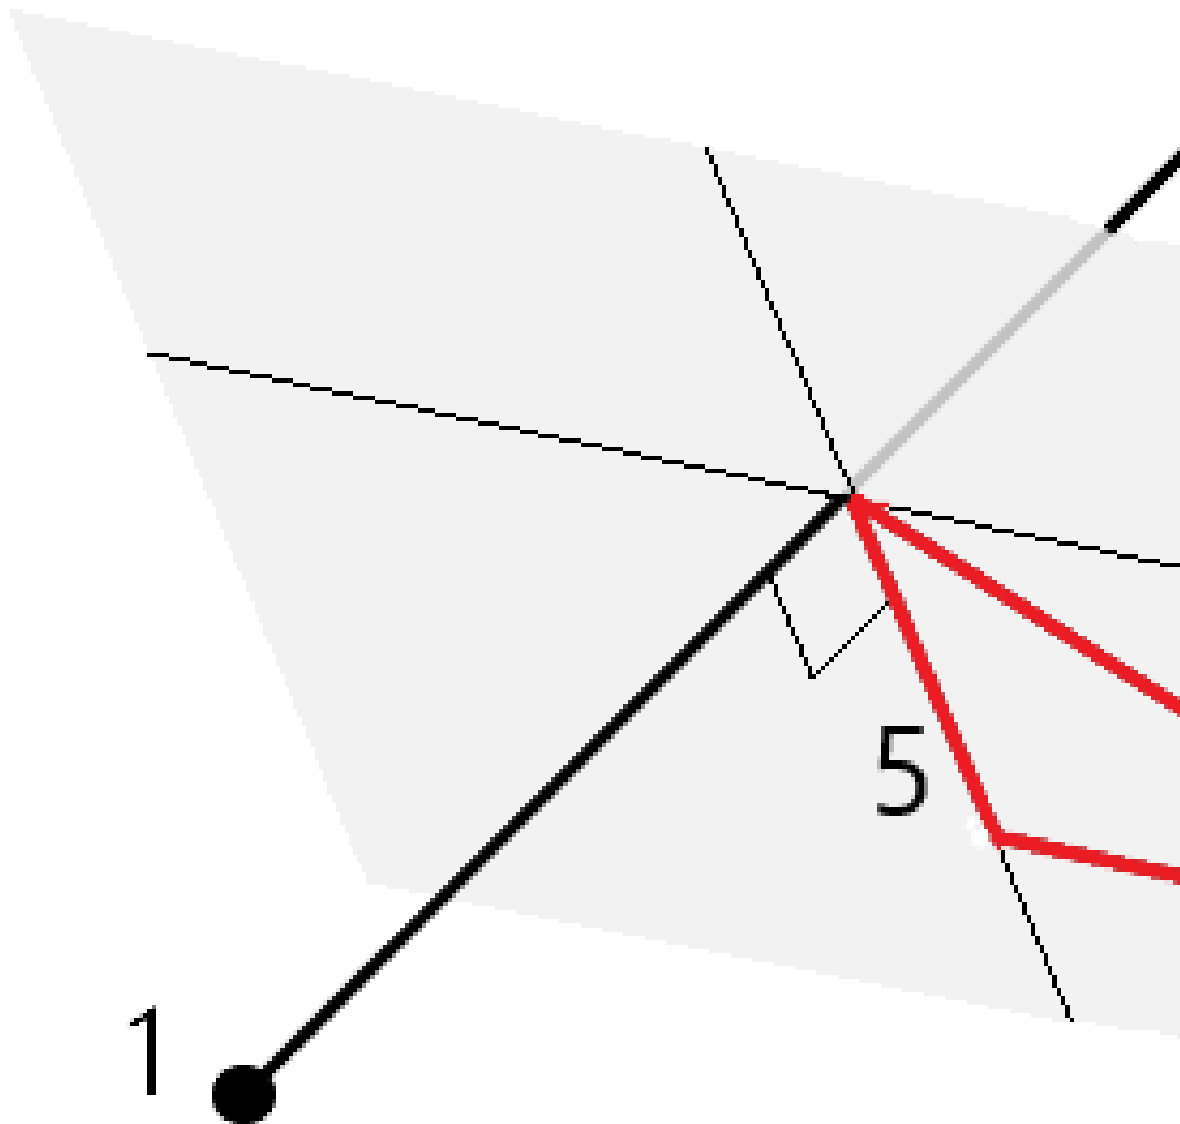
The Origin software reports the coordinates and elevation for the measured point, and the orthogonal and vertical deltas for the point relative to the 3D axis (see the diagrams below).

5. Enter the **Point name** and, if required, the **Code**.

NOTE – Descriptions and attributes are not supported.

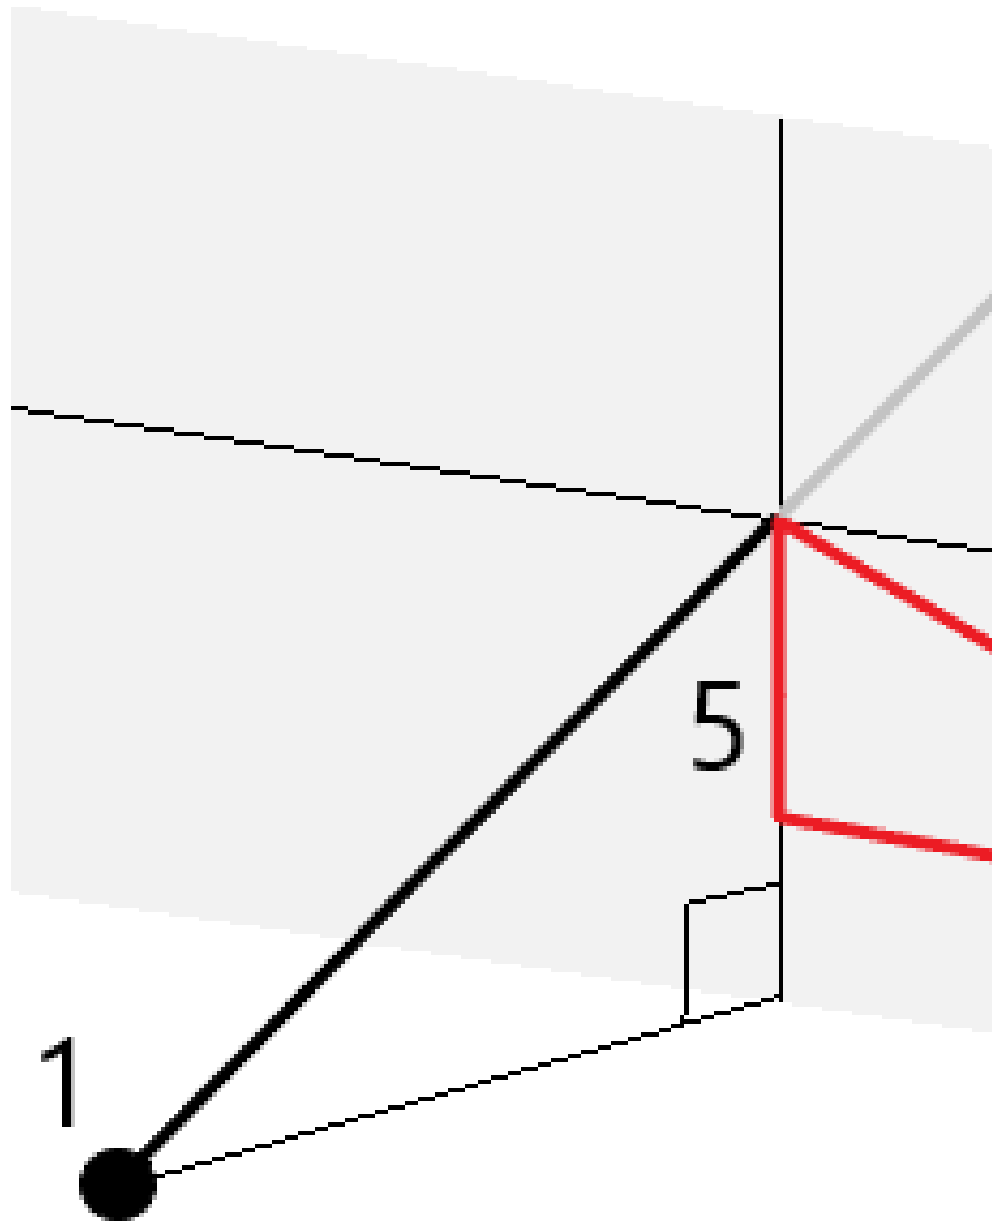
6. Tap **Store**.

The following diagram and table describes the reported orthogonal deltas using the default format.



1	Point 1 defining the 3D axis	4	Horizontal offset to 3D axis
2	Point 2 defining the 3D axis	5	Perpendicular offset to orthogonal point on 3D axis
3	Measured point	6	Radial offset to orthogonal point on 3D axis

The following diagram and table describes the reported vertical deltas using the default format.



1	Point 1 defining the 3D axis	4	Horizontal offset to 3D axis
2	Point 2 defining the 3D axis	5	Vertical offset to vertical point on 3D axis
3	Measured point	6	Radial offset to vertical point on 3D axis

The Origin software also reports the:

- distance from Point 1 and Point 2 to the calculated orthogonal point on the 3D axis
- distance from Point 1 and Point 2 to the calculated vertical point on the 3D axis
- coordinates and elevation for the calculated orthogonal and vertical points on the 3D axis


NOTE – If points 1 and 2 define a vertical axis, all vertical deltas show as null (?).

To measure continuous topo points

Use the **Continuous topo** measurement method to measure points continuously, for example a line of points at a fixed interval.

You can also use the **Continuous topo** measurement method to store depths measured using an echo sounder. For more information, see [Echo sounders](#).

To start **Continuous topo** measurements:

1. Tap  and select **Measure / Continuous topo**.
2. Enter the **Start point name**. The point name increments automatically.
3. If required, enter a value in the **Target height** field.
4. Select the method using the steps below.

To measure continuous topo points without stopping

1. Select the **Method**.

A point is stored when one of these predefined events occurs:

- the time interval has elapsed (**Fixed time** method)
- the distance has been exceeded (**Fixed distance** method)
- the time interval has elapsed and/or the distance has been exceeded (**Time and distance** or **Time or distance** method)

NOTE – For a postprocessed survey, you must use the **Fixed time** continuous method. By default the time interval is set to the same value as the logging interval configured in the **Rover options** screen of the postprocessed survey style.

2. Enter a value in the **Distance** field and/or the **Time interval** field, depending on which method you are using.
3. Tap **Start**. Data starts recording.
4. Move along the feature to be surveyed.

TIP – To store a position before the predefined conditions have been met, tap **Store**.

5. To stop measuring continuous points, tap **End**.

To measure continuous topo points using the stop and go method

1. In the **Method** field, select **Stop and go**.
2. In the **Stop time** field, enter the period of time the target must be stationary before the instrument starts to measure the point.
The target is deemed to be stationary when its velocity is less than 5 cm/sec.
3. Enter a value in the **Distance** field for the minimum distance between points.
4. Tap **Start**. Data starts recording.
5. Move along the feature to be surveyed. A point is stored when the stop time and distance settings have been met.

TIP – To store a position before the predefined conditions have been met, tap **Store**.

6. To stop measuring continuous points, tap **End**.

NOTE – If you are using a FOCUS 30/35 instrument with laser blinking enabled, laser blinking is temporarily disabled when using **Continuous topo**.

Surface scanning

1. From the **Survey** menu, select **Surface scan**.
2. Enter the **Start point name** and **Code**.
3. In the **Method** field, select a measurement method.
4. Define the area for the scan and grid interval using one of the methods described below.
5. Tap the Instrument icon in the status bar to open the **Instrument functions** screen and set the EDM measurement method (TRK is fastest).

The total number of points to scan, scan grid dimensions, and estimated scan time are displayed. Change the scan size, step sizes or EDM measurement method to increase or decrease the number of points and scan time.

6. Tap **Start**.

To define the scan area

To define the scan area, do one of the following:

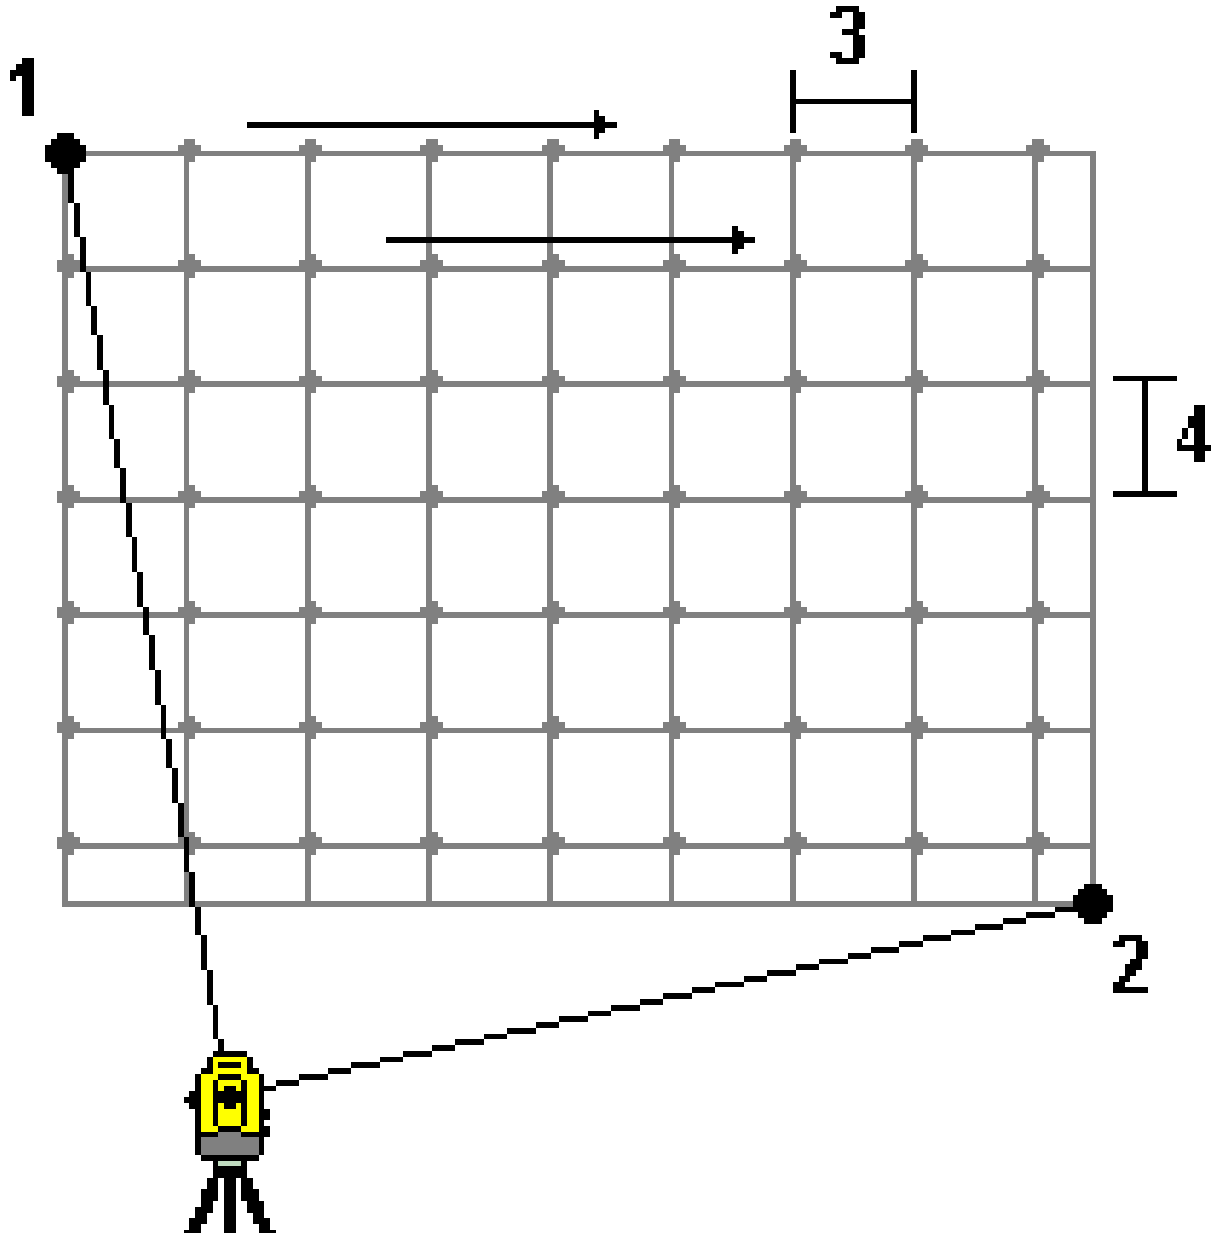
- If the point already exists, enter the point name, or use menu arrow to select it from the list.
- From the pop-up menu in the **Top left** and **Bottom right** fields select **Fast fix** or **Measure** to measure and store points that define the limits of the search.

Define the scan area with one of the following methods.

NOTE - The defined scan area may not exactly fit the grid interval. There may be an area left over along the scan extents that is smaller than the grid interval. If the width of this area is less than one-fifth of the grid interval, the points along this scan area will not be measured. If the width is more than one-fifth of the grid interval, then an extra point is scanned.

HA VA interval

Use this method on complex surfaces when you cannot use a rectangular plane to approximate the surface you are scanning.



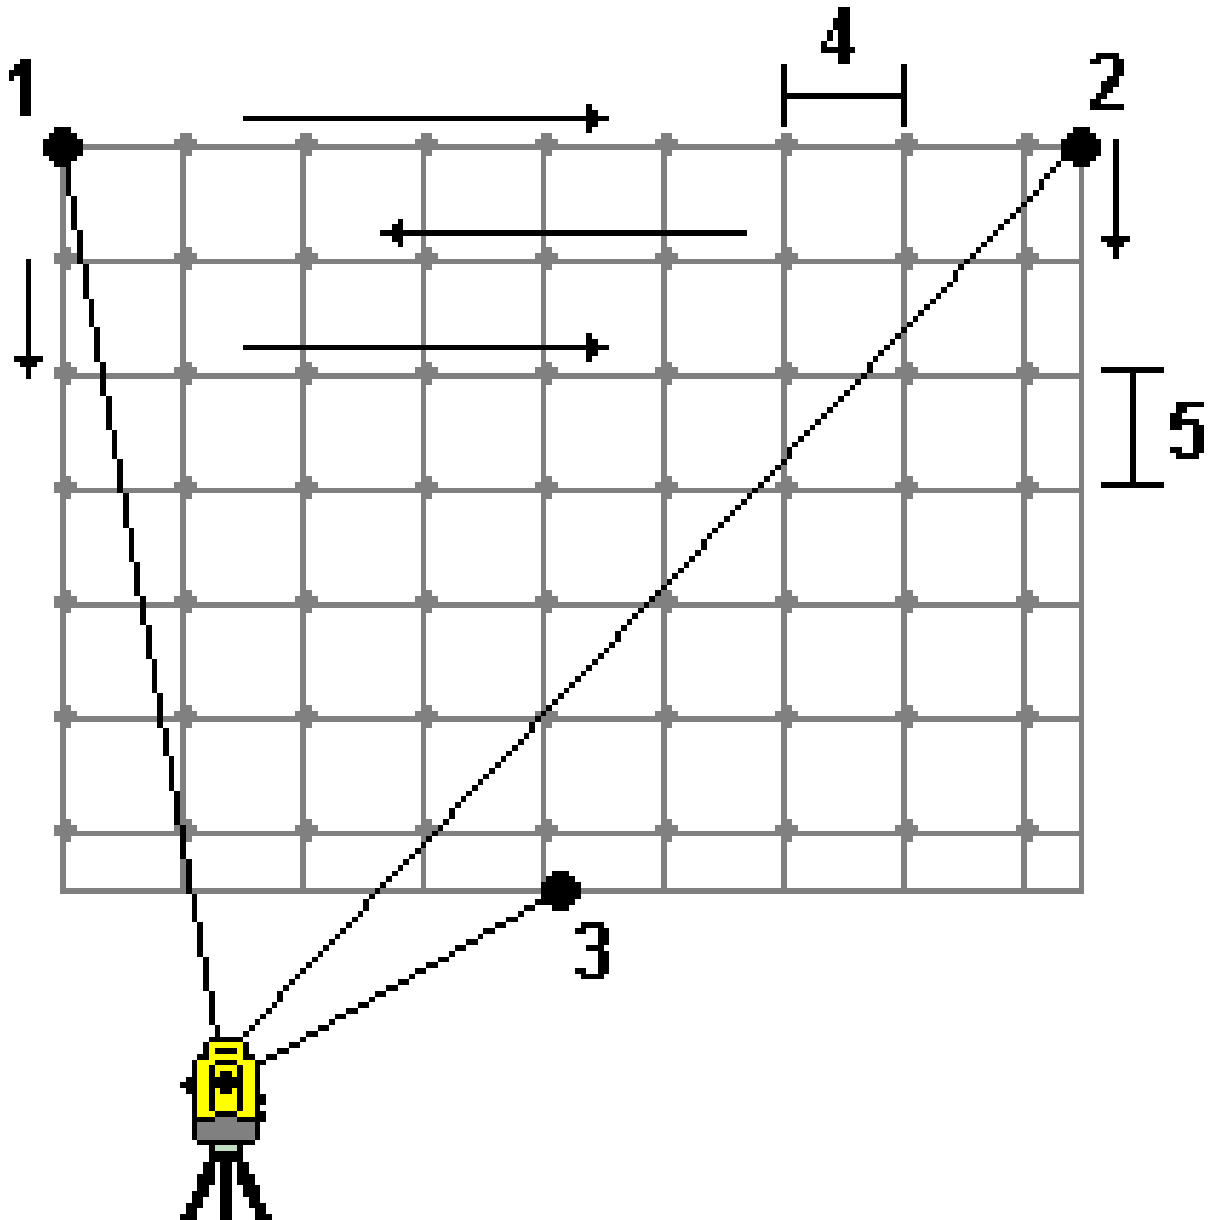
1. Aim to the top left corner of the scan area (1) and measure a point.
2. Aim to the bottom right corner of the scan area (2) and measure another point.

3. Define the angular grid interval, where:
 - 3 is the Horizontal angle
 - 4 is the Vertical angle

TIP - To define a Horizontal only scan of a 360° scan area, set the Top left and Bottom right points to the same name, and set the VA interval to null.

Rectangular plane

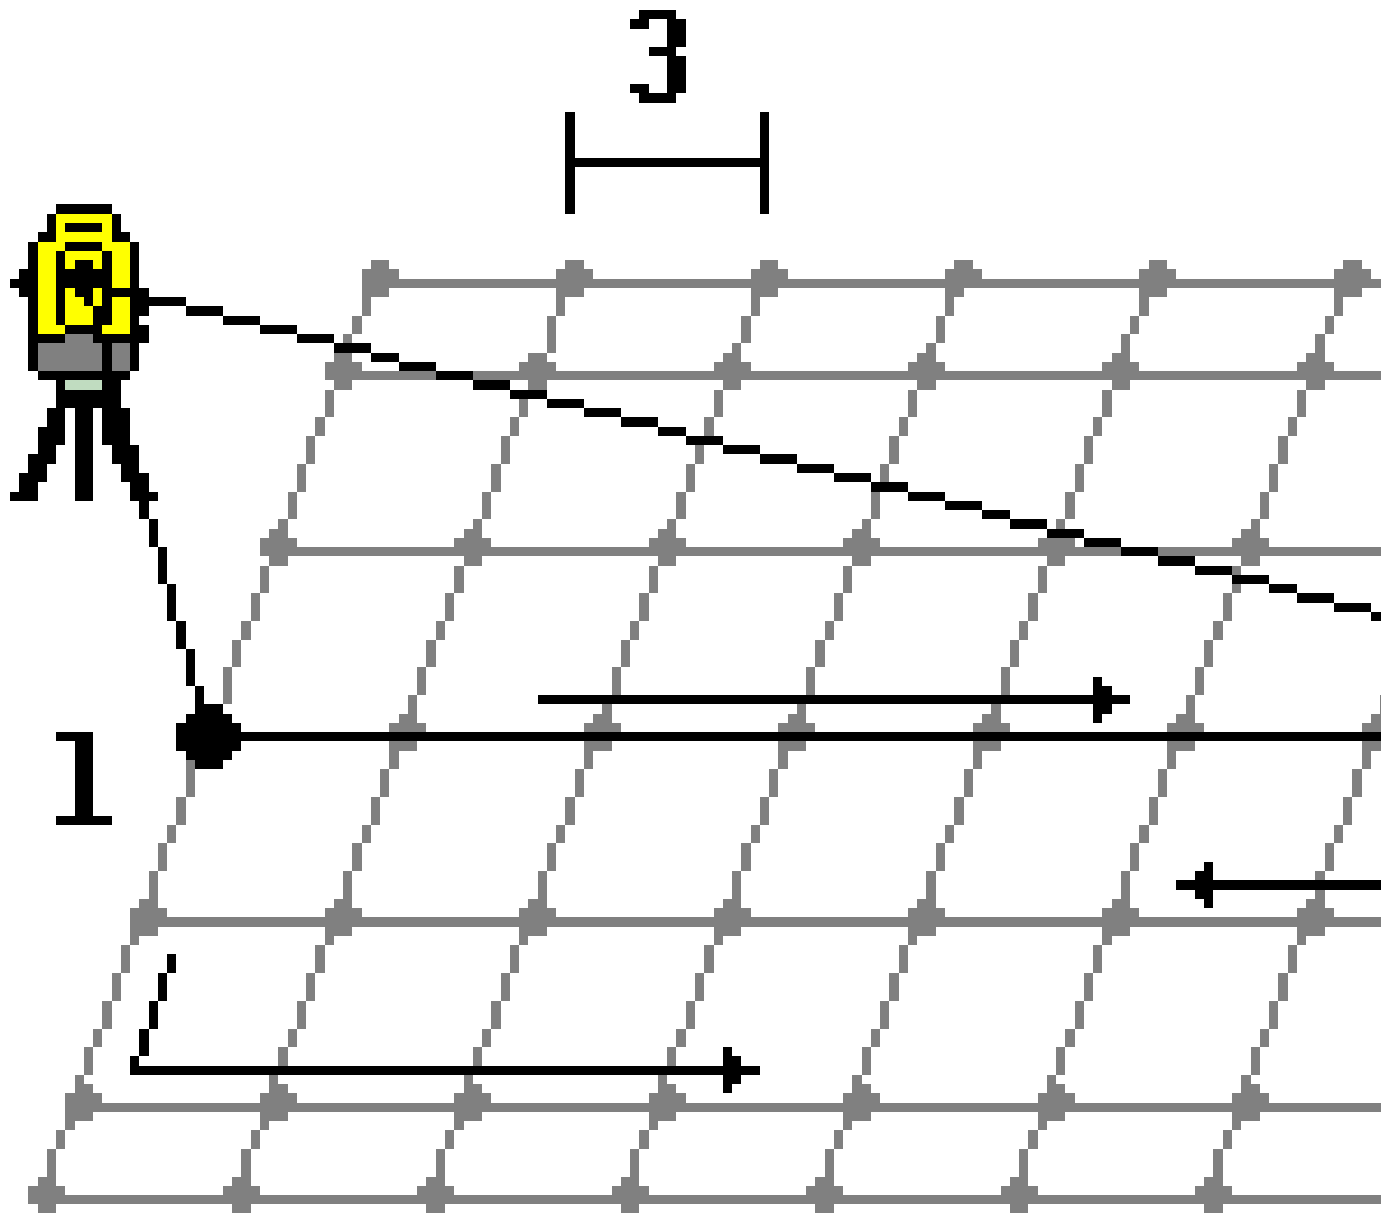
Use this method on a plane surface where you need a regular grid interval. The Origin software determines the angle of the plane, and uses this and the grid interval to approximate how far to turn the instrument for each subsequent point.



1. Aim to the first corner of the scan area (1) and measure a point.
2. Aim to the second corner of the scan area (2) and measure another point.
3. Aim to the third point on the opposite side of the plane (3) and measure a point.
4. Define the distance grid interval, where:
 - 4 is the horizontal distance
 - 5 is the vertical distance

Line and offset

Use this method to define the area to scan from a centerline that has equal offsets to the left and right. The Origin software defines the surface using horizontal offsets perpendicular to the centerline. The software then uses this definition and the station interval to determine approximately how far to turn the instrument for each subsequent point.



1. Do one of the following:

- Two point method:

 
- a. Aim to the start point of the centerline (1) and measure a point.
- b. Aim to the end point of the centerline (2) and measure another point. These two points (1 and 2) define the centerline.

- Access the pop-up menu in the **Start point** field. Change the method and then define the line by a start point with azimuth and length.
2. Define the station interval (3).
 3. Define the maximum offset distance (4).
 4. Define the offset interval (5).

The Origin software scans the centerline first, then the points on the right-hand side, and finally the left-hand side.

GNSS survey measure methods

The types of points that you can measure in a GNSS survey depend on the type of GNSS survey configured in the survey style.

To measure points during a GNSS survey, tap  and select **Measure / Measure points**, or in the map, with nothing selected, tap **Measure**.

In the **Method** field, select:

- **Topo point** to measure a topographic point.
- **Observed control point** to measure a point with an extended occupation time and quality control information.

If the **Topo point** is configured to perform 180 measurements in the [GNSS point options](#) screen, the positional result is the same as a point measured using the observed control point measurement method.

- **Calibration point** to measure a point during site calibration.
- **Rapid point** to quickly measure a point with no minimum occupation time.

In an RTK and Data logging survey, points measured using the [Rapid point method](#) are not saved to the T01/T02 file and are not available for postprocessing.

- **H_z. tilt offset** to measure a [horizontal tilt offset point](#) using the azimuth of the pole from IMU tilt compensation and a keyed-in offset distance.

NOTE – The H_z. tilt offset method is available only when using a receiver with IMU tilt compensation enabled and a properly aligned IMU.

- **MultiTilt point** to measure a point using three contributing tilted eBubble measurements.

NOTE – MultiTilt is available only when using a receiver with an eBubble. It is not available in data logging surveys or when IMU tilt compensation is active.

- **Fast static** to measure points without tracking satellites between points. This option is available only when in a FastStatic survey.

TIP – If you are using a receiver with IMU tilt compensation and the IMU is aligned, then IMU tilt compensation is "active" and you can use IMU tilt compensation for any measurement method except observed control point. When measuring an observed control point, the receiver automatically switches to GNSS-only mode. If IMU tilt compensation is enabled but the IMU is not aligned, you can level the pole using the GNSS eBubble and measure a topo point without IMU tilt compensation, or measure an observed control point.

From the **Measure** menu, you can also:

 
- Use **Measure codes** to measure and code observations in one step.
- Use **Measure to surface** to calculate and store the closest distance from the measured point to the selected surface.
- Use **Continuous topo** to measure a line of points at a fixed interval.

See also:

- [To measure points using a laser rangefinder, page 468](#)
- [To store depths using an echo sounder, page 471](#)
- [To measure points using the utility locator, page 474](#)
- [To measure a check point, page 533](#)
- [Construction points, page 262](#)


To measure a topo point

The **Topo point** method is the most frequently used measurement method. You can measure a topo point in any type of GNSS survey except a FastStatic survey.


1. Tap  and select **Measure / Measure points**, or in the map, with nothing selected, tap **Measure**.
2. In the **Method** field, select **Topo point**.
3. Enter the **Point name** and **Code**. See [To select feature codes in Measure points or Measure topo, page 549](#).

If the selected code has attributes, the **Attrib** softkey appears. Tap **Attrib** and fill out the attribute fields. See [To enter attribute values when measuring a point, page 546](#). Tap **Store**.

4. Enter a value in the **Antenna height** field and make sure that the setting in the **Measured to** field is set appropriately.
5. Position the receiver and tap **Measure**.

If you are using [IMU tilt compensation](#) and the IMU is aligned, you can tilt the pole as required. The status bar shows . Keep the **pole tip** stationary during measurement.

If you are not using IMU tilt compensation or the IMU is not aligned, level the pole.

If you are using a receiver that supports the [GNSS eBubble](#), use the eBubble to level the pole. The status bar shows . Keep the pole vertical and stationary during measurement.

TIP – To measure points more quickly, enable **Auto-measure** to automatically initiate a measurement. See [Auto-measure, page 381](#).

6. When the preset occupation time and precisions have been reached, the point is automatically stored when **Auto store point** is enabled. If **Auto store point** is not enabled, tap **Store**. See [Auto-store point, page 380](#).

TIP –

 
- To search for the next available point name, tap **Find**. Enter the point name you want to start searching from (for example, 2000) and tap **Enter**. The software searches for the next available point name after 2000 and inserts it in the **Point name** field.
- To add a vertical offset to the measured point, tap **Options**. Select the **Add vertical offset** check box and then in the **Measure points** screen enter a value in the **Vertical offset** field.
- To configure quality, precision, and other settings, tap **Options**. See [GNSS point options, page 379](#).
- To accept the measurement before the occupation time or precision requirements have been satisfied, tap the blank softkey in the bottom right corner.

To measure continuous topo points

Use the **Continuous topo** measurement method to measure points continuously, for example a line of points at a fixed interval. Measuring points along a feature requires following the feature closely with the pole tip as you move along the feature.

TIP – You can also use the **Continuous topo** measurement method to store depths measured using an echo sounder. For more information, see [Echo sounders](#).

To start **Continuous topo** measurements:

1. Tap  and select **Measure / Continuous topo**.
2. Enter the **Start point name**. The point name increments automatically.
3. If required, enter a value in the **Antenna height** field.
4. To add a vertical offset to the measured points, tap **Options**. Select **Add vertical offset** and then in the **Continuous topo** screen enter a value in the **Vertical offset** field.
5. Select the method using the steps below.

To measure continuous topo points without stopping


1. Select the **Method**.


A point is stored when one of these predefined events occurs:

- the time interval has elapsed (**Fixed time** method)
- the distance has been exceeded (**Fixed distance** method)
- the time interval has elapsed and/or the distance has been exceeded (**Time and distance** or **Time or distance** method)

NOTE – For a postprocessed survey, you must use the **Fixed time** continuous method. By default the time interval is set to the same value as the logging interval configured in the **Rover options** screen of the postprocessed survey style.

2. Enter a value in the **Distance** field and/or the **Time interval** field, depending on which method you are using.
3. Tap **Start**. Data starts recording.
4. Move along the feature to be surveyed, following the feature closely with the pole tip as you move along the feature.

If you are using IMU tilt compensation and the IMU is aligned, the status bar shows . You can tilt the pole as required as you move along the feature.

If you are using GNSS only, the status bar shows . You must keep the pole vertical as you move along the feature. If **Tilt warnings** are enabled, a point is not stored until the receiver is within the defined tilt tolerance.


5. Points are stored automatically when the preset occupation time and precisions have been reached. To store a position before the predefined conditions have been met, tap **Store**.
6. To stop measuring continuous points, tap **End**.


To measure continuous topo points using the stop and go method

1. In the **Method** field, select **Stop and go**.
2. In the **Stop time** field, enter the period of time the target must be stationary before the instrument starts to measure the point.

The target is deemed to be stationary when its velocity is less than 5 cm per second.

3. Enter a value in the **Distance** field for the minimum distance between points.
4. Tap **Start**. Data starts recording.
5. Move along the feature to be surveyed, following the feature closely with the pole tip as you move along the feature.

If you are using IMU tilt compensation and the IMU is aligned, the status bar shows . You can tilt the pole as required as you move along the feature.


If you are using GNSS only, the status bar shows . You must keep the pole vertical as you move along the feature. If **Tilt warnings** are enabled, a point is not stored until the receiver is within the defined tilt tolerance.

6. Points are stored automatically when the stop time and distance settings have been met. To store a position before the predefined conditions have been met, tap **Store**.
7. To stop measuring continuous points, tap **End**.

To measure an observed control point


Use the **Observed control point** method to measure a point with an extended occupation time and quality control information.

NOTE – For an RTK survey, initialize the survey before starting to measure the point. For a Postprocessed Kinematic survey, you can start measuring a point before initialization, but you should not store it until you have initialized the survey.

1. Tap  and select **Measure / Measure points**, or in the map, with nothing selected, tap **Measure**.
2. Select **Observed control point** in the **Method** field.

If you are using a receiver with IMU tilt compensation, the software automatically switches to GNSS-only mode when you select the observed control point method, so the point can be measured in static mode.
3. Enter the **Point name** and **Code**.. See To select feature codes in Measure points or Measure topo, page 549.

If the selected code has attributes, the **Attrib** softkey appears. Tap **Attrib** and fill out the attribute fields. See To enter attribute values when measuring a point, page 546. Tap **Store**.
4. Enter a value in the **Antenna height** field and make sure that the setting in the **Measured to** field is set appropriately.
5. To configure quality, precision, and tilt settings, tap **Options**. See GNSS point options, page 379.
6. If you are using a receiver that supports the GNSS eBubble, use the eBubble to level the receiver and make sure the pole is vertical and stationary. To show or hide the eBubble from any screen, press **Ctrl + L**.
7. Tap **Measure**.


The static measuring mode icon  in the status bar indicates the pole should be vertical while you measure the point.
8. When the preset occupation time and precisions have been reached, tap **Store**.

If you have been measuring the point for longer than 15 epochs and the precisions go out of tolerance, a message warns that the occupation timer will reset and allows you to store the last position with good precisions. Tap **Yes** to store the last good position. Tap **No** to reset the timer and continue measuring the point.

To accept the measurement before the occupation time or precision requirements have been satisfied, or if there has been movement, tilt, or precision warnings during the occupation, tap



 
NOTE - If you are using a receiver with IMU tilt compensation, if you select a different measurement method and the IMU is still aligned, then the software returns to using IMU tilt compensation. The


eBubble automatically disappears, and the tilted measuring mode icon  in the status bar indicates points can be measured without leveling the pole.

To measure rapid points


Use the **Rapid point** method to quickly measure points with no minimum occupation time.

TIP – Because the software collects just one epoch of roving mode data when the preset precisions are reached, Spectra Geospatial recommends setting the default precision values higher for the **Rapid point** method than for other point measurement types. To configure quality, precision, and other settings, tap **Options**. See [GNSS point options, page 379](#).

1. Tap  and select **Measure / Measure points**, or in the map, with nothing selected, tap **Measure**.
2. Select **Rapid point** in the **Method** field.
3. Enter the **Point name** and **Code**.
4. Enter a value in the **Antenna height** field and make sure that the setting in the **Measured to** field is set appropriately.
5. Position the receiver and tap **Measure**.

If you are using [IMU tilt compensation](#) and the IMU is aligned, you can tilt the pole as required. The status bar shows . Keep the **pole tip** is stationary during measurement.

If you are not using IMU tilt compensation or the IMU is not aligned, level the pole.

If you are using a receiver that supports the [GNSS eBubble](#), use the eBubble to level the pole. The status bar shows . Keep the pole vertical and stationary during measurement.

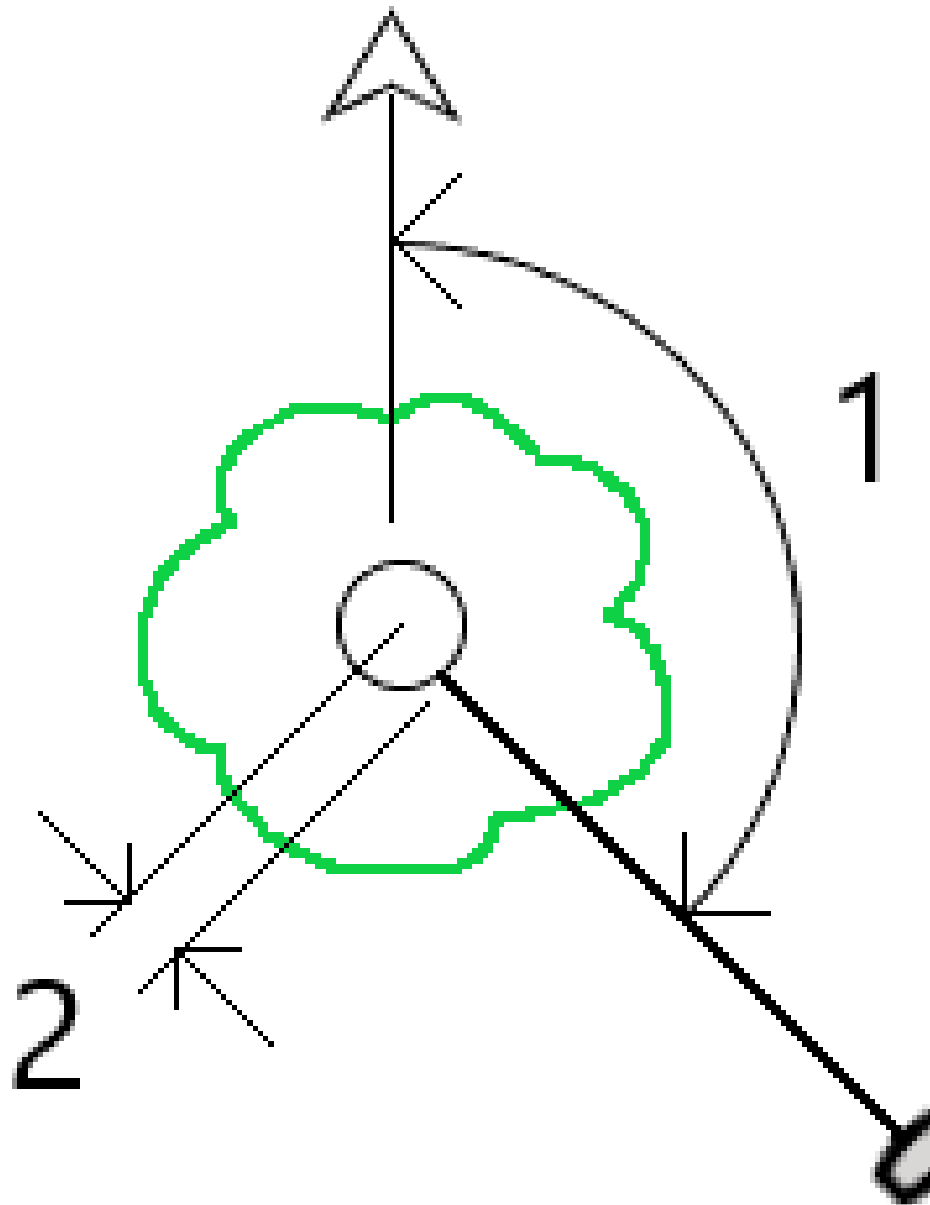
TIP – To measure points more quickly, enable **Auto-measure** to automatically initiate a measurement. See [Auto-measure, page 381](#).


The point is automatically stored when the preset precisions are reached.

To measure a horizontal tilt offset point

When using a GNSS receiver that has IMU tilt compensation enabled and a properly aligned IMU, you can use the **Horizontal tilt offset** method to measure locations that cannot be occupied by the tip of the pole, for example when measuring the center of a tree or post.

The **Horizontal tilt offset** method uses IMU tilt compensation to calculate the azimuth of the tilted pole between the Antenna Phase Center (APC) of the GNSS receiver and the pole tip, and then projects the reciprocal of the azimuth (**1**) forward from the tip at the specified offset distance (**2**) to compute the offset point:



1. Tap  and select **Measure / Measure points**, or in the map, with nothing selected, tap **Measure**.
2. In the **Method** field, select **Hz. tilt offset**.
3. Enter the **Point name** and **Code**. The point name defaults to the topo point naming sequence.

If the selected code has attributes, the **Attrib** softkey appears. Tap **Attrib** and fill out the attribute fields. See [To enter attribute values when measuring a point, page 546](#). Tap **Store**.


4. Enter a value in the **Antenna height** field and make sure that the setting in the **Measured to** field is set appropriately.
5. Enter a value in the **Offset** field.

This is the distance from the tip of the pole to the offset point to measure. The offset is represented on the Map by an arrow from the tip position icon.

Usually the pole is tilted toward you – in this case you will enter a positive value. If you need to tilt the pole away from you, then enter a negative value.

6. [Align the IMU](#) so that IMU tilt compensation is active, and then position the tip of the pole at the source location for the offset and tap **Measure**.

7. Tilt the pole more than 15° and sight down the pole at the required azimuth to the offset point.

The offset arrow on the Map is red when the tilt is under 15°. The offset arrow changes to yellow when the tilt is greater than 15° and the azimuth becomes usable. When measuring the status bar shows . You must keep the pole tip stationary during measurement, but you can move the GNSS receiver to sight down the pole so that the center of the receiver, the center of the pole, the pole tip, and the offset point being measured (for example, the center of the tree) are in a straight line (on the same azimuth). The azimuth at the time of point storage is the azimuth used for the offset.

8. When the preset occupation time and precisions have been reached, tap **Store**.

If **Auto store point** is enabled the point is automatically stored after the preset conditions are met.

TIP –

- **Auto store point** uses the precision, time, and number of measurements options you have set for topo points. You must ensure that you have sighted in the correct azimuth before the automatic point storage criteria are met. If you are using **Auto store point**, Trimble recommends that you sight the azimuth correctly *before* tapping **Measure**.
- **Auto measure** starts when the pole tip becomes stationary. You can move the antenna to sight the azimuth to the offset while keeping the tip stationary. Trimble recommends not using **Auto-store** and **Auto-measure** together as there may not be enough time to sight the offset azimuth. If you use full automatic mode you may need to lengthen the measurement time to suit.
- Vertical offsets are not available with the **H_z tilt offset** function. The horizontal tilt offset is horizontal only; the computed offset result is at the same elevation as the source tip point measurement.
- Sighting in the azimuth is the biggest source of error when using this feature. To obtain the correct azimuth, you need to line up the center of the pole with the offset point. For example, at a tilt angle of 25° and an offset vector length of 1.000 m, the difference in azimuth between using one side of the pole to sight the azimuth and the other side of the pole is approximately three degrees, which means the two offset results are about 5 cm apart. If a more accurate offset method is required, use one of the offset methods to compute the point, such as **From a baseline**.

NOTE –

- The occupation counter will not count if the pole is within 15° of level. This is because a significant amount of tilt is required for a good azimuth between the APC of the GNSS receiver and the tip of the pole to be determined and sighted by the operator.
- To ensure the point names of the H_z tilt offset pole tip points are unique, the point names are automatically generated from the GPS time, prefixed with **HTO_** denoting horizontal tilt offset.
- Horizontal tilt offset points are stored as a bearing and distance (polar) in the job file. To see the azimuth and distance entered, change the **Coordinate view** field in the **Options** screen to **As stored**.
- The source (pole tip) points stored with horizontal tilt offset points are classes as construction points and by default these do not appear on the Map. To view these on the map, change the map filter settings. See Filtering data by measurement type, page 142.

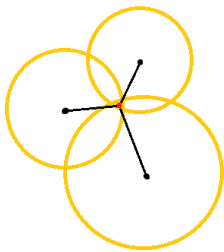
To measure a MultiTilt point

Use the **MultiTilt point** measurement method to measure a point using three contributing tilted eBubble measurements.

NOTE – MultiTilt is available only when using a receiver with an eBubble and when **Tilt functions** are enabled in the survey style. To be able to measure MultiTilt points the GNSS receiver **must** have a properly calibrated eBubble. The **MultiTilt point** measurement method is **not** available in data logging surveys or when IMU tilt compensation is active.

How the MultiTilt point measurement method works

When you measure a **MultiTilt point**, you position the tip of the pole at the desired measurement location, and **keep the pole tip fixed at the same location** during the entire measurement process. Tilt the pole first in one direction and measure, tilt the pole in the second direction and measure, and then tilt the pole in the third direction and measure.



The diagram above shows the three tilt circles that are created when you tilt the antenna to three different positions, where each antenna position is indicated by a black dot at the center of each tilt circle. The tilt circles have a radius equal to the current tilt distance, and each tilt circle represents the circle of possible locations of the pole tip at that distance from the antenna position. To calculate the location of the pole tip, the software calculates the point at which the three tilt circles intersect.

To measure a MultiTilt point

The steps below guide you through measuring three tilted observations, where the software automatically measures when the pole is held still, and computes the resulting point using the intersections of the three tilt circles observed with the tilted pole:

1. Tap **☰** and select **Measure / Measure points**, or in the map, with nothing selected, tap **Measure**.
2. Select **MultiTilt point** from the **Method** field.
3. Enter the **Point name** and **Code**.
4. If the selected code has attributes, the **Attrib** softkey appears. Tap **Attrib** and fill out the attribute fields. See [To enter attribute values when measuring a point, page 546](#). Tap **Store**.
5. Enter a value in the **Antenna height** field and make sure that the setting in the **Measured to** field is set appropriately.

NOTE – Antenna height is critical in the MultiTilt computations. Make sure the entered antenna height and measurement method is set correctly before beginning a MultiTilt point measurement.

6. To configure the quality control and precision settings, tap **Options**.

NOTE – The precisions shown in the status line reflect the amount of tilt of the antenna. If measuring points with large amounts of tilt, you may need to increase the precision tolerance setting.

7. Position the tip of the pole at the desired measurement location. Do not move the tip through the entire measurement process.
8. Keeping the pole tip at the desired measurement location, tilt the pole to the desired angle.

The eBubble shows the amount of tilt of the antenna.

NOTE – The eBubble turns yellow if the tilt exceeds 30 degrees. This indicates when the precision of the RTK solution produced may become unreliable due to the tilt being outside the acceptable tilt range for non-IMU tilt compensated positions. The measurements in this range may remain usable if the precision estimates are acceptable to you. The eBubble turns red if the tilt exceeds 45 degrees.

9. Tap **Measure**.

The **MultiTilt status** field indicates the process of taking three tilted rapid point measurements. It shows **Waiting to measure** when the antenna is moving, **Move antenna** when a measurement has been taken and the software is waiting for the antenna to move an acceptable amount for another measurement to be taken, and **Measuring – hold still** when the antenna is being held completely still while tilted.

10. To ensure good intersection geometry of the three contributing measurements, move the antenna as much as practicable between the three stationary measurements, so that the three antenna positions form a triangular shape rather than a straight line.

The counter indicates the remaining number of stationary measurements. The map shows yellow circles representing the three tilt measurements, and a cross representing the result once the third measurement is taken.

11. When the result has been computed and the precisions are acceptable, tap **Store**.

If the precision of the resulting intersection is not acceptable, tap **Esc** to discard the three measurements and then remeasure the MultiTilt point.


TIP – If the antenna height is correct and the eBubble is properly calibrated, the resulting intersection of the three circles should be centimeter-level. If the circles do not overlap at a discrete point or the precisions are too high:

- Check your eBubble calibration is of high quality, and make sure that the entered antenna height and measurement method are correct. You cannot correct for these errors after storing a MultiTilt point.
- Remeasure the point, changing your points of measurement by tilting further away or even a bit closer.


To measure to a surface

Use the **Measure to surface** measurement method to calculate and store the closest distance from the measured point to the selected surface model. The surface model can be a [BIM model](#) or a [digital terrain model \(DTM\)](#).

NOTE – If more than one surface is selected, the nearest surface is used.

1. If the surface is in:
 - a DTM, tap  and select **Measure / Measure to surface**. If there is more than one surface available, select the surface in the **Select surface** field.
 - a BIM model, select the surface in the map and then from the tap and hold menu select **Measure to selected surface**.

NOTE – To select the surface the BIM model must be displayed as a solid object and the layer containing the surface must be selectable.

TIP – You can choose whether selecting surfaces in the map selects **Individual faces** or selects the **Whole object**. To change the **Surface selection** mode, tap  and select your preferred **Surface selection** mode. See [BIM model selection mode, page 171](#).

2. Enter the **Distance to surface limit**.
3. If required, enter a value in the **Antenna height/Target height** field.
4. Tap **Start**.

If the surface is not already visible in the map, it becomes visible.

The software calculates and reports the closest distance from the current position to the selected surface model and displays it in the **Distance to the surface** field. The **Distance to the surface** is only shown if it is within the **Distance to surface limit**.

The position on the surface is highlighted in the map and a line is drawn from the measured position to the position on the surface. Negative distances are reported for positions between you and the model and positive distances are reported for positions on the other side of the model.

TIP – If the software warns **Terrain models disagree**, there are overlapping surfaces with different elevations in the map. Hide any surfaces you are not using in the **Map files** tab of the **Layer manager**. See [Managing map file layers](#).

5. Enter the **Point name** and, if required, the **Code**.
6. Tap **Measure**.
7. Tap **Store**.

The **Distance to surface** value and the coordinates of the closest point on the surface are stored with the measured point and can be viewed in **Review job** and **Point manager**.

 
To measure a check point

In a real-time GNSS survey, measure a point twice. Give the second point the same name as the first point. If the duplicate point tolerances are set to zero, the software warns that the point is a duplicate when you try to store it. Select **Store as check** to store the second point as a check class point. See [Managing points with duplicate names, page 673](#).

To measure FastStatic points

This type of point is measured in a FastStatic survey.

NOTE – FastStatic surveys are postprocessed and do not need to be initialized.

1. Tap  and select **Measure / Measure points**, or in the map, with nothing selected, tap **Measure**.
2. Enter the **Point name** and **Code**.
3. Enter a value in the **Antenna height** field and make sure that the setting in the **Measured to** field is set appropriately.
4. Tap **Measure** to start measuring the point.
5. When the preset occupation time is reached, tap **Store**.

Receiver type	4 SVs	5 SVs	6+ SVs
Single-frequency	30 min	25 min	20 min
Dual-frequency	20 min	15 min	8 min

No satellite tracking is necessary between measuring points. The occupation time counter for measuring a FastStatic point pauses when the PDOP of the satellites being tracked exceeds the PDOP mask set in the survey style being used. The counter resumes when the PDOP falls below the mask.

NOTE – The number of satellites required for measuring a FastStatic point depends on whether you are using GPS satellites only, BeiDou satellites only or a combination of GPS, BeiDou, GLONASS, Galileo and QZSS satellites. The following table summarizes the **minimum** requirements:

Satellite systems	Required satellites
GPS only	4 GPS
GPS + QZSS	3 GPS + 1 QZSS
GPS + GLONASS	3 GPS + 2 GLONASS
GPS + BeiDou	3 GPS + 2 BeiDou
GPS + Galileo	3 GPS + 2 Galileo
BeiDou only	4 BeiDou
BeiDou + GPS	3 BeiDou + 2 GPS
BeiDou + GLONASS	3 BeiDou + 2 GLONASS
GLONASS only	N/A
Galileo only	N/A

Measurement messages and warnings

Depending on the equipment you are using and the settings you have configured in the survey style, different types of warnings may appear during when measuring points in a GNSS survey.

GNSS messages

To discard GNSS messages and prevent them reappearing, tap **Ignore** in the message. For non-RTX messages, the message is discarded and does not appear again. For Trimble RTX correction service messages, only messages regarding the same subscription status are ignored; if the subscription status changes then the Ignore setting is reset and messages appear. Tapping **Ignore** is controller-specific; if you use the same GNSS receiver with a different controller then the Ignore setting for that controller is used and the messages may reappear.

Occupation warnings

During a point measurement the software warns if there are adverse conditions that result in any of the tolerances being exceeded and prevent the point being stored.

To accept the measurement before the occupation time or precisions have been satisfied or while there are conditions preventing point storage, tap



When you tap **Store**, the **Confirm and store point?** screen lists all issues that occurred during the measurement, in order of priority.

Tap **Yes** to store the point. Tap **No** to discard the point. To remeasure the point, tap **Remeasure**.

The **Position compromised** warning appears when the receiver is in static mode measuring a point and a new GNSS position is different from the immediately previous GNSS position by more than the current

3-sigma precision estimates. This warning appears only when the difference in position is larger than the current precision tolerances, and if the GNSS receiver does not produce excess movement warnings of its own during the occupation. The position compromised warning can occur in severely marginal GNSS environments where there is a lot of multipath or signal attenuation. The QC1 occupation warnings information enables you to tell if this happened while observing a point stored in the database.

NOTE - No occupation warnings appear when you are measuring a Rapid point.

If you are using a GNSS receiver with a built-in tilt sensor, tilt warnings may also appear. See [GNSS eBubble tilt warnings, page 440](#).

Measuring points with feature codes

Assign codes to points to identify the point as a specific feature type. If the feature type for the code is a line or polygon, the line or polygon is drawn on the map as you measure points that use that feature code.

If the feature code has **attributes** then you can then fill out attribute information for the point. You can configure the Origin software to prompt you to enter the attribute data. See [To enter attribute values when measuring a point, page 546](#).

You can add codes to a point from the **Measure point**, **Measure topo** or **Measure codes** form.


Applying codes in Measure point and Measure topo

When using codes in the **Measure point** or **Measure topo** form, you must enter the code for every point you measure in the **Code** field. You can select the code from the list of codes in the Feature Library FXL file, or you can type in the code. If the job is not using an FXL file, you can type in a code to use. See [To select feature codes in Measure points or Measure topo, page 549](#).

Applying codes in Measure codes

 
The **Measure codes** form provides a faster, more intuitive way to work with codes you have set up in the Feature Library FXL file used by the job. The **Measure codes** form provides a grid of large buttons, with each button set to a specific code. To measure a point with that code, simply tap the large button for that code. To measure the next point using the same code, tap **Enter** or press the **Enter** key.


To measure and code points using **Measure codes**:

1. In the **Job properties** screen, select the Feature Library file to use with the job. See [Feature library, page 102](#).
If you are using a feature library file that has groups defined, the groups and the codes within the group are automatically shown in the **Measure codes** form.
2. If you need to assign codes to buttons or to change the code on a button, tap and hold the button on the **Measure codes** form and select a different code. To edit multiple buttons, or to create or manage groups of code buttons tap  in the **Measure codes** form. See [To set up code buttons for Measure codes, page 540](#)
3. Measure points using codes. See [To measure points in Measure codes, page 538](#).
4. Use stringing to more easily manage measurement of multiple lines that use the same feature code. See [To measure multiple lines in Measure codes, page 538](#).
5. Use control codes on the CAD toolbar to draw specific shapes such as arcs or polygons. See [Controlling feature geometry using control codes, page 552](#).

To measure points in Measure codes

Use the steps below to enable fast and efficient collection of multiple points using **Measure codes**:

1. Tap  and select **Measure / Measure codes**.
2. If you have not already started the survey, start the survey. If you are using a conventional survey, put the instrument in tracking mode.
3. To measure the first point:
 - a. Select the code group from the list or press A-Z to quickly switch to group pages 1–26.

NOTE – You cannot use alphanumeric key shortcuts if the Multi-code button  at the bottom of the form is enabled.

- b. To start measuring the point, tap the appropriate code button.


 
You can also select code buttons using the keypad. If the button layout has three columns you can press the numeric key that corresponds to the code button, or use the arrow keys to navigate to the button and then press the **Space** key.

TIP – If **Single tap to measure** is not enabled, you must double-tap the code button to start measuring.

- c. In the **Measure topo** or **Measure point** screen, measure and store the point.
To change the auto store settings, in the **Measure topo** screen tap **Options** and then clear the **View before storage** check box or in the **Measure point** screen tap **Options** and then select the **Auto store point** check box.
Once the measurement is stored, the **Measure codes** form appears, ready for the next measurement.
 - d. To configure the software to start measuring the point as soon as you tap the code button in the **Measure codes** form, tap **Options** and select the **Auto measure** check box.
4. To measure subsequent points using the same code, tap the same code button again or press the **Enter** key.

If the feature type for the code is a line or polygon, the line or polygon is drawn on the map as you measure subsequent points using the same feature code.

5. To measure points using a different code, tap the required code button in the **Measure codes** screen.

 
TIP – To change the point name or the measurement method during the survey, tap  and select the **Measure** form in the **Return to** list, make your changes, and then tap  and select **Measure codes**.

To measure multiple lines in Measure codes

When you are measuring multiple lines that have the same code, you can use stringing to add a numeric suffix to each line so that you can keep track of which line you are measuring. Stringing enables you to:

- Start measuring points for one line feature, and then pause it and start measuring points for another line feature of the same type before resuming the first feature.
- Easily define the start and end points of line features without having to use control codes, which is useful when measuring several features of the same type one after the other.

To measure more than one line that uses the same feature code:

1. Tap  and select **Measure / Measure codes**.
2. If you have not already started the survey, start the survey. If you are using a conventional survey, put the instrument in tracking mode.
3. Select the code group from the list or press A-Z to quickly switch to group pages 1–26.

NOTE - You cannot use alphanumeric key shortcuts if the Multi-code button  at the bottom of the form is enabled.

4. To start measuring points on the first line feature:

- a. To measure the first point, tap the appropriate code button.

You can also select code buttons using the keypad. If the button layout has three columns you can press the numeric key that corresponds to the code button, or use the arrow keys to navigate to the button and then press the **Space** key.

TIP - If **Single tap to measure** is not enabled, you must double-tap the code button to start measuring.

- b. In the **Measure topo** or **Measure point** screen, measure and store the point.

Once the measurement is stored, the **Measure codes** form appears, ready for the next measurement.

- c. To measure subsequent points on the first line, tap the same code button again or press the **Enter** key.

The line or polygon is drawn on the map as you measure points.

5. To start measuring points on a different line feature of the same code type:

- a. Tap the **+ Str** softkey to increment the suffix on the highlighted code button.

- b. In the **Measure topo** or **Measure point** screen, measure and store the point.

Once the measurement is stored, the **Measure codes** form appears, ready for the next measurement.

- c. To measure subsequent points on the second line, tap the same code button again or press the **Enter** key.


The line or polygon is drawn on the map as you measure points.

6. To switch between the two line features in progress, tap the **- Str** or the **+ Str** softkey.

The selected feature is highlighted on the map, and the map shows a dotted line from the end of the feature to the current point, enabling you to visually check how the line will be extended when you add the current point and to ensure you have selected the correct feature.

TIP – When measuring multiple lines at once, tapping the + **Str** softkey will show the next string in the sequence. When starting a new line, to find the next available unused string for the currently highlighted button, tap **Find Str**.

To set up code buttons for Measure codes

To edit multiple buttons, create or manage groups of code buttons, or to configure template pickup, use the **Edit measure codes** screen. To view the **Edit measure codes** screen, tap  in the **Measure codes** form.

TIP – Feature libraries can have a default template of groups you can use to initially set up your measure codes forms. Changes to the default template made in the **Measure codes** or **Edit measure codes** screen apply only to the controller on which the change has been made, and do not affect the default groups in the feature code library.

To create a code group

1. Tap **New group**.
2. Enter the **Code group name**.
3. Tap **Accept**.

New groups are added after the current group. To add a group to the end of existing groups, ensure you select the last group before selecting **Add group**.

If you are not using a feature library that has groups defined, you must select the codes from the feature library that you want to appear on the form. You can define multiple pages of codes, each consisting of up to 25 codes.

To assign codes to buttons

- To edit an existing code group, select the group from the **Group** drop-down list.
- To add a code to an empty button, tap the button and select the code from the list of codes in the feature library and then tap **Enter**.

An icon on the button indicates whether the code is for a point, line, or polygon feature.

- You can also select code buttons using the keypad. Navigate to the button using the arrow keys, and then press the **Space** key.
- To change the code assigned to a button:
 - If the button is already highlighted, tap it once.
 - If it is not already highlighted tap it once to highlight it and again to change it.
- To add another code to the same button, enter a space in the text field next to the first code, and then enter or select the second code. See [To select feature codes in Measure points or Measure topo, page 549](#).

- To change the number of code buttons that appear in the group, change the value in the **Code button layout** field. You may need to scroll down the **Edit Measure codes** screen to view this field.
- To reorder buttons in the group, if the button is not already highlighted, tap the button to select it and then tap the left arrow or right arrow softkey to move the button. The other buttons in the group shuffle automatically.
- To create a template so that when measuring groups of observations that are typically coded in a regular pattern the software automatically selects the appropriate code for the next observation, configure the settings in the **Template pickup** group. See [To create a template of a measurement code sequence, page 542](#).
- Tap **Accept**.

TIP – If required, you can also enter additional description fields that are not in the feature library. See [Additional settings, page 114](#).

To change the number of code buttons that appear in the group

To change the number of code buttons that appear in the group, change the value in the **Code button layout** field. You may need to scroll down the **Edit Measure codes** screen to view this field.

The list of codes for each group is independent. For example, if you create codes for buttons using a 3x3 layout and then change the layout to 3x4, then three additional empty buttons are added to the group. The software does not move three buttons from any other group into the current group.

NOTE – The codes defined for a group are remembered, even if they are not displayed. For example, if you create codes for buttons using a 3x4 layout and then change the layout to 3x3, only the first nine codes are displayed. If you change the layout back to 3x4, all twelve codes are displayed.

When using Measure codes, if the code button layout has 3 columns you can use the numeric keypad on the controller to select the required code button. When using a 3x3 layout, keys 7, 8, 9 activate the top row of buttons, keys 4, 5, 6 activate the middle row of buttons, keys 1, 2, 3 activate the bottom row of buttons. On a 4x3 layout, the 0, . and - keys are used for the additional buttons. If the layout has more than 4 rows, you must tap the code button for buttons in the 5th and subsequent rows.

To delete buttons or groups

Use the **Delete** softkeys to delete buttons or groups. (In portrait mode, swipe right to left along the row of softkeys to view more softkeys.)

 


- To delete a button, tap the button to select it and then tap **Delete**. The other buttons in the group shuffle automatically to replace the deleted button.
- To delete the currently selected group, tap **Delete group** and then tap **Yes**.
- To delete all codes in the group, tap **Delete all** and then tap **Yes**.

To reset all string numbers

Tap the **Reset all string numbers** button to reset all buttons in the **Measure codes** screen to the original code. This removes any string suffix from the buttons. For more information on string suffixes, see **String suffix** in [Measure code options, page 544](#).

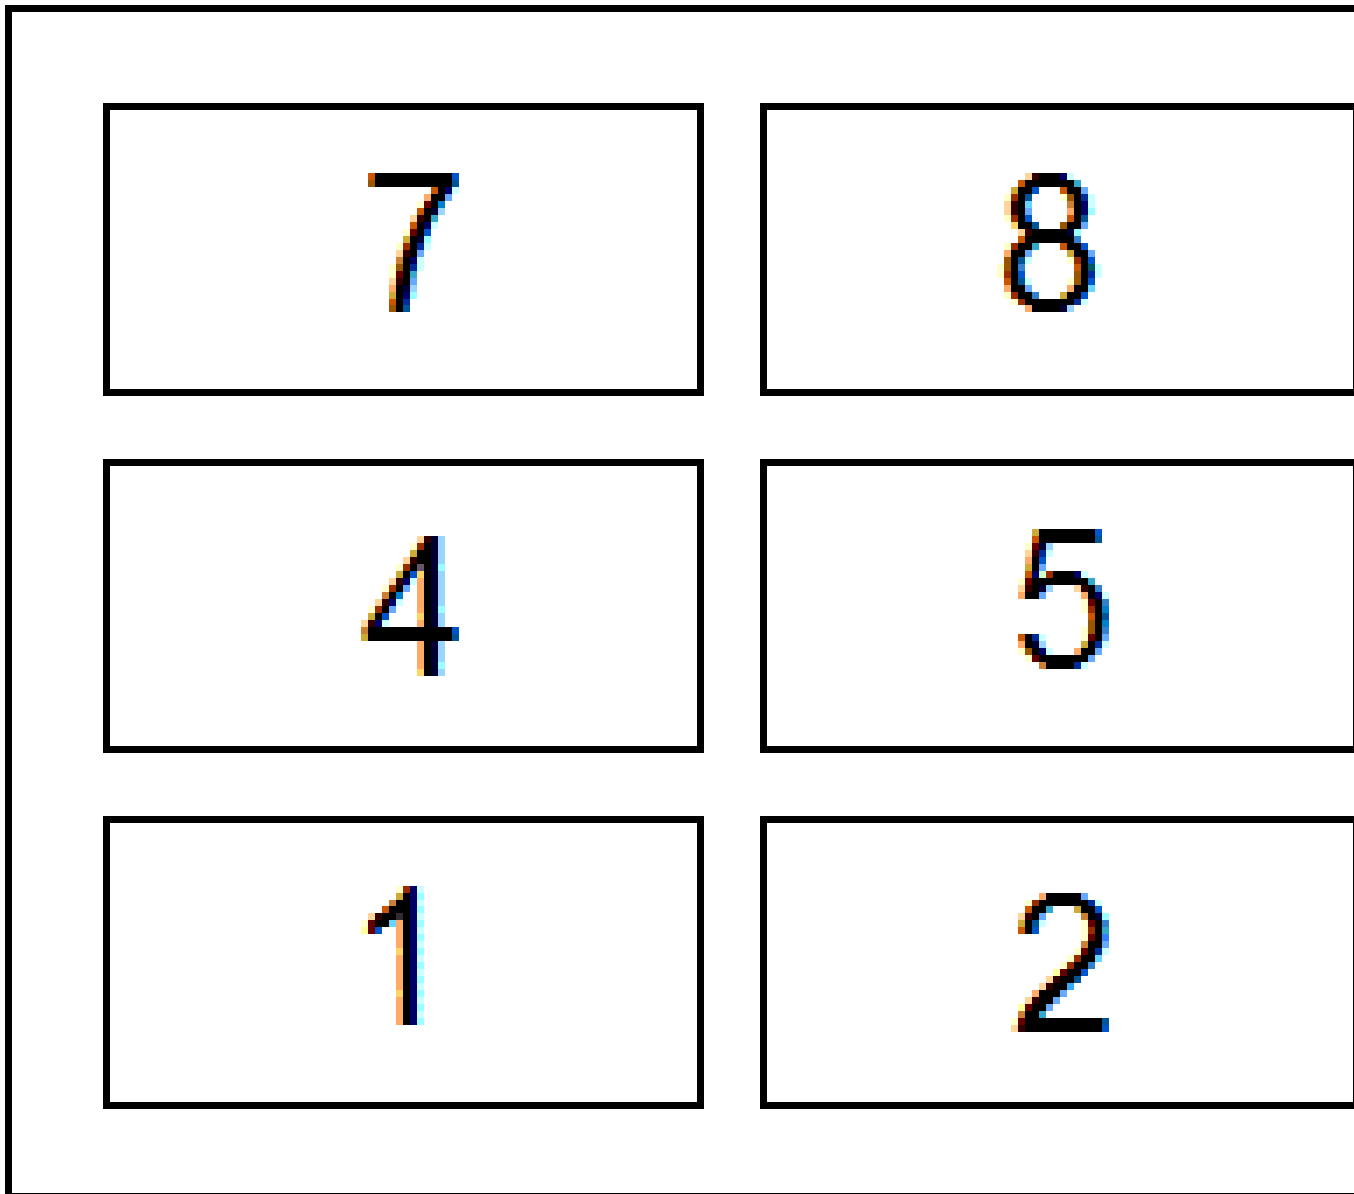
To create a template of a measurement code sequence

To automatically select the next code button in the code group after storing a measurement using **Measure codes**, configure the **Template pickup** settings in the **Edit Measure codes** screen. Template pickup is particularly useful when coding observations in a regular pattern, for example, a road cross section.

1. Tap  and select **Measure / Measure codes**.
2. In the **Measure codes** form, tap . The form changes to the **Edit Measure codes** screen.
3. In the **Template pickup** group, select the **Enable** check box to enable template pickup on the code buttons in the group. The template icon  appears on each code button used in the template.
4. In the **Number of elements** field, enter the number of elements in the template. The number of elements in the template can be fewer than the number of buttons in the group.

For example, in a 3x3 button layout you could choose to have 6 buttons in the template and use the additional 3 buttons in the group for extra items that you commonly measure but that are not part of the template. The first 6 buttons would be included in the template, but you can reorder the buttons as required. Tap a button to select it and then tap the left arrow or right arrow softkey to move the button.

5. Configure the template pickup **Direction**. Refer to the following diagram:



For the example above, where the template uses 6 buttons (buttons 4 through 9):

- **Left to right** – The highlight moves from 7-9, then 4-6, then 7-9 again and so on.
- **Right to left** – The highlight moves from 6-4, then 9-7, then 6-4 again and so on.
- **Zig zag** – The highlight moves from 7-9, 4-6 then 6-4, 9-7, then 7-9 again and so on.

NOTE – During measurement, you can skip a code in the template by tapping a different code button or by using the arrow keys to select a different button.


Measure code options

To configure options when measuring using **Measure codes**, tap **Options** when viewing the **Measure codes** form. (In portrait mode, swipe right to left along the row of softkeys to view the **Options** softkey.)

String suffix

Measure codes has **+ Str** and **- Str** softkeys that enable you to apply a suffix to the code on the button. This is useful when you use the stringing method for feature coding.

Select the format of the suffix from the **String suffix** field. You can select **1**, **01**, **001**, or **0001**.

To remove the string suffix from all buttons in the **Measure codes** screen, return to the **Measure codes** screen and tap  to view the **Edit measure codes** screen. Tap the **Reset all string numbers** button.

Auto measure

The **Auto measure** check box controls whether the software starts measuring as soon as you move from the **Measure codes** screen to the **Measure topo** or **Measure point** screen. Clear the **Auto measure** check box if you want to be able to change measurement settings, such as the measurement method or the antenna or target height before you start the measurement.

Prompt for attributes

Select the **Prompt for attributes** check box to make the attribute form appear when a point is stored for which there are required attributes but no value has yet been entered.

Select the **Only prompt once for line and polygon features** check box to ensure the attribute form appears only after measuring the **first** point in a new feature that contains more than one point.

NOTE - When **Prompt for attributes** settings are enabled:

- If you already entered attributes by tapping the **Attrib** softkey, the software does not show the attributes form.
- If attributes that are set as required are assigned a default value in the feature library, the software does not show the attributes form.

Use attributes of base code

Base codes are used when you use the stringing softkeys in the **Measure** screen to append a numerical suffix to a base code. Use the **Find str** softkey to append a suffix to the code field to identify the unique instance of that feature. Use the **+ Str** and **- Str** softkeys to move to the previous or the next instance of the feature and, if needed, add positions to that feature.

For example, when you code a fence where all points coded "Fence01" are joined together to create the linear feature "Fence01" and all points coded "Fence02" are joined together, and so on, and they all have the same attributes. In this example, you can create feature code libraries that contain all the "Fence**" codes, or contain just the base code "Fence".

If you do string codes, and the feature library includes **only the base code**, then select the **Use attributes of base code** check box.

If you do not string codes, or if you do string codes but you include the entire code in the feature library, then you are not using base codes and you should clear the **Use attributes of base code** check box.

The following rules help to explain the base code:

- When **Use attributes of base code** is **enabled**, the code **entered** on a button is the base code. Enter "Fence", string the code to become "Fence01", the attributes are derived from "Fence".
- When **Use attributes of base code** is **disabled**, the code **displayed** on a button is the base code. Enter "Fence", string the code to become "Fence01", the attributes are derived from "Fence01".
- If you edit or change the code on a button, the base code resets, using rule 1 or rule 2 above.
- If you change the configuration of the **Use attributes of base code** setting, the base code resets, using rule 1 or rule 2 above.


NOTE -

- You cannot string numeric only codes when **Use attributes of base code** is disabled.
- If the **Use attributes of base code** check box is selected, it is applied throughout the software.

Single tap to measure

By default the **Single tap to measure** check box is selected to speed up your workflow and open the **Measure topo** or **Measure point** screen with a single tap of the appropriate code button.

Clear the **Single tap to measure** check box if the controller does not have arrow keys and you need to edit the code before measuring, for example to add a string suffix or to add additional codes to the observation.

NOTE - When the **Single tap to measure** check box is not selected, you must double-tap each code button to add the code to the **Code** field when the Multi-code button  is enabled.

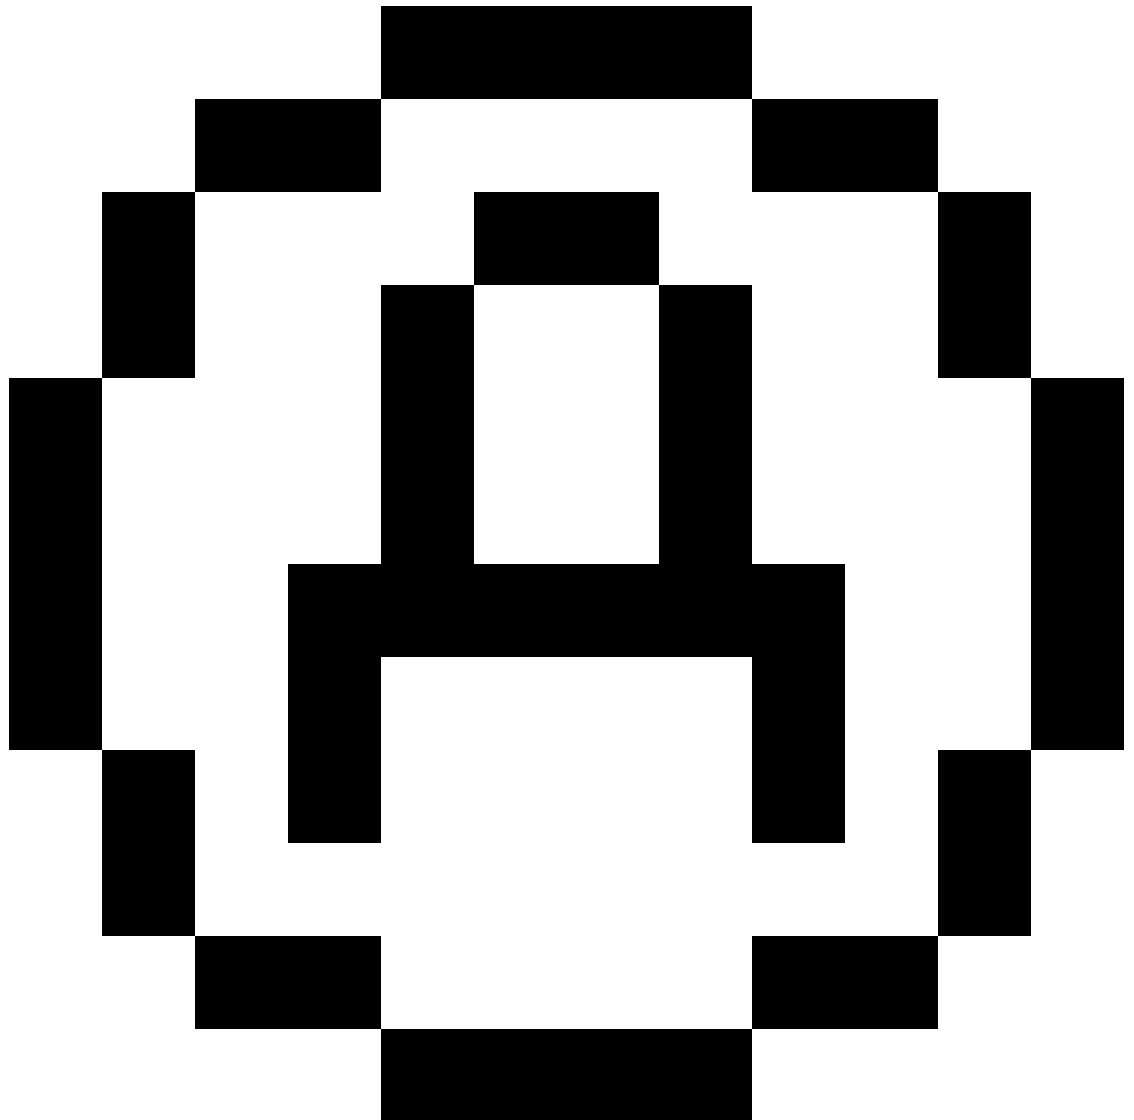
Descriptions

Select the **Descriptions** check box to show the description for the code as well as the code on the buttons in the **Measure codes** form. Clear the **Descriptions** check box to shown only the code.

To enter attribute values when measuring a point

1. Enter the point name and select a code. If the code has attributes, the **Attrib** softkey appears in the **Measure** screen.

Feature codes that have attributes have an attribute icon (



) next to the feature code in the library.

2. To make the attribute form appear when a point is stored for which there are required attributes but no value has yet been entered, tap **Options** and select **Prompt for attributes**.

NOTE – When **Prompt for attributes** is enabled:

- If you already entered attributes by tapping the **Attrib** softkey, you are not prompted for attributes.
- If attributes that are set as required are assigned a default value in the feature library, you are not prompted for attributes.

3. To enter attributes, tap the **Attrib** softkey.
4. To select the default attribute values, tap **Options** and select:
 - **Last used** to use the attribute values for the last measured point
 - **From library** to use the default attribute values from the feature library
5. Enter the attributes of the point you are measuring.

TIP – To streamline the process for capturing images and linking them to attributes, see [To link an image to an attribute, page 547](#).

6. Tap **Store**.

NOTE – If you are [stringing line features](#) and the attributes screen does not show all of the attributes you expect, in the **Measure** screen tap **Options** and make sure **Use attributes of base code** check box is selected. See [Measure code options, page 544](#).

To link an image to an attribute

If a point has a file name attribute, you can use the file name attribute to link an image to the attribute.

NOTE – You should not rename a file after attaching it to an observation. Files renamed after attaching will not be downloaded with the job.

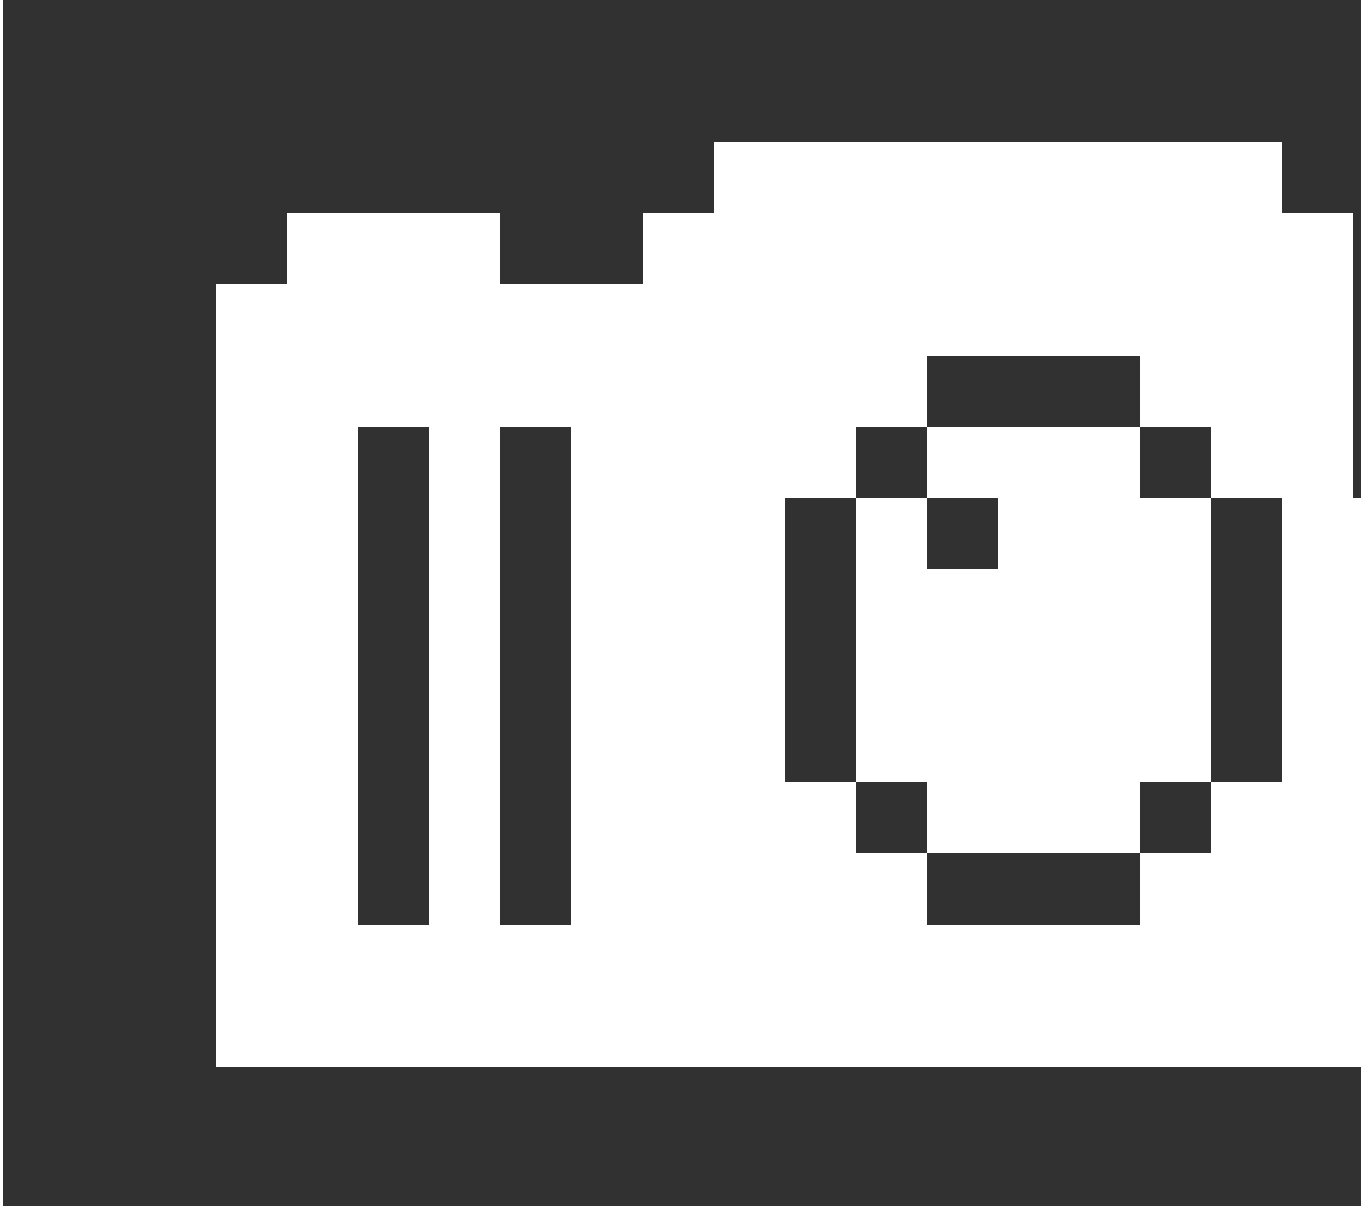
To capture and link an image to an attribute

1. In the measure or stakeout screen, enter the feature code. The feature code must have a file name attribute.

If the code has multiple file name attributes, or if the point has multiple codes, the image will be linked to the first file name attribute that appears when you view the attribute screen.
2. To link the image to a specific file name attribute, tap **Attrib** and select the required file name field.
3. Measure the point.


If the **View before storage** check box is enabled in the **Measure point options** screen, then the attribute form automatically appears when you store the point.
4. To view the attributes screen, tap **Attrib**.

5. To capture an image using the camera in the controller, tap



in the attribute form or press the appropriate key on the controller keypad.




The name of the image appears in the photo file name field.

6. To review the image; tap  next to the photo file name field and select **Review**.

NOTE - In a conventional survey, if you selected the **Attrib** softkey before measuring and storing the point **and** you have elected to annotate the image with the position coordinates, the coordinates are shown as null because the point has not yet been measured.

7. Tap **Store**.


To link a captured image to an attribute

1. In the measure or stakeout screen, enter the feature code. The feature code must have a file name attribute.
2. To view the attributes screen, tap **Attrib**.
3. In the photo file name field, tap  and select the file to link to the attribute.
The name of the image appears in the photo file name field.
4. To review the image, tap  and select **Review**.
5. To select a different image, tap  and tap **Select file**. Browse to the location of the file you want to link and select it.

TIP – To facilitate automatic upload of images to the cloud with the job, the image should be located in the current **<job name> Files** folder.

6. Tap **Store**.

To change the image file linked to a point or attribute

1. You can change the image file linked to an attribute in the **Review job** or **Point manager** screen:
 - In the **Review job** screen, select the point you want to edit and tap **Edit**.
 - In the **Point manager** screen, select the point you want to edit and tap **Details**.
2. If the image is linked to an attribute, tap **Attrib**. If the image is linked to the point, tap **Media files**. (In portrait mode, swipe right to left along the row of softkeys to view the **Media files** softkey.)
3. In the photo file name field, tap  and tap **Select file**. Browse to the location of the file you want to link and select it.

The name of the image appears in the photo file name field.

TIP – To facilitate automatic upload of images to the cloud with the job, the image should be located in the current **<job name> Files** folder.

4. Tap **Store**.

To select feature codes in Measure points or Measure topo

Select the feature code for a point from the **Code list**. To view the **Code list** form, do one of the following:

- Tap inside the **Code** field in the **Measure** form.
- Press the right arrow key when measuring a point.

The **Code list** form lists all the codes in the selected feature library. Refer to the sections below for information on selecting codes and filtering the **Code list**.

TIP – To quickly reuse a code from an existing point, tap inside the **Code** field of the **Measure** form or the **Code** field at the top of the **Code list**, and then tap the existing point on the map. The software populates the **Code** field with the code(s) of the selected point.

To select codes

1. Select the code from the list or type it in the field near the top of the list.

Searching by **Code** automatically selects the first item found in the **Code list**. Tap or press **Enter** to add the selected code to the **Code** field for the current point.

Searching by **Description** does not automatically select any item in the **Code list**. Tap an item or use the arrow key to select it and then tap or press **Enter** to add the code to the **Code** field for the current point.

2. To enter multiple codes, for example to add control codes to a point to build a feature geometry, select each code in turn from the list. The software automatically enters a space to separate each code.

If you enter codes through the controller keypad, you must enter a space after each code to display the entire code list again before you enter the next code.

NOTE – The maximum number of characters allowed in the **Code** field is 60.

3. Tap **Enter**.

TIP – To enter a code that is not in the library, but which has a similar entry in the library, press the space key to accept the code that you enter instead of the similar code from the library. Alternatively, disable auto-complete.

To filter the list of codes

- Tap **Code** to search by **Code** or tap **Description** to search by **Description**. Depending on your selection, the software shows items in the feature library that have codes or descriptions starting with the text you entered.

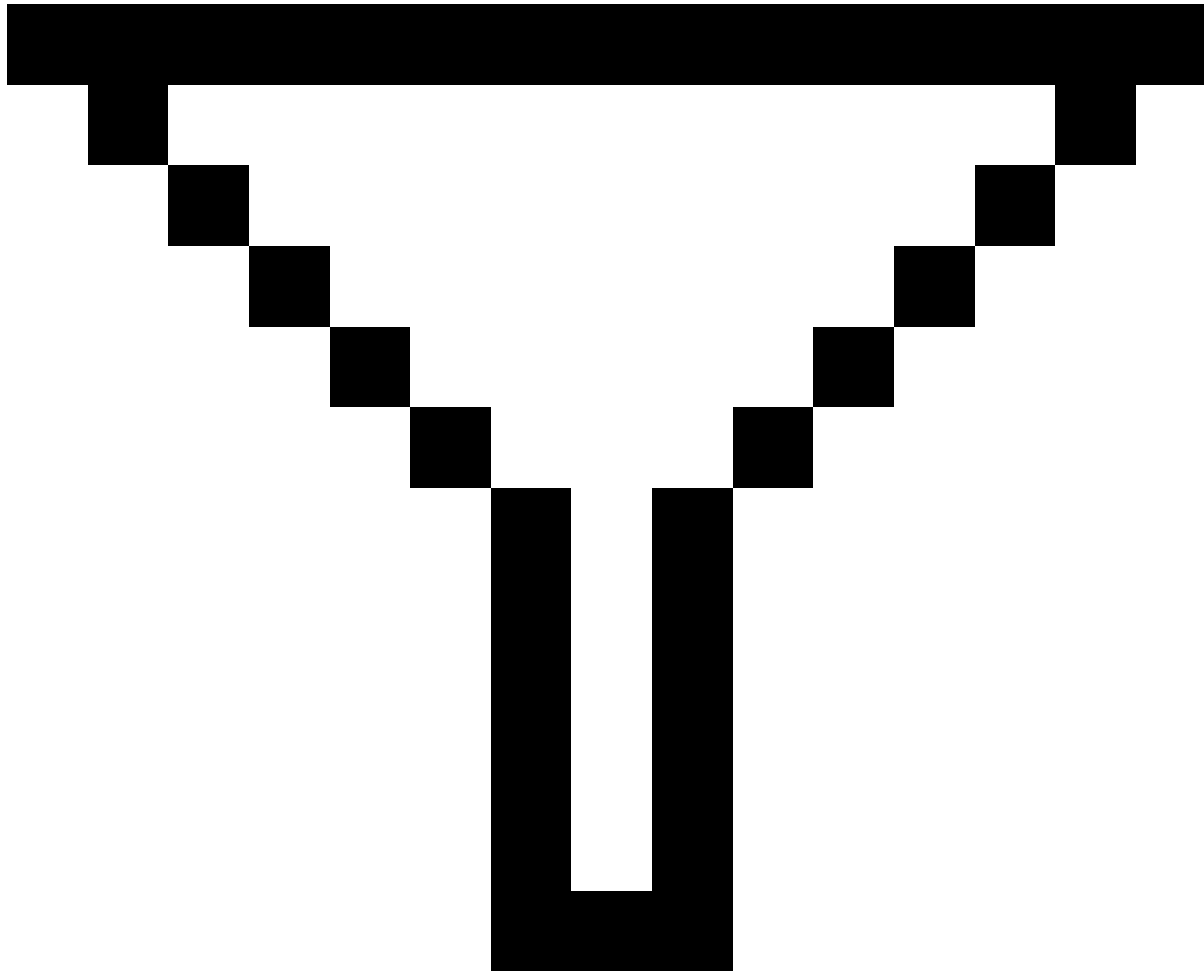
If you are searching by **Code**, text you enter in the code field will auto complete to match existing codes in the list. Text does not auto complete when you are searching by **Description**.

- To search based on a series of characters that appear *anywhere* within the code or description, tap **Match**. All items in the FXL that contain the exact string entered are listed.

The **Match** function can be enabled separately for codes and for descriptions.

NOTE – You must enter the exact string to find. You cannot enter an asterisk (*) as a wildcard character when using the **Match** function.

- To filter the entire feature code list by either code **Type**, for example point or control code, or by the **Category** as defined in the feature library, tap



. The **Set code list filters** screen appears. Tap a feature type or a feature category to show/hide it. Tap **Accept** to return to the code list.

TIP – When you select a code from the list, any filtering is disabled and the entire feature code list appears, which allows you to select another code.

To edit values in the Code field

When editing a **Code** field, tap inside the **Code** field. The **Code list** appears with the existing contents of the **Code** field highlighted. To replace the entire contents, select a new code. To remove the highlight before you select the new code, tap at the beginning or end of the code field, or press the left or right arrow key.

To edit the **Code** field, use the arrow keys to navigate to the correct position and then use the backspace key to remove unwanted characters. As the code is modified, the code list filters accordingly.

To disable auto-complete

By default, auto-complete is enabled. To disable auto-complete, tap the **Auto off** softkey.

When auto-complete is turned off, recently used codes appear at the top of the code list. Multiple entry codes are remembered as a single entry in the recently used list. This allows you to quickly select recently used codes, especially multiple code entries.

Controlling feature geometry using control codes

Use control codes when you want more control over the shape of the linear or polygon feature you are measuring.

Origin uses the same control codes as Survey Office to create line, arc, or polygon features from points. Points that have the same line or polygon feature code assigned to them are joined by lines. Origin does not fill polygons.

To create features as you measure, select the feature code for the point and then select the appropriate control code from the CAD toolbar.

TIP – The [CAD toolbar, page 274](#) works in two modes: **Measure mode** and **Drawing mode**. When you have started a survey and open the **Measure points**, **Measure topo**, or **Measure codes** form, the CAD toolbar automatically switches to **Measure mode**.

For a detailed step-by-step guide to creating features using control codes in the **Measure codes** form, see [To create features using control codes in Measure codes](#). This topic also highlights key differences when creating features using control codes in the **Measure points** or **Measure topo** form.


Once you are familiar with control codes, refer to one of the following topics for a handy guide when in the field:

- [Quick reference: CAD toolbar with Measure codes, page 563](#)
- [Quick reference: CAD toolbar with Measure points or Measure topo, page 566](#)

Feature code library requirements for control codes



To create features, the feature library must contain codes defined as lines for the features you want to create, and control codes for the required action to create the feature geometry, such as starting or ending a new join sequence. The example codes in the *Origin Help* are found in the **GlobalFeatures.fxl** example feature library file that you can install with the Origin software using Spectra Geospatial Installation Manager. See [Example feature library file for installation, page 103](#).

Start join sequence control codes start lines, and **End join sequence** control codes end lines. You can use one or the other, or both, depending on the situation or workflow you prefer as there is flexibility in how you use them. For example, you can start lines without a control code, but to start the next line of the same feature code type you can use either the **End join sequence** control code on the previous/last measurement, or use the **Start join sequence** control code on the first point of the new line.

For example, to survey the centerline of a road, the feature library must contain a road centerline (**RCL**) feature code defined as a **Line** feature type. To create the centerline feature, before measuring the first point in **Measure codes** select the **RCL** feature code and then tap the start join sequence button  on the CAD toolbar. All subsequent points with that are assigned the **RCL** feature code are added to the line.

TIP – Where there are more than 2 points in a sequence before the line is stopped or a control code is used to skip or join to another code, feature coded linework creates a continuous line segment or polyline. The linework is not saved to the job as a polyline, but created on-the-fly from coded points. The polyline can be selected and staked. Or, to select an individual section of the polyline, tap and hold on the individual section of interest and then from the tap and hold menu select **Select feature coded line segment**.


Assigning multiple codes

You can assign multiple feature codes and control codes to a single point. When assigning more than one feature code, the simplest way to select multiple feature codes is to use the **Multi-code** button  in the **Measure codes** form. First tap , and then select the feature code and the control code(s) to apply.

To create features using control codes in Measure codes

This topic describes how to create features using control codes in the **Measure codes** form. You can also create features using control codes in the **Measure points** or the **Measure topo** form.



When creating features as you measure observations:


- Always select the feature code first, followed by the control code.
- If required, you can select more than one control code for an observation. Simply select the required control codes on the toolbar.
- If the feature uses multiple line feature codes, or when stringing features, in the **Measure codes** form tap the **Multi-code** button  and select the line feature codes first **and then** select the control code (s) from the CAD toolbar. Buttons for the active control codes are not highlighted yellow when using the **Multi-code** button.

NOTE –

- When creating features as you measure points, the workflow is slightly different when using the **Measure points** or the **Measure topo** form rather than the **Measure codes** form. In the **Measure codes** form you will select first the control code action from the CAD toolbar and then select the feature code because selecting the feature code typically triggers the measurement. In the **Measure points** or **Measure topo** form, you will first select the line feature code in the **Code** field and then use the CAD toolbar to append the control code to the **Code** field.
- Because control codes are normally only used once at the start or end of an item, when using the **Measure points** or **Measure topo** form the control codes are automatically removed from the **Code** field once the point is measured. The feature code remains in the **Code** field, ready for the next point in the feature.

To measure a line using Measure codes

1. Tap **Start join sequence** . The **Start join sequence** code is added to the **Code** field.
2. Select the feature code for the feature in the **Measure codes** form. This feature code must be defined as a **line feature** in the feature code library. The line feature code is added to the **Code** field.
3. Measure and store the point.
4. Continue to measure points to form the line, assigning each point the same feature code as you used for the start point. As you measure and store each point, each line segment appears in the map.
5. When you reach the final point of the line, tap **End join sequence** . The **End join sequence** code is added to the **Code** field.


Tap **End join sequence**  to make sure the next point that has the same line feature code will not join to this line. However, if you always use **Start join sequence** when starting a line sequence, then ending a feature with **End join sequence** is optional.

6. Measure and store the point. This last stored point ends the line.


To measure a tangential arc using Measure codes

1. Tap **Start join sequence** . The **Start join sequence** code is added to the **Code** field.

NOTE – A tangential arc must be joined to at least one point so that the tangent information can be calculated.

2. Select the feature code for the feature in the **Measure codes** form. This feature code must be defined as a **line feature** in the feature code library. The line feature code is added to the **Code** field.
3. Measure at least one point, from which the arc will be drawn tangentially.
4. To start creating the arc, tap **Start tangential arc** . The **Start tangential arc** code is added to the **Code** field after the feature code.




The azimuth between this point and the previous point defines the entry tangent direction.

5. Measure and store the point.
6. Tap **End tangential arc** . The **End tangential arc** code is added to the **Code** field.
7. Measure and store the point. This last stored point ends the arc.
8. If required, continue measuring and storing points for the line feature.

NOTE - If an arc cannot be computed, the segment is drawn as a dashed red line to indicate that something is wrong. Situations where this will occur are:

- An arc is defined by two points and no tangency information is defined at the entry to the start arc point.
- A two point arc is defined as being tangential at both the start and end but these tangents do not work.

To measure a non-tangential arc using Measure codes

1. To include the arc as part of a line, tap **Start join sequence** . The **Start join sequence** code is added to the **Code** field.
2. Select the feature code for the feature in the **Measure codes** form. This feature code must be defined as a **line feature** in the feature code library. The line feature code is added to the **Code** field.
3. Tap **Start non-tangential arc** . The **Start non-tangential arc** code is added to the **Code** field.
4. Measure and store the point.
5. Continue to measure points to form the arc, assigning each point the same line feature code as you used for the start point. As you measure and store each point, each arc segment appears in the map.
6. When you reach the final point of the arc, tap **End non-tangential arc** . The **End non-tangential arc** code is added to the **Code** field.
7. Measure and store the point. This last stored point ends the arc.



TIP - To measure the transition point between two back-to-back arcs, tap both the **End arc** and the **Start arc** buttons before measuring the last point of the first arc.

NOTE - If an arc cannot be computed, such as when only two points of the non-tangential arc have been measured, the segment is drawn as a dashed red line to indicate that something is wrong.

To measure a smooth curve using Measure codes

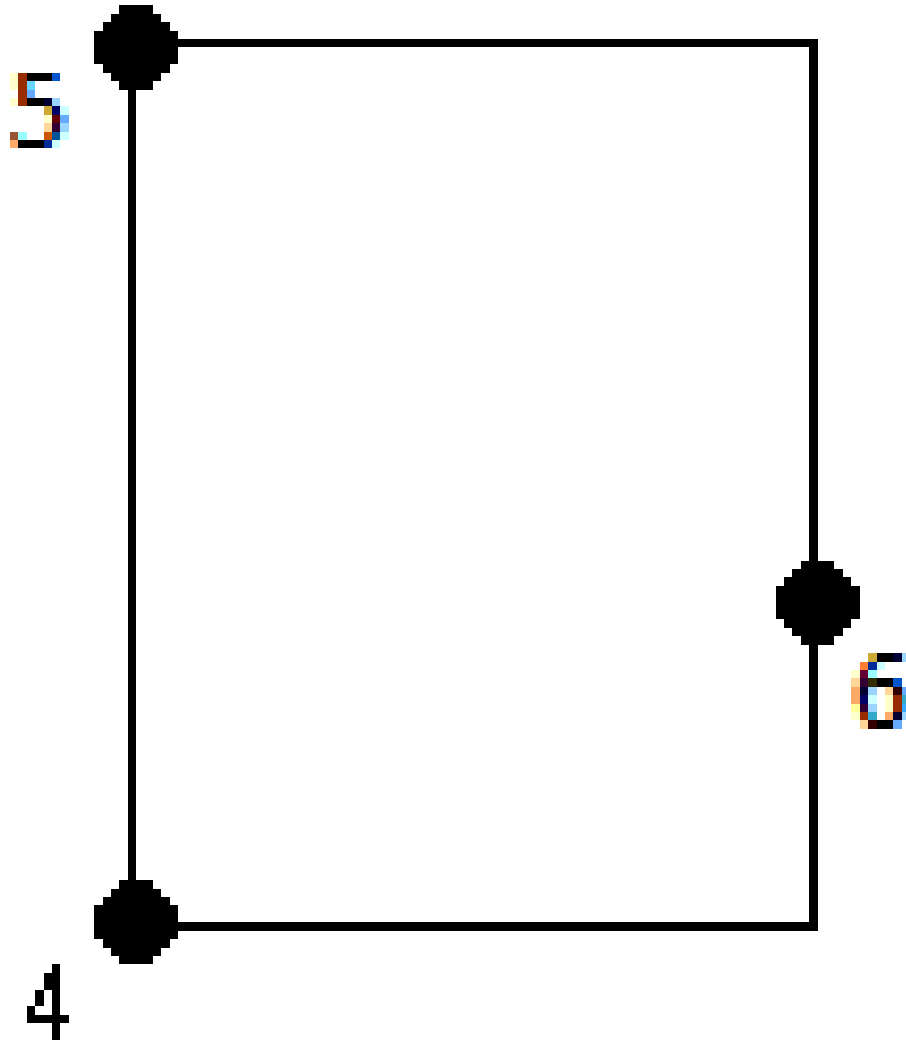
Use the **Start smooth curve** control code to create a smooth looking curve. Subsequent points are added to the smooth curve until you use the **End smooth curve** control code.

NOTE - If any point that makes up the curve has a null elevation then the entire curve is considered to be 2D, and will lie on the groundplane.

1. Tap **Start smooth curve** . The **Start smooth curve** code is added to the **Code** field.
2. Select the feature code for the feature in the **Measure codes** form. This feature code must be defined as a **line feature** in the feature code library. The line feature code is added to the **Code** field.
3. Measure and store the point.
4. Continue to measure points to form the curve, assigning each point the same line feature code as you used for the start point. As you measure and store each point, each curve segment appears in the map.
5. When you reach the final point of the arc, tap **End smooth curve** . The **End smooth curve** code is added to the **Code** field.
6. Measure and store the point. This last stored point ends the line.

To measure a rectangle using Measure codes

To measure a rectangle, you can:





- Measure two points, where the first point **(1)** defines one corner of the rectangle, the second point **(2)** defines the next corner of the rectangle, and **one** of the points includes a **width value (3)**. The first point uses the **Start rectangle** control code and the line feature code and the second point uses just the line feature code. For one of the points, enter the width value after the line feature code. For

example, **<Start rectangle> <Line feature> 8** for the first point and then **<Line feature>** for the second point.


- Measure three points, where the first point **(4)** defines one corner of the rectangle, the second point **(5)** defines the next corner of the rectangle, and the third point **(6)** is used to define the width of the rectangle. The first point uses the **Start rectangle** control code and the line feature code and the second and third points use just the line feature code.

NOTE – Rectangles are drawn respecting the elevation of all points.

To measure a rectangle if you do know the width:

1. Move to the location of the first corner of the rectangle.
2. Tap .
3. Select the feature code for the feature in the **Measure codes** form. This feature code must be defined as a **line feature** in the feature code library. The line feature code is added to the **Code** field.
4. Tap **Start rectangle** . The **Start rectangle** code is added to the **Code** field.
5. Enter the width of the rectangle in the **Multi-code** field. Enter a positive value to create the rectangle to the right of the line direction, and a negative value to create the rectangle to the left.
6. Measure and store the point.
7. Move to the second corner along the length of the rectangle. This point uses the same line feature code you selected for the first point.
8. Measure and store the point. This last stored point ends the rectangle, and the rectangle is drawn on the map.


To measure a rectangle if you do not know the width:

1. Move to the location of the first corner of the rectangle.
2. Tap **Start rectangle** . The **Start rectangle** code is added to the **Code** field.
3. Select the feature code for the feature in the **Measure codes** form. This feature code must be defined as a **line feature** in the feature code library. The line feature code is added to the **Code** field.
4. Measure and store the point.
5. Move to the second corner along the length of the rectangle. This point uses the same line feature code you selected for the first point.
6. Measure and store the point.
7. To measure another point to define the rectangle width, move to a location on the opposite side of the rectangle. This point uses the same line feature code you selected for the first point.
8. Measure and store the point. This last stored point ends the rectangle, and the rectangle is drawn on the map.

To measure a circle using the circle edge using Measure codes

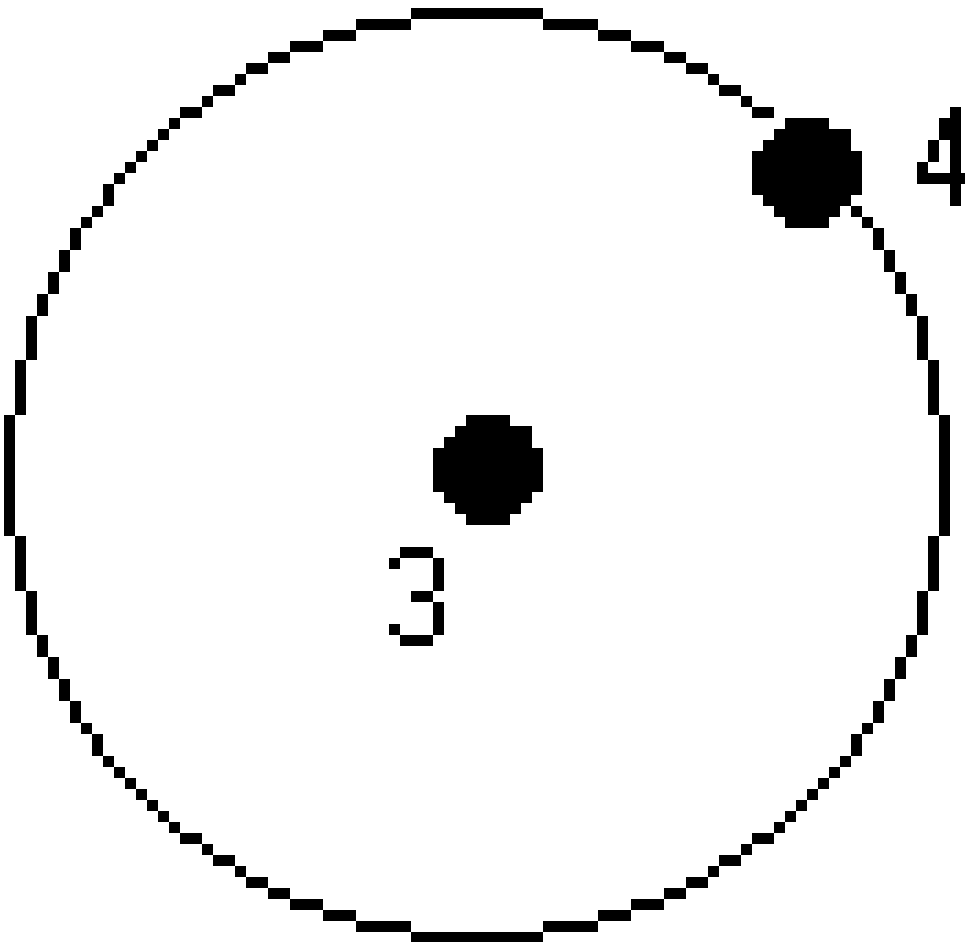
To measure the circle, measure three points that lie on the edge of the circle. The first point uses the line feature code and the **Start circle (edge)** control code, and the second and third points just use the line feature code.

NOTE – Circles are drawn horizontal at the elevation of the first point with an elevation.

1. At the first point on the circle edge, tap **Start circle (edge)** . The **Start circle (edge)** code is added to the **Code** field.
2. Select the feature code for the feature in the **Measure codes** form. This feature code must be defined as a **line feature** in the feature code library. The line feature code is added to the **Code** field.
3. Measure and store the point.
4. Move to the second point on the circle edge. This point uses the same line feature code you selected for the first point.
5. Measure and store the point.
6. Move to the third point on the circle edge. This point uses the same line feature code you selected for the first point.
7. Measure and store the point. This last stored point ends the circle, and the circle is drawn on the map.

To measure a circle using the center of the circle using Measure codes

To measure a circle using the center of the circle, you can:





- Measure a single point (1) at the center of the circle where that point uses the **Start circle (center)** control code and the line feature code, followed by a radius value (2). For example, **<Start circle (center)> <Line feature> 8**.

- Measure one point **(3)** at the center of the circle, and then measure a second point **(4)** which lies on the edge of the circle and is used to define the radius of the circle. The first point uses the **Start circle (center)** control code and the line feature code and the second point uses only the line feature code. For example, **<Line feature> <Start circle (center)>** for the first point and then **<Line feature>** for the second point.


NOTE - Circles are drawn horizontal at the elevation of the first point with an elevation.

To measure a circle when you know the radius:

1. Tap .
2. Select the feature code for the feature in the **Measure codes** form. This feature code must be defined as a **line feature** in the feature code library. The line feature code is added to the **Code** field.
3. At the center of the circle, tap **Start circle (center)** . The **Start circle (circle)** code is added to the **Code** field.
4. Enter the radius value in the **Multi-code** field.
5. Measure and store the point.

The circle is drawn on the map.

To measure a circle when you do not know the radius:

1. At the center of the circle, tap **Start circle (center)** . The **Start circle (circle)** code is added to the **Code** field.
2. Select the feature code for the feature in the **Measure codes** form. This feature code must be defined as a **line feature** in the feature code library. The line feature code is added to the **Code** field.
3. Measure and store the point.
4. To measure a point to define the radius, move to a location on the circle edge. This point uses the same line feature code you selected for the first point.
5. Measure and store the point. This last point completes the circle, and the circle is drawn on the map.

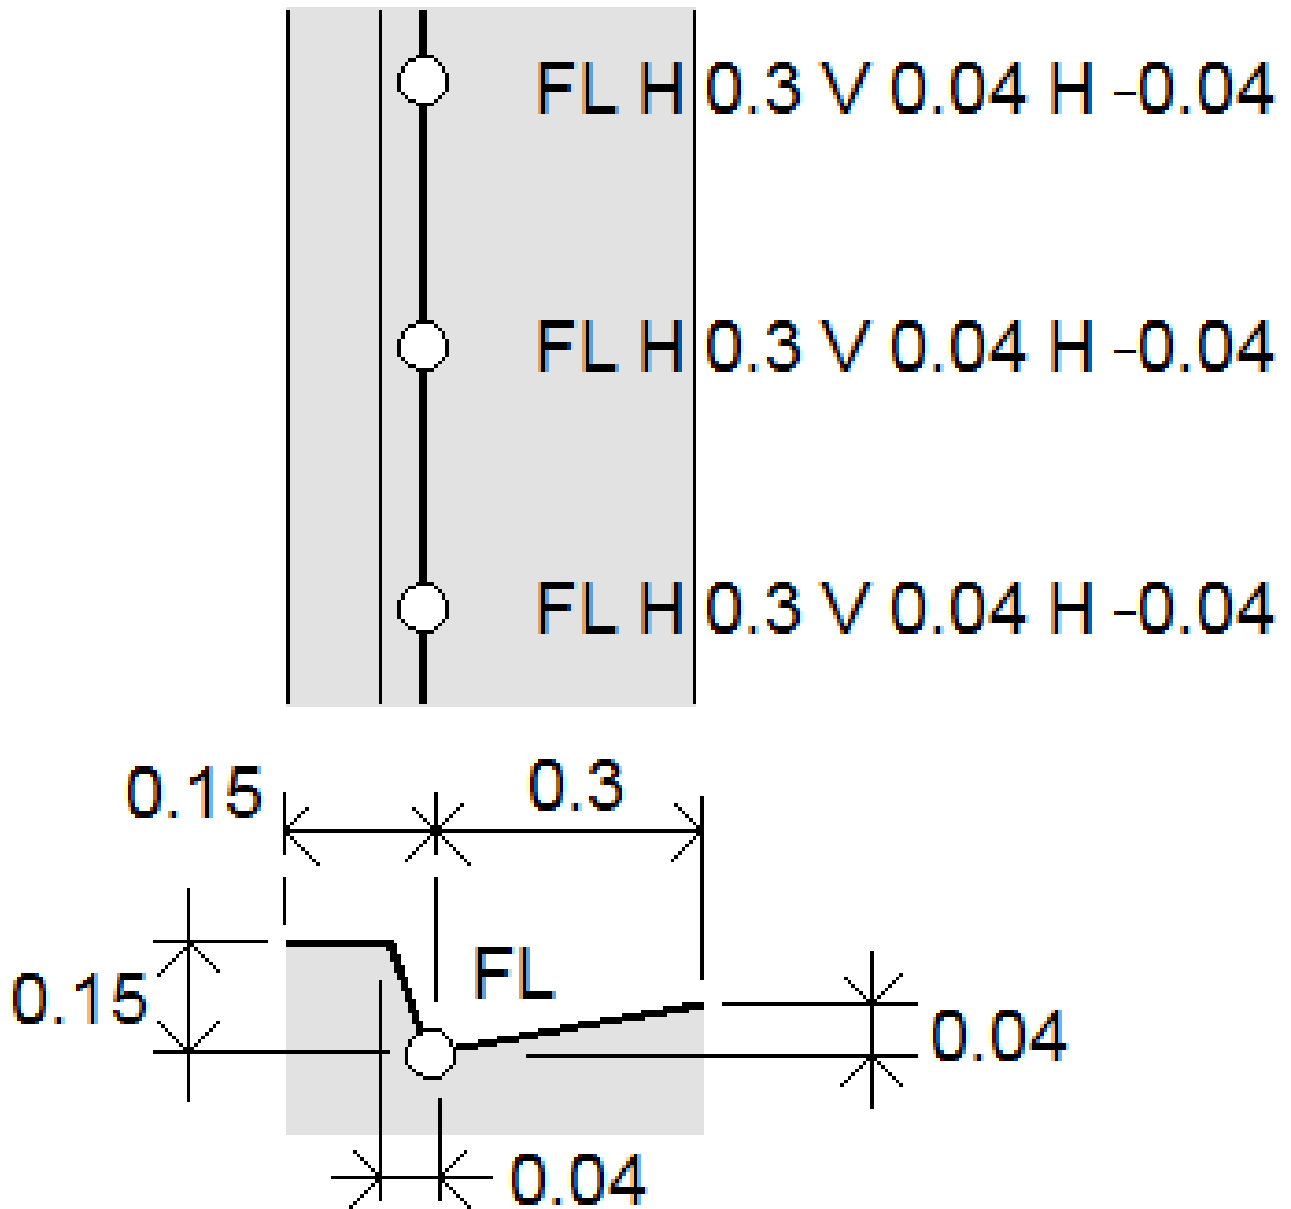
To add an offset to a line or arc

You can add a horizontal and/or vertical offset value to offset lines and arcs.


NOTE - You cannot offset linework created using the smooth curve control codes.

For example, when surveying a curb and gutter you can measure points at the flow line (invert) of the gutter using a line code and then set the horizontal and vertical offset control codes for the curb and gutter. For example, **<Line code> <Horizontal offset> 0.3 <Vertical offset> 0.04**.

Refer to the following real world example of a curb and gutter where FL is the line code for the flow line, H is the horizontal offset control code and V is the vertical offset control code:



To apply offset values to the **next point** to be measured:



 
1. Tap **Offset** .
2. From the **Number** field, select the number of offsets to define.
3. Enter the **Horizontal offset** and **Vertical offset** values.

A positive **Horizontal offset** value offsets to the right of the line direction, a negative value offsets to the left.




A positive **Vertical offset** value offsets above the line, a negative value offsets below the line.

4. Tap **Accept**.



The offset information is shown in the **Code** field, indicating the offset value(s) will be applied to the next measurement.

NOTE – When applying offsets, Spectra Geospatial recommends using the **Start join sequence**  and **End join sequence**  control codes to start and end the line. The **End join sequence**  control code automatically turns off the offset button and removes the offset text.

Special control codes for joining points and skipping joins

- To join the current point to a selected point, tap **Join to named point**  and then enter the name of the point or select the point in the map and tap **Accept**.
- To join a point to the first point in the sequence that has the same line feature code, tap **Join to first (same code)** .
- To measure a point but not join it to the last measured point, tap **No join**  and then measure and store the point.

To set the next point name

1. To check what the next point name will be, tap . The text after the **Next point name** menu item indicates the next point name.
2. To set the name for the next point, tap  and select **Next point name**.
3. Enter the point name and the code for the next point.
4. Tap **Accept**.

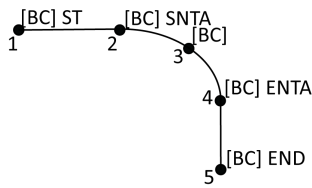
Quick reference: CAD toolbar with Measure codes





Refer to the example features and the button-press information below to create these features in **Measure codes** using the CAD toolbar.

NOTE – For detailed step by step information on using each function, see [To create features using control codes in Measure codes](#).

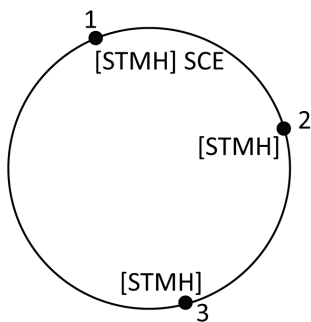
TIP – To create back curb (**BC**) or standard manhole (**STMH**) features, define the **BC** and **STMH** feature codes as lines in the feature library and make sure the feature library includes definitions for the appropriate control codes.


To create the example line and non-tangential arc feature



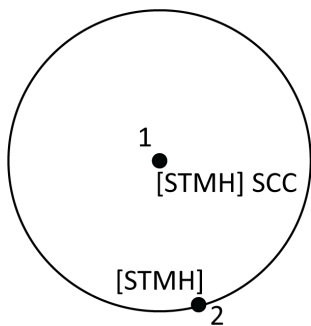
1. For point 1, tap  + [BC].
2. For point 2, tap  + [BC].
3. For point 3, tap [BC].
4. For point 4, tap  + [BC].
5. For point 5, tap  + [BC].


To create the example three-point circle (edge) feature



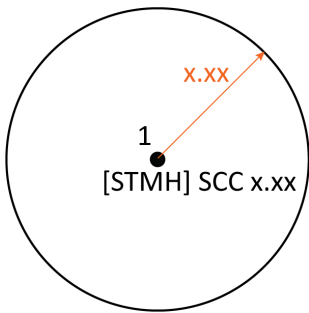
1. For point 1, tap  + [STMH].
2. For point 2, tap [STMH].
3. For point 3, tap [STMH].

To create the example two-point circle (center) feature



1. For point 1, tap  + [STMH].
2. For point 2, tap [STMH].

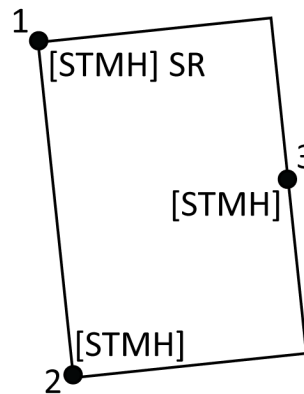
To create the example one-point circle (center) feature




1. Tap .
2. Tap **[STMH]** +  + radius value **[x.xx]**.

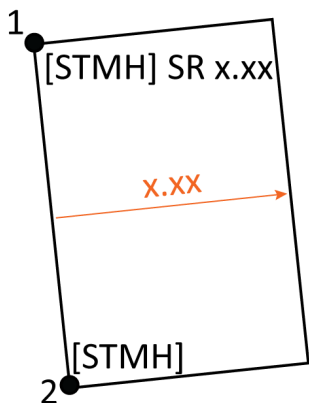
T
O


 
create the example three-point rectangle feature



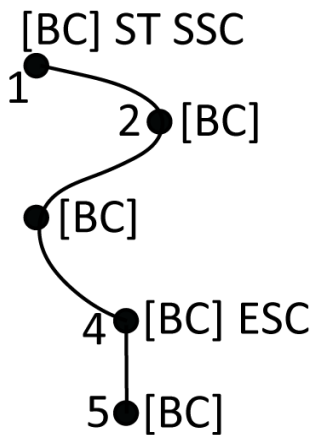
1. For point 1, tap  + **[STMH]**.
2. For point 2, tap **[STMH]**.
3. For point 3, tap **[STMH]**.




To create the example two-point rectangle feature



1. Tap .
2. For point 1, tap **[STMH]** +  + width value **[(+/-)x.xx]**.
3. For point 2, tap **[STMH]**.

To create the example smooth curve feature



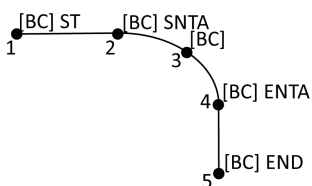
1. For point 1, tap  +  [BC].
2. For point 2, tap [BC].
3. For point 3, tap [BC].
4. For point 4, tap  + [BC].
5. For point 5, tap [BC].





Quick reference: CAD toolbar with Measure points or Measure topo

Refer to the example features and the button-press information below to create these features in the **Measure points** or **Measure topo** form using the [CAD toolbar](#).

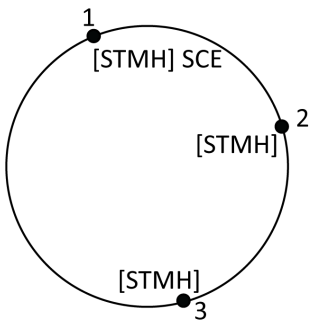
TIP - To create back curb (**BC**) or standard manhole (**STMH**) features, define the **BC** and **STMH** feature codes as lines in the feature library and make sure the feature library includes definitions for the appropriate control codes.


To create the example line and non-tangential arc feature



1. For point 1, select [BC] + tap .
2. For point 2, select [BC] + tap .
3. For point 3, select [BC].
4. For point 4, select [BC] + tap .
5. For point 5, select [BC] + tap .

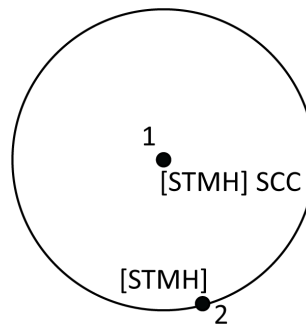
To create the example three-point circle (edge) feature




1. For point 1, select **[STMH]** + tap .
2. For point 2, select **[STMH]**.
3. For point 3, select **[STMH]**.

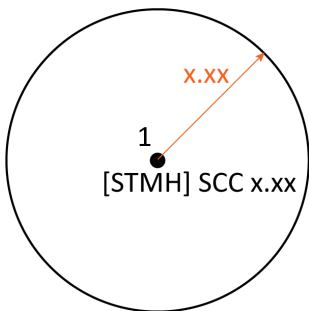
T
O

create the example two-point circle (center) feature



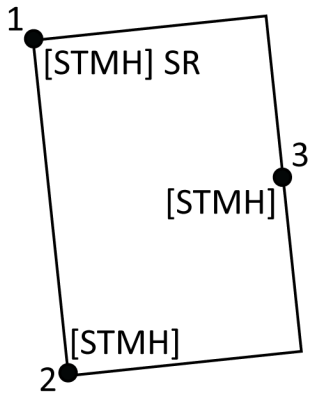
1. For point 1, select **[STMH]** + tap .
2. For point 2, select **[STMH]**.


To create the example one-point circle (center) feature



1. Select **[STMH]** + tap  + enter the radius value **[x.xx]**.

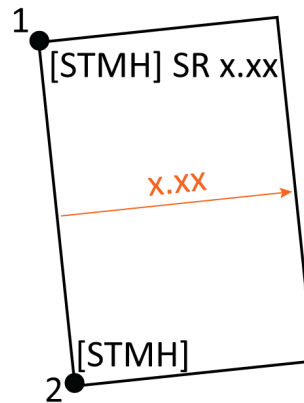
To create the example three-point rectangle feature




1. For point 1, select **[STMH]** + tap .
2. For point 2, select **[STMH]**.
3. For point 3, select **[STMH]**.

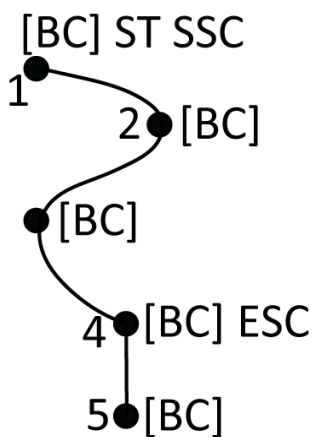
T
O




create the example two-point rectangle feature



1. For point 1, select **[STMH]** + tap  + enter the width value **[(+/-)x.xx]**.
2. For point 2, select **[STMH]**.

To create the example smooth curve feature



1. For point 1, select **[BC]** + tap  + .
2. For point 2, select **[BC]**.
3. For point 3, select **[BC]**.
4. For point 4, select **[BC]** + .
5. For point 5, select **[BC]**.

Cadastral point tolerance checks

Origin provides the ability to check measured or staked out points have been measured twice ("double-tied") to ensure they meet the appropriate local cadaster regulations for being within tolerance.

To date, this feature has been developed to meet cadaster regulations in Switzerland and in Norway. If your country uses the same cadastral tolerance checking rules you may be able to use this functionality in your own region.

To use this functionality in Origin you will need to add an XML file to the **Spectra Geospatial Data\System Files** folder. The XML file defines the cadastral codes and specifies the different tolerance requirements for the type of point being measured or staked.

To help you get started, there are two sample cadastral tolerances XML files – one for Switzerland and one for Norway:

- The sample **CadastralTolerances.xml** file:
 - Enables setup of multiple point classes
 - Checks each point has been measured twice
 - Checks each point is within horizontal tolerance
 - Checks the point is within vertical tolerance for some point classes.
- The sample **CadastralTolerances - Norway.xml** file:
 - Is set up for a single point class
 - Checks each point has been measured twice
 - Checks each point is within horizontal tolerance
 - Checks for “blunders” or large differences between the two measurements
 - Checks for measurement quality using internal reliability and external reliability calculations
 - Checks that sufficient time has passed between the two measurements of each point

Once you have enabled cadastral tolerance checking in the job, the Origin software automatically checks the tolerances for cadastral points in the job when you stake a point or compute an average of two or more points. The status of each cadastral point is displayed on the map and is summarized in the job screen. For more information on how Origin shows cadastral point status, see [Cadastral point status, page 571](#).

Setting up the controller to perform cadastral tolerance checks

To set up the controller so that Origin automatically checks tolerances for cadastral points in the job:

1. Download the appropriate sample cadastral tolerances XML file from the [Configuration files page](#) of the Trimble Access Help Portal.


The sample file provides example codes and includes notes that explain how the file works, and what can be configured. For more information, see [Swiss cadastral XML file setup, page 572](#) or [Norwegian cadastral XML file setup, page 574](#).

2. Using a text editor, configure the cadastral tolerances XML file to use your codes and tolerance values.
 - a. Set up your own codes and make sure the tolerance values in the cadastral tolerances XML file are correct, or modify them to match the tolerance values required.
 - b. Make sure the codes in the cadastral tolerances XML file are correctly assigned the classification name that matches the tolerance values required, and modify them as needed.
3. Copy the modified cadastral tolerances XML file to the **Spectra Geospatial Data\System Files** folder on the controller.

NOTE – For automatic cadastral point tolerance checking to occur in Origin, the XML file must be named **CadastralTolerances.xml**. This means that if you download the **CadastralTolerances - Norway.xml** file, you must rename it to **CadastralTolerances.xml** before adding it to the **Spectra Geospatial Data\System Files** folder on the controller.

Enabling cadastral tolerance checking in the job

For each job that you want to enable automatic cadastral tolerance checks:

1. Tap  and select **Job**.
2. Tap **Properties**.
3. In the **Notes** field of the **Job properties** screen, enter the appropriate cadastral Class name for the cadastral points in the job.

All cadastral points in the job must use the same cadastral class.

The Class names are specified just after the <SurveyClasses> line in the cadastral tolerances XML file:

- **CadastralTolerances.xml** lists multiple classes, for example **TS2**.
- **CadastralTolerances - Norway.xml** lists one class, **ClassA**.

4. Tap **Accept**.

The job details panel now includes the **Cadastral summary**, which shows a color-coded summary of cadastral points in the job.

Cadastral tolerance checks and feedback

For any point for which the **Code** field specifies a cadastral code defined in the cadastral tolerances XML file stored in the **System Files** folder on the controller, the Origin software automatically performs cadastral tolerance checking when:

- Staking the point
- When computing an average, such as:
 - When you compute an average using the **Compute average** function.
 - When the software detects a duplicate point and from the **Action** drop-down list you choose to average the points.

The computed errors for the staked or averaged position are compared with the tolerance values recorded for that cadastral code in the cadastral tolerances XML file, and shown in the **Tolerance check** group box of the **As-staked deltas** or the **Compute average** screen.

The color of the point on the map changes to indicate the status of the cadastral point.

TIP – Some cadastral regulations may require that each measurement is "independent" for double-tied cadastral points. For conventional surveys, you may be able to achieve this using a different station setup or using the [Taped distances](#) feature. For GNSS surveys, you can use the [SV subset](#) feature to divide all tracked satellites into two subsets with an even spread throughout the sky, and use one subset to measure and then the other subset to remeasure the point using independent occupations.

Cadastral point status

The **Cadastral summary** in the **Job details** panel in the **Jobs** screen shows the number of cadastral points in the job, by status.

The map provides immediate feedback on the status of cadastral points.

TIP – The display of the colored icons is prioritized so that red is displayed on top of orange, which is displayed on top of green. This means that points out of tolerance or not double-tied are more visible at any zoom level.

Swiss cadastral point status

When using **CadastralTolerances.xml**, the color of the point icons provides the following feedback:

- **Green:** The point is double-tied and the averaged measurement is within the defined tolerance values.
- **Orange:** Because the point is not double-tied (it has only a single measurement), the tolerance is unknown.
- **Red:** The point is double-tied and the averaged measurement is outside the defined tolerance values.

To confirm the defined tolerance, threshold, and time values, refer to the **CadastralTolerances.xml** file in use on the controller.

Norwegian cadastral point status

When using **CadastralTolerances - Norway.xml**, the color of the point icons provides the following feedback:

- **Green:** The point is double-tied and:
 - The averaged measurement is within the defined horizontal tolerance.
 - The distance between the two measurements is within the defined tolerance (no blunders detected).
 - The calculated internal and external reliability error values do not exceed the defined thresholds.
 - Sufficient time has elapsed between the two measurements.
- **Orange:** The point is either:
 - Double-tied but the calculated internal and external reliability error values exceed the defined thresholds.
 - Not yet double-tied (it has only a single measurement), therefore the tolerance is unknown.
- **Red:** The point is double-tied but at least one of the following is true:
 - The distance between the two measurements exceeds the defined horizontal tolerance.
 - There is an unexpectedly large difference between the two measurements of the point ("blunder" detection).
 - The calculated internal and external reliability error values exceed the defined thresholds.
 - Insufficient time has elapsed between the two measurements.

To confirm the defined tolerance, threshold, and time values, refer to the **CadastralTolerances - Norway.xml** file in use on the controller.

Swiss cadastral XML file setup

To use cadastral tolerance checking in Origin, modify the sample **CadastralTolerances.xml** file to meet your requirements.

Download the sample **CadastralTolerances.xml** file from the [Configuration files page](#) of the Trimble Access Help Portal.

The sample XML file uses a combination of the **Survey class** and **Classification** to determine the tolerance value that the point must be checked against.

The **Classification** name defines the type of point being measured or staked: Topo, Boundary, and Control. The **Survey class** name defines the tolerance level required for the location of the point, for example urban versus rural.

In the case of Switzerland there are five tolerance levels for points:

- Level 1 is used in the center of larger cities.
- Level 2 is used in residential zones outside the city centers and in villages.
- Level 3 and Level 4 are used for rural areas such as agricultural land.
- Level 5 is used in the mountains.

NOTE – You cannot change element names and attribute names. Note these are case sensitive.

- The element names are: CadastralTolerances, SurveyClasses, Class, Classifications, Classification, Tolerances, Codes and Code.
- The attribute names are: name, id, hzTol, vtTol, description and classification.

Survey class

The sample XML file defines a survey class for each level:

```
<SurveyClasses>
  <Class name="TS1" id="Class1"/>
  <Class name="TS2" id="Class2"/>
  <Class name="TS3" id="Class3"/>
  <Class name="TS4" id="Class4"/>
  <Class name="TS5" id="Class5"/>
</SurveyClasses>
```

To enable cadastral tolerance checking in the job, you must specify the **Survey class** for each job. To do this, enter the survey class name (for example, **TS2**) in the **Notes** field in the **Job properties** screen in Origin. All points within the job will have the same class.

Tolerance values

The sample XML file uses classifications to define the tolerance values for each Survey class, per point type. For example, points with a boundary classification may have the following tolerance values, depending on the Survey class specified for the job:

```
<Classification name="Boundary1">
  <Tolerances id="Class1" hzTol="0.035" vtTol=""/> <!-- Horizontal at least as good as Class2 -->
  <Tolerances id="Class2" hzTol="0.035" vtTol=""/>
  <Tolerances id="Class3" hzTol="0.070" vtTol=""/>
  <Tolerances id="Class4" hzTol="0.150" vtTol=""/>
  <Tolerances id="Class5" hzTol="0.350" vtTol=""/>
</Classification>
<Classification name="Boundary2">
```

```

<Tolerances id="Class1" hzTol="0.200" vtTol=""/> <!-- Horizontal at least as good as Class2 -->
<Tolerances id="Class2" hzTol="0.200" vtTol=""/>
<Tolerances id="Class3" hzTol="0.350" vtTol=""/>
<Tolerances id="Class4" hzTol="0.750" vtTol=""/>
<Tolerances id="Class5" hzTol="1.000" vtTol=""/>
</Classification>

```

Feature codes

The sample XML file also defines feature codes so that you can easily specify the classification for cadastral points when staking and measuring in the job. For example, points with a boundary classification can have any of the following feature codes:

```

<Codes>
<Code name="1" description="Boundary Point Stone" classification="Boundary1"/>
<Code name="2" description="Boundary Point Bolt" classification="Boundary1"/>
<Code name="3" description="Boundary Point Cross" classification="Boundary1"/>
<Code name="4" description="Boundary Point plastic sign" classification="Boundary1"/>
<Code name="5" description="Boundary Point uninsured" classification="Boundary2"/>

```

For a job where the **Notes** field is set to **TS2**, if you code a point as "1" the point will have a description of "Boundary Point Stone", and a classification of "Boundary1". This means the point must meet a horizontal tolerance of 35mm, because the **CadastralTolerances.xml** file specifies that "Boundary 1" points in "Class 2" jobs must have hzTol="0.035".

TIP – As noted above, you cannot rename element names and attribute names. However:

- You can rename the Class names (for example, "TS1"), Classification names (for example, "Boundary1") and Code names (for example, "1"). If you rename them, make sure you rename all instances.
- You can create additional Class names and Classification names. Simply follow the pattern in the XML file to create more.

Norwegian cadastral XML file setup

To use Norwegian cadastral tolerance checking in Origin, modify the sample **CadastralTolerances - Norway.xml** file to meet your requirements.

Download the sample **CadastralTolerances - Norway.xml** file from the [Configuration files page](#) of the Trimble Access Help Portal.

NOTE – For automatic cadastral point tolerance checking to occur in Origin, the XML file must be named **CadastralTolerances.xml**. This means that if you download the **CadastralTolerances - Norway.xml** file, you must rename it to **CadastralTolerances.xml** before adding it to the **Spectra Geospatial Data\System Files** folder on the controller.

The sample XML file uses a combination of the **Survey class** and **Classification** to determine the tolerance value that the point must be checked against.

The **Classification** name defines the type of point being measured or staked. The **Survey class** name defines the tolerance level required for the location of the point.

NOTE – You cannot change element names and attribute names. Note these are case sensitive.

- The element names are: CadastralTolerances, SurveyClasses, Class, Classifications, Classification, Tolerances, Codes and Code.
- The attribute names are: name, id, hzTol, vtTol, description and classification.

Survey class

The sample XML file defines a survey class for each level:

```
<SurveyClasses>
  <Class name="ClassA" id="ClassA" algorithm="NorwayCadaster"/>
</SurveyClasses>
```

To enable cadastral tolerance checking in the job, you must specify the **Survey class** for each job. To do this, enter the survey class name (**ClassA**) in the **Notes** field in the **Job properties** screen in Origin. All points within the job will have the same class.

Tolerance values

The sample **CadastralTolerances - Norway.xml** file defines the tolerance values for each ClassA as a control point:

```
<Classification name="Control1">
  <Tolerances id="ClassA" hzTol="0.050" vtTol="0.100" alpha="0.05" internalReliabilityError="0.1"
  internalReliabilityWarning="0.1" externalReliabilityError="0.1" externalReliabilityWarning="0.1"
  reliability3D="false">
    <TimeDistance minimumMinutes="45" measurementCount="2" />
    <TimeDistance minimumMinutes="15" measurementCount="3" />
  </Tolerances>
</Classification>
```

The covariance calculation is done in 3D, but to provide a 2D value the reliability3D value in the file is set to false.

When checking measurements against the defined tolerances, a statistical analysis is made of the data for:

- **Blunder detection (*grovfeilsøk*)**

Blunder detection controls against large deviations between the two measurements or “blunders” (*grovfeilsøk*).

A large deviation/blunder is defined as a deviation that is significantly larger than the random deviation you would expect. A large deviation or blunder can be thought of as a deviation three times the standard deviation.

Because the blunder detection calculation discovers only large errors, the internal reliability and external reliability values are used to indicate the quality of the measurements when smaller deviations are taken into account.

- **Internal reliability (*indre pålitelighet*)**

The internal reliability (*indre pålitelighet*) value indicates the presence of smaller errors than can be discovered by blunder detection. These errors are referred to as the “maximum remaining deviation”. The threshold for the internal reliability value is a level of significance of 5% or lower.

- **External reliability (*ytre pålitelighet*)**

The external reliability (*ytre pålitelighet*) value is a calculation of the maximum point deformation, and indicates how much the maximum remaining deviation could impact the end result.

Checks are also made for suitable times elapsing between re-measurements of the same point.

Feature codes

The sample XML file also defines feature codes so that you can easily specify the classification for cadastral points when staking and measuring in the job. For example, points with a Control classification can have any of the following feature codes:

```
<Codes>
<Code name="surveyPoint" description="Checked Cadastral" classification="Control1"/>
<Code name="OLD" description="Checked Cadastral" classification="Control1"/>
<Code name="PEG" description="Checked Cadastral" classification="Control1"/>
<Code name="IS" description="Checked Cadastral" classification="Control1"/>
<Code name="IT" description="Checked Cadastral" classification="Control1"/>
<Code name="NAIL" description="Checked Cadastral" classification="Control1"/>
```

For a job where the **Notes** field is set to **ClassA**, if you code a point as “NAIL” the point will have a description of “Checked Cadastral”, and a classification of “Control1”. This means the point must meet a horizontal tolerance of 50mm, because the **CadastralTolerances - Norway.xml** file specifies that “Control1” points in “ClassA” jobs must have hzTol=“0.050”.

TIP – As noted above, you cannot rename element names and attribute names. However:

- You can rename the Class names (for example, "ClassA"), Classification names (for example, "Control1") and Code names (for example, "NAIL"). If you rename them, make sure you rename all instances.
- You can create additional Class names and Classification names. Simply follow the pattern in the XML file to create more.

Stakeout

Use the **Stakeout** function to stake out points, lines, arcs, polylines, alignments, roads, and DTMs. To use stake out you must start a survey.

CAUTION – Do not change the coordinate system or calibration after you have staked out items. If you do, the previously staked out points will be inconsistent with the new coordinate system and any points computed or staked out after the change.

To use GNSS for stakeout, you must start an RTK survey. To stake out lines, arcs, polylines, alignments, or digital terrain models, you must define a projection and datum transformation.

You can stake out items that are already in the job, in a linked file, or by keying them in during stakeout. You can stake them out from the map, from the menu, or from a list you have created. To work from a list, see [Stake out items list, page 579](#).

To stake out an item

1. To stake out from:

- the map, select the item to be staked out in the map and tap **Stake out**.
- the menu, tap ☰ and select **Stakeout** and then select the item type to stake out. In the **Stake out** screen, select the item to stake out.

TIP – When selecting line, arc, or polyline features to stake out from the map, tap near the end of the feature that you want to designate as the start. Arrows are then drawn on the feature to indicate the direction. If the direction is incorrect, tap the feature to deselect it and then tap it at the correct end to reselect the feature in the direction required. Alternatively tap and hold in the map and select **Reverse direction** from the menu. If the feature has been offset, the offset directions are not swapped when the direction is reversed.

2. Navigate to the point, or to the point designated as the start of the feature. Alternatively, direct the person holding the pole on which the target or prism is mounted to the point.

For detailed information on using the stakeout navigation feature, see [Stakeout navigation, page 581](#).

3. Mark the point.

4. Tap **Accept** to store the point.

5. If you selected the **View before storage** option, the staked deltas you selected in the **Stakeout options** screen are shown. Tap **Store** to store the deltas.

Stake out items list

To work from a list of items to stake out, for example when staking a group of points, you must create a list of items to stake out, and then select a point from the **Stake out items** list and stake it out. Once you have stored the point, the software shows the **Stake out items** list. Select the next point to stake out.

You can update the **Stake out items** list by changing point selections in the map, when the **Stake out items** list is displayed on the right.


To create the stake out list from the map

1. In the map, select the items to be staked out. Tap **Stakeout**.
2. The **Stake out items** list shows the items selected for stakeout. To add more items to the list, do one of the following:
 - Select them on the map. The **Stake out items** list is updated as you select them. Tap **OK**.
 - Tap **Add**. Select the method you want to use to add points to the list.

The items you selected are shown in the **Stake out items** list.

TIP – When selecting line, arc, or polyline features to stake out from the map, tap near the end of the feature that you want to designate as the start. Arrows are then drawn on the feature to indicate the direction. If the direction is incorrect, tap the feature to deselect it and then tap it at the correct end to reselect the feature in the direction required. Alternatively tap and hold in the map and select **Reverse direction** from the menu. If the feature has been offset, the offset directions are not swapped when the direction is reversed.

To create the stake out list from the menu


1. Tap  and select **Stakeout / Points**.
2. If the map is not shown and the **Stake out point** form is full-width, tap **List**.

The **Stake out items** list shows all items selected for stake out. The list may already contain points that were added to the list previously but not staked out.

3. Tap **Add**. Select the method you want to use to add points to the list.
The points you selected are shown in the **Stake out items** list.

To create the stake out list from a file outside the job

To select points in a CSV/TXT file or another job that is not linked to the current job:

1. Tap  and select **Stakeout / Points**.
2. If the map is not shown and the **Stake out point** form is full-width, tap **List**.
3. Tap **Add**.

4. Tap **Select from file**.
5. Tap the file to select it or use the controller arrow keys to select the file. Tap **Accept**.
6. If the **Advanced geodetic** check box is enabled in the **Cogo settings** screen, and you select a CSV or TXT file, you must specify the **Coordinate type** of the points in the file. Select **Grid points** or **Grid (local) points**.
7. If the points in the file are **Grid (local) points**, select the transformation to use to transform them to grid points:
 - To assign the transformation later, select **Not applied, this will be defined later**. Tap **Accept**.
 - To create a new display transformation, select **Create new transformation**. Tap **Next** and complete the required steps. See [Transformations](#), page 248.
 - To select an existing display transformation, select **Select transformation**. Select the display transformation from the list. Tap **Accept**.
8. To select the points from the file to add to the stakeout list, tap each point name or tap **All**.

NOTE – Points in the CSV/TXT/JOB file that are already in the stake out list do not appear and cannot be added again to the list.

9. Tap **Add**.

The points you selected are shown in the **Stake out items** list.

Managing the list of Stake out items

If you select more than one item in the map and then tap **Stakeout**, the **Stake out items** list appears. Select each item in turn from the **Stake out items** list, navigate to it and stake it out before returning to the **Stake out items** list.

TIP – Points are automatically removed from the list after they have been staked. To keep points in the list, clear the **Remove staked point from list** check box in the [stakeout options](#) screen. This setting does not affect line, arc, or polyline features.

When the **Stake out items** list is shown alongside the map:

- The currently selected list item is highlighted on the map.
- Changing the items that are selected in the map updates the items in the **Stake out items** list, and removing items in the **Stake out items** list updates what is selected in the map.
- To clear the **Stake out items** list, tap **Rem all** or double-tap in the map. If you accidentally clear the list, tap **Undo** to restore the list of **Stake out items**.

To set aside the **Stake out items** list tap **Esc**. The **Stake out items** list is remembered and you can return to it later.

When the **Stake out items** list is not open:

- To clear the current map selection, double-tap in the map.
- Select items in the map as usual to perform other functions, for example to key in features or compute Cogo calculations.
- To return to the **Stake out items** list, tap **Stakeout**.
- To add the current map selection to the current **Stake out items** list, tap and hold in the map and select **Stakeout: x items**, where **x** is the count of the items in the stakeout list as well as the number of items in the map. The **Stake out items** list opens, showing the updated list.

Stakeout navigation

When navigating to a point during stakeout, the information shown depends on whether you are performing a Conventional or GNSS survey, and the options you have configured in the **Stakeout options** screen. To configure these options, see [Stakeout navigation display, page 582](#).

Conventional survey

1. Hold the display screen in front of you as you walk forwards in the direction that the arrow is pointing. The arrow points in the direction of the point that you intend to measure (the "target").

The navigation deltas appear at the bottom of the screen, and indicate the distance to and direction of the target. To change the displayed deltas, tap **Options**.

2. When you get to within 3 meters (10 feet) of the point, the arrow disappears, and the in/out and left/right directions appear, with the instrument as a reference point.

If you are operating a robotic instrument remotely from the target:

- the instrument automatically tracks the prism as it moves
- the instrument continuously updates the graphical display
- the graphical display is reversed and the arrows are shown from the target (prism) to the instrument

The first display shows which way the instrument should be turned, the angle that the instrument should display and the distance from the last point staked to the point currently being staked.

3. Turn the instrument (two outline arrows will appear when it is on line), and direct the person holding the pole on line.

If you are using a servo instrument, and the **Servo auto turn** field in the survey style is set to **HA & VA**, or **HA only** the instrument automatically turns to the point. If you are working robotically, or when the **Servo auto turn** field in the survey style is set to **Off**, the instrument does not turn automatically.

4. Stake the point.

GNSS survey

1. Hold the display screen in front of you as you walk toward the point that you intend to stake (the "target"). The navigation deltas appear at the bottom of the screen, and indicate the distance to and direction of the target. To change the displayed deltas, tap **Options**.

If you are using IMU tilt compensation and the IMU is aligned:

- The heading from the receiver is used to orient the large stakeout navigation arrow, even when you are standing still. You must be facing the LED panel of the receiver for these to be orientated correctly.
- The deltas apply to the pole tip. You can tilt the pole as required as you navigate to the feature.

If you are using GNSS only:

- The large navigation arrow points in the direction of the point that you intend to measure (the "target"). You must be moving for the navigation arrow to show the correct direction.
- The horizontal deltas apply to the antenna phase center (APC). You must keep the pole vertical as you navigate to the feature.

TIP – To change the reference point used by the small orientation arrow, tap the **North/Sun** softkey. (In portrait mode, swipe right to left along the row of softkeys to view more softkeys.)

2. When you get to within 10 feet (3 meters) of the point, the arrow disappears and a bull's-eye target appears. When staking a point, line, arc, or alignment a grid appears as you near the target. The grid changes scale as you move closer to the target.

Keep facing in the same direction and only move forwards, backwards, left or right. Do not change your orientation.

3. Continue moving forwards until the cross, representing your current position, covers the bull's-eye target, representing the point.


TIP – If you are using IMU tilt compensation and the IMU is aligned, once the fully zoomed-in screen appears you can stop moving yourself and simply move the pole tip to the target position, using the stakeout screen for guidance.

4. Stake the point.

Stakeout navigation display

The information shown when navigating to points during stakeout depends on whether you are performing a Conventional or GNSS survey, and the options you have configured in the **Stakeout options** screen.

To configure these options:

- In the survey style, tap  and select **Settings / Survey styles / <Style name> / Stakeout**.
- During stakeout, tap **Options** in the stakeout navigation screen.

Conventional surveys

Use the **Display** group to configure the appearance of the navigation display during stakeout:

- To show the large navigation arrow in the navigation screen, set the **Show stakeout graphics** switch to **Yes**.

TIP – If you are using a controller with a smaller screen, or you want to fit more navigation deltas on the screen, set the **Show stakeout graphics** switch to **No**. The other fields in the **Display** group are hidden when the switch is set to **No**.


- Select the **Display mode**: The options are:
 - **Direction and distance** – the stakeout navigation display shows a large arrow pointing in the direction you have to move. When you are close to the point, the arrow changes to the in/out and left/right directions, relative to the instrument.
 - **In/out and left/right** – the stakeout navigation display shows in/out and left/right directions.

TIP – By default the software automatically gives in/out and left/right directions from the **Target perspective** in a robotic survey, and from the **Instrument perspective** when connected to a servo instrument using a face plate or cable. To change this, change the settings in the **Servo/Robotic** group box. For more information, see [Servo/Robotic](#), page 284.

- Use the **Distance tolerance** field to specify the allowable error in distance. If the target is within this distance from the point, the software indicates that the distance is correct.
- Use the **Angle tolerance** field to specify the allowable error in angle. If the conventional instrument is turned away from the point by less than this angle, the software indicates that the angle is correct.
- Use the **Grade** field to display the grade of a slope as an angle, percent, or ratio. The ratio can be displayed as **Rise:Run** or **Run:Rise**. See [Grade](#), page 98.

In the **Deltas** group, review the deltas shown for the current stakeout item. To change the deltas shown, tap **Edit**.

Deltas are the information fields shown during navigation that indicate the direction and distance you need to travel to the item you want to stake out. See [Stakeout navigation deltas](#), page 585.

To display the cut or fill relative to a surface during stakeout, enable the **Cut/Fill to surface** switch. In the **Surface** field, select the surface file from the current project folder. If required, in the **Offset to surface** field, specify an offset to the surface. Tap  to select whether the offset is to be applied vertical or perpendicular to the surface.

If your Spectra Geospatial controller includes an internal compass, you can use it when staking out a position or navigating to a point. To use the internal compass, select the **Compass** check box. Spectra Geospatial recommends you **disable** the compass when you are near magnetic fields that may cause interference.

GNSS surveys

Use the **Display** group to configure the appearance of the navigation display during stakeout:

- To show the large navigation arrow in the navigation screen, set the **Show stakeout graphics** switch to **Yes**.

TIP – If you are using a controller with a smaller screen, or you want to fit more navigation deltas on the screen, set the **Show stakeout graphics** switch to **No**. The other fields in the **Display** group are hidden when the switch is set to **No**.


- Select the **Display mode**: The options are:
 - **Target centered** – the selected point stays fixed in the center of the screen
 - **Surveyor centered** – your position stays fixed in the center of the screen
- Choose a setting in the **Display orientation** field. The options are:
 - **Direction of travel** – the screen will orientate so that the top of the screen points in the direction of travel.
 - **North / Sun** – the small orientation arrow shows the location of North or the sun. The screen will orientate so that the top of the screen points toward North or the sun. When using the display, tap the **North/Sun** softkey to toggle the orientation between north and the sun.
 - **Reference azimuth**:
 - For a point the screen will orientate to the **Reference azimuth** for the job. The **Stake** option must be set to **Relative to azimuth**.
 - For a line or road the screen will orientate to the azimuth of the line or road.

NOTE – If, when staking a point, the **Display orientation** is set to **Reference azimuth** and the **Stake** option is **not** set to **Relative to azimuth** the display orientation behavior will default to **Direction of travel**. For Stake options, see [GNSS stake methods, page 594](#).

- Use the **Grade** field to display the grade of a slope as an angle, percent, or ratio. The ratio can be displayed as **Rise:Run** or **Run:Rise**. See [Grade, page 98](#).

In the **Deltas** group, review the deltas shown for the current stakeout item. To change the deltas shown, tap **Edit**.

Deltas are the information fields shown during navigation that indicate the direction and distance you need to travel to the item you want to stake out. See [Stakeout navigation deltas, page 585](#).

To display the cut or fill relative to a surface during stakeout, enable the **Cut/Fill to surface** switch. In the **Surface** field, select the surface file from the current project folder. If required, in the **Offset to surface** field, specify an offset to the surface. Tap  to select whether the offset is to be applied vertical or perpendicular to the surface.

If your Spectra Geospatial controller includes an internal compass, you can use it when staking out a position or navigating to a point. To use the internal compass, select the **Compass** check box. Spectra Geospatial recommends you **disable** the compass when you are near magnetic fields that may cause interference.

NOTE – If you are using IMU tilt compensation and the IMU is aligned, the heading from the receiver is always used to orient the GNSS cursor, the large stakeout navigation arrow and the close up screen. You must be facing the LED panel of the receiver for these to be orientated correctly.

 
By default the software displays navigation information to the point from your current position. To navigate using a cross-track line between the point to be staked out and a reference point, change the **Stake** method. See [GNSS stake methods](#), page 594.

Stakeout navigation deltas

The navigation information displayed during stakeout is user-definable and different configurations can be set up for the following item types:

- Points
- Points on a line, arc, polyline, or road
- Line, arc, polyline, or road
- Surface

To edit the stakeout deltas

1. Tap  and select **Settings / Survey styles / <Style name> / Stakeout** to configure the survey style to display the stakeout deltas as you usually use them.

TIP – To change the deltas during stakeout, tap **Options** in the stakeout screen or tap and hold in the navigation pane.

2. In the **Deltas** group, tap **Edit**.
 - a. In the **Deltas** list, tap a delta to change whether the delta is displayed. A check mark indicates the delta will be shown. When fewer deltas are shown they are displayed in a larger font.
 - b. To reorder the deltas, tap and hold a delta and drag it up or down the list.
 - c. Tap **Accept**.
3. If you are using a controller with a smaller screen, or you want to fit more navigation deltas on the screen, set the **Show stakeout graphics** switch to **No**.
4. To save the changes you have made to the stakeout deltas to the current survey style, tap **Save to style**.
5. Tap **Accept** to return to the **Stakeout** screen.

Available deltas

NOTE – Available deltas for different items are listed below. However, if a specific delta is not applicable to the selected method used to stake out the item then the delta is either not shown or shows null.

Deltas: Points

Available deltas for points are:

- Go North/South
- Go East/West
- Go Left/Right
- Go Forward/Backward
- Go In/Out (conventional surveys only)
- Delta Horizontal Angle (conventional surveys only)
- Go Left/Right (angle) (conventional surveys only)
- Horizontal Angle required (conventional surveys only)
- Elevation
- Vertical distance
- Design elevation
- Azimuth
- Horizontal distance
- Northing
- Easting
- DTM elevation
- Vertical distance to surface
- Perpendicular distance to surface
- Code

Deltas: Points on a line, arc, polyline, alignment or road

Available deltas for points on a line, arc, polyline, alignment or road are the same as for a line, arc, polyline, or road, **with the addition of:**

- Go Forward/Backward Relative to line
- Go Left/Right Relative to line
- Grade to line
- Distance along line
- Horizontal distance to end
- Side slope (Design)
- Side slope (Calculated)

- Fill slope (as staked)
- Horizontal distance to hinge point
- Vertical distance to hinge point
- Slope distance to hinge
- Station: Reference string
- Horizontal offset: Reference string
- Vertical distance to cross slope (roads only)
- Code
- Horizontal construction offset (when staking construction offsets)
- Vertical construction offset (when staking construction offsets)
- Station construction offset (when staking construction offsets)
- Design station
- Design string
- Design horizontal offset
- Design vertical offset (not available for roads)
- Design slope (alignments or roads only)
- Slope (roads only)
- Surface slope (alignments or roads only)

TIP –

- **Distance along line** is the 3D or slope distance from the start of the line (or arc, polyline, or road) to the current location. **H.Distance to end** is the 2D or horizontal distance from the current location projected to the end of the line (or arc, polyline, or road).
- **Design slope** displays the slope of the template element that precedes the string you have selected to stake when you are staking **To a string**, **Station on a string** or **To the nearest string**. When staking by **Side slope from alignment** it displays the slope of the side slope directly below your current position. **Slope** displays the slope of the template element directly below your current position. **Surface slope** displays the slope of the surface at right angles to the horizontal alignment and directly below your current position.

Deltas: Line, arc, polyline, alignment or road

Available deltas for a line, arc, polyline, alignment or road are the same as for points, **with the addition of:**

- Go Left/Right Relative to line
- Grade to line
- Distance along line

- Horizontal distance to end
- Station
- Horizontal offset
- Grade to line
- Station: Reference string
- Horizontal offset: Reference string
- Vertical distance to cross slope (roads only)
- Code
- Horizontal construction offset (when staking construction offsets)
- Vertical construction offset (when staking construction offsets)
- Station construction offset (when staking construction offsets)
- Design station
- Design string
- Design horizontal offset
- Design vertical offset (not available for roads)
- Design slope (alignments or roads only)
- Slope (roads only)
- Surface slope (alignments or roads only)

TIP –

- **Distance along line** is the 3D or slope distance from the start of the line (or arc, polyline, or road) to the current location. **H.Distance to end** is the 2D or horizontal distance from the current location projected to the end of the line (or arc, polyline, or road).
- **Design slope** displays the slope of the side slope directly below your current position, unless you are staking **To a string**, **Station on a string** or **To the nearest string** when it displays the slope of the template element that precedes the string you have selected to stake. **Surface slope** displays the slope of the surface at right angles to the horizontal alignment and directly below your current position.

Deltas: Surface

Available deltas for surfaces are:


- Northing
- Easting
- Elevation

- Design elevation
- Vertical distance to surface at current position
- Vertical distance to surface at target (roads only)
- Perpendicular distance to surface at current position
- Perpendicular distance to surface at target (roads only)
- Code

As-staked point details

As-staked point details are shown in stakeout reports generated from the **Export** screen, and they are shown on the **Confirm staked deltas** screen that appears when you enable **View before storage**.

To configure **As-staked point details**:

- When editing the survey style, tap  and select **Settings / Survey styles / <Style name> / Stakeout**.
- During stakeout, tap **Options**.

The **As-staked point details** group box has the following settings.

View before storage and horizontal tolerance

To see the differences between the design point and the as-staked point before you store the point, select the **View before storage** check box and then choose one of these options:

- To see the differences every time, set the **Horizontal tolerance** to 0.000 m.
- To see the differences only if the tolerance is exceeded, set the **Horizontal tolerance** to a suitable value.

NOTE – The **Stake delta** values are reported as differences *from* the measured/as-staked point *to* the design point.

Staked deltas format

From the **Staked deltas format** field, select an appropriate display format.

NOTE – If you are using a receiver with IMU tilt compensation and the IMU is aligned, the **deltas apply to the pole tip**, not the Antenna Phase Center (APC).

General Survey stakeout formats

If you chose to install a **Language and Help Files** language pack when you installed the Origin software, stakeout report formats are installed to the controller in the language of your choice. If you did not choose to install a language pack you can install it at any time by running Spectra Geospatial Installation Manager. See [Installing Origin, page 13](#)

The following stakeout report formats are available for General Survey:

- **Point – Stake markup**

This staked deltas format stylesheet provides a simplified stakeout display that presents the vertical distance (cut/fill) to the design point. If applicable, the vertical distance to a DTM is displayed.

- **Point – Stake multiple elevs**

This staked deltas format stylesheet provides a stakeout display that allows you to edit the point design elevation (the cut/fill value will be updated) and entry of up to two extra design elevations with associated vertical offsets and updated cut/fill values.

- **Line – Stake markup**

This staked deltas format stylesheet provides a simplified stakeout display that presents the vertical distance (cut/fill) to the design position. The appropriate station and offset values are reported, based on the selected line stakeout method.

- **Arc – Stake markup**

This staked deltas format stylesheet provides a simplified stakeout display that presents the vertical distance (cut/fill) to the design position. The appropriate station and offset values are reported, based on the selected arc stakeout method.

- **DTM – Stake markup**

This staked deltas format stylesheet provides a simplified stakeout display that presents the vertical distance (cut/fill) to the DTM being staked.

- **Stake manhole inverts**

When staking a manhole with multiple inverts from a pipe network LandXML file, this staked deltas format stylesheet provides a simplified stakeout display that uses the extra invert elevations in the LandXML pipe network file to compute their associated vertical offsets and updated cut/fill values on the **Confirm staked deltas** screen.

Roads stakeout formats

If the Roads application is installed, the following additional translated stakeout formats are available:

- **Road – Catch + offsets**

This staked deltas format stylesheet provides details of all the standard road staked deltas plus a list of the horizontal and vertical distances to each of the cross-section positions from the staked offset

position. The reported horizontal and vertical distances include the applied horizontal and vertical construction offsets.

- **Road – Stake markup**

This staked deltas format stylesheet provides a simplified stakeout display that presents the vertical distance (cut/fill) to the road design position. Appropriate station and offset values and cross-section details (in the case of catch point staking) are reported, based on the road stakeout method.

- **Road – XS details**

This staked deltas format stylesheet provides details all the standard road staked deltas details as well as a list of the cross-section elements (left and right) that define the design cross-section at the selected station.

As-staked name and as-staked code

You can set the name of the As-staked point to be one of the following:

- **Design name**
- **Design name (with prefix)**
- **Design name (with suffix)**
- the next **Auto point name**

For the design name options that have a prefix or suffix, complete the **Prefix/Suffix** field as required.

NOTE – The design name options are available only when staking points.

You can also set the code of the As-staked point to be one of the following:

- **Design name**
- **Design code**
- **Last code used**
- **Design station and offset**

The **Description** defaults as follows:

- When staking a point, line or arc with descriptions, the description of the as-staked point will default to the description of the design entity unless the **As-staked** code is set to **Last code used** in which case the last used description is used.
- When staking a road using the Roads application, the description will always be the last used independent of the **As-staked code** setting.

Store grid deltas

Set the **Store grid deltas** check box. Do one of the following:

- Select the check box to display and store the delta northing, delta easting, and delta elevation during stakeout.
- Clear the check box to display and store the deltas as a horizontal distance, vertical distance, and azimuth.

NOTE – If you use a user definable stakeout report, the **Store grid deltas** option is not used, unless it is referenced in your report.

To stake out points

You can stake a single point or group of points from the map, or from the menu.

Before you start, configure your [navigation display settings](#). You can stake [relative to a DTM](#) or [the design elevation](#), if required.

When navigating to the point, you can navigate to and stake a new point defined by an azimuth and offset from the selected point, if required.

To stake a single point from the map

Conventional survey



1. Make sure the **Target height** is correct.
To change the target height, tap the target icon in the status bar and edit the height of the target. Tap **Accept**.
2. Tap the point in the map and then tap **Stakeout**. Alternatively, double-tap the point.
3. [Navigate to the point](#).
4. When the point is within tolerance, tap **Measure** to measure the point.
5. Tap **Accept** to store the point.
6. If you selected the **View before storage** option, the staked deltas you selected in the **Stakeout options** screen are shown. Tap **Store**.

GNSS survey

1. Make sure the **Antenna height** and **Measured to** information is correct.
2. Tap the point in the map and then tap **Stakeout**. Alternatively, double-tap the point.
3. [Navigate to the point](#).

4. When the point is within tolerance, measure the point.
5. Tap **Store**.
6. If you selected the **View before storage** option, the staked deltas you selected in the **Stakeout options** screen are shown. Tap **Store**.

 
To stake a single point from the Stakeout menu

1. Tap  and select **Stakeout / Points**.
2. If the **Stake out items** list appears beside the map, tap **Point** to change to staking a single point.
3. Tap  next to the **Point name** field and select:
 - **List** to view a list of all points in the current job and linked files.
 - **Wildcard search** to select from a filtered list of all points in the current job and linked files.
 - **Key in** to key in the coordinates of the point to stake.

TIP – Tap **Closest** to populate the **Point name** field with the name of the closest point. (In portrait mode, swipe right to left along the row of softkeys to view more softkeys.) **Closest** searches the current job and all linked files to find the closest point that is **not** an as-staked point or a design point for the as-staked points.

4. Enter the **Point increment value**. After measuring and storing the point, the software uses the **Point increment** value to determine the next point to stake. To:
 - Return to the stake out point screen after staking a point, enter an increment of 0 or ?.
 - Automatically increment to the next point, enter a valid increment value.

If a point does not exist using the increment specified, tap **Cancel** to return to this screen after staking a point. Alternatively, tap the **Search** button to find the next available point.

You can use a decimal point increment, for example 0.5. You can also increment the numeric component of a point name that ends in alpha characters, for example, you can increment 1000a by 1 to 1001a. To do this, tap  and then clear the **Apply to numeric only** check box.

5. Navigate to the point and stake it. Refer to the steps in the [To stake a single point from the map, page 592](#) section above.
6. The software uses the **Point increment** value to determine the next point to stake. If a point with the increment value exists, the name and navigation information for the next point are shown.

If the point does not exist, the **Stake out point** screen appears. Select the next point to stake. Tap **Next** to find the next point. If it does not exist, tap the **Search** button to find the next available point.

TIP – When staking a single point, you can still use a stake point list to ensure that you stake all required points. To do this, build the stake list, make sure that **Remove staked point from list** is enabled, and stake points using the stake a single point mode. As points are staked they will be removed from the stake list. Tap **List** as required to check which points still need to be staked.

To edit the design elevation

When navigating to a point during stakeout, the design elevation is shown in the **Stake out** screen. To edit the elevation, press the **Space** key or tap > and enter the new elevation value.

The original design elevation is automatically restored as soon as you change the design or the section of the design being staked, or once you exit stakeout. To restore the original elevation during stakeout after you have edited it, press the **Space** key or tap ▶ and then tap ▶ next to the **Design elevation** field and select **Reload original elevation**.

After staking, you can modify the design elevation in the as-staked deltas screen, depending on the [stake out stylesheet](#) being used.

GNSS stake methods

In a GNSS survey, configure the stake method to control how stake out navigation information appears. The default method is **To the point**, where directions to the point are given from your current position.

To change the GNSS stake method:

1. Make sure you have entered an antenna height.
2. Tap ≡ and select **Stakeout / Points**.
3. If the **Stake out point** form appears beside the map showing a list, tap **Point** to change to staking a single point.
4. Tap **Options**.
5. In the **Stake** field, select the method. Select from:
 - **To the point** – stake out the point with directions from your current position. This is the default method.
 - **From fixed point** – stake out the point with cross-track information and directions from another point. Enter a point name in the **From point** field. Select from a list, key in, or measure this value.
 - **From start position** – stake out the point with cross-track information and directions from the current position when you start to navigate.
 - **From last point staked** – stake out the point with cross-track information and directions from the last point that was staked out and measured. The **staked** point is used, not the design point.
 - **Relative to azimuth** – stake out the point with the cross-track information and directions relative to the **Reference azimuth**.

The **Reference azimuth** field shows the value entered in the **Reference azimuth** field of the **Cogo settings** screen of the job properties (see [Cogo settings, page 107](#)). Editing the **Reference azimuth** field in the **Stakeout Options** screen updates the **Reference azimuth** field in the **Cogo settings** screen and the **Map settings** screen.

NOTE -

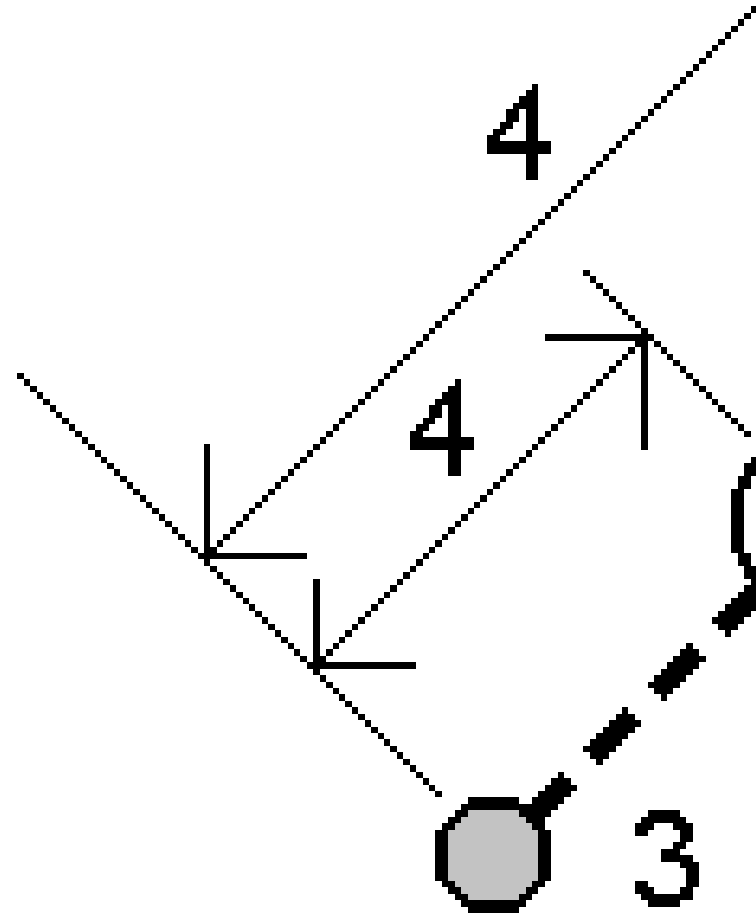
- The cross-track function creates a line between the point to be staked out and one of the following: a fixed point, the start position, the last point staked, or a reference azimuth. The Origin software displays this line, and an extra field (**Go left** or **Go right**) gives the offset to the line.
- When the **Deltas** field is set to Station and offset the **Go left** or **Go right** field shows the same information as the **H.Offset** field.
- When the **Deltas** is set to Station and offset and the **Stake** method is set to Relative to azimuth, the **Go left** or **Go right** field is replaced by the **delta Elev (to last)** staked point field.

To stake an offset point

When staking a point using the default GNSS stake method **To the point** you can stake an offset point defined by an azimuth and offset from the point.

You can also define a second offset point on the same azimuth as the first offset point.

1. When navigating to the point, tap **Offset**.
2. Use the fields in the **Offset** screen to configure staking out points (1) at an azimuth (2) from a point (3) and offset by a horizontal distance (4).



The elevation for each offset point can be defined by:

- **Slope from point** – the elevation is computed by a slope from the elevation of the point selected to stake.
- **Delta from point** – the elevation is computed by a delta from the elevation of the point selected to stake.
- **Key in** – the elevation is keyed in.

NOTE – If the point has no elevation, the elevation for the offset points must be keyed in.

3. Tap **Accept**.

The map shows the selected point and the first offset point.

4. Navigate to the offset point. See [Stakeout navigation, page 581](#).
5. When the point is within tolerance, measure the point. Tap **Store**.
If you have defined a second point, it is shown on the map.
6. Navigate to the second offset point.
7. When the point is within tolerance, measure the point. Tap **Store**.
If you are staking points from a list, the software returns to the stakeout point list.



To stake out a line


Before you start, configure your [navigation display settings](#). You can stake [relative to a DTM](#) or [the design elevation](#), if required.


1. To select the line:
 - From the map, you can:
 - Select the line and tap **Stakeout**.
 - Select the two points that define the line, and then tap and hold in the map and select **Stake out line**.
 - Double-tap the line in the map.

TIP – When selecting a line to stake out from the map, tap near the end of the line that you want to designate as the start. Arrows are then drawn on the line to indicate the direction. If the direction is incorrect, tap the line to deselect it and then tap it at the correct end to reselect the line in the direction required. Alternatively tap and hold in the map and select **Reverse line direction** from the menu.

NOTE – If the line has been offset, the offset directions are not swapped when the line direction is reversed.



- From the menu, tap  and select **Stakeout / Lines**. Tap  next to the **Line name** field and select:
 - **List** to view a list of previously defined lines to select from.
 - **Two points** to define the line from two points.
 - **Azimuth** to define the line by a start point and an azimuth.
2. In the **Stake** field, select the method and then fill out the required fields. Refer to the [Line stakeout methods, page 599](#) below.

To select the station to stake, key it in, tap the **Sta-** and **Sta+** softkeys, or tap  next to the **Station** fields to select a station from the list. To select the start or end station, tap the **Start station** or **End station** softkey.


TIP – To customize the stations available for stakeout, tap  next to the **Station** field to view the **Select station** screen. See [Stations available for stakeout](#), page 649.

 


NOTE – If the **Station interval** value is null, no station labels are displayed. If the station interval is 0, the station labels for the start and end stations plus any PI, PC or PT stations are displayed. If the station interval is a numeric value, labels for all stations are displayed (depending on the zoom scale).

3. To display the cut or fill relative to a surface during stakeout, enable the **Cut/Fill to surface** switch.
 - a. In the **Surface** field, select the surface file from the current project folder. Alternatively, in the map select surfaces from BIM files. The **Surface** field indicates the number of surfaces you have selected in the map.

If you cannot select surfaces in the map, make sure the BIM file is set to selectable in the **Layer manager**. If the **Selection mode** button  on the **BIM** toolbar is button is yellow , tap it and select **Surface selection - Individual faces** mode.

NOTE – You can select **Surface selection - Whole object** mode, but when using **Whole object** mode the software selects both the top and bottom surface and calculates the cut/fill to whichever surface you are closest to.

- b. If required, in the **Offset to surface** field, specify an offset to the surface. Tap  to select whether the offset is to be applied vertical or perpendicular to the surface.
 - c. To show the distance to the surface in the stakeout navigation screen, tap **Options**. In the **Deltas** group box, tap **Edit** and select the **V. Dist surface at current position** or the **Perp. Dist to surface at current position** delta. Tap **Accept**.
4. To review the line definition, tap **Details**.
5. Enter the **Antenna height** or **Target height**, the value of the station to be staked out (if any), and any further details, such as horizontal and vertical offsets.
6. Tap **Start**.
7. [Navigate to the point](#).

TIP – When the stake method is **Station on line**, **Station/offset from line** or **Skew offset**, you can edit the elevation. To edit do this, press the **Space** key or tap  and enter the new elevation value. The original design elevation is automatically restored as soon as you change the design or the section of the design being staked, or once you exit stakeout. To restore the original elevation during stakeout after you have edited it, press the **Space** key or tap  and then tap  next to the **Design elevation** field and select **Reload original elevation**.

8. When the point is within tolerance, tap **Measure** to measure the point.
9. Tap **Accept** to store the point.

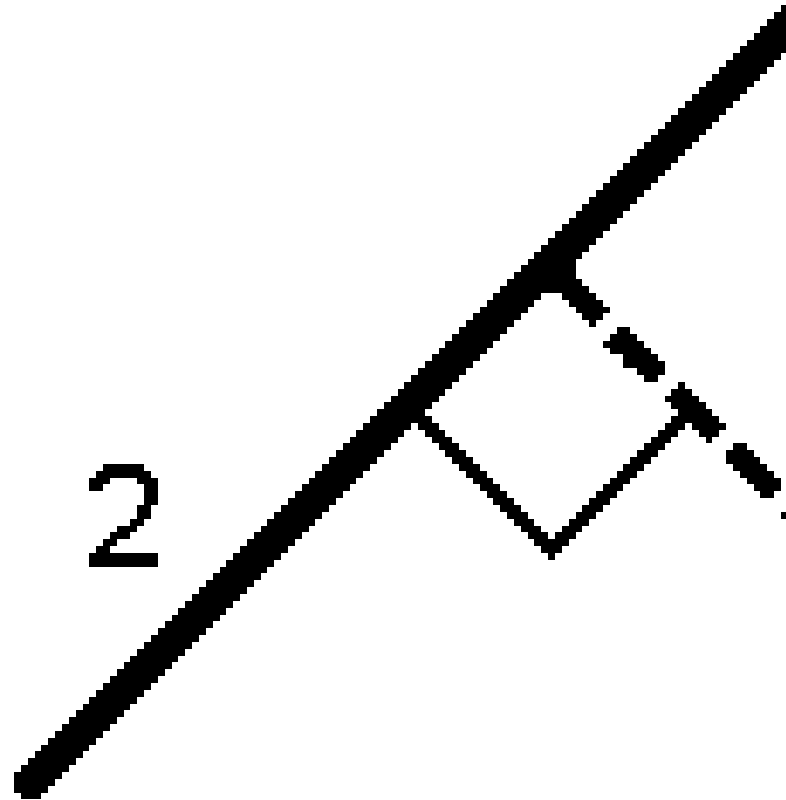
10. If you selected the **View before storage** option, the staked deltas you selected in the **Stakeout options** screen are shown. Tap **Store**.
11. The software returns to the navigation screen or, if you selected multiple items to stake out, the software returns to the **Stake out items** list.

Line stakeout methods

TIP – When staking a station or staking to the line you can tap another station or line in the map to change what you are staking, and the stakeout details in the adjacent panel update to reflect the new selection.

To the line

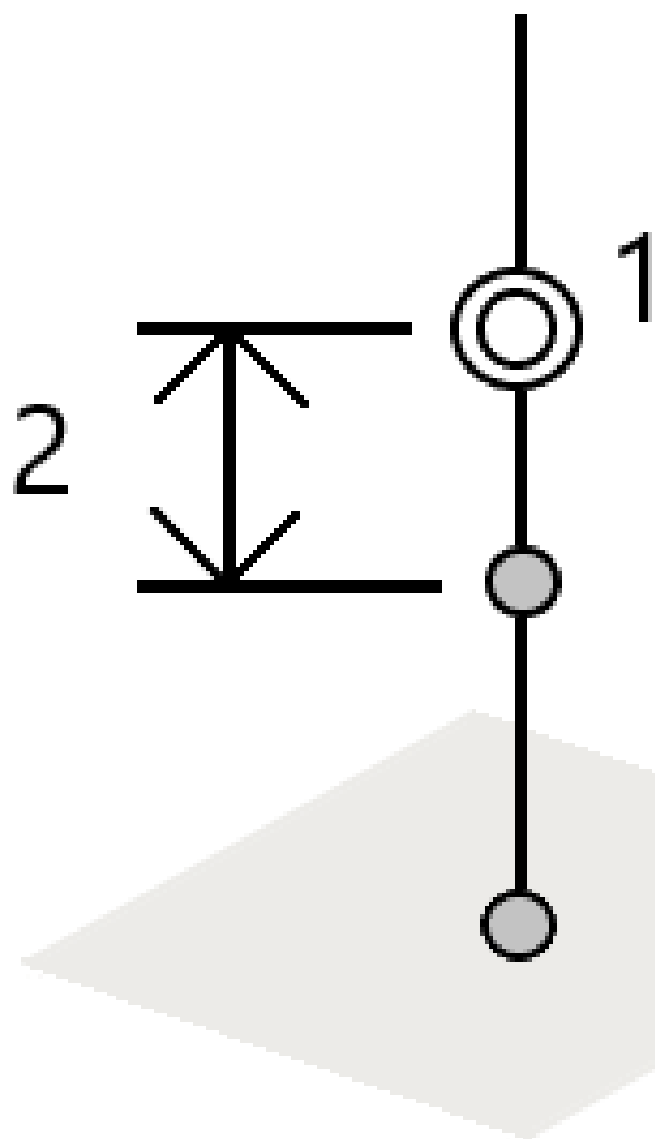
Measure your position **(1)** relative to a defined line **(2)**.



Distance along line

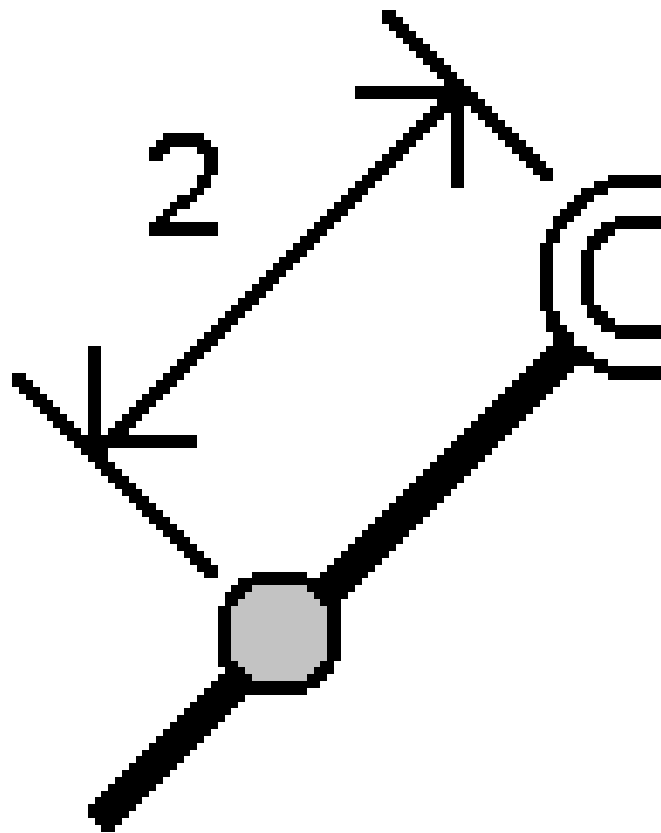
Stake out the distance along a defined line **(1)** at the distance interval **(2)**. The distance and distance interval values are **slope** distances along the line, rather than **horizontal** distances. This method also enables positions on a vertical line to be staked.

NOTE - When staking using this method the station values display in the map are on the horizontal.



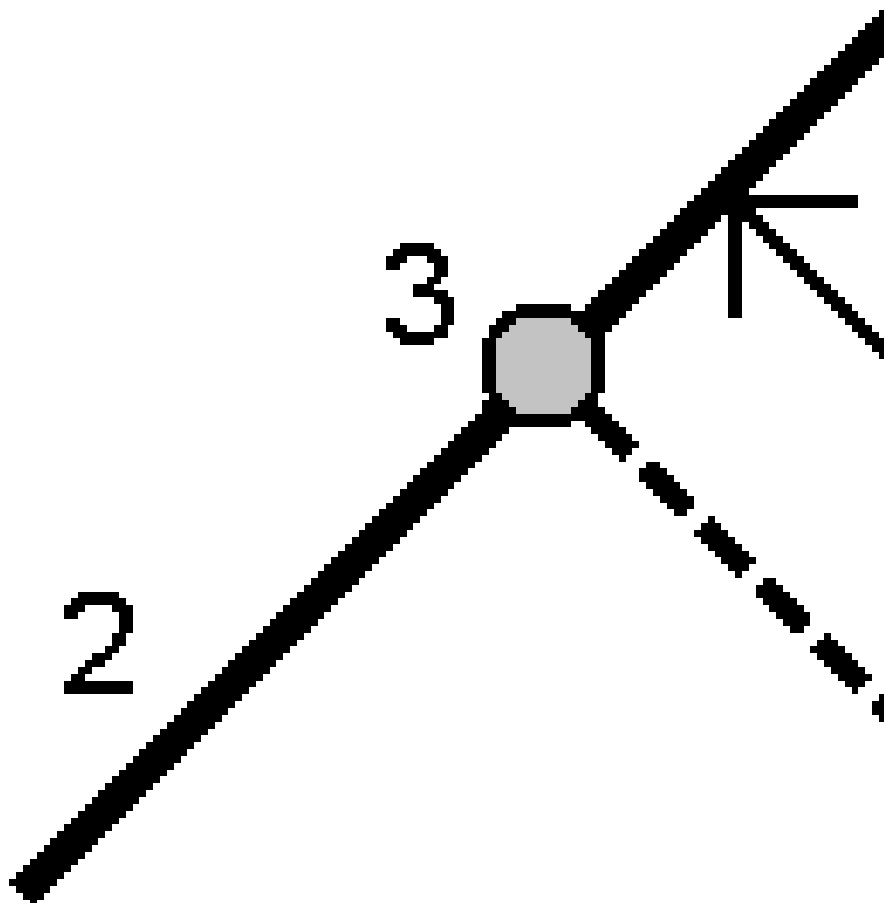
Station on line

Stake out stations **(1)** on a defined line at the station interval **(2)** along the line.



Station/offset from line

Stake out a point **(1)** perpendicular to a station **(3)** on a defined line **(2)** and offset to the left or right by a horizontal distance **(4)**. The design elevation of the point is the same as the elevation of the line at the selected station.



TIP - You can also apply a vertical offset.

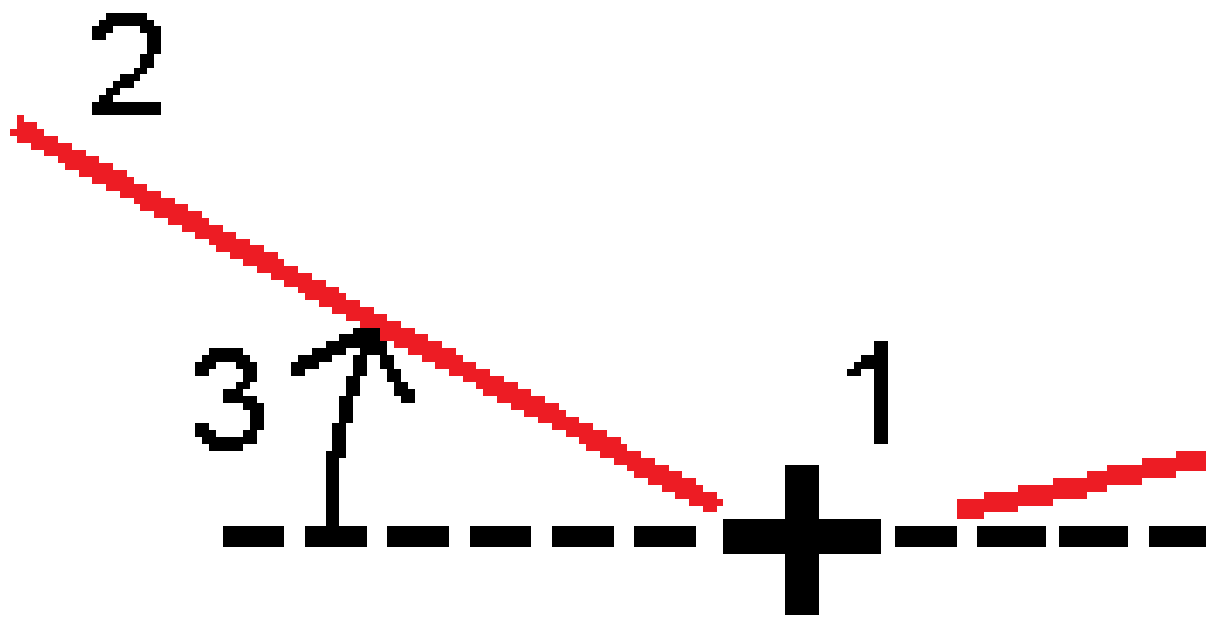
Slope from line

Measure your position relative to a slope **(2)** defined either side of a defined line **(1)**. Each slope can be defined with a different grade **(3)**.

Use the **Slope left** field and the **Slope right** field to define the type of grade in one of the following ways:

- horizontal and vertical distance
- grade and slope distance
- grade and horizontal distance

The software reports your position relative to the line and the vertical distance as a cut (4) or a fill (5) to the slope.



The elevation for the point can be defined by:

- **Slope from line** – the elevation is computed by a slope from the elevation of the line at the entered station
- **Delta from line** – the elevation is computed by a delta from the elevation of the line at the entered station.
- **Key in** – the elevation is keyed in.

NOTE – If the line has no elevation, the elevation for the point must be keyed in.

To stake out a polyline

Polylines are two or more lines or arcs connected together. If required, you can create a polyline from existing points in the map. See [To key in a polyline, page 192](#).


Before you start, configure your [navigation display settings](#). You can stake [relative to a DTM](#) or [the design elevation](#), if required.


1. To select the polyline:

 
- From the map, you can:
 - Select the polyline and tap **Stakeout**.
 - Double-tap the polyline in the map.

TIP – When selecting a polyline to stake out from the map, tap near the end of the polyline that you want to designate as the start. Arrows are then drawn on the polyline to indicate the direction. If the direction is incorrect, tap the polyline to deselect it and then tap it at the correct end to reselect the polyline in the direction required. Alternatively tap and hold in the map and select **Reverse polyline direction** from the menu.

NOTE – If the polyline has been offset, the offset directions are not swapped when the polyline direction is reversed.



- From the menu, tap  and select **Stakeout / Polylines**.
2. In the **Stake** field, select the method and then fill out the required fields. Refer to the [Polyline stakeout methods, page 609](#) below.

To select the station to stake, key it in, tap the **Sta-** and **Sta+** softkeys, or tap  next to the **Station** fields to select a station from the list. To select the start or end station, tap the **Start station** or **End station** softkey.


TIP – To customize the stations available for stakeout, tap  next to the **Station** field to view the **Select station** screen. See [Stations available for stakeout, page 649](#).

NOTE – If the **Station interval** value is null, no station labels are displayed. If the station interval is 0, the station labels for the start and end stations plus any PI, PC or PT stations are displayed. If the station interval is a numeric value, labels for all stations are displayed (depending on the zoom scale).

 


3. To display the cut or fill relative to a surface during stakeout, enable the **Cut/Fill to surface** switch.
 - a. In the **Surface** field, select the surface file from the current project folder. Alternatively, in the map select surfaces from BIM files. The **Surface** field indicates the number of surfaces you have selected in the map.

If you cannot select surfaces in the map, make sure the BIM file is set to selectable in the **Layer manager**. If the **Selection mode** button  on the **BIM** toolbar is button is yellow , tap it and select **Surface selection - Individual faces** mode.

NOTE – You can select **Surface selection - Whole object** mode, but when using **Whole object** mode the software selects both the top and bottom surface and calculates the cut/fill to whichever surface you are closest to.

- b. If required, in the **Offset to surface** field, specify an offset to the surface. Tap  to select whether the offset is to be applied vertical or perpendicular to the surface.
 - c. To show the distance to the surface in the stakeout navigation screen, tap **Options**. In the **Deltas** group box, tap **Edit** and select the **V. Dist surface at current position** or the **Perp. Dist to surface at current position** delta. Tap **Accept**.
4. To review the polyline definition, tap **Details**.
5. Enter the **Antenna height** or **Target height**, the value of the station to be staked out (if any), and any further details, such as horizontal and vertical offsets.
6. Tap **Start**.
7. Navigate to the point.

NOTE – The **Relative to polyline** navigation deltas are derived by projecting from your current position perpendicular to the polyline to compute the **Go Right/Go Left** value, with the **Go Forward/Go Backward** value computed from that station along the polyline to the target station.

TIP – When the stake method is **Station on polyline**, **Station/offset from polyline** or **Skew offset**, you can edit the elevation. To edit do this, press the **Space** key or tap  and enter the new elevation value. The original design elevation is automatically restored as soon as you change the design or the section of the design being staked, or once you exit stakeout. To restore the original elevation during stakeout after you have edited it, press the **Space** key or tap  and then tap  next to the **Design elevation** field and select **Reload original elevation**.

8. When the point is within tolerance, tap **Measure** to measure the point.
9. Tap **Accept** to store the point.

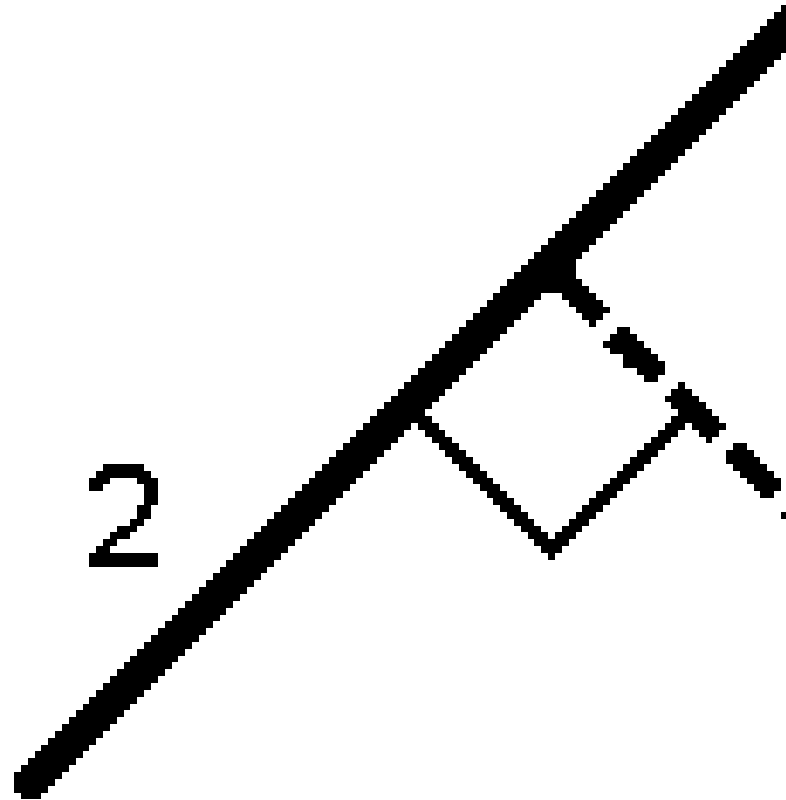
10. If you selected the **View before storage** option, the staked deltas you selected in the **Stakeout options** screen are shown. Tap **Store**.
11. The software returns to the navigation screen or, if you selected multiple items to stake out, the software returns to the **Stake out items** list.

Polyline stakeout methods

TIP – When staking a station or staking to the polyline you can tap another station or polyline in the map to change what you are staking, and the stakeout details in the adjacent panel update to reflect the new selection.

To the polyline

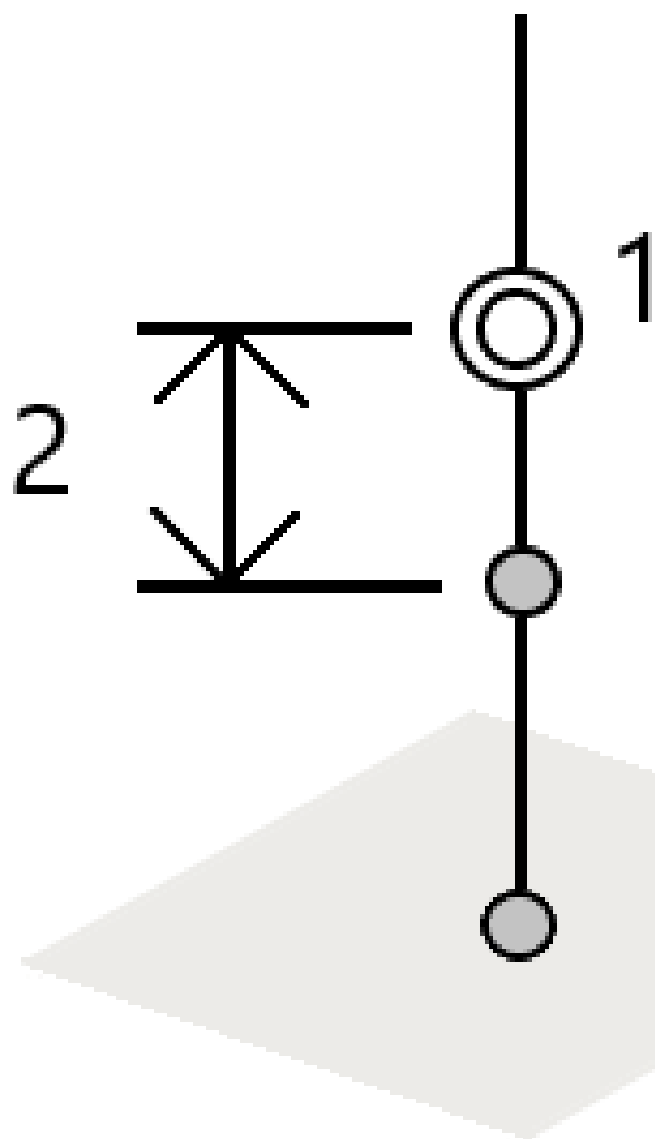
Measure your position **(1)** relative to a polyline **(2)**.



Distance along polyline

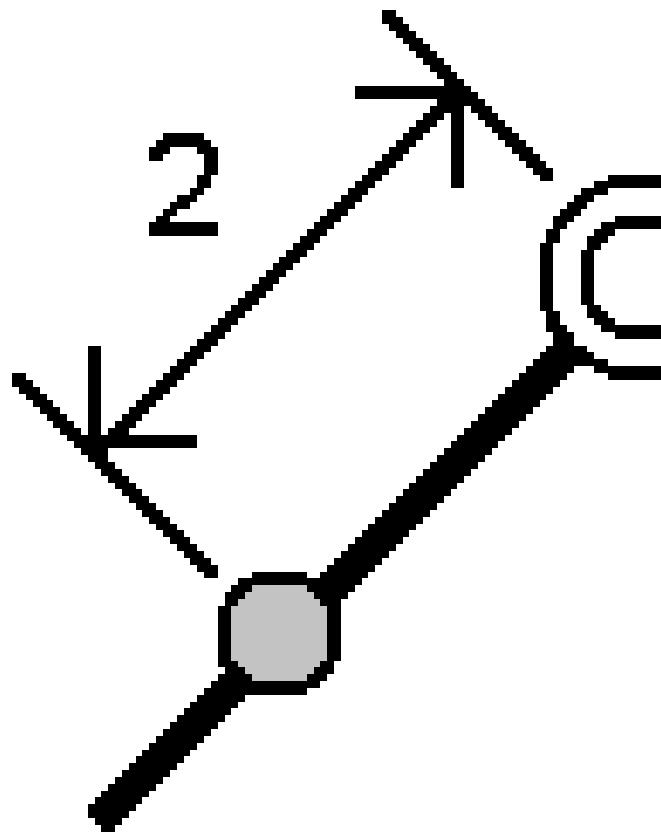
Stake out the distance along a defined polyline **(1)** at the distance interval **(2)**. The distance and distance interval values are **slope** distances along the polyline, rather than **horizontal** distances. This method also enables positions on a vertical polyline to be staked.

NOTE - When staking using this method the station values display in the map are on the horizontal.



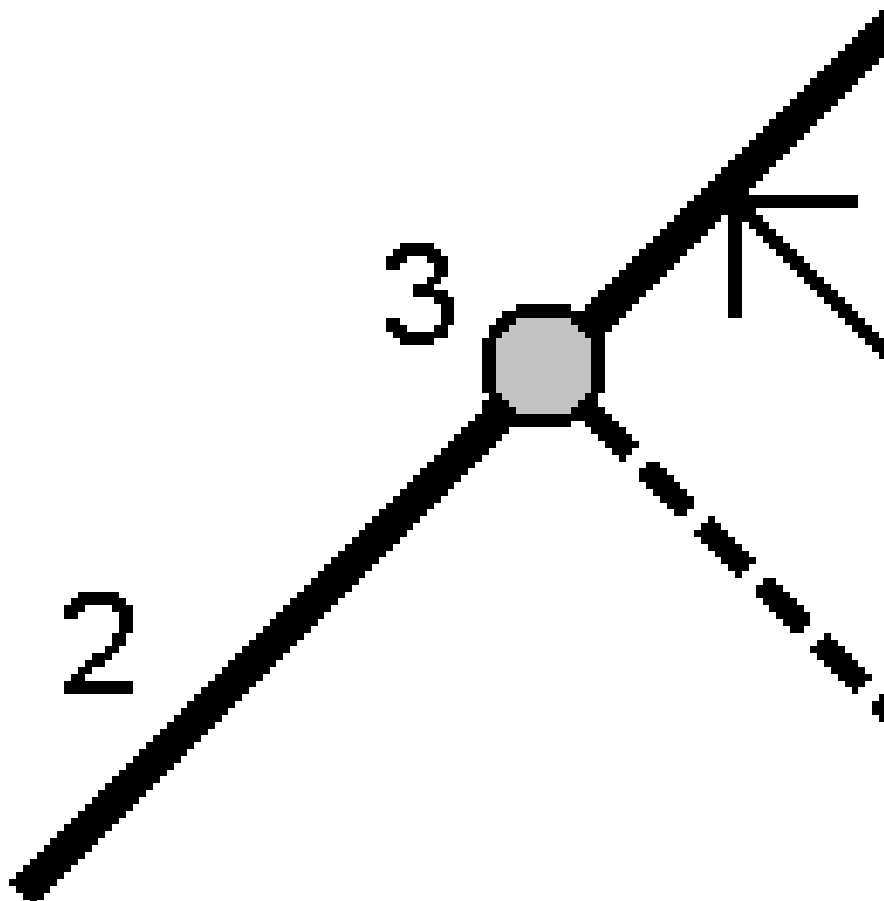
Station on polyline

Stake out stations **(1)** on a defined polyline at the station interval **(2)** along the polyline.



Station/offset from polyline

Stake out a point **(1)** perpendicular to a station **(3)** on a defined polyline **(2)** and offset to the left or right by a horizontal distance **(4)**. The design elevation of the point is the same as the elevation of the polyline at the selected station.



TIP - You can also apply a vertical offset.

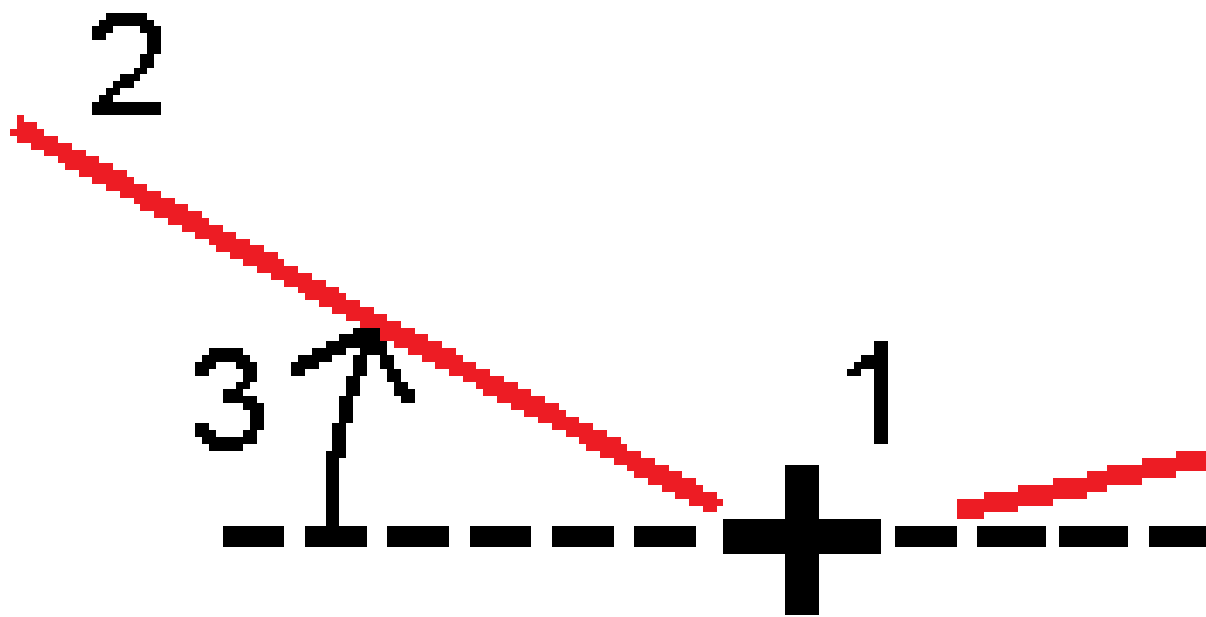
Slope from polyline

Measure your position relative to a slope **(2)** defined either side of a defined polyline **(1)**. Each slope can be defined with a different grade **(3)**.

Use the **Slope left** field and the **Slope right** field to define the type of grade in one of the following ways:

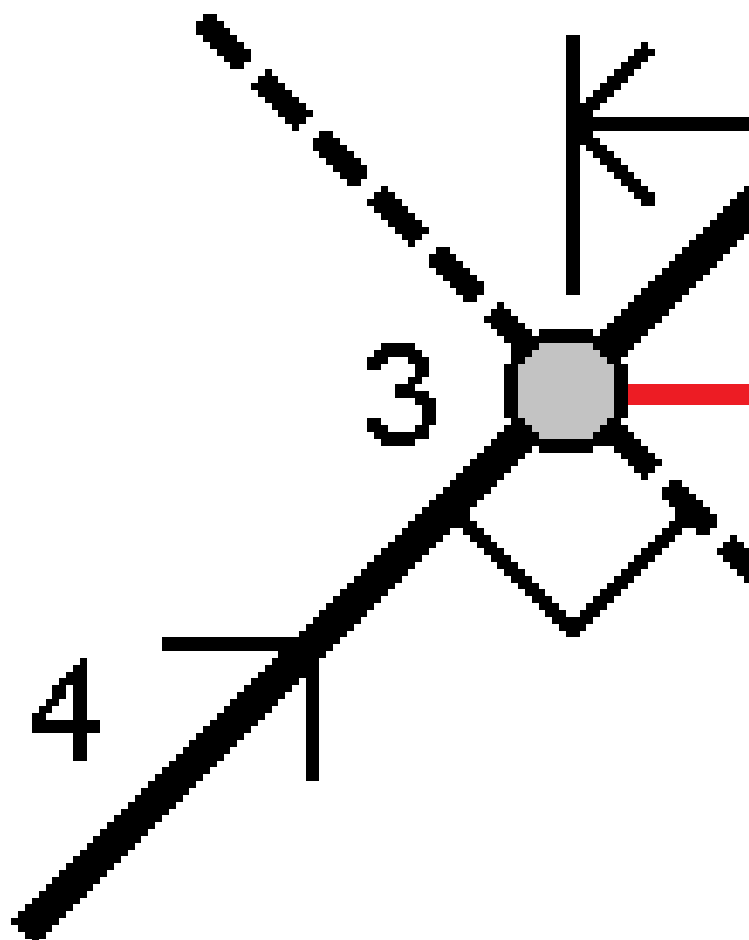
- horizontal and vertical distance
- grade and slope distance
- grade and horizontal distance

The software reports your position relative to the polyline and the vertical distance as a cut (4) or a fill (5) to the slope.



Skew offset

Stake out a point **(1)** at a skew **(2)** from a station **(3)** on a defined polyline **(4)** and offset to the left or right by a skew distance **(5)**. The skew can be defined by a forward or backward delta angle to a polyline **(6)** at right angles to the polyline being staked, or the skew can be defined by an azimuth. The diagram shows a point defined by a skew forward and offset to the right.



 
The elevation for the point can be defined by:

- **Slope from polyline** – the elevation is computed by a slope from the elevation of the polyline at the entered station
- **Delta from polyline** – the elevation is computed by a delta from the elevation of the polyline at the entered station.
- **Key in** – the elevation is keyed in.

NOTE – If the polyline has no elevation, the elevation for the point must be keyed in.

 
Side slope from polyline

- To define the hinge, select a **Hinge derivation** method and then complete the appropriate fields:



1 - Offset and elevation. Enter an offset (**4**) from the polyline, and the elevation (**5**) of the hinge position.

2 - Offset and slope. Enter an offset (**6**) from the polyline, and the slope value (**7**) from the polyline to the hinge position.





TIP - When staking a side slope the hinge position and, if applicable, the cut slope hinge position are displayed in the map and can be selected and staked.

To stake out an arc

Before you start, configure your [navigation display settings](#). You can stake [relative to a DTM](#) or [the design elevation](#), if required.

 
1. Do one of the following:

 
- Tap  and select **Stakeout / Arcs** and then tap  next to the **Arc name** field to view a list of previously defined arcs to select from.
- In the map, select the arc to be staked out. Tap **Stakeout**.

TIP – When selecting an arc to stake out, tap near the end of the arc that you want to designate as the start. Arrows are then drawn on the arc to indicate the direction. If the direction of the arc is incorrect, tap the arc to deselect it and then tap it at the correct end to reselect the arc in the direction required. Alternatively tap and hold in the map and select **Reverse arc direction**.

NOTE – If the arc has been offset, the offset directions are not swapped when the arc direction is reversed.

2. In the **Stake** field, select the method and then fill out the required fields. Refer to the [Arc stakeout methods](#), page 622 below.



To select the station to stake, key it in, tap the **Sta-** and **Sta+** softkeys, or tap  next to the **Station** fields to select a station from the list. To select the start or end station, tap the **Start station** or **End station** softkey.

TIP – To customize the stations available for stakeout, tap  next to the **Station** field to view the **Select station** screen. See [Stations available for stakeout](#), page 649.


NOTE – If the **Station interval** value is null, no station labels are displayed. If the station interval is 0, the station labels for the start and end stations plus any PI, PC or PT stations are displayed. If the station interval is a numeric value, labels for all stations are displayed (depending on the zoom scale).


 
 
3. To display the cut or fill relative to a surface during stakeout, enable the **Cut/Fill to surface** switch.

- In the **Surface** field, select the surface file from the current project folder. Alternatively, in the map select surfaces from BIM files. The **Surface** field indicates the number of surfaces you have selected in the map.

If you cannot select surfaces in the map, make sure the BIM file is set to selectable in the **Layer manager**. If the **Selection mode** button  on the **BIM** toolbar is button is yellow , tap it and select **Surface selection - Individual faces** mode.

NOTE – You can select **Surface selection - Whole object** mode, but when using **Whole object** mode the software selects both the top and bottom surface and calculates the cut/fill to whichever surface you are closest to.

- b. If required, in the **Offset to surface** field, specify an offset to the surface. Tap  to select whether the offset is to be applied vertical or perpendicular to the surface.
 - c. To show the distance to the surface in the stakeout navigation screen, tap **Options**. In the **Deltas** group box, tap **Edit** and select the **V. Dist surface at current position** or the **Perp. Dist to surface at current position** delta. Tap **Accept**.
4. To review the arc definition, tap **Details**.
 5. Enter the **Antenna height** or **Target height**, the value of the station to be staked out (if any), and any further details, such as horizontal and vertical offsets.
 6. Tap **Start**.
 7. Navigate to the point.

TIP – When the stake method is **Station on arc, Station/offset from arc, Intersect point of arc, Center point of arc, or Skew offset**, you can edit the elevation. To edit do this, press the **Space** key or tap  and enter the new elevation value. The original design elevation is automatically restored as soon as you change the design or the section of the design being staked, or once you exit stakeout. To restore the original elevation during stakeout after you have edited it, press the **Space** key or tap  and then tap  next to the **Design elevation** field and select **Reload original elevation**.

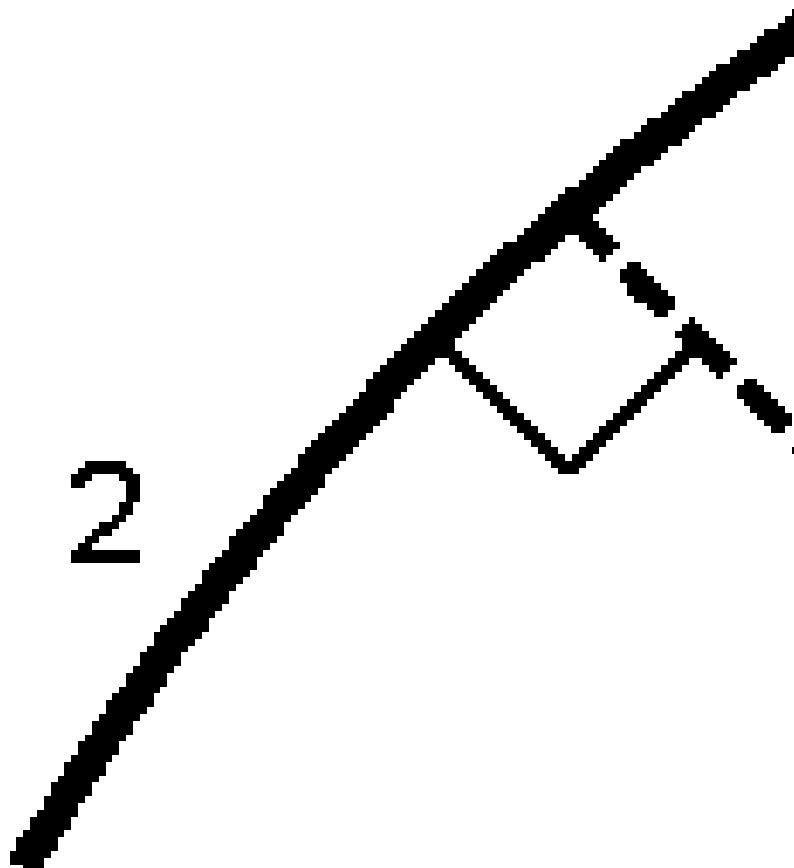
8. When the point is within tolerance, tap **Measure** to measure the point.
9. Tap **Accept** to store the point.
10. If you selected the **View before storage** option, the staked deltas you selected in the **Stakeout options** screen are shown. Tap **Store**.
11. The software returns to the navigation screen or, if you selected multiple items to stake out, the software returns to the **Stake out items** list.

Arc stakeout methods

TIP – When staking a station or staking to the arc you can tap another station or arc in the map to change what you are staking, and the stakeout details in the adjacent panel update to reflect the new selection.

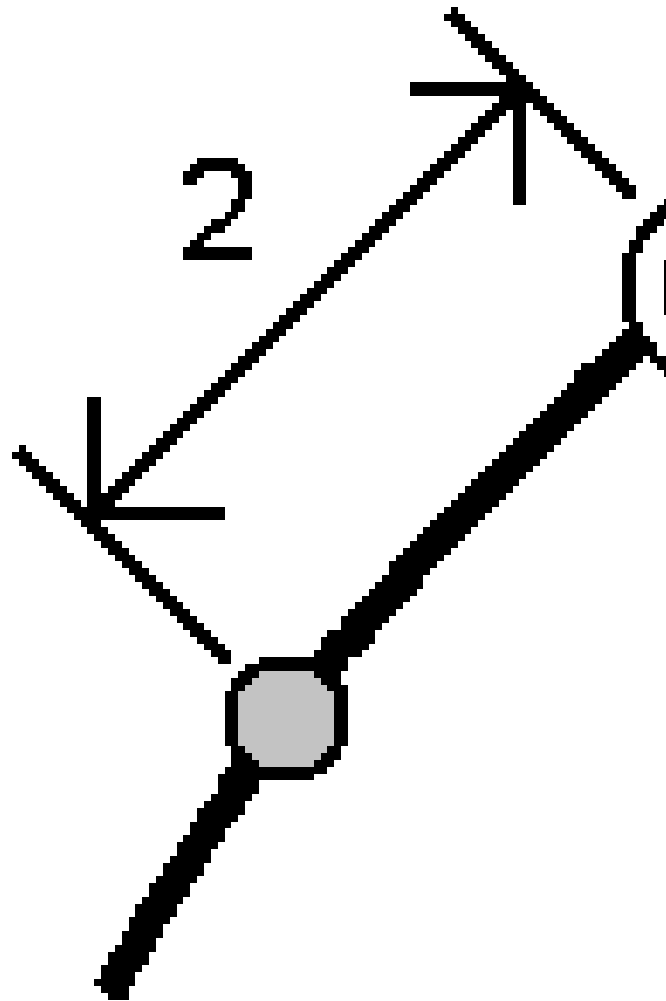
To the arc

Measure your position **(1)** relative to a defined arc **(2)**.



Station on arc

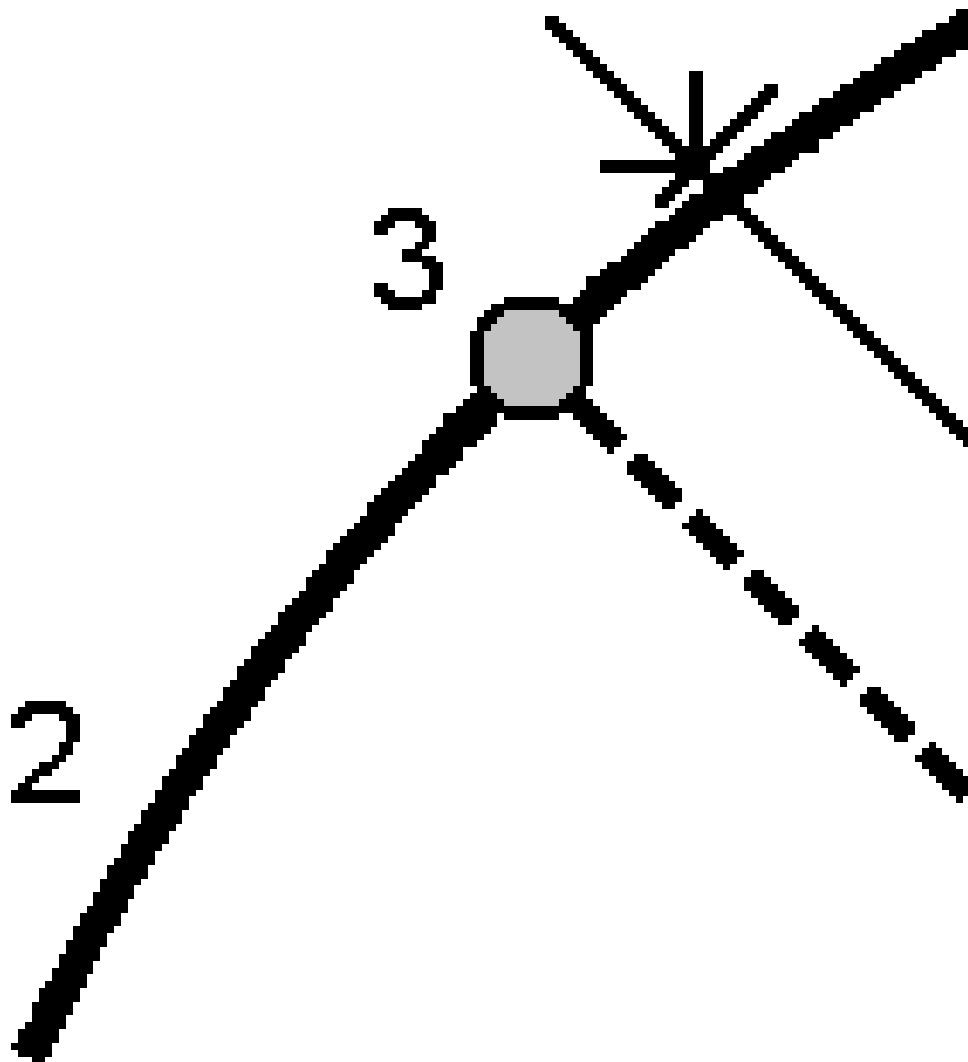
Stake out points **(1)** on a defined arc at the station intervals **(2)** along the arc.



Station/offset from arc

Stake out a point **(1)** perpendicular to a station **(3)** on a defined arc **(2)** and offset to the left or right by a horizontal distance **(4)**.

The design elevation of the point is the same as the elevation of the arc at the selected station.



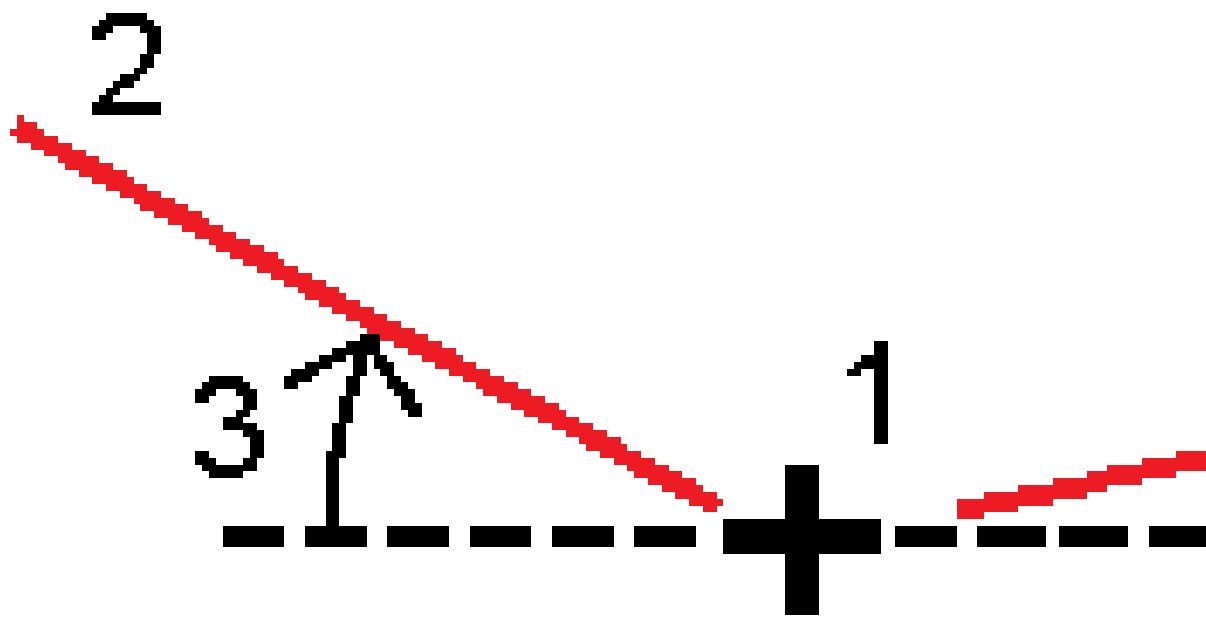
Slope from arc

Measure your position relative to a slope **(2)** defined either side of a defined arc **(1)**. Each slope can be defined with a different grade **(3)**.

Use the **Slope left** field and the **Slope right** field to define the type of grade in one of the following ways:

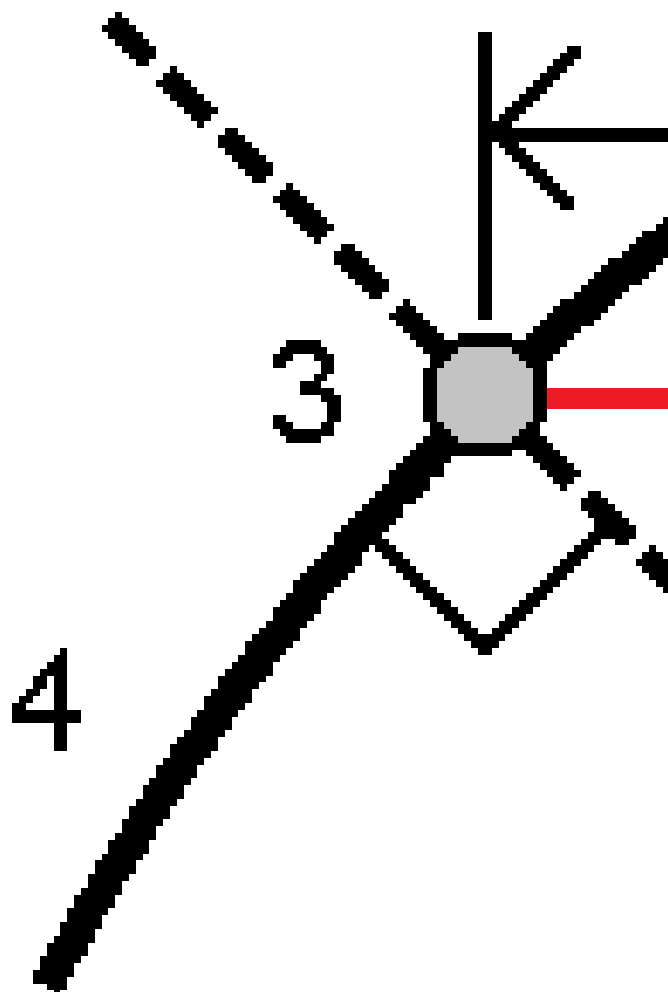
- horizontal and vertical distance
- grade and slope distance
- grade and horizontal distance

The software reports your position relative to the arc and the vertical distance as a cut **(4)** or a fill **(5)** to the slope.



Skew offset

Stake out a point **(1)** at a skew **(2)** from a station **(3)** on a defined arc **(4)** and offset to the left or right by a skew distance **(5)**. The skew can be defined as a forward or backward delta angle to a line **(6)** at right angles to the arc being staked, or the skew can be defined by an azimuth. The diagram shows a point defined by a skew forward and offset to the right.



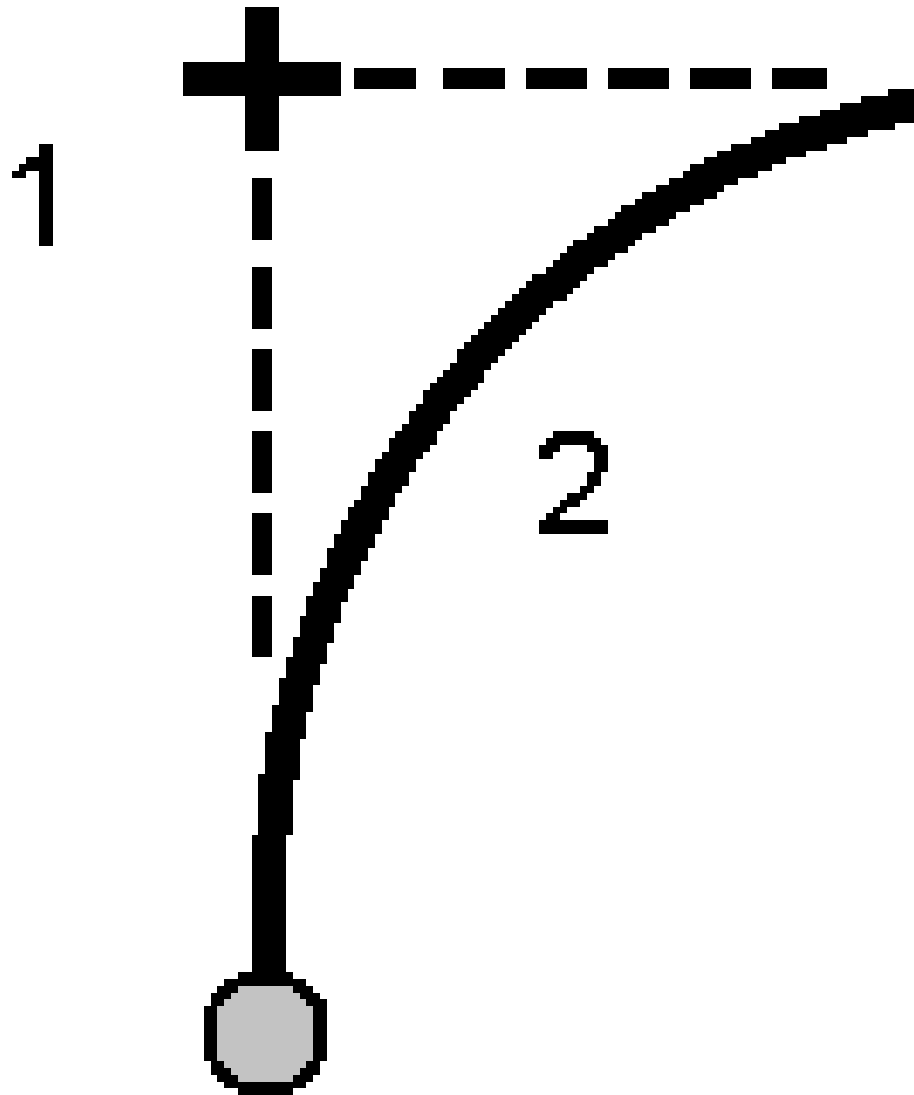
The elevation for the point can be defined by:

- **Slope from arc** – the elevation is computed by a slope from the elevation of the arc at the entered station.
- **Delta from arc** – the elevation is computed by a delta from the elevation of the arc at the entered station.
- **Key in** – the elevation is keyed in.

NOTE – If the arc has no elevation, the elevation for the point must be keyed in.

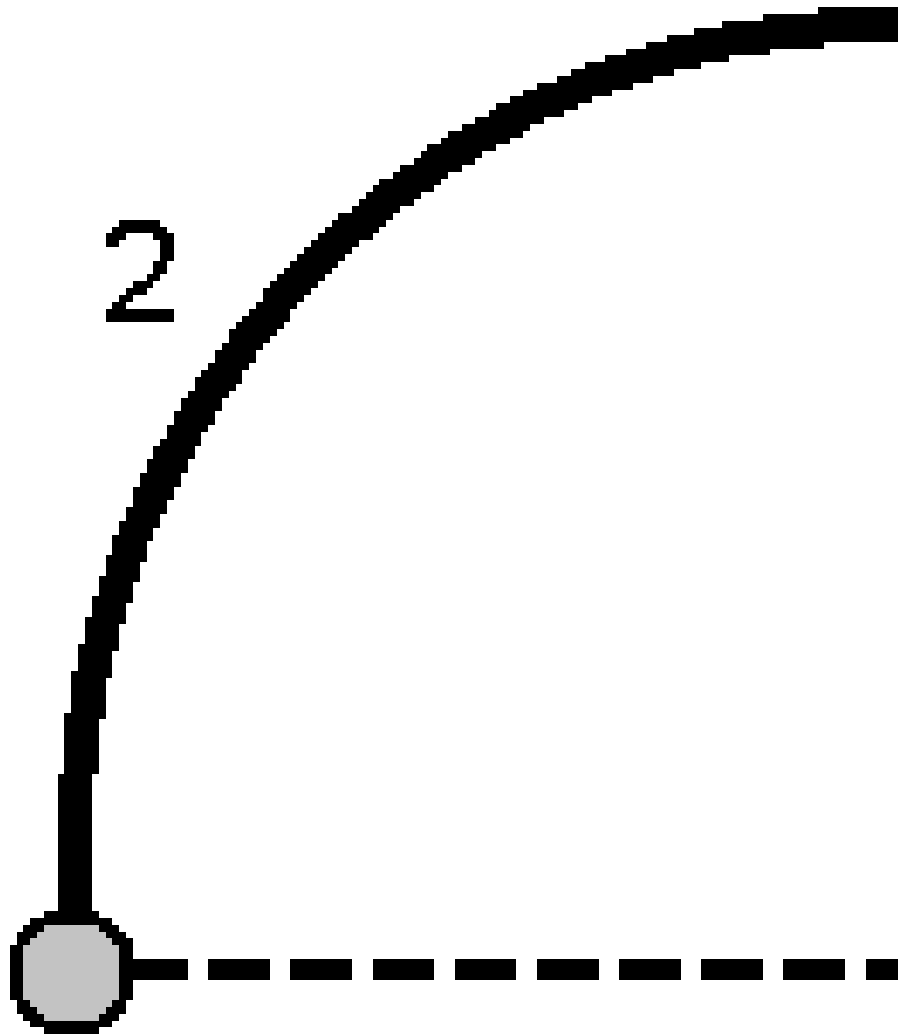
Intersect point of arc

Stake out the Intersection point **(1)** of an arc **(2)**.



Center point of arc

Stake out the center point **(1)** of a defined arc **(2)**.



To stake out an alignment

The Origin software supports the following alignment formats:

 

- **RXL:** Defined in the Origin Roads or Survey Office software, or a number of third-party design packages including Autodesk AutoCAD Land Desktop, Autodesk Civil 3D, Bentley InRoads, and Bentley GEOPAK.
- **LandXML:** Defined in the Survey Office or Tekla Civil software, or a number of third-party design packages including Autodesk AutoCAD Land Desktop, Autodesk Civil 3D, Bentley InRoads, and Bentley GEOPAK.
- **12da:** Defined in the 12d Model software as alignments or super alignments. Origin can work with both alignment types.
- **IFC:** Define an alignment using the IFC 4.1 schema using a number of design software packages.

These files can be easily shared between jobs and with other controllers.

When staking an alignment defined in an RXL file, you can work from the map or from the menu. When staking an alignment defined in a LandXML, 12da, or IFC file, you must work from the map.



Before you start, configure your [navigation display settings](#). You can stake [relative to a DTM](#) or [the design elevation](#), if required.

To stake out the alignment:


1. In the map, tap the alignment and then tap **Stakeout**. Alternatively, tap  and select **Stakeout**. Tap **Alignments**, select the alignment to stake and tap **Next**.
If the alignment you want to stake out is not shown in the map, tap  in the map toolbar to open the **Layer manager** and select the **Map files** tab. Select the file and then make the appropriate layer(s) visible and selectable. The file must be in the current project folder.
2. If you have not yet started a survey, the software prompts you through the steps to start the survey.
3. Enter a value in the **Antenna height** or **Target height** field and make sure that the **Measured to** field is set correctly.
4. Enter the **Station interval for lines** and **Station interval for arcs and transitions** or accept the default value set when the alignment was defined.

Station interval values are required when staking out a station on a string. These values are optional for other survey methods.

5. To display the cut or fill relative to a surface during stakeout, enable the **Cut/Fill to surface** switch.
 - a. In the **Surface** field, select the surface file from the current project folder. Alternatively, in the map select surfaces from BIM files. The **Surface** field indicates the number of surfaces you have selected in the map.

If you cannot select surfaces in the map, make sure the BIM file is set to selectable in the **Layer manager**. If the **Selection mode** button  on the **BIM** toolbar is button is yellow , tap it and select **Surface selection - Individual faces** mode.

NOTE – You can select **Surface selection - Whole object** mode, but when using **Whole object** mode the software selects both the top and bottom surface and calculates the cut/fill to whichever surface you are closest to.

- b. If required, in the **Offset to surface** field, specify an offset to the surface. Tap  to select whether the offset is to be applied vertical or perpendicular to the surface.
 - c. To show the distance to the surface in the stakeout navigation screen, tap **Options**. In the **Deltas** group box, tap **Edit** and select the **V. Dist surface at current position** or the **Perp. Dist to surface at current position** delta. Tap **Accept**.
6. Tap **Options** to configure preferences for **Grade, As-staked point details, and Display**.
 7. Tap **Next**.

The alignment is ready to stake, using your preferred stakeout method. For more information, refer to the topic for the selected method. See:

[To stake out to the alignment, page 633](#)

[To stake out a station on an alignment, page 634](#)


[To stake out the side slope from an alignment, page 635](#)

[To stake out a station at a skew offset from an alignment, page 636](#)

To stake out to the alignment

1. Tap the alignment in the map or select **To the alignment** in the **Stake** field.
2. If **construction offsets** are required, tap and hold in the map and select **Define construction offsets**. Enter values in the **Construction offsets** field. See [Construction offsets, page 639](#).
3. Tap **Start**.
4. [Navigate relative to the alignment](#).


A dashed green line is drawn at a right angle from your current position to the alignment. The elevation of your current position and the design elevation of the computed position are shown.


To switch between the plan view and the cross section view, tap .

The cross section shows your current position and the target, and is orientated in the direction of increasing station. Construction offset(s) appear as green lines. If construction offsets are specified, the smaller single circle indicates the selected position and the double circle indicates the selected position adjusted for the construction offset(s).


5. When the point is within tolerance, tap **Measure** to measure the point.
6. Tap **Accept** to store the point.
7. If you selected the **View before storage** option, the staked deltas you selected in the **Stakeout options** screen are shown. Tap **Store**.

To stake out a station on an alignment

 
 
 
TIP – To customize the stations available for stakeout, tap  next to the **Station** field to view the **Select station** screen. See [Stations available for stakeout, page 649](#).

1. Tap the station on the alignment in the map, or in the stakeout form:
 - a. Select **Station on alignment** in the **Stake** field.
 - b. Tap  next to the **Station** field and select the station or enter a nominal station value.
2. To edit the design elevation, tap and hold in the map and select **Edit elevation**. See [To edit the design elevation, page 594](#).
3. If **construction offsets** are required, tap and hold in the map and select **Define construction offsets**. Enter values in the **Construction offsets** field. See [Construction offsets, page 639](#).
4. Tap **Start**.
5. [Navigate to the point](#).


The elevation of your current position and the design elevation of the computed position are shown.

To switch between the plan view and the cross section view, tap .


The cross section shows your current position and the target, and is orientated in the direction of increasing station. Construction offset(s) appear as green lines. If construction offsets are specified, the smaller single circle indicates the selected position and the double circle indicates the selected position adjusted for the construction offset(s).


TIP – When the stake method is **Station on alignment** or **Skew offset**, you can edit the elevation. To edit do this, press the **Space** key or tap  and enter the new elevation value. The original design elevation is automatically restored as soon as you change the design or the section of the design being staked, or once you exit stakeout. To restore the original elevation during stakeout after you have edited it, press the **Space** key or tap  and then tap  next to the **Design elevation** field and select **Reload original elevation**.

6. When the point is within tolerance, tap **Measure** to measure the point.
7. Tap **Accept** to store the point.
8. If you selected the **View before storage** option, the staked deltas you selected in the **Stakeout options** screen are shown. Tap **Store**.
9. Continue measuring points along the alignment. To select the previous station, tap the **Sta-** softkey. To select the next station, tap the **Sta+** softkey.

TIP – Alternatively, tap  next to the **Station** field to open the **Select station** screen and then from the **Auto increment** field select **Sta-** or **Sta+** to [automate the selection of the previous or next station](#).


To stake out the side slope from an alignment

TIP – To customize the stations available for stakeout, tap  next to the **Station** field to view the **Select station** screen. See [Stations available for stakeout, page 649](#).

1. Select **Side slope from alignment** in the **Stake** field.
2. Tap  next to the **Station** field and select the station or enter a nominal station value.
3. Tap **Side slope**.
4. Select the **Hinge derivation method**. Complete the appropriate fields to define the hinge, offset to the alignment, and the side slope. See [Hinge derivation methods, page 642](#).
5. If **construction offsets** are required, tap and hold in the map and select **Define construction offsets**. Enter values in the **Construction offsets** field. See [Construction offsets, page 639](#).
6. Tap **Start**.
7. [Navigate to the point](#).

The elevation of your current position and the side slope value defined by your current position are shown.

When you are within 3 m of the target the plan view shows your current position along with the target. A dashed line connects the side slope catch position (the point where the side slope intersects with the ground) to the side slope hinge position.


To switch between the plan view and the cross section view, tap .

The cross section shows your current position and the target, and is orientated in the direction of increasing station. Construction offset(s) appear as green lines. If construction offsets are specified, the smaller single circle indicates the selected position and the double circle indicates the selected position adjusted for the construction offset(s).

If you are staking to a **catch point** with construction offsets, navigate to the catch point and then tap **Apply** to add the construction offsets. You are prompted to apply the offsets from your current position. If you are not on the catch position, select **No**, navigate to the catch position and then tap **Apply** again. See **Catch point** in the *Spectra Geospatial Origin Roads User Guide*.


To store the catch position and the construction offset, see [Construction offsets, page 639](#).


8. When the point is within tolerance, tap **Measure** to measure the point.
9. Tap **Accept** to store the point.
10. If you selected the **View before storage** option, the staked deltas you selected in the **Stakeout options** screen are shown. Tap **Store**.
11. Continue measuring points along the alignment. To select the previous station, tap the **Sta-** softkey. To select the next station, tap the **Sta+** softkey.

TIP – Alternatively, tap  next to the **Station** field to open the **Select station** screen and then from the **Auto increment** field select **Sta-** or **Sta+** to automate the selection of the previous or next station.

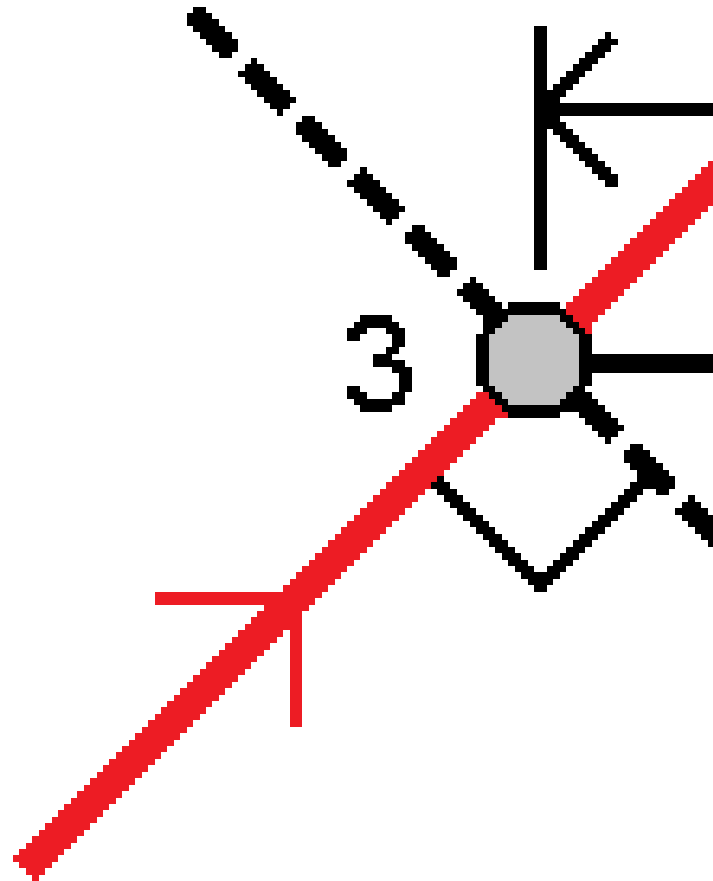
NOTE – To also stake the appropriate hinge position, tap **Select>>** and select the **Hinge point (Cut)** or **Hinge point (Fill)** option.

To stake out a station at a skew offset from an alignment

TIP – To customize the stations available for stakeout, tap  next to the **Station** field to view the **Select station** screen. See Stations available for stakeout, page 649.

1. In the **Stake** field, select **Skew offset**.
2. Tap  next to the **Station** field and select the station or enter a nominal station value.
3. Tap **Skew offset** and enter the skew and offset values.

As shown in the diagram below, the point to stake (1) is defined from the station (3) by an offset (5) along the skew (2). The skew can be defined by a forward or backward delta angle to a line (6) at right angles to the alignment being staked (4), or the skew can be defined by an azimuth. The diagram shows a point defined by skew forward and offset to the right.



4. The elevation for the point can be defined by:

- **Slope from alignment** – the elevation is computed by a slope from the elevation of the alignment at the entered station.
- **Delta from alignment** – the elevation is computed by a delta from the elevation of the alignment at the entered station.
- **Key in** – the elevation is keyed in.

 
 

If the alignment only has a horizontal alignment, the elevation for the point must be keyed in.

5. If **construction offsets** are required, tap and hold in the map and select **Define construction offsets**. Enter values in the **Construction offsets** field. See [Construction offsets, page 639](#).

NOTE – If the computed position is before the start or beyond the end of the alignment the point cannot be staked.


6. Tap **Start**.
7. [Navigate to the point](#).

The elevation of your current position, the design elevation of the selected position, and the skew offset and delta information are shown.

 
TIP – When the stake method is **Station on alignment** or **Skew offset**, you can edit the elevation. To edit do this, press the **Space** key or tap  and enter the new elevation value. The original design elevation is automatically restored as soon as you change the design or the section of the design being staked, or once you exit stakeout. To restore the original elevation during stakeout after you have edited it, press the **Space** key or tap  and then tap  next to the **Design elevation** field and select **Reload original elevation**.

NOTE – When staking a station at a skew offset, the cross section view is unavailable.

8. When the point is within tolerance, tap **Measure** to measure the point.
9. Tap **Accept** to store the point.
10. If you selected the **View before storage** option, the staked deltas you selected in the **Stakeout options** screen are shown. Tap **Store**.
11. Continue measuring points along the alignment. To select the previous station, tap the **Sta-** softkey. To select the next station, tap the **Sta+** softkey.

TIP – Alternatively, tap  next to the **Station** field to open the **Select station** screen and then from the **Auto increment** field select **Sta-** or **Sta+** to automate the selection of the previous or next station.

To offset an alignment

1. Tap  and select **Stakeout / Alignments**.
2. In the **Select file** screen, select the alignment to stake.
3. Tap **Offset** in the **Select file** screen.
4. Enter the offset distance. To offset to the left, enter a negative value.
5. Select the **Store offset alignment** check box and enter the **Alignment name**.
6. Enter the **String name**.
7. To store node points at the vertices of the offset alignment, select the **Store points at nodes** check

box and enter the **Start point name** and the **Code**, if required.

8. Tap **Store**.

NOTE – An offset alignment has a vertical component if the vertical geometry of the original alignment coincides with the horizontal geometry and the vertical geometry consists only of points. The offset vertical geometry cannot include curves. If the vertical geometry of an alignment cannot be offset, only the horizontal component will exist in the offset alignment. You cannot offset an alignment that includes transitions.

Construction offsets

A point to be staked can be offset by a horizontal or a vertical offset.

During stakeout a construction offset is indicated by a green line, with the double circle indicating the selected position adjusted for the specified construction offset(s).

When you define a construction offset for an alignment, the offset is:

- used for all alignments in the same job.
- used for all subsequent surveys of the alignment in the same job, until a different construction offset is defined.
- not used for the same alignment when it accessed from a different job.

Horizontal construction offsets

When staking stations on the alignment or at a skew offset from the alignment, you can define a horizontal construction where:

- A negative value offsets points to the left of the alignment.
- A positive value offsets points to the right of the alignment.

NOTE – When staking a station at a skew offset from the alignment, the horizontal construction offset is applied along the skew, not at right angles to the alignment.

When staking stations offset from the alignment or when staking a side slope, you can define a horizontal construction where:

 
- A negative value offsets points toward the alignment (in).
- A positive value offsets points away from the alignment (out).

When staking a catch point, tap  next to the **Horizontal offset** field to specify if the offset is to be applied:

- Horizontally
- At the slope of the previous element in the cross section

NOTE – Construction offsets are not automatically applied to a side slope offset. When you stake a side slope, select the **Store both catch and construction offset** check box to measure and store the catch position. See **Catch point** in the Spectra Geospatial Origin Roads User Guide.

The following diagram shows a **Horizontal offset (1)** and **Slope previous offset (2)** applied to the catch point **(3)**. For the **Slope previous** option, the slope of the offset is defined by the slope of the side slope **(4)**. The **Vertical offset** value in the diagram is 0.000.




NOTE – For points with zero offset, you cannot apply construction horizontal offsets at the slope value of the previous template element.

Vertical construction offsets

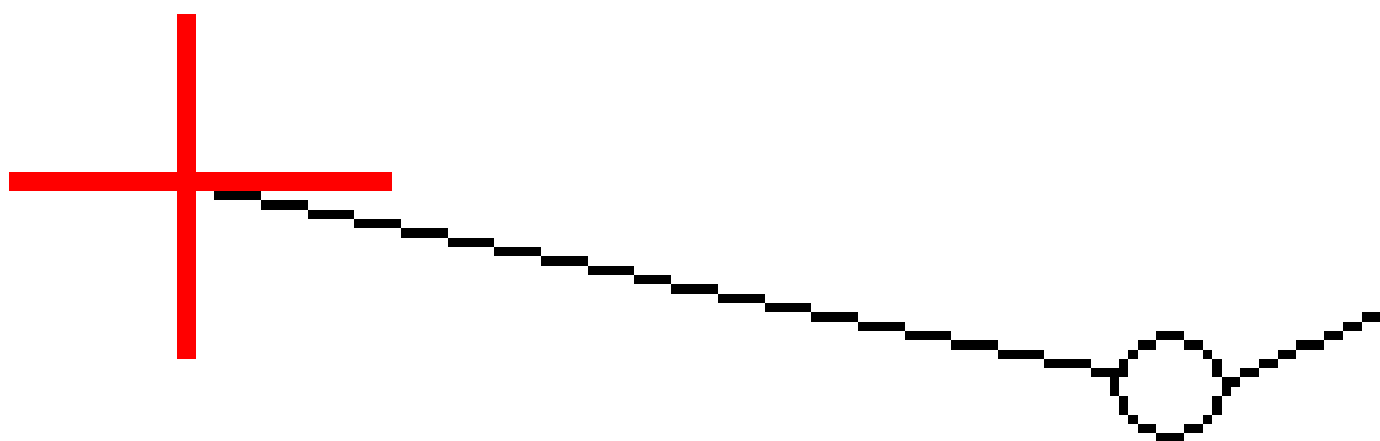
You can define a vertical construction offset where:

- A negative value offsets points vertically down.
- A positive value offsets points vertically up.

When staking a side slope from the alignment, tap  next to the **Vertical offset** field to specify if the offset is to be applied:

 
- Vertically
- Perpendicular to the element in the cross section before the point being staked

The following diagram shows a **Vertical offset** applied vertically **(1)** and a **Vertical offset** applied perpendicular **(2)** to the side slope **(3)**.



Hinge derivation methods

 
Select one of the **Hinge derivation** methods illustrated below:



1 – Offset and elevation. Enter an offset (**4**) from the horizontal alignment, and the elevation (**5**) of the hinge position.

2 – Offset and slope. Enter an offset (**6**) from the horizontal alignment, and the slope value (**7**) from the intersection of the horizontal and vertical alignments to the hinge position.

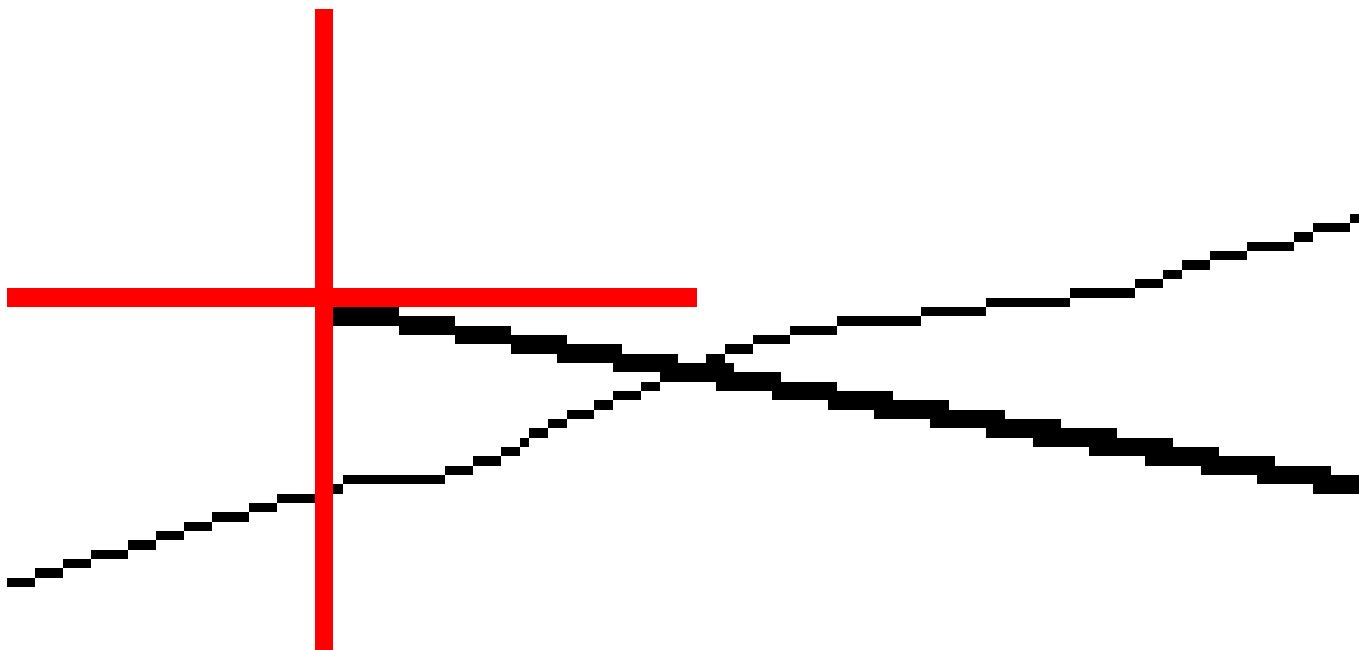
3 – Offset and vertical distance. Enter an offset (**8**) from the horizontal alignment, and the vertical difference (**9**) from the intersection of the horizontal and vertical alignments to the hinge position.



Catch point

The catch point is the point where the design side slope intersects with the ground.

The actual intersection position of the side slope with the existing ground surface – the catch point – is determined iteratively (by repetition). The software calculates the intersection of a horizontal plane passing through the current position, and either the cut or fill side slope, as shown in the following diagram, where x_n is the **Go Right/Left** value.



The plan view shows the calculated catch position. The calculated slope value (in blue) and the design slope value appears at the top of the screen.

The cross section is displayed looking in the direction of increasing station. Your current position and the calculated target are indicated. A line is drawn (in blue) from the hinge position to your current position to indicate the calculated slope.

Green lines indicate if the catch point has construction offsets specified. The smaller single circle indicates the calculated catch position and the double circle indicates the selected position adjusted for the specified construction offset(s). The construction offsets appear only after you have applied them.

 
Catch point staked deltas

To configure the display of staked information on the **Confirm staked deltas** screen that appears before the point is stored if you have enabled **View before storage**, see [As-staked point details](#).

To view the **Catch point deltas report** screen, tap **Report** in the **Confirm staked deltas** screen or **Review job** screen.

The horizontal and vertical distances from the hinge and the centerline are shown. If the side slope includes a cut ditch, the report includes the hinge position at the toe of the cut slope. The reported values exclude any construction offset specified.

See the diagram below:



Where:

A	=	Distance to centerline
B	=	Horizontal distance to hinge point
C	=	Vertical distance to hinge point


D	=	Slope
E	=	Slope distance to hinge point
F	=	Horizontal construction offset
G	=	Ditch offset
H	=	Hinge point
J	=	Catch point

NOTE – The value in the **S.Distance to hinge + Constr off** field includes any construction offset values specified and reports the slope distance from the hinge to the as-staked position. The value is null (?) if there is no horizontal construction offset specified or the horizontal construction offset is applied horizontally.

Stations available for stakeout

You can customize the stations available for stakeout when staking a:

- Station on a line, arc, polyline, or alignment
- Station/offset from a line, arc, or polyline
- Side slope from a polyline or alignment
- Skew offset

To customize the stations available, select the stakeout method and then tap  next to the **Station** field in the **Stakeout** screen.

Station interval settings

Select the station interval **Method**:

- The **0 based** method is the default method and gives station values that are multiples of the station interval. For example, if the start station is 2.50 and the station interval is 10.00, the 0 based method produces stations at 2.50, 10.00, 20.00, 30.00 and so on.
- The **Relative** method gives station values relative to the start station. For example, if the start station is 2.50 and the station interval is 10.00, the **Relative** method produces stations at 2.50, 12.50, 22.50, 32.50, and so on.

When staking an alignment, you can edit the **Station interval for lines** and **Station interval for arcs and transitions** or accept the default value set when the alignment was defined. A separate station interval value for arcs and transitions enables you to tighten the interval for curves and more accurately represent the design on the ground.

TIP – When staking an alignment, if you have configured different values for the **Station interval for lines** and the **Station interval for arcs and transitions**, then the list of available stations may include stations at different intervals.

In the **Auto increment** field:

- Select **Sta+** to automate the selection of the **next** station for stakeout.
- Select **Sta-** to automate the selection of the **previous** station for stakeout.
- Select **No** if you want to manually select the next station to stake.

Selecting **Sta+** or **Sta-** in the **Auto increment** field provides a faster, more streamlined workflow.

NOTE – When staking stations on an alignment, **Station interval** settings (including **Method** and **Auto increment** settings) configured in the **Select station** screen are written to the alignment file (for example, the RXL file) so that the same settings are used if the file is shared with other survey crews. If the file is an **IFC file**, the **Station interval** settings are written to a **Trimble Additional Properties (TAP)** file. The TAP file is stored in the same folder as the IFC file of the same name. If other survey crews are using the IFC file, then you must share the .tap file with the .ifc file to ensure all survey crews use the same settings.

 
Available stations

The types of stations that may be shown in the station list are listed below:

Station type	Abbreviation	Meaning
Start/end	S	Start station
	E	End station
Computed sections	CXS	Computed sections defined by the station interval
Horizontal curve	PI	Point of intersection
	PT	Point of tangent (Curve to tangent)
	PC	Point of curvature (Tangent to curve)
	TS	Tangent to transition
	ST	Transition to tangent
	SS	Transition to transition
	CS	Curve to transition
	SC	Transition to curve

To stake out to the design elevation

To measure your position relative to an elevation in an RTK or conventional survey:

1. Tap  and select **Stakeout / Elevation**.
2. Enter the **Design elevation**.
3. Enter the **As-staked name** and **Code**.
4. Enter a value in the **Antenna height** or **Target height** field and make sure that the **Measured to** field is set correctly.
5. Tap **Start**.

 
The coordinates of the current position and the distance above (cut) or below (fill) the design elevation are shown.



NOTE - Unless you are using a conventional instrument that supports tracking, the values appear only after you have taken a distance measurement.

6. When the point is within tolerance, tap **Measure** to measure the point.
7. Tap **Accept** to store the point.
8. If you selected the **View before storage** option, the staked deltas you selected in the **Stakeout options** screen are shown. Tap **Store**.

To show the cut/fill to a surface during stakeout

When staking out a point, line, arc, polyline, or alignment it can be useful to display the cut/fill to a surface, where the horizontal navigation is relative to the item you are staking but the displayed cut/fill delta value is from your current position to the surface.

1. Transfer a surface file to the appropriate project folder on the controller.
2. Make sure the file containing the surface is visible and selectable in the map.
If it is available, your current position, the surface elevation, and the distance above (cut) or below (fill) the surface appear in the map screen.
3. Tap  and select **Stakeout / [feature type]**.
4. Enable the **Cut/Fill to surface** switch.
 - a. In the **Surface** field, select the surface file from the current project folder. Alternatively, in the map select surfaces from BIM files. The **Surface** field indicates the number of surfaces you have selected in the map.

If you cannot select surfaces in the map, make sure the BIM file is set to selectable in the **Layer manager**. If the **Selection mode** button  on the **BIM** toolbar is button is yellow , tap it and select one of the **Surface selection** modes. To select a different surface from the map, double-tap in the map to clear the current selection and then select the new surface.

- b. If required, in the **Offset to surface** field, specify an offset to the surface. Tap ► to select whether the offset is to be applied vertical or perpendicular to the surface.
 - c. To show the distance to the surface in the stakeout navigation screen, tap **Options**. In the **Deltas** group box, tap **Edit** and select the **V. Dist surface at current position** or the **Perp. Dist to surface at current position** delta. Tap **Accept**.
5. Stake out the selected item as usual.

NOTE – When a horizontal construction offset is applied, the cut/fill value reported is to the surface at the position selected for stakeout and not to the surface at your current position.

To stake out a DTM

A DTM is a gridded digital terrain model, which is a type of topographical surface.

1. Tap **Stakeout / DTMs**.
2. Select the file to be used. The list includes all DTM files in the current project folder.
3. If required, in the **Offset to surface** field, specify an offset to the surface. Tap ► to select whether the offset is to be applied vertical or perpendicular to the surface.

By default, the **V. Dist**, **Perp. Dist** and **Design elevation** stakeout deltas are shown in the stakeout navigation screen when staking out a DTM. To change the deltas shown, tap **Options** and In the **Deltas** group box, tap **Edit**. Make your changes and tap **Accept** and then tap **Accept** again to return to the **Stake out DTM** screen.

4. If required, change the height of the target or antenna height. If the target or antenna height have not been defined, the elevation and cut/fill will be null (?).
5. Tap **Start**.

The coordinates of the current position and the distance above (cut) or below (fill) the DTM are shown. When staking out the DTM, if you are outside the extent of the DTM or in a "hole", the DTM elevation and cut/fill will be null (?).

NOTE – Unless you are using a conventional instrument that supports tracking, the values appear only after you have taken a distance measurement.


6. When the point is within tolerance, tap **Measure** to measure the point.
7. Tap **Accept** to store the point.
8. If you selected the **View before storage** option, the staked deltas you selected in the **Stakeout options** screen are shown. Tap **Store**.

Job data

Use the **Job data** menu to view job data in tabulated form in the **Point Manager** screen or as a history of changes in the job in the **Review job** screen.


From the **Job data** menu you can also return to the map or open Windows Explorer, so that you can easily transfer files into or from the **Spectra Geospatial Data** folder. See [Transferring files to and from the controller, page 117](#).

Importing data to the job

 
1. Tap  and select **Job**.
2. In the **Jobs** screen, select the job to import data to.
3. Tap **Import**. The **Import** screen appears.
4. Select the **File format** of the file you are importing.

The options are CSV or TXT formats.

TIP – To create a job from a DC or JobXML file, see [To create a local job, page 72](#).

5. Tap  to browse to the file to import.

You can select a file on any available drive, such as a network drive or a USB drive. For Spectra Geospatial controllers running Android, USB drives should be formatted to the FAT32 format.

If the controller is running Android, you may be prompted to give Origin read and write permissions for the USB drive. When you tap **Yes**, the Android folder selection screen appears. Tap  in that screen, browse to the USB drive and tap **[SELECT]** or **[Use this folder]**. The USB drive now appears in the Origin **Select folder** screen. If the **USB drive detected** message does not appear, or if you have dismissed the message, tap the **Select USB drive** softkey once the USB device is connected. Note that it can take up to 30 seconds for the USB drive to be detected.

6. Select the file to import from the **Select a file** screen. Tap **Accept**.
7. To import points as control points, select the **Import points as control** check box.
8. If the selected file is a comma delimited CSV or TXT file:
 - a. Use the **Point name**, **Point code**, **Northing**, **Easting** and **Elevation** fields to map each field to the appropriate field in the file. Select **Unused** if a particular value is not present in the file being received.
 - b. From the **Field delimiter** list, select the character (comma, semicolon, colon, space, or tab) that separates the data in your file into distinct fields.

- c. If the file contains null elevations, enter the **Null elevation** value.
- d. In the **Duplicate point action** field, select the action the software should take if the file contains points of the same name as existing points in the job. Select:
 - **Overwrite** to store the imported points and delete all existing points of the same name.
 - **Ignore** to ignore the imported points of the same name so that they are not imported.
 - **Store another** to store the imported points and keep all existing points of the same name.
9. If the **Advanced geodetic** check box is enabled in the **Cogo settings** screen, and you select a CSV or TXT file, you must specify the **Coordinate type** of the points in the file. Select **Grid points** or **Grid (local) points**.
10. If the points in the file are **Grid (local) points**, select the transformation to use to transform them to grid points:
 - To assign the transformation later, select **Not applied, this will be defined later**. Tap **Accept**.

NOTE – If you select this option and you later decide to assign an input transformation to this file, you must unlink and then relink the file.
 - To create a new display transformation, select **Create new transformation**. Tap **Next** and complete the required steps. See [Transformations, page 248](#).
 - To select an existing display transformation, select **Select transformation**. Select the display transformation from the list. Tap **Accept**.
11. Tap **Accept**.
12. Tap **OK**.

Import file formats

You can use the predefined formats or create a comma delimited CSV or TEXT file.

TIP – DC and JobXML files are not imported; instead create a job from these files. See [To create a local job, page 72](#).

Predefined file formats

Select from the following predefined formats:

- CSV Grid points E-N
The data must be in the format Name, Easting, Northing, Elevation, Code
- CSV Grid points N-E
The data must be in the format Point Name, Northing, Easting, Elevation, Code
- CSV Lines

The data must be in the format Start Point Name, End Point Name, Start Station,

- CSV Global Lat-long points
- Surpac

NOTE - To be successfully imported, points in **Global** and local geographic coordinates must have a height.

Comma delimited CSV or TXT files

If the Comma Delimited (*.CSV, *.TXT) option is selected, you can specify the format of the data that is received. Five fields appear: **Point name**, **Point code**, **Northing**, **Easting**, and **Elevation**. If description fields are enabled for the job, there are two additional fields to configure. Select **Unused** if a particular value is not present in the file being received.

When opening linked CSV files or importing any of the predefined CSV file formats, Origin automatically detects if the file is using UTF-8 character encoding. If UTF-8 is not detected, Origin assumes the data is using ASCII/Multibyte encoding.

NOTE - Where possible, Spectra Geospatial recommends standardizing on UTF-8 for your CSV files, because it can encode any character in Unicode. ASCII/Multibyte encoding is locale-specific and so may not encode all characters correctly.

Null elevations

If the comma-delimited file you are importing contains 'null elevations' that are defined as something other than null, for example a 'dummy' elevation such as -99999, you can configure the format of the **Null elevation** and the Origin software converts these 'null elevations' to real null elevations inside the job.

The **Null elevation** value is also used when points are imported or copied from linked CSV files.

Coordinate type and local transformations

If **Advanced geodetics** is enabled, then for most file formats you must specify the **Coordinate type** of the points in the file.

You can create a transformation when you import grid local points, but you cannot use the grid local points from the file you are about to import unless that file has already been linked to the current job.

Import file template file location

Predefined import file formats are defined using XSLT stylesheet (*.xsl) definition files. They are typically located in the **Spectra Geospatial Data\System Files** folder.

The predefined stylesheet definitions are provided in English. Translated stylesheet files are typically stored in the appropriate language folder.

The location of the folder depends on the controller operating system:

- Windows: **C:\Program Files\Spectra Geospatial\General Survey\Languages\<language>**
- Android: **<Device name>\Spectra Geospatial Data\Languages\<language>**

Custom import formats

You can modify a predefined format to meet your specific requirements, or use it as a template to create a completely new custom import format.

You can use any text editor, such as Microsoft Notepad, to make minor changes to the predefined formats.

Modifying a predefined format offers the following benefits:

- Important information can be displayed first.
- Data can be ordered to suit your requirements.
- Information that is not required can be removed.
- Additional data can be computed for display, for example by applying construction offsets to reported values.
- The point design elevation can be edited after the stake out measurement is completed.
- Up to 10 extra design elevations with individual vertical offset values can be defined and edited, with the cut/fill to each extra design elevation being reported.
- The size and color of the font can be modified to suit your requirements

NOTE – Spectra Geospatial recommends saving any modified XSLT files with a new name. If you keep the original name, predefined XSLT files are replaced when you upgrade the controller, so any custom changes are lost.

Creating a new custom format

To create a completely new custom format, you need some basic programming knowledge to modify the XSLT file. XSLT stylesheet definition files are XML format files. Stylesheets must be created according to the XSLT standards as defined by the World Wide Web Consortium (W3C). For details, go to w3.org.

You cannot easily modify or create a stylesheet on the controller. To successfully develop new stylesheet definitions, work on an office computer using a suitable XML file utility program.

Origin version 2021.00 and later supports stylesheets that use the following EXSLT modules:

- **math**: math functions typically defined to use the math: namespace
- **date**: date and time functions typically defined to use the math: namespace (except for date:format-date, date:parse-date and date:sum)
- **sets**: functions to provide set manipulation typically defined to use the set: namespace
- **strings**: functions to provide string manipulation typically defined to use the set: namespace

- **functions:** functions that allow users to define their own functions for use within XSLT (except for func:script)

Requirements

To develop your own XSLT stylesheets, you need:

- An office computer.
- Basic programming skills.
- An XML file utility program with good debugging facilities.
- The JobXML file schema definition that provides the details of the JobXML format required to create a new XSLT stylesheet. There is a link to the schema location at the top of every JobXML file.
- A job or JobXML file that contains the source data.

Custom stylesheet creation process



The basic steps are:

1. Source a Job file or JobXML file from your controller.
2. Create the new format using a predefined XSLT stylesheet as a starting point and the JobXML schema as a guide.
3. To create the custom files on the controller, copy the file to the **System Files** folder on the controller.

For information on how to create your own custom import formats, refer to the **Importing Custom Formats into Spectra Geospatial Origin** PDF, which can be downloaded from the [PDF guides page](#) of the Trimble Access Help Portal.

Reviewing and editing job data

Origin provides several ways to review data in the current job:

 
 
- Select items in the map and then tap **Review** to view details about the selected items.
- Tap  and select **Job data / Review job** to view the log detailing the history of points stored in the job as well as all changes made to job settings. Records are listed in chronological order.
- Tap  and select **Job data / Point manager** to view the database of all the points and observations in the job as well as linked files. Usually point records are listed in ascending order of point name, but if you choose to display records by **Target height**, all observations are listed appear in the order that they occur in the database.

You can add notes to the job, edit target/antenna height records, and edit code records from the **Review job** or **Point manager** screen.

To review media files or occupation warnings, use **Review job**.

To edit point name and coordinate records, or to delete points or features, use **Point manager**.

Review job

1. Tap  and select **Job data / Review job** or tap  and select **Review job** from the **Favorites** list.
2. Tap a record to select it or use the softkeys or arrow keys to navigate the database.

To move to the end of the database quickly, highlight the first record and press the up arrow key.

To search for a particular item, tap **Search** and select an option. You can search by current record type, or search for points by name, code or class. See [Managing points with duplicate names, page 673](#).

3. To see more information about an item, tap the record. Some fields, for example, **Code** and **Antenna height**, can be edited.

If there are no coordinates shown, check the **Coordinate view** setting. To see grid coordinates in review, the **Coordinate view** must be set to grid, and the coordinate system settings for the job must define a projection and datum transformation.

In conventional surveys, an observation is displayed with null coordinates until the observation to the backsight is stored.

TIP – To view the point details alongside the map, select the point(s) in the map and then tap and hold in the map and select **Review**.

To review and edit media files

1. Select the media file record in the job or in the point record.
2. Tap **Details**. The image appears.
3. Tap **Expand**.
4. To change the **Link to** method and the name of any linked point, tap the **Link** softkey. See [Media files, page 116](#).

TIP – To remove the link to the job or a point, select **None**. The media file remains in the project folder.

NOTE – If the image is annotated with an information panel and you edit values defining the measured point for the image such as the code and descriptions, the information panel is not updated if you change the method and point name.

5. To mark up an image, tap **Draw**. See [To draw on an image, page 696](#).

To insert a note in the job

1. Select a record.
2. Tap **Note**. The **Note** screen that appears displays the date and time that the current record was created.

3. Enter the note and then tap **Accept**. The note is stored with the current record. In **Review job**, the note appears below the record with the note icon.

To review warning records

For points measured using a GNSS receiver with an integrated tilt sensor, **Review Job** shows the excess movement, excess tilt, or poor precision warnings given for the point. To view these, expand the point record and then expand the **Quality control / QC1** records.



The following records are available:

- The **Warnings** section shows the warnings were given during the occupation when the point was being measured.
- The **Conditions at storage** section shows the error conditions that were present at the time the point was stored.

The conditions at storage have a major impact on the measured coordinates of the point.

Point manager

Point manager enables you to easily review observations and the best point and all duplicate points for a selected point.

To open **Point manager**, tap  and select **Job data / Point manager** or tap  and select **Point manager** from the **Favorites** list. The **Point manager** screen shows a tabulated tree structure of all points and observations in the job database and linked files.

Using **Point manager** you can easily edit:

- Target and antenna heights (single or multiple)
- Point names
- Point coordinates
- Codes (single or multiple)
- Descriptions (single or multiple)
- Notes

Viewing the data

By default, points are listed by name. When there are duplicate points of the same name, the best point always appears first. All occurrences of points of the same name, including the best point, appear in a list below the best point.

NOTE – When the data is in the **Target height** view, all observations are listed in the order that they occur in the database.

To view more information about a point, you can:

- Tap + to expand the point tree list and reveal all associated points and observations. Expand the subtree to view individual point information. These records can include the point coordinates, observations, antenna or target details, and quality control records.
- Tap a point, or select it and tap **Details** to open the same point details form as seen in **Review job**. This allows you to edit information such as the point code and attributes.

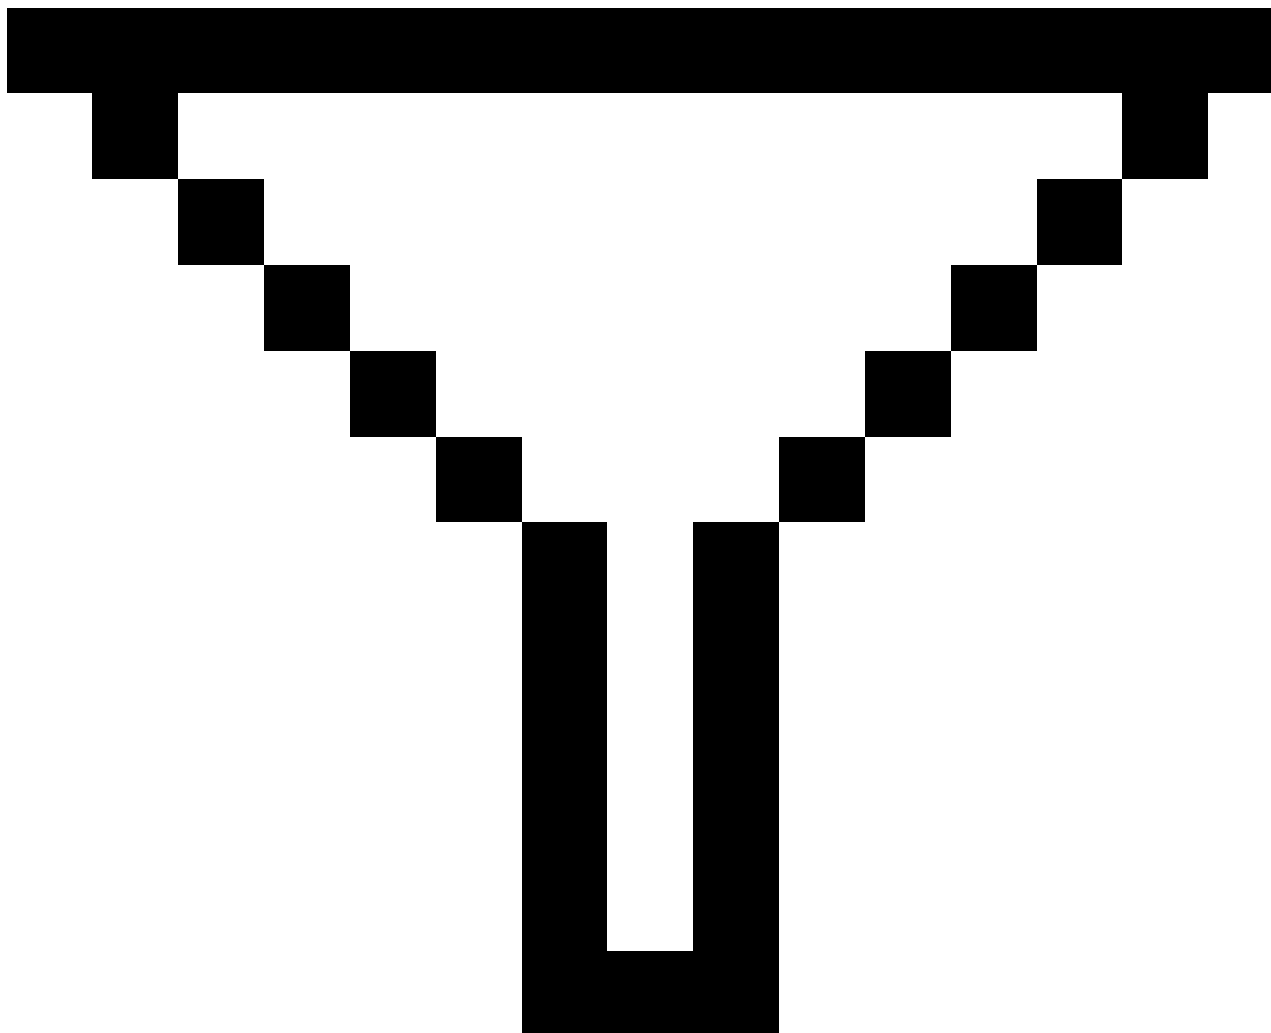
To change the format of the indented coordinates or the observations that appear when you expand the point tree, tap the coordinates or observations displayed, or highlight them and press the space key. In the list that appears, select the new data view. This allows you to review the raw conventional or GNSS observations and the Grid coordinates at the same time.

To view additional columns, tap **Display** and select the required columns.

To sort data by column value, tap the column header.

To include deleted points in the displayed information, tap **Options** and then select **Display deleted points**. (In portrait mode, swipe right to left along the row of softkeys to view the **Options** softkey.)

To filter data by wildcard search, tap



. See [To filter data using wildcard search, page 662](#).

Adding or editing notes using Point manager

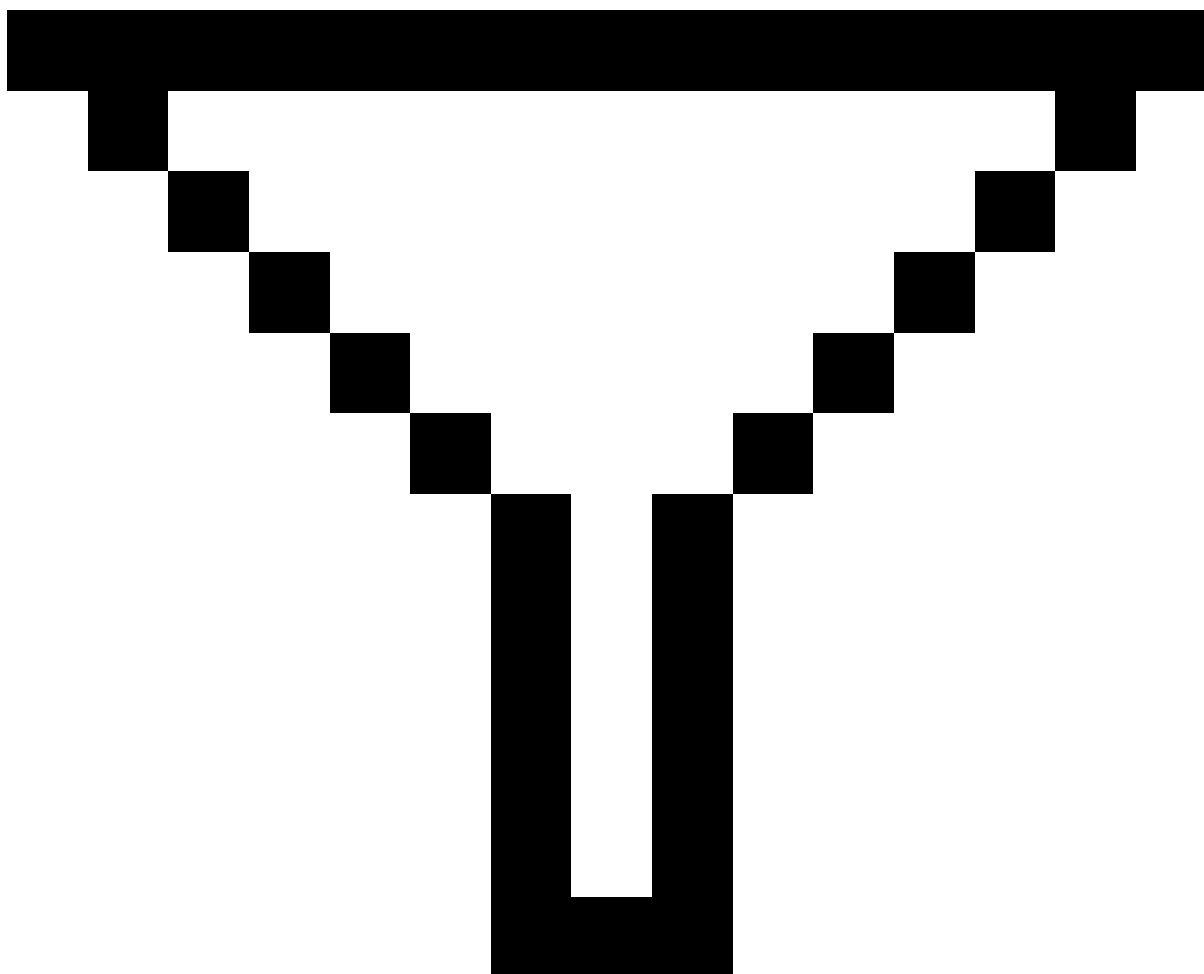
When you edit point records in **Point manager**, the software automatically inserts notes into the job database to record what was edited, the original data, and the time of the edit. You can view the edited records and notes in **Review job**.


To enter a note or change an existing note, tap the **Note** field. Enter the note details and then tap **Accept**.

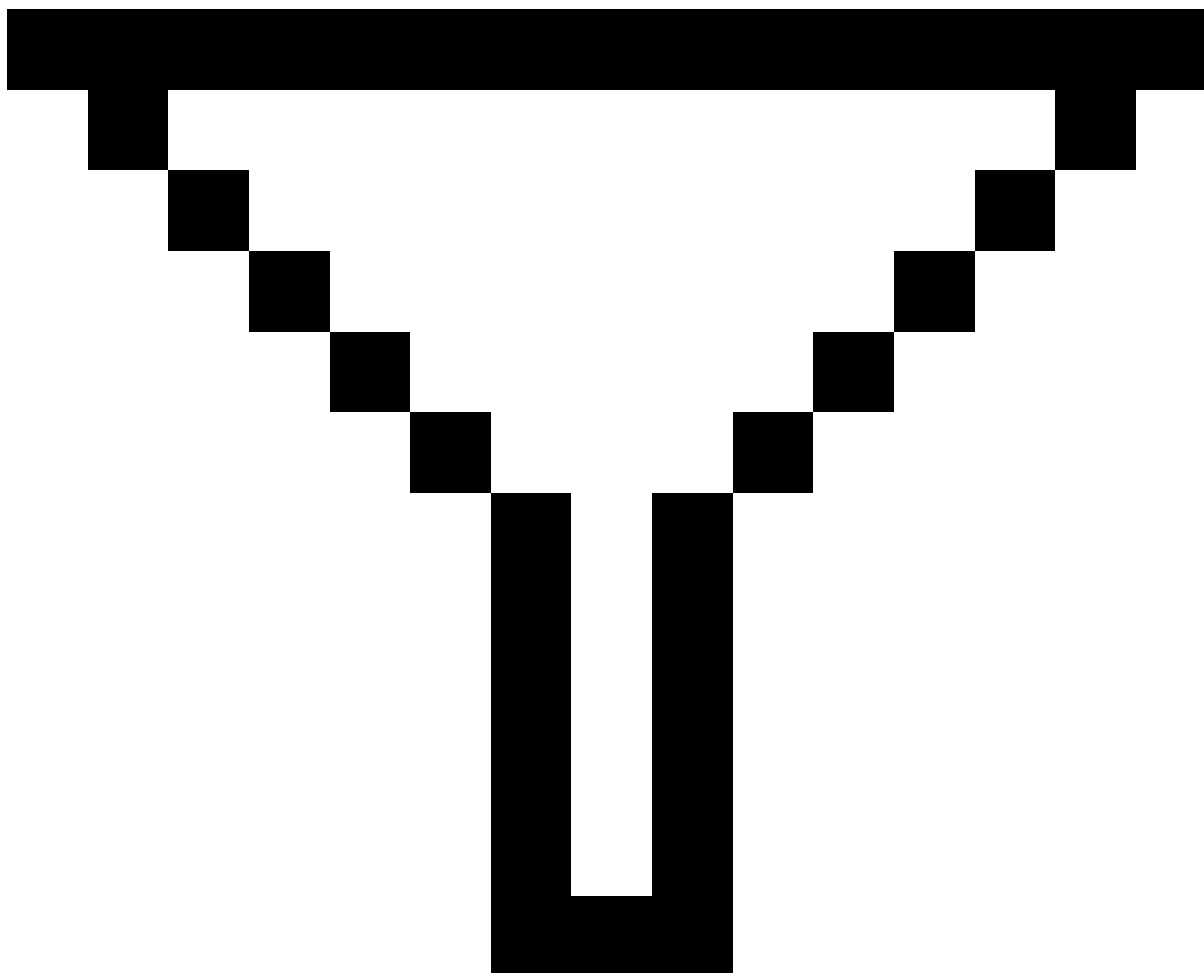
To filter data using wildcard search

To filter the displayed information using wildcard matching, do one of the following:

- In the **Point manager** screen, tap



- Tap  in the **Map** toolbar, select the **Filter** tab and then tap



The **Wildcard search** screen appears. Enter your search criteria as needed in the **Point name**, **Code**, and **Note** fields and, if enabled, the **Description** fields.

To include wildcard searching, use * (for multiple characters) and ? (for a single character). The filters specified for the separate fields are processed together and only points that meet the criteria of all the filters will appear. Use * in any field that you do not want to filter. Filtering is not case sensitive. For example:

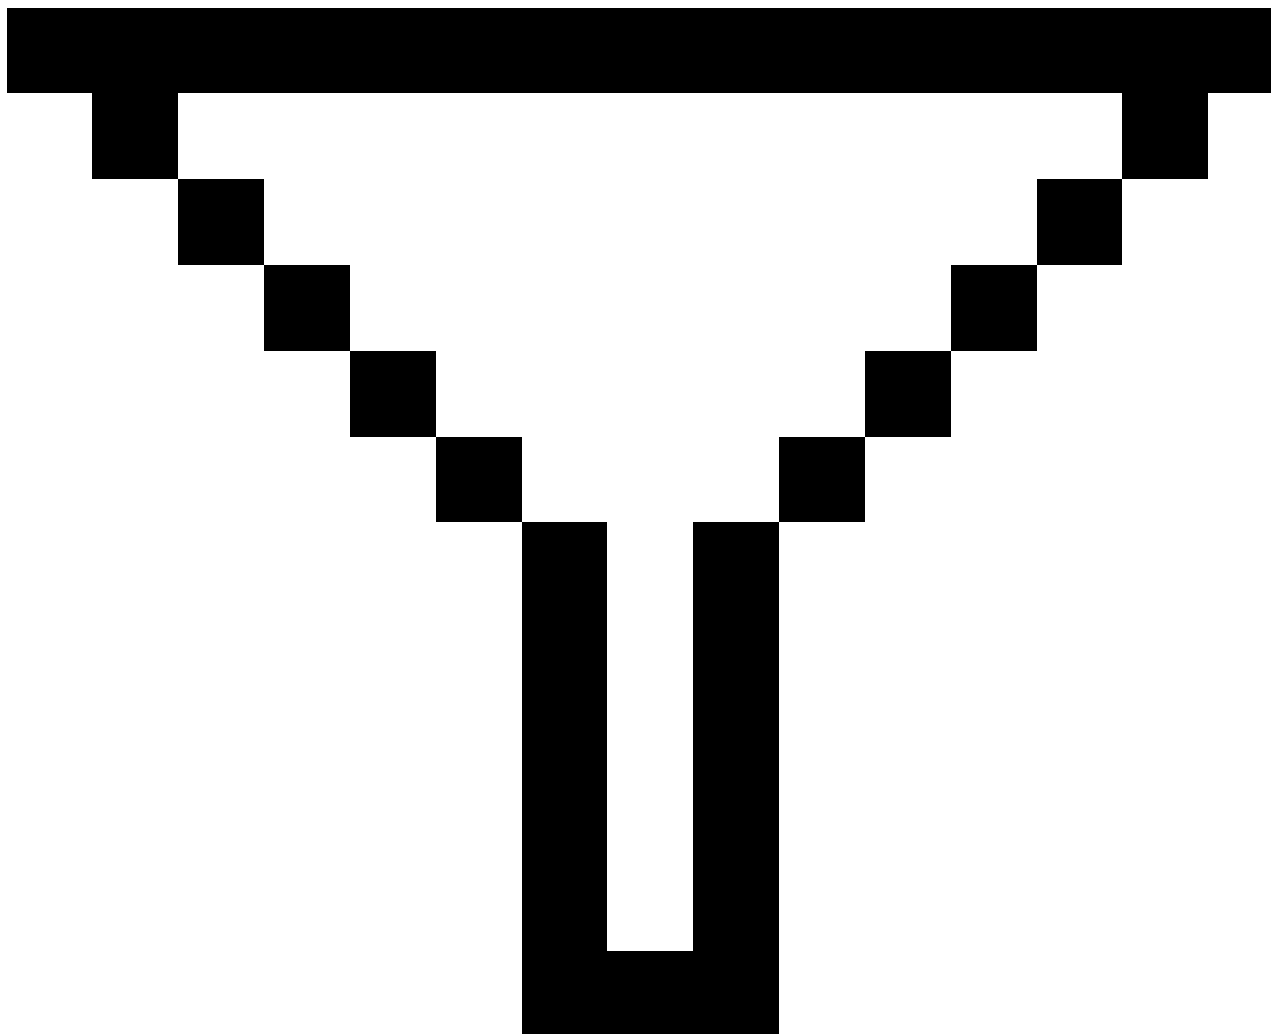
Point name	Code	Descr. 1	Descr. 2	Note	Example results
1	*	*	*	*	1, 10, 2001, 1a
1*	*	*	*	*	1, 10, 1a
1?	*	*	*	*	10, 1a
1	Fence	*	*	*	All points with a name that contains a 1 and where code = Fence
1	*Fence*	*	*	*	All points with a name that contains a 1 and a code that contains Fence
1???	*	*	*	wrong*	All points with a name that starts with 1 and is 4 characters long and a note that starts with wrong
*	Tree	Aspen	25	*	All points where code = tree and Description 1 = Aspen and Description 2 = 25

TIP - The search results return points from files linked to the job that meet your search criteria even if they are not currently displayed in the map.

The filter icon is colored yellow to indicate when a filter is applied. To disable the filter, tap **Reset**, or set all fields to *.

In the Map, filter settings are cleared when you change jobs.

In Point manager, filter settings are remembered, but are not applied if Point manager is closed. To reactivate filter settings, tap



and then tap **Accept**.

To edit antenna and target height records

You can review and edit target height records after measuring points.

NOTE - The target height record refers to conventional target heights and the GNSS antenna heights.

To change a target/antenna height record and automatically update **all** observations using that height record, use **Review job**.

If there are a group of target/antenna height records and only some of them need to be changed, use **Point manager**.

CAUTION – Take care when changing target/antenna height records. In particular, be aware of the following:

- When measuring or staking out points using IMU tilt compensation, make very sure the entered antenna height and measurement method is correct. Alignment reliability and pole tip position reliability, especially during movement of the antenna while the pole tip is stationary, relies completely on the antenna height being correct. Residual error in horizontal position caused by antenna motion while measuring when the pole tip is stationary cannot be removed by changing the antenna height after measuring the point.
- When you change target/antenna height record in the database, stakeout deltas, Cogo points, averaged points, calibrations, resections, and traverse results are not automatically updated. Re-observe staked out points, and recalculate Cogo points, averaged points, calibrations, resections, and traverses.
- Offset points that are stored as coordinates are not updated when you change a target/antenna height record in the database.

A change in antenna height does not affect any postprocessed points that will be processed using the Survey Office software. Verify the target/antenna height information when you transfer the data to the office computer or transfer postprocessed points directly from the receiver to the office software.

Some conventional measurements use calculated (system) targets, which have a zero height and zero prism constants, for example, Dual-prism offset. You cannot edit the target heights for system targets.

 
To edit a target/antenna record using Review job

1. Tap the target/antenna record. The current target (conventional survey) or antenna (GNSS survey) details appear.
2. Enter the new details.
3. Tap **Accept**.

The current record is updated with the new details, which apply to all subsequent observations using that record.

When you change a target/antenna height record, a note with a time stamp is attached to the record. This note documents the old height details, including when the changes were made.

To edit target/antenna records using Point manager

1. Tap  and select **Job data / Point manager**.
2. Tap **Display** and select **Target height** to show the **Target height/Antenna height** column.

3. Tap a record to select it. To select multiple records, press and hold **Ctrl** to select records from anywhere in the list, or press and hold **Shift** to select a group of records from the list.

TIP –

- You do not need to select contiguous target and/or antenna heights to edit.
- You cannot edit a selection of antenna heights that includes more than one type of antenna. Select and edit the points in separate groups, according to the type of antenna used.
- You can edit a selection of different targets. The new target heights are applied to each of the different targets but the target numbers remain unchanged.

4. If you have selected:
 - one record, the point details screen appears.
 - multiple records, tap **Edit** and then select **Targets**.
5. If you are editing the:
 - target height, edit the measured target height value, the measurement method (when applicable), and the prism constant.
When measuring to the notch on a Spectra Geospatial traverse prism base, tap ► and then select **S notch**.
 - antenna height, edit the measured heights and the measurement method.

NOTE – If your point selection included points with target heights and points with antenna heights, two edit dialogs appear – one to edit antenna heights and one to edit target heights.

6. Tap **Accept**.

The corrected details are shown in the Point manager.

The software automatically inserts notes into the job database to record what was edited, the original measurement data, and the time of the edit. You can view the edited records and notes in **Review job**.

To edit code records

You can review and edit code records after measuring points.

 
When you edit a code record, a note with a time stamp documenting the old code value is attached to the record.

If you are editing:

 
 
- a single code, use **Review job** or **Point manager**.
- codes in multiple records, use **Point manager**.

TIP – You can edit **Descriptions** in the same way.

To edit the code for a single point record using Review job

1. Tap  and select **Job data / Review job**.
2. Tap the observation record that contains the code you want to edit.
3. Change the code.
4. Tap **Accept**.

 
To edit codes in multiple point records using Point manager

1. Tap  and select **Job data / Point manager**.
2. Tap a record to select it. To select multiple records, press and hold **Ctrl** to select records from anywhere in the list, or press and hold **Shift** to select a group of records from the list.
3. Tap **Edit** and then select **Codes**.
4. Enter the new code(s) or tap  , select the new code and tap **Enter**.
5. Tap **OK**.
If the code has attributes, the attribute entry screen for the code appears. See [To enter attribute values when measuring a point, page 546](#).
6. Enter the attributes. Tap **Store**.

To edit point name records

You can use the **Point manager** to edit the names of points and observations.

CAUTION – If you change the name or coordinates of a record, or delete a point or feature record, the positions of other records that rely on that record could change or disappear. Make sure you have read the topic [Point record changes: effects on other points, page 671](#) and you understand the impact of your changes before you make them.

1. Tap  and select **Job data / Point manager**.
2. Tap the record or use the arrow keys to select it.
You cannot edit the name of
 - points in linked files
 - an observation to the current station if a survey is running
 - a backsight observation
3. Tap **Edit** and then select **Point names**.
4. Edit the name.

TIP – If you are editing the name of a total station observation which is one of a number of total station observations to the same point name, such as observations taking when measuring rounds, select whether to rename other observations with the same name observed from the same station. If you are renaming an MTA record, then all other observations to the same point from the same station setup will be automatically renamed to match the MTA point name.

 
5. Tap **OK**.

Details of changes made are automatically saved to the **Note** record.

To edit point coordinate records

You can use the **Point manager** to edit the coordinates of imported or keyed in points.

CAUTION – If you change the name or coordinates of a record, or delete a point or feature record, the positions of other records that rely on that record could change or disappear. Make sure you have read the topic [Point record changes: effects on other points, page 671](#) and you understand the impact of your changes before you make them.

1. Tap  and select **Job data / Point manager**.
2. Tap the record or use the arrow keys to select it.

You cannot edit the coordinates of:

- raw observations
- points in linked files
- a range of records at one time

3. Tap **Edit** and then select **Coordinates**.
4. Edit the coordinates.
5. To change the search class for a keyed in point from **Normal** to **Control**, select the **Control point** check box. To change the search class from **Control** to **Normal**, clear the check box.
6. Tap **OK**.



Details of changes made are automatically saved to the **Note** record.

To delete points or features

If required, you can delete points or job features (lines, arcs, or polylines) in Point manager or from the map. A deleted point or feature is not used in calculations, but it is still in the database.

 
CAUTION – If you change the name or coordinates of a record, or delete a point or feature record, the positions of other records that rely on that record could change or disappear. Make sure you have read the topic [Point record changes: effects on other points, page 671](#) and you understand the impact of your changes before you make them.

The search class for deleted points changes to Deleted (normal), Deleted (control), Deleted (staked), Deleted (backsight), or Deleted (check), depending on the original search classification.

 
When you delete a point or feature, the symbol used for the point or feature record changes to indicate it has been deleted. For example, for a topo point, the  symbol replaces the  symbol.

The software records a note with the original point or feature record, showing the time it was deleted.

To delete a point or feature record

1. Tap  and select **Job data / Point manager**.
2. Select the point or feature record to be deleted and tap **Details**.
3. Tap **Delete**.
4. Tap **Accept**.

To restore a point or feature record

1. Tap  and select **Job data / Point manager**.
2. Tap the point or feature record to be restored.
3. Tap **Undelete**.
4. Tap **Accept**.

To delete features from the map

1. Select the required feature(s) using one of these options:
 - Tap the feature(s).
 - Drag a box around the feature(s).
 - Tap and hold on the screen and tap **Select**.

You can only delete points, lines, arcs, or polylines that are in the job database. You cannot delete points or features from a linked map file (for example, a DXF or SHP file).

2. Tap and hold on the screen and select **Delete**.
3. Tap **Delete**.

Point record changes: effects on other points

The Origin software uses a dynamic database. If you change the name or coordinates of a record, the positions of other records that rely on that record could change or disappear. Deleting a record can result in null coordinates for records that rely on the deleted record.

If you select a range of records and change their name, all the selected records are renamed to the new name that you entered.

If you rename or edit the coordinates of points, all records that contain computed deltas to other points, for example as-staked, check, and backsight observations, are not updated.

Base station or station setup positions

If you rename a point name that is used as a base in a GNSS survey, or as a station setup point in a conventional survey, this does not rename the point name that is referenced in the Base record or Station setup record. You cannot edit the point name referenced in the Base record or Station setup record.

If you rename the base position or station setup position, and another record with the same name

- **does not** exist, then the positions of all records that are computed from that base position or station setup position cannot be computed, and those records will no longer be displayed in the map.
- **does** exist, then the positions of all records that are computed from that base position or station setup position may change, as they will be computed from the next best point with the same name.

If you edit the base position or station setup position, then the positions of all records that are computed from that base position or station setup position will change.

If you edit the azimuth in an a station setup with a keyed-in azimuth to the backsight, then the positions of all records that are computed from that station setup will change.

Backsight positions

If you edit or rename the point record that is used as a backsight in a station setup with a computed azimuth to the backsight, then the positions of all records that are computed from that station setup may change.

Changes to other positions

Changes to resections, lines, arcs, compute inverse records, and others may also affect other positions. Refer to the table below, where the * symbol shows the database records that may change if the name or the coordinates of the record that was used to derive their position is modified.

Record	Names	Coordinates
Topo points (GNSS)	*	*
Rapid points	*	*
FastStatic points	*	*
Observed control points	*	*
Face 1 Topo points (Conv.)	*	*
Face 2 Topo points (Conv.)	*	*
Mean turned angle	*	*
As-staked points	*	*
Check points	*	*
Continuous points	*	*
Construction points	*	*
Laser points	*	*
Lines	*	*
Arcs	*	*
Compute inverse	*	*
Resection points	-	-
Adjusted points	-	-
Averaged points	-	-
Cogo points (computed) (see note below)	* 1	* 1
Intersection points	-	-
Offset points	-	-
Roads	-	-

Record	Names	Coordinates
Alignments	–	–
Calibration points	–	–
Compute area	–	–

1 – Cogo points can change if the point they are computed from is modified, but it depends on how the Cogo points were stored. If they were stored as a vector, for example Az HD VD and the base point is moved, then the Cogo point will also move.

Deleted items

A deleted point, line, arc, or polyline is not used in calculations, but it is still in the database. Deleting points, lines, arcs, or polylines does not make a job file smaller.

Some points, such as continuous offset points and some intersection and offset points, are stored as vectors from a source point. If you delete a source point, any point stored as a vector from that point has null (?) coordinates when you review the database point record.

When you delete an observation that has been recorded during a Station setup plus, a Resection, or Measure rounds operation, the mean turned angle records and station or round residuals records will not be updated. Deleting an observation that has been used to compute an average does not automatically update the average. Use **COGO / Compute average** to recompute the average.

You cannot delete points from a linked file.

Use File Explorer to delete alignment files, road files, map files, or any other file type stored on the controller.

Managing points with duplicate names

This topic explains the **database search rules** applied by the software when managing points of the same name.

If you configure the **Duplicate point tolerance** options in the survey style to allow points of the same name in the job, then make sure you are familiar with these rules. If your job does not contain points of the same name, then the search rules are not used.

Dynamic database

The Origin software includes a dynamic database. This stores networks of connected vectors during RTK and conventional surveys, making the positions of some points dependent on the positions of others. If you change the coordinates of a point that has dependent vectors (for example, an instrument station, a backsight point, or a GNSS base station), this affects the coordinates of all points that depend on it.

NOTE – Editing the name of a point that has dependent vectors can also affect the coordinates of points that depend on it. If you change the point name, the following could occur:

- positions of other points could become null
- if another point with a matching name exists, that one could be used to coordinate the dependent vectors

The software uses database search rules to resolve the coordinates of dependent points, based on the new coordinates for a point they depend on. If the coordinates of a point with dependent points move by a certain amount, the dependent points are shifted by the same amount.

When two points of the same name exist, the software uses search rules to determine the best point.

Search rules

The software lets multiple points with the same point name (point ID) exist in the same job.

To distinguish between points of the same name and to decide how these points are to be used, the software applies a set of search rules. When you ask for the coordinates of a point in order to perform a function or calculation, these search rules examine the database according to:

- the order in which the point records were written to the database
- the classification (search class) given to each point

Order in the database

A database search starts at the beginning of the job database and works down to the end of the job, looking for a point with the specified name.

The software finds the first occurrence of a point of that name. It then searches the rest of the database for points of the same name.

The rules generally followed by the software are:

- If two or more points have the same class and the same name, it uses the first point.
- If two or more points have the same name but different classes, it uses the point of higher class, even if this is not the first occurrence of the point.
- If two or more points (one from the job database and one from an attached linked file) have the same name, the software uses the point in the job database, regardless of the classification of the point in the linked file. However, you can add points to a stakeout list from the linked file using the **Select from file** option, and the point from the linked file will be used even when the point already exists in the current job. For more information, see [Linked files and their search rules](#).

Search class

The software gives most **Coordinates** and **Observations** a classification. It uses this classification to determine the relative importance of points and observations stored in the job database.

Coordinates always have priority over Observations.

If a Coordinate and an Observation of the same name have different search classes, the Coordinate will be used regardless of their respective search classes, and regardless of their order in the database.

Coordinate search classes

The coordinate search classes are arranged in a descending hierarchy, as follows:

- Control – (the highest class) can only be set when a point is keyed in or transferred.
- Averaged – is given to grid positions stored as a result of an average position computation.
- Adjusted – is given to points that are adjusted in a traverse computation.
- Normal – is given to keyed-in and copied points.
- Construction – is given to all points measured using Fastfix, which are typically used in the computation of another point.
- Deleted – is given to points that have been overwritten, where the original point had the same (or a lower) search class than the new point.

Deleted points are not displayed in point lists and they are not used in calculations. However, they do remain in the database.

Control class

Control class is used in preference to other coordinate classes. It can only be set by you. Use control class for points that you want to use in preference to points of the same name in the same job database. See [Assigning control class to a point](#).

NOTE – You cannot overwrite a control class point with a measured point, or use a control class point in an average position computation.

Observation search classes

The observation search class is used only to determine which observation to use when two observations have the same name.

The observation search classes are arranged in a descending hierarchy, as follows:

- Mean Turned Angle (MTA) , Normal, Backsight, and Stakeout
- Construction
- Check
- Deleted

Deleted observations are not displayed in point lists and they are not used in calculations. However, they do remain in the database.

If there are multiple observations of the same name which also have an equivalent classification (that is, normal and backsight are equivalent), then the best is the one that is found first in the database.

NOTE – Within a single station setup, a Mean Turned Angle observation is better than all the other classes – it is treated as an equivalent classification to the other classifications that are listed only when the observations appear in different station setups.

Example

If a point named "1000" is entered as the start point when calculating a from-a-baseline offset, the software searches for the first occurrence of point "1000". It then searches the rest of the database for any point named "1000", under the following rules:

- If no other point of this name is found, it uses the one it has to calculate the offset.
- If another point "1000" is found, the software compares the classes of the two points. It uses the point "1000" that has the highest classification. Remember that a Coordinate class point (for example, keyed-in) is higher than an Observation class point.

For example, if both points were keyed in, one was given a normal classification and the other a control classification, the Origin software uses the control class point to calculate the offset, regardless of which record the search finds first. If one point was keyed in and one was observed, the Origin software uses the keyed-in point.

- If the points are of the same class, the Origin software uses the first one. For example, if both points named "1000" were keyed in, and both were given a normal classification, the first one is used.

Exceptions to the search rules for GNSS surveys

Normal search rules are not used in the following situations:

- In a GNSS calibration

Calibration searches for the highest class point stored as grid coordinates. This grid point is used as one of a pair of calibration points. The software then searches for the highest class GNSS point stored as **Global** coordinates or as a **Global** vector. This point is used as the GNSS part of the point pair.

- When starting an RTK rover

When you start a rover survey, if the broadcast base point is called, for example, "BASE001", choosing **Start survey** causes the software to search for the highest class GNSS point of that name stored as **Global** coordinates. If there is no GNSS point stored as **Global** coordinates, but "BASE001" exists stored as grid or local coordinates, the software converts the grid or local coordinates of the point into **Global** coordinates. It uses the projection, datum transformation, and current calibration to calculate the point. It is then stored, as "BASE001", with **Global** coordinates and is given a check class classification so that the original grid or local coordinates will still be used in calculations.

NOTE – The **Global** coordinates of the base point in the database are the coordinates from which GNSS vectors are solved.

If there is no base point in the database, the position broadcast by the base receiver is stored as a normal class point and it is used as the base coordinates.

Exceptions to the search rules for conventional surveys

Normal search rules are not used in the following situations:

- Face 1 or face 2 from one station setup and an MTA from another station setup

If you observe a point on more than one face, the face 1 observation and the face 2 observation are combined to create an MTA record. In this situation, the MTA is used to coordinate the point. However, if there is an observation to a point on face 1 or face 2 only, from an earlier station setup, and later a station setup (that could be at the same station as the first) to that same point creates a new MTA, then the MTA is deemed to be of the same class as the earlier face 1 or face 2 observation. In this situation, the order in the database rule is invoked, and the first point in the database is deemed the best point.

- Observations that coordinate a point are better than those that do not

An angles and distance observation that coordinates the point, is better than an angles-only observation that does not coordinate a point. This rule applies even when the angles-only observation is earlier in the database, and is of a higher class, for example, an MTA.

Linked files and their search rules

Comma Delimited (*.csv or *.txt) files or (job) files can be linked to the current job to access external data.

The search rules do not operate across linked files. Points in the current job are **always** used in preference to a point of the same name in the linked file, regardless of the classification. For example, if point 1000 in the current job has an As-staked classification, and point 1000 in a linked job file has a Normal coordinate classification, then the search rules will select the As-staked class point in preference to the Normal class point. If both points were in the current job, then the search rules would select the Normal class point.

NOTE – You can add points to the stakeout list using the **Select from file** option even if the point in the linked file already exists in the current job. When a point of the same name exists in the current job, this is the only way that you can stake a point from a linked file.

When points of the same name exist in a single CSV file, the software uses the first point.

When points of the same name exist in multiple CSV files, the software uses the point in the first CSV file. The first CSV file is the first one in the file selection list. To change the order of the CSV files, tap the tabs at the top of the file selection screen. If you change the order of the CSV files, this may change the order in which files are selected.

When you accept a CSV file selection, and you then go back and select more CSV files, all subsequent files are appended to the initial selection, using the rules. This assumes that the original selection is not altered.

Spectra Geospatial recommends that you do not use multiple CSV files that contain points of the same name.

Finding the best point in the database

To find the point with the highest classification, use the **Point manager**. In the **Point manager**, the highest class point always appears at the first level in the tree structure. If there is more than one point of the same name, the tree structure has a second level, which contains all points of the same name. The point with the highest classification appears at the top, followed by the other points of the same name, in the order in which they were observed.

Duplicate point tolerance settings and overwriting

Duplicate point tolerance settings are configured in the survey style. When storing points, these settings are used to compare the coordinates of the point to be stored with points of the same name that already exist in the database. If the coordinates are outside the duplicate point tolerances defined in the survey style, the **Duplicate point out of tolerance** dialog appears.

NOTE - This warning appears only if the new point is out of tolerance with the original point. If you have changed the tolerance values, the message may not appear. See [Duplicate point tolerance options, page 385](#).

Of the options displayed in the **Duplicate point out of tolerance** dialog, **Overwrite** and **Average** are the only two options that might result in a point being 'promoted' – thus changing the coordinates for the best point.

In a conventional survey, observations from one station setup to the same point are combined to create an MTA record. You do not see the "duplicate point out of tolerance" warning.

If you store a face 2 observation to a point that already has a face 1 observation, the face 2 observation is checked to see if it is within tolerance of the face 1 observation and then stored. For more information about face 1 and face 2 observations, see [Measuring a point in two faces](#).

The overwrite rules

Overwrite deletes points, and results in a change to the coordinates of the best point. Deleted points remain in the database and have a search class of Deleted. See [Search class](#).

If the **Overwrite** option does not appear in the software, this means that an overwrite would not result in changes to the coordinates of the best point.

Select **Overwrite** to store the new point and delete all existing points of the same class or below:

- Observations can overwrite and therefore delete Observations.
- Coordinates can overwrite and therefore delete Coordinates.
- Observations cannot overwrite Coordinates.
- Coordinates cannot overwrite Observations.

One exception to these rules is when a Rotate, Scale or Translation is performed. When one of these transformations is applied, the original observations are deleted and replaced by the translated points.

That does not mean that all Observations can overwrite all other Observations of the same name, and all Coordinates can overwrite all Coordinates of the same name. The [Search class](#) rules still apply.

Overwrite examples

- If you measure a point with a name that already exists in the database, you can choose to overwrite it when you store the new one. All previous Observations of the same name, and with the same or a lower search class, are deleted.

If a point stored as a Coordinate existed, then overwrite would not have been an option, because overwriting the observations would not have changed the best point.

- If you key in a point with a name that already exists in the database, you can choose to overwrite it when you store the new one. All previous points stored as Coordinates, of the same name, and with the same or a lower search class, are deleted. Points of the same name stored as Observations are not affected.

Storing another does not change the best point

If you measure or key in a point with a name that already exists in the database, you can choose to store both points in the database, and both are transferred with the job. The Origin search rules ensure that the point with the highest class is used for calculations. If there are two points of the same class, the **first** is used.

Averaging overwrites another average

If you measure a point and use a name that already exists in the current job, you can choose to average all points of that name. To store the observation and an averaged grid coordinate, select **Average**. Where an averaged position of that name already exists, the new averaged position will overwrite the existing averaged position. Averaged points have a coordinate classification. Coordinates have a higher classification than observations, so the stored averaged position is used in preference to any observations. You can also choose to Auto-average when the point is within tolerance. See [Auto average tolerance](#), page 385.

Assigning control class to a point

Control class is the highest classification that you can give to a point. Any high-accuracy point that you use as a fixed standard in a job can be a control point.

If you specify control search class when you key in the coordinates for a point, you can be sure that those coordinates will not change until you key in another point of the same name and the same search class (control) and choose to overwrite the first point.

The Origin software never elevates measured points to control class. This is because measured points have measurement errors and may change or be measured again during the course of the job. If the keyed-in

point "CONTROL29" is control class, generally you would not want the coordinates of that point to change. A control class point is held fixed for the job.

The Origin software can measure **observed** control points, but it does not give them control classification. This is because, in calibration, the measured point often has the same name as the keyed-in control point. This makes it easier to set up the calibration. It also makes it easier to manage your data, for example, if you know that all references to point "CONTROL29" on the ground are also references to point "CONTROL29" in the database.

Point storage and classification

How you record a point determines how it is stored in the Origin software. Points are stored either as vectors or as positions. For example, RTK points and conventionally observed points are stored as vectors, while keyed-in points, real-time differential points, and postprocessed points are stored as positions.

To review details about a stored point, tap \equiv and select **Job data / Review job**. A point record contains information about the point, such as the point name, the code, the method, the coordinates, and the GNSS data file name. The **Method** field describes how the point was created.

The coordinates are expressed as Global, local, or grid coordinates, depending on the setting in the **Coordinate view** field.

To change the coordinate view settings, do one of the following:

- From the **Job data** menu, tap **Review job**. Open the point record and then tap **Options**.
- From the **Key in** menu, tap **Points** and then tap **Options**.

NOTE - Define a datum transformation and/or a projection if you want to display local or grid coordinates for a GNSS point. Alternatively, calibrate the job.

Each point record uses the antenna height given in the previous antenna height record. From this, the software generates a ground height (elevation) for the point.

The following table shows how the point is stored in the **As Stored** field.

Value	What the point is stored as
Grid	Grid coordinates
Local	Local geodetic coordinates
Global	View as L, L, H coordinates in the Global reference datum at the Global reference epoch .
ECEF (Global)	View as Earth-Centered, Earth-Fixed X, Y, Z coordinates in the Global reference datum at the Global reference epoch .
ECEF deltas	View as an Earth-Centered, Earth-Fixed X, Y, Z vector in the Global reference datum at the Global reference epoch .

Value	What the point is stored as
Polar	Azimuth, horizontal distance, and vertical distance. This is a vector.
HA VA SD	A horizontal circle reading, vertical circle reading (a zenith angle), and slope distance. This is a vector.
HA VA SD (raw)	A horizontal circle reading, vertical circle reading (a zenith angle), and slope distance with no corrections applied. This is a vector.
Mag.Az VA SD	A magnetic azimuth, vertical (zenith) angle, and slope distance vector.
MHA MVA MSD	A meaned horizontal angle from the backsight, meaned vertical angle (a zenith angle), and meaned slope distance. This is a vector.
USNG/MGRS	USNG/MGRS string and elevation

Read the **As Stored** field in conjunction with the **Method** field.

The **Global reference datum** and the **Global reference epoch** are shown in the **Select coordinate system** screen of the job properties. See [Coordinate system, page 79](#).

For points calculated using **Cogo/Compute point**, you can choose how to store that point. The available options depend on the selected coordinate system and the type of observation used in computing the point.

NOTE – Points stored as vectors are updated if the calibration or coordinate system of the job changes, or the antenna height of one of the source points is changed. Points stored as Global coordinates (for example, an offset point calculated using the **From a baseline** method) are not updated.

For GNSS points, Quality Control (QC) records are stored at the end of the point record.

Point classification

When points are stored they have either one or two classifications:

- Points that have been measured using GNSS have an observation class and a search class.
- Points that have been keyed in, computed, or measured with a conventional instrument or laser rangefinder have only a search class.

Observation class

The following table lists the GNSS observation classes and resulting solutions.

Observation class	Result
RTK	A real-time kinematic solution.
L1 Fixed	An L1 fixed real-time kinematic solution.
L1 Float	An L1 float real-time kinematic solution.
L1 Code	An L1 code real-time differential solution.
Autonomous	A postprocessed solution.
SBAS	A position that has been differentially corrected using SBAS signals.
Network RTK	A real-time kinematic solution using Network RTK.
RTX	A position that has been generated by the Trimble Centerpoint RTX correction service.
WA Fixed	A fixed solution using wide-area processing.
WA Float	A float solution using wide-area processing.
OmniSTAR HP	A high-precision OmniSTAR corrected solution (HP/XP/G2)
OmniSTAR VBS	An OmniSTAR VBS differentially corrected position

NOTE – For postprocessed surveys, the observation class is autonomous and no precisions are recorded.

Search class

A search class is applied to a point when it is measured, keyed in, or computed. The search class is used by the software when details of a point are required for stakeout or calculations (for example, for Cogo calculations). See [Database search rules](#).

Coordinate view settings

You can change the **Coordinate view** settings when viewing a point in the **Review job** screen or the **Point manager** or when keying in a point.

Available coordinate view options

Option	Description
Global	View as L, L, H coordinates in the Global reference datum at the Global reference epoch
Local	View as local ellipsoidal latitude, longitude, and height.
Grid	View as northing, easting, and elevation.
Grid (local)	View as northing, easting, and elevation relative to a transformation.
ECEF (Global)	View as Earth-Centered, Earth-Fixed X, Y, Z coordinates in the Global reference datum at the Global reference epoch .
ITRF 2020	View as X, Y, Z , and T (time/epoch of measurement) coordinates in the ITRF 2020 reference frame.
Station and Offset	View as station, offset, or vertical distance relative to a line, arc, polyline, alignment, or road.
Az VA SD	View as azimuth, vertical angle, and slope distance.
HA VA SD (raw)	View as horizontal angle, vertical angle, and slope distance.
Az HD VD	View as azimuth, horizontal distance, and vertical distance.
HA HD VD	View as horizontal angle, horizontal distance, and vertical distance.
Delta Grid	View as differences in northing, easting, and elevation from the instrument point.
USNG/MGRS	View as USNG/MGRS string (based on the local ellipsoid) and elevation.

NOTE –

- The **Global reference datum** and the **Global reference epoch** are shown in the **Select coordinate system** screen of the job properties. See [Coordinate system, page 79](#).
- When keying in a point, and for all options except **Grid** or **Grid (local)**, the computed grid coordinates are also displayed. To select **Grid (local)**, the **Advanced Geodetic** option must be enabled in the **Cogo settings** screen.

Null coordinate values

If the coordinate value when viewing a point is **?**, one of the following situations may have occurred:

- The point may be stored as a GNSS point but with the **Coordinate view** field set to **Local** or **Grid** and a datum transformation and projection not defined. To correct this, change the **Coordinate view** setting to **Global**, define a datum transformation and/or projection, or calibrate the job.
- The point may be stored as a **Grid (local)** point and with the **Coordinate view** field set to **Grid**, but a transformation has not been defined to convert the **Grid (local)** to a **Grid**.
- The point may be stored as a polar vector from a point which has been deleted. To correct this, restore the point.
- In a 2D survey, a projection may have been defined with the project height as null. To correct this, set the **Project height** to approximate the site elevation.

To view Grid (local) coordinates

NOTE – To select **Grid (local)**, the **Advanced Geodetic** option must be enabled in the **Cogo settings** screen.

 
1. In **Point manager** or **Review job**, tap **Display** and then select **Grid (local)**.
2. To select the Grid (local) transformation for coordinate display, or to create a transformation, select **Options**.
3. Do one of the following:
 - To view the original Grid (local) values, select **Display original grid local** and then tap **Accept**.
 - To create a new display transformation, select **Create new transformation**. Tap **Next** and complete the required steps. See [Transformations, page 248](#).
 - To select an existing display transformation, select **Select transformation**. Select the display transformation from the list. Tap **Accept**.

NOTE -

- The 'input' transformation transforms a point from the original entered Grid (local) coordinates to database grid coordinates.
- The 'display' transformation transforms a point, regardless of how it was stored, from the database grid coordinates to display computed Grid (local) coordinates.
- When viewing the original Grid (local), points not stored as Grid (local) appear as null North (local), East (local), and Elev (local).
- When you select a display transformation, all database grid points appear using the current display transformation. If the display transformation is different from the original transformation, the computed Grid (local) coordinates are different from the original entered Grid (local) coordinates. To see the original Grid (local) coordinates, set the **Coordinate view** to **As Stored. Transformation (as stored)** is displayed when reviewing Grid (local) and the **Coordinate view** is set to **As Stored. Transformation (display)** is displayed when reviewing Grid (local) and the **Coordinate view** is set to **Grid (local)**.
- A point entered as a Grid (local) point is stored in its original format to the job as a Grid (local) point. Typically, the input transformation to transform the point to a database grid point is assigned at the time the point is entered, but the transformation can be created later and then assigned to the point(s) using **Point manager**.

To view coordinates by station and offset

To view points by station and offset relative to an item such as a line, arc, polyline, alignment, or road:

1. Tap  and select **Job data / Point manager**.
2. Tap **Display** and then select **Station and offset**.
3. Tap **Options**.
4. Select the item **Type** and the item name. If you select **Road** in the **Type** field, then you must select the **Road format** before you select the **Road name**.
5. Tap **Accept**.


If the **Coordinate view** is set to **Station and offset** relative to a road or alignment, then the station and offset for the point is to the intersection point of two horizontal alignment elements when:

- the horizontal alignment includes consecutive elements that are non tangential;
- the point is beyond the end tangent point of the incoming element but before the start tangent point of the next element; and
- the point is on the **outside** of the horizontal alignment.

The exception to this behavior is if the distance from the point to the intersection point is greater than the distance to another element in the horizontal alignment. In that case, the station and offset for the point is to the closer element.

Where the point is on the **inside** of the horizontal alignment, then the station and offset is relative to the closest horizontal element.


Where the point is before the start of the horizontal alignment or beyond the end of the alignment, the station and offset for the point is null.

To change the term used for distances in the software to **Chainage** instead of the default **Station**, tap  and select **Settings / Language**.


Exporting data from the job

Options shown in the **Export** screen are specific to the export file format you select.

To export data from the job

1. Tap  and select **Job**.
2. In the **Jobs** screen, select the job to export data from.
3. Tap **Export**. The **Export** screen appears.
4. In the **File format** field, select the type of file to create. For information about options specific to the export file format you have selected, see [File format-specific options, page 686](#) below.
5. If required, edit the file name. By default, the **File name** field shows the name of the current job and the file extension is the file extension for the selected file type.

By default the file will be exported to the folder where the current job is stored. To export the file to a **different folder**, see [To export files to a folder that is not the current job folder, page 689](#) below.

TIP - If you have previously selected an export folder but then want the software to return to the default export location, tap  and select the folder where the current job is stored.

6. To automatically view the file after you create it, select the **View created file** check box.
7. If you selected the **Comma Delimited (*.CSV, *.TXT)** file format, the **Select points** screen appears. Choose the method for selecting the points and then select them. See [Selecting points](#). To reorder points you have selected from a list or from the map, tap the **Name** column in the **Points to export** list.
8. Tap **Accept**.

File format-specific options

Options shown in the **Export** screen are specific to the export file format you select.

Comma Delimited (*.CSV, *.TXT)

1. Select a field for each value. To exclude a value from the exported file, select **Unused**.
2. From the **Field delimiter** list, select the character (comma, semicolon, colon, space, or tab) that separates the data in your file into distinct fields.
3. When you tap **Accept**, you will be able to select the points to export. See [Selecting points](#).

To reorder points you have selected from a list or from the map, tap the **Name** column in the **Points to export** list.

DXF

1. Select the **DXF file format**, the item types to export, and the number of **Decimal places for elevation attribute values**.
2. In the **Symbols** field, select the type of symbols used to represent the data in the DXF file.
 - Select **Dot symbols** to:
 - Show all points with a uniform dot symbol.
 - Show line and polygon features using the simple solid or dashed **Field line style** from the Feature Library.
 - Select **Method symbols** to:
 - Show points by the method used to create the point. For example, different symbols are used for topo points, control points, keyed in points and as-staked points.
 - Show line and polygon features using the simple solid or dashed **Field line style** from the Feature Library.
 - Select **Feature library symbols** to:
 - Show points using the symbol defined for points of the same feature code in the feature library (FXL) file. Points that do not have a feature symbol associated are displayed as a small circle.
 - Show line and polygon features using the custom **Line style** from the Feature Library.

Separate layers are created for each text attribute, for example point names, codes, and elevations. When exporting to DXF with the **Symbols** field set to **Feature library symbols**, a separate layer for each text attribute is created per feature code.

Point names, codes, elevations and extra attributes associated with inserted blocks are enabled for display by default in DXF files.

ESRI Shapefiles

Set the **Coordinates** to **Grid** (northing/easting/elevation) or **Lat/Long coordinates** (local latitude/longitude/height).

Grid local coordinates

Select whether to output the original entered grid (local) coordinates or the computed display grid (local) coordinates.

NOTE - The computed grid (local) coordinates are derived by taking the keyed-in or computed grid coordinates and then applying the display transformation. You must set the required display transformation **before** you export the file. To do this in **Review job**, select a point, go to **Options**, set the **Coordinate view** to **Grid (local)** and then select a **Transformation for grid (local) display**.

LandXML

Select the item types to export. Options include points, feature coded linework and database linework.

Select the **Bentley compatible format** check box to be able to view linework in Bentley Open Road Design software.

Attributes associated with points and linework are exported to the LandXML file.

Attributes recorded as **featureRef** attributes found in a **CgPoint** element can also be reviewed.

Stakeout report

Specify the acceptable stakeout tolerances in the **Stakeout horizontal tolerance** and the **Stakeout vertical tolerance** fields.

Any stakeout delta greater than the defined tolerances appears in color in the generated report.

Surface inspection report

Enter the **Report description** that will appear near the top of the report.

NOTE - The **Surface inspection report** is available only as a PDF file.

Survey report

Select whether to generate a detailed report and the format for reporting GNSS deltas. Any screen captures and snapshots saved to the job are automatically included in the report.

Traverse report

Specify the traverse deltas limit. Values that exceed this limit are highlighted in the generated report.


JobXML

Select the appropriate version number.

Utility Survey DXF

Configure the options for creating lines and generating text.

To export files to a folder that is not the current job folder


By default the file will be exported to the folder where the current job is stored. To export the file to a *different folder*, tap  to browse to and select the folder:

- If you create or select a folder in the current job folder, then for subsequent exports from any job the software will create or select a folder of that name in whatever the current job folder is at the time of export. For example, if you create a folder named "Exports" in the current job folder, then for subsequent exports the software will export to a folder named "Exports" in the current job folder at the time of export.

To change this behavior, either select a folder outside the Origin project folder structure, or select the current job folder to restore the software to the default location.

- If you select a folder that is outside the Origin project folder structure, such as a network drive or a USB drive, then the software will continue to export files to the same nominated folder until you select a different folder.

For Spectra Geospatial controllers running Android, USB drives should be formatted to the FAT32 format.

If the controller is running Android, you may be prompted to give Origin read and write permissions for the USB drive. When you tap **Yes**, the Android folder selection screen appears. Tap  in that screen, browse to the USB drive and tap **[SELECT]** or **[Use this folder]**. The USB drive now appears in the Origin **Select folder** screen. If the **USB drive detected** message does not appear, or if you have dismissed the message, tap the **Select USB drive** softkey once the USB device is connected. Note that it can take up to 30 seconds for the USB drive to be detected.

Export file formats

Data can be exported as machine-readable files for use in other software applications, or as human-readable reports in Word or HTML format.

Use these files to check data in the field, or to produce reports, which you can transfer from the field to your client or to the office for further processing with the office software.

Predefined file formats

The predefined export file formats available on the controller include:

- Check shot report
- CSV Global Lat-long points
- CSV with attributes
- DXF
- ESRI Shapefiles
- GDM area
- GDM job
- Grid (local) coordinates
- ISO rounds report
- JobXML
- Local grid coordinates
- Locator to CSV
- Locator to Excel
- M5 coordinates
- Road-line-arc stakeout report
- SC Exchange
- SDR33 DC
- Stakeout report
- Surface inspection report
- Survey report
- Traverse adjustment report
- Traverse deltas report
- Trimble DC v10.7
- Utility Survey DXF
- Volume computation report

Comma delimited CSV or TXT files

If the Comma Delimited (*.CSV, *.TXT) option is selected, you can select the points to export and specify the format of the data that is received. Five fields appear: **Point name**, **Point code**, **Northing**, **Easting**, and **Elevation**. If description fields are enabled for the job, there are two additional fields to configure. To exclude a value from the exported file, select **Unused**.

When you tap **Accept**, you will be able to select the points to export. See [Selecting points](#).

Export file template file location

Predefined export file formats are defined using XSLT stylesheet (*.xsl) definition files. They are typically located in the **Spectra Geospatial Data\System Files** folder.

The predefined stylesheet definitions are provided in English. Translated stylesheet files are typically stored in the appropriate language folder.

The location of the folder depends on the controller operating system:

- Windows: **C:\Program Files\Spectra Geospatial\General Survey\Languages\<language>**
- Android: **<Device name>\Spectra Geospatial Data\Languages\<language>**

Additional predefined formats available for download

Stylesheets for exporting to other formats can be downloaded from the [Stylesheets page](#) of the Trimble Access Help Portal.

Copy the downloaded stylesheets to the **C:\ProgramData\Spectra Geospatial Data\System Files** folder on the controller.

If you have measured depths using an echo sounder, you can also download the following stylesheets to generate reports with depths applied:

- **Comma Delimited with elevation and depths.xsl**
- **Comma Delimited with depth applied.xsl**

For more information, see [To generate reports that include depths](#).

Custom export formats

You can modify a predefined format to meet your specific requirements, or use it as a template to create a completely new custom export format.

You can use any text editor, such as Microsoft Notepad, to make minor changes to the predefined formats.

Modifying a predefined format offers the following benefits:

- Important information can be displayed first.
- Data can be ordered to suit your requirements.
- Information that is not required can be removed.
- Additional data can be computed for display, for example by applying construction offsets to reported values.
- The point design elevation can be edited after the stake out measurement is completed.
- Up to 10 extra design elevations with individual vertical offset values can be defined and edited, with the cut/fill to each extra design elevation being reported.
- The size and color of the font can be modified to suit your requirements

NOTE – Spectra Geospatial recommends saving any modified XSLT files with a new name. If you keep the original name, predefined XSLT files are replaced when you upgrade the controller, so any custom changes are lost.

Creating a new custom format

To create a completely new custom format, you need some basic programming knowledge to modify the XSLT file. XSLT stylesheet definition files are XML format files. Stylesheets must be created according to the XSLT standards as defined by the World Wide Web Consortium (W3C). For details, go to w3.org.

You cannot easily modify or create a stylesheet on the controller. To successfully develop new stylesheet definitions, work on an office computer using a suitable XML file utility program.

Origin version 2021.00 and later supports stylesheets that use the following EXSLT modules:

- **math:** math functions typically defined to use the math: namespace
- **date:** date and time functions typically defined to use the math: namespace (except for date:format-date, date:parse-date and date:sum)
- **sets:** functions to provide set manipulation typically defined to use the set: namespace
- **strings:** functions to provide string manipulation typically defined to use the set: namespace
- **functions:** functions that allow users to define their own functions for use within XSLT (except for func:script)

NOTE – Stylesheets using these EXSLT extensions can be used in Origin, but will not operate successfully in the File and Report Generator utility as that utility is based solely on the stylesheet functionality available the Windows operating system.

Requirements

To develop your own XSLT stylesheets, you need:

- An office computer.
- Basic programming skills.
- An XML file utility program with good debugging facilities.
- The JobXML file schema definition that provides the details of the JobXML format required to create a new XSLT stylesheet. There is a link to the schema location at the top of every JobXML file.
- A job or JobXML file that contains the source data.

Some custom reports can be generated using Origin on the controller, while others can be generated using the **File and Report Generator utility**, which can be downloaded from the [Software and utilities page](#) of the Trimble Access Help Portal.


Custom stylesheet creation process

The basic steps are:

1. Source a Job file or JobXML file from your controller.
2. Create the new format using a predefined XLST stylesheet as a starting point and the JobXML schema as a guide.
3. To create the new custom file on the office computer, use the File and Report Generator utility to apply the XSLT stylesheet to the Job or JobXML file. For information on using this utility, refer to the **File and Report Generator Help**.
4. To create the custom files on the controller, copy the file to the **System Files** folder on the controller.

Working with media files

Media files refers to image files linked to the job in the following ways:

- Images uploaded as a file
- Images captured using the controller's internal camera
- Screen captures created by tapping  in the **Map** screen

Media files can be linked to a job or to a point in the job. See [Media files, page 116](#).

If you are using a feature library that uses media file attributes, you can capture an image and link it to the appropriate attribute. See [To link an image to an attribute, page 547](#).

Adding additional information to images

If required, you can:

- Add geographical identification metadata to images (known as geotagging).
Metadata includes position coordinates that is written to the EXIF header of the image (EXIF = EXchangeable Image File format). The geotagged image can be used in office software such as Survey Office. This requires the job to have a coordinate system.
- Add linework, polygons or text to images by drawing on them. See [To draw on an image, page 696](#).

Storing images

By default, images captured using the controller's integrated camera are stored in the **<job name> Files** folder. Storing images in the current **<job name> Files** folder facilitates automatic upload to the cloud with the job, and makes linking the images to a job, a point, or an attribute of a point possible. When you [capture an image using the controller's integrated camera](#) from within the Origin software, the image file name is automatically entered into the **File name attribute** field when the image is saved to the **<job name> Files** folder.

NOTE – If the controller is running Android, you **must** open the controller camera application from within the Origin software for Origin to be able to detect when an image is saved to the **Pictures** folder. If you have already opened the camera application, close it and open it from within Origin.

To change the image file linked to a point or attribute

1. You can change the image file linked to an attribute in the **Review job** or **Point manager** screen:
 - In the **Review job** screen, select the point you want to edit and tap **Edit**.
 - In the **Point manager** screen, select the point you want to edit and tap **Details**.
2. In the **Point manager** screen, select the point you want to edit and tap **Details**.
3. If the image is linked to an attribute, tap **Attrib**. If the image is linked to the point, tap **Media files**. (In portrait mode, swipe right to left along the row of softkeys to view the **Media files** softkey.)
4. In the photo file name field, tap **▶** and tap **Select file**. Browse to the location of the file you want to link and select it.

The name of the image appears in the photo file name field.

TIP – To facilitate automatic upload of images to the cloud with the job, the image should be located in the current **<job name> Files** folder.

5. Tap **Store**.

To geotag an image

Geotagging is assigned to JPG images linked as a file or image attribute or media file to a point.

When images are geotagged, the properties of the file include the GPS coordinates of where the image was captured, a timestamp showing when the image was captured, and other relevant information including point ID as the image description and user name (if applicable).

To view geotagging information, select the image in the file explorer on your device and view the **Properties** or **Details** for the file.

 
NOTE – It is not possible to remove geotagging information from an image.

To use position information from the connected receiver instrument

1. Tap **☰** and select **Job**. The current job is already selected.
2. Tap **Properties**.
3. Tap **Media files**.
4. In the **Link to** field, select **Previous point**, **Next point** or **Point name**.
5. Select **Geotag images**.
6. Tap **Accept**.

Alternatively, when capturing images to link to attributes, in the attribute entry screen, tap **Options** and then select **Geotag images**.

To use position information from the GPS in the controller

 
1. Tap  and select **Instrument / Camera**. The camera application on the controller opens.
2. To change to the rear-facing camera, tap the **Switch camera** icon in the top left.
3. Tap the **Settings** icon.
4. Click **Choose whether camera can use location information**.
5. Tap **Yes** to switch applications.
6. Enable the **Location service** switch.
7. Return to the camera application and tap the image capture button.

To capture an image using the controller camera

You can capture an image using the controller's integrated camera from within the Origin software.

Images captured using the controller's integrated camera are typically saved to the **Pictures** folder. For some devices the location these files are saved to can be changed, but Spectra Geospatial recommends you save the files to the **Pictures** folder because the Origin software monitors the **Pictures** folder and moves images saved to the Pictures folder to the **<job name> Files** folder. If the files are saved to another location, the software cannot detect the arrival of new files and cannot move them.

NOTE – When using a Spectra Geospatial controller running Android, you **must** open the controller camera application from within the Origin software for Origin to be able to detect when an image is saved to the **Pictures** folder. If you have already opened the camera application, close it and open it from within Origin.

1. Tap  and select **Instrument / Camera**. The camera application in the controller opens.
2. If the screen shows an image of you then the front-facing (selfie) camera is selected. To change to the rear-facing camera, tap the **Switch camera** icon in the top left.
3. To change the camera or image settings, tap the **Settings** icon and make your changes. For more information, refer to the documentation for your controller.
4. Position the controller to capture the required image and then tap the camera button or the **OK** button on the controller to capture the image.
5. To close the camera, tap the screen and then tap **X** in the top right.

If you selected the **Show with new media file** option when you configured the media file settings, the media file screen appears showing a thumbnail of the image. This enables the **Link to** method to be changed and, if linking by point name, the point name.

If the **Show with new media file** option was not selected, the image is not shown and is

automatically linked to the option you selected in the **Media file** screen of the job properties.

6. Tap **Accept**.






To draw on an image

Use the **Draw** toolbar to add linework, polygons or text to any image in the job, including screen captures you have created from the **Map** screen or the **Surface inspection** form.


The **Draw** toolbar is available when you view an image file in the **Review job** screen.

TIP – When you select a media file in the **Review job** screen, the **Media file** window appears. To make the **Media file** window full-size, click **Expand**.

To draw on the image:

1. Tap **Draw**.
2. From the **Draw** tool bar select the appropriate option to draw items on the image:
 -  freehand linework
 -  lines
 -  rectangles
 -  ellipses
 -  text

TIP – To split text onto a new line, press **Shift + Enter** or **Ctrl + Enter**.

3. To reposition the item, tap and hold on the item and then drag it.
To undo an edit, tap .
4. To change the line width, style, and color or the text color, background color, and size of the item, tap and hold the item and then tap **Options**.
5. To save a copy of the original image to the **<project>\<job name> Files\Original Files** folder, tap **Options** and select **Save original image**.

NOTE – If you do not have a job open, images are saved to the current project folder and original images are saved to the **Original Files** folder inside the current project folder.

To view the original image in the **Review Job** screen, tap **Original**. To return to the edited image, tap **Modified**.

6. Tap **Store**.

Data quality graph

The **QC graph** screen displays a graph of quality indicators that are available from data in a job. To change the type of data to display, tap **Display**. To scroll along the graph, use the arrow buttons. To view basic details

of a point, tap the graph. For more information, double tap the graph to access **Review**.

You can view a graph of:

- Horizontal precision (H. Prec.)
- Vertical precision (V. Prec.)
- Tilt distance
- Satellites
- PDOP
- GDOP
- RMS
- HA standard error
- VA standard error
- SD standard error
- Elevation
- Target height
- Attributes

NOTE – Attributes can be filtered by **Feature code** and **Attributes** but only feature codes that contain numeric or integer attributes are displayed.

Tap a point to see details for that point. Tap again to review the point.

To aid point selection, tap a point and then tap **Prev** or **Next** to select the previous or next point.

To add a note to a point, tap the bar in the graph to select the point, and then tap the **Note** softkey.

To navigate to a point, tap the point and swipe right to left along the row of softkeys and then tap **Navigate**.

To define the Y axis range, tap near the Y axis and from the pop-up menu define the **Minimum** and **Maximum** Y axis values.

Glossary of terms

This topic explains some of the terms used in this Help.

accuracy	The closeness of a measurement or coordinate value to the actual (true) or accepted value.
almanac	Data, transmitted by a GNSS satellite, that includes orbit information on all the satellites, clock correction, and atmospheric delay parameters. The almanac facilitates rapid satellite acquisition. The orbit information is a subset of the ephemeris data with reduced precision.
Angles and distance	Measurement of horizontal and vertical angles and a slope distance.
Angles only	Measurement of horizontal and vertical angles.
annotation	Markings on images for the purpose of clarification.
attribute	A characteristic or property of a feature in a database. All features have a geographic position as an attribute. Other attributes depend on the type of feature. For example, a road has a name or designation number, surface type, width, number of lanes, and so on. Each attribute has a range of possible values, called a domain. The value chosen to describe a particular feature is called the attribute value.
Autolock	The ability to lock onto and track a target.
automated rounds	The process of automatically measuring a multiple observations to observed points.
autonomous positioning	The least precise form of positioning that a GNSS receiver can produce. The position fix is calculated by one receiver from satellite data alone.
azimuth	Horizontal direction relative to a defined coordinate system.

backsight	Point with known coordinates or known azimuth from the instrument point that is used to orientate the instrument during station setup.
base station	In a GNSS survey, you observe and compute baselines (the position of one receiver relative to another). The base station acts as the position from which all unknown positions are derived. A base station is an antenna and receiver set up on a known location specifically to collect data to be used in differentially correcting rover files.
baud	A unit of data transfer speed (from one binary digital device to another) used in describing serial communications; generally one bit per second.
BIM	Building Information Modeling (BIM) is a process where the planning, design, construction, and maintenance of buildings and other built assets such as roads, bridges or utilities infrastructure is managed using digital 3D models. For information on BIM model file formats supported in Origin, see BIM models, page 131 .
C/A (Coarse Acquisition) code	A pseudorandom noise (PRN) code modulated onto an L1 signal. This code helps the receiver compute the distance from the satellite.
change face	Refers to when the face of the conventional instrument that is measuring observations changes between face 1 and face 2. On a servo instrument , this happens automatically. On a robotic instrument , this happens when you tap Change face in the Origin software. On a mechanical instrument , you must manually change face on the instrument.
CMR	Compact Measurement Record. A satellite measurement message that is broadcast by the base receiver and used by RTK surveys to calculate an accurate baseline vector from the base to the rover.
constellation	A specific set of satellites used in calculating positions: three satellites for 2D fixes, four satellites for 3D fixes. All satellites visible to a GNSS receiver at one time. The optimum constellation is the constellation with the lowest PDOP. See also PDOP .
construction offsets	A specified horizontal and/or vertical offset distance to enable equipment to operate without disturbing construction stakes.
construction point	A point that is measured using the "quick fix" option in COGO.

control point	A point on the earth that has an accurately known geographic position.
conventional survey	In a conventional survey, the controller is connected to a conventional survey instrument such as a total station.
curvature and refraction	Correction to the measured vertical angle for the curvature of the earth and the refraction caused by the earth's atmosphere.
data message	A message, included in the GNSS signal, that reports on the location and health of the satellites as well as any clock correction. It includes information about the health of other satellites as well as their approximate position.
datum	See <u>geodetic datum</u> and <u>local datum</u> .
design code	The code name given to the design point.
design name	The name given to the design point.
Differential Positioning	Precise measurement of the relative position of two receivers tracking the same satellites simultaneously.
Direct Reflex (DR)	Type of EDM that can measure to non reflective targets.
displacement model	A model of the movement of points on the surface of the Earth due to plate motion, tectonic strain accumulation, seismic/postseismic deformation, glacial isostatic adjustment, and/or other geological or anthropogenic processes that cause significant coordinate change over large areas. Used to propagate coordinates from one epoch (such as the epoch of measurement) to another (such as the reference epoch of the selected global reference datum).

DOP (Dilution of Precision)	<p>An indicator of the quality of a GNSS position. DOP takes into account the location of each satellite relative to other satellites in the constellation, as well as their geometry relative to the GNSS receiver. A low DOP value indicates a higher probability of accuracy. Standard DOPs for GNSS applications are:</p> <ul style="list-style-type: none">- PDOP – Position (three coordinates)- GDOP – Geometric (three coordinates and time)- RDOP – Relative (Position, averaged over time)- HDOP – Horizontal (two horizontal coordinates)- VDOP – Vertical (height only)- TDOP – Time (clock offset only)
Doppler shift	<p>The apparent change in frequency of a signal caused by the relative motion of satellites and the receiver.</p>
DRMS	<p>Distance Root Mean Square. In Origin, DRMS is an estimate of the root mean square of the radial distance from the true position to the observed position. DRMS is one of the available options for the display of GNSS precision estimates in the Origin software. See Precision display.</p>
dual-frequency	<p>GNSS receiver that uses both L1 and L2 signals from GNSS satellites. A dual-frequency receiver can compute more precise position fixes over longer distances and under more adverse conditions because it compensates for ionospheric delays.</p>
dual-prism offset	<p>Measurement of horizontal and vertical angles and a slope distance to two prisms located on one prism pole for the purpose of positioning an obstructed point.</p>
DXF file	<p>A DXF file is a 2D or 3D vector graphic file format generated from CAD software such as AutoDesk. DXF stands for Drawing Exchange Format.</p>
Earth-Centered, Earth-Fixed (ECEF)	<p>A cartesian coordinate system expressing coordinates in the Global datum. The center of this coordinate system is at the earth's center of mass. The z axis is coincident with the mean rotational axis of the earth and the x axis passes through 0° N and 0° E. The y axis is perpendicular to the plane of the x and z axes.</p>
eccentric object	<p>Measurement of horizontal and vertical angles and a slope distance to the face of a radial object (for example, power pole). An additional horizontal angle is observed to the side of the object to calculate the radius and thus position the center of the object.</p>

EGNOS	European Geostationary Navigation Overlay Service . A satellite-based augmentation system (SBAS) that provides a free-to-air differential correction service for GNSS.
elevation	Height above mean sea level. Vertical distance above the geoid.
elevation mask	The angle below which Spectra Geospatial recommends that you do not track satellites. Normally set to 10 degrees to avoid interference from buildings and trees as well as ground multipath errors.
ellipsoid	A mathematical model of the earth formed by rotating an ellipse around its minor axis.
ephemeris	The current satellite position predictions (trajectory), transmitted in the data message.
epoch	The measurement interval of a GNSS receiver. The epoch varies according to the survey type: – for real-time surveys it is set at one second – for postprocessed surveys it can be set to a rate of between one second and one minute
face 1	Observing position of an instrument where the vertical circle is commonly on the left hand side of the telescope.
face 2	Observing position of an instrument where the vertical circle is commonly on the right hand side of the telescope.
FastStatic survey	A type of GNSS survey. A FastStatic survey is a postprocessed survey using occupations of up to 20 minutes to collect raw GNSS data. The data is postprocessed to achieve subcentimeter precisions.
feature	A representation of a real-world object on a map. Features can be represented as points, lines, or polygons. Multipoint features consist of more than one point but only reference one set of attributes in the database.
feature codes	Simple descriptive words or abbreviations that describe the features of a point.

fixed solution	Indicates that the integer ambiguities have been resolved and a survey is initialized. This is the most precise type of solution.
float solution	Indicates that the integer ambiguities have not been resolved, and that the survey is not initialized.
FSTD (fast standard)	The method of measuring one distance and one angle to coordinate a point.
GAGAN	GPS Aided Geo Augmented Navigation. A regional satellite-based augmentation system (SBAS) implemented by the Indian government.
Galileo	Galileo is a global navigation satellite system (GNSS) built by the European Union (EU) and European Space Agency (ESA). Galileo is an alternative and complementary GNSS to the U.S. Global Positioning System (GPS), the Russian GLONASS, and the Japanese Quasi-Zenith Satellite (QZSS).
GDOP	Geometric Dilution of Precision. The relationship between errors in user position and time, and errors in satellite range. See also DOP .
GENIO	GENeric Input Output file exported by a number of road design software packages that defines a road as a series of strings. See also string .
geodetic datum	A mathematical model designed to fit part or all of the geoid (the physical earth's surface).
geoid	The surface of gravitational equipotential that closely approximates mean sea level.
Global	Global is the short form name to refer to coordinates in the Global reference datum .
Global reference datum	<p>The Global reference datum is the datum of RTK measurements, such as the reference frame of base stations including VRS. The Origin software determines the Global reference datum using the coordinate system and zone you have selected from the coordinate system library.</p> <p>If you perform an RTK survey in the job, you must make sure the selected real-time correction source is providing GNSS positions in the same datum as that specified in the Global reference datum field in the Select coordinate system screen of the job properties.</p>

Global reference epoch	The Global reference epoch is the epoch of realization of the Global reference datum . The Origin software determines the Global reference epoch using the coordinate system and zone you have selected from the coordinate system library.
GLONASS	GLObal NAVigation Satellite System (GLONASS) is the global navigation satellite system (GNSS) operated for the Russian government by the Russian Space Forces. GLONASS is an alternative and complementary GNSS to the U.S. Global Positioning System (GPS), the European Union Galileo positioning system, and the Japanese Quasi-Zenith Satellite (QZSS).
GNSS	Global Navigation Satellite System (GNSS). This is the standard generic term for satellite navigation systems that provide geospatial positioning with global coverage.
GNSS survey	In a GNSS survey, the controller is connected to a GNSS receiver.
GPS	Global Positioning System (GPS) is the global navigation satellite system (GNSS) operated U.S. government. GPS is an alternative and complementary GNSS to the GLObal NAVigation Satellite System (GLONASS), the European Union Galileo positioning system, and the Japanese Quasi-Zenith Satellite (QZSS).
GPS time	A measure of time used by the NAVSTAR GPS system.
H. Angle offset	Measurement of vertical angle and slope distance. Horizontal angle is then measured separately, usually to an obstructed point.
H. Angle only	Measurement of horizontal angle.
HDOP	Horizontal Dilution of Precision. See also <u>DOP</u> .
Helmert adjustment	A Helmert transformation is a coordinate transformation which uses rotation, scaling, and translation. The horizontal adjustment in a GNSS site calibration is a 2D form of Helmert transformation, and it can also be used for computing a resection.
horizontal circle	Graduated or digital disc from which the horizontal angle is measured.
instrument height	Height of the instrument above the instrument point.

instrument point	Point that the instrument is occupying.
integer ambiguity	The whole number of cycles in a carrier phase pseudorange between the GNSS satellite and the GNSS receiver.
integrated survey	In an integrated survey, the controller is connected to both a conventional survey instrument and a GNSS receiver at the same time. The Spectra Geospatial Origin software can quickly switch between the two instruments, within the same job.
ionosphere	The band of charged particles 80 to 120 miles above the earth's surface. The ionosphere affects the accuracy of GNSS measurements if you measure long baselines using single-frequency receivers.
K factor	The K factor is a constant defining a vertical curve in a road definition. $K = L/A$. where: L is the length of the curve A is the algebraic difference between the incoming and outgoing slopes in %.
L1 signal	The primary L-band carrier used by GNSS satellites to transmit satellite data.
L2 signal	The secondary L-band carrier used by GNSS satellites to transmit satellite data. Block IIR-M and later GPS satellites will transmit an additional signal on L2 called L2C.
L5 signal	The third L-band carrier used by GNSS satellites to transmit satellite data. This has been added to Block IIF and later GPS satellites.
LandXML file	A LandXML file is an XML file format for civil engineering design and survey measurement data such as points, surfaces, parcels, pipe network data and alignments.
Local datum	The Origin software determines the Local datum using the coordinate system and zone you have selected from the coordinate system library.

measurement modes	Angles are measured and averaged as one distance is measured using one of the following measurement modes: Standard (STD), Fast Standard (FSTD), Tracking (TRK). STD mode is indicated by an S next to the instrument icon on the status bar. One angle and one distance are measured. FSTD mode is indicated by an F next to the instrument icon on the status bar. Angles and distances are continually measured. TRK mode is indicated by a T next to the instrument icon on the status bar.
mechanical instrument	A conventional instrument that must be manually turned to change face or to locate targets. Compare with <u>servo instrument</u> .
MGRS	Military Grid Reference System
MSAS	MTSAT Satellite-Based Augmentation System. A satellite-based augmentation system (SBAS) that provides a free-to-air differential correction service for GNSS over its coverage area, which is Japan.
multipath	Interference, similar to ghosting on a television screen. Multipath occurs when GNSS signals traverse different paths before arriving at the antenna.
neighborhood adjustment	A coordinate adjustment that is applied to conventional surveys with multiple backsights or jobs with a GNSS site calibration. During station setup plus, resection or GNSS site calibration, residuals are calculated for each observed control point. The calculated distances from each new point to the control points used in the station setup or calibration are used to determine the coordinate adjustment to be applied to the new point.
NMEA	A standard, established by the National Marine Electronics Association (NMEA), that defines electrical signals, data transmission protocol, timing, and sentence formats for communicating navigation data between marine navigation instruments.
NTRIP	Networked Transport of RTCM via Internet Protocol
observation	A measurement made at or between points using surveying equipment, including GNSS receivers and conventional instruments.
OmniSTAR	A satellite-based system that broadcasts GPS correction information.
P-code	The "precise" code transmitted by the GPS satellites. Each satellite has a unique code that is modulated onto both the L1 and L2 carrier waves.

parity	A form of error checking used in binary digital data storage and transfer. Options for parity checking include Even, Odd, or None.
PDOP	Position Dilution of Precision, a unitless figure of merit expressing the relationship between the error in user position and the error in satellite position.
PDOP mask	The highest PDOP value at which a receiver will compute positions.
polyline	Polylines are two or more lines or arcs connected together. A line is a single line between two points.
positioning system	A system of instrumental and computational components for determining geographic position.
postprocess	To process satellite data on a computer after it has been collected.
postprocessed kinematic survey	A type of GNSS survey. Postprocessed kinematic surveys store raw stop-and-go and continuous observations. The data is postprocessed to achieve centimeter-level precisions.
PPM	Parts per million correction that is applied to measured slope distances to correct for the affects of the earth's atmosphere. PPM is determined using observed pressure and temperature readings together with specific instrument constants.
precision	A measure of how closely random variables tend to cluster around a computed value, which indicates the repeatability of one or a set of measurements.
prism constant	Distance offset between the center of a prism and the point being measured.
projection	Used to create flat maps that represent the surface of the earth or parts of that surface.

QZSS	Quasi-Zenith Satellite (QZSS) is a Japanese based satellite system built by the Japan Aerospace Exploration Agency (JAXA). QZSS is a complementary GNSS to the U.S. Global Positioning System (GPS), the Russian GLONASS, and the European Union Galileo positioning system. QZSS is also a satellite-based augmentation system (SBAS).
RDOP	Relative Dilution of Precision. See also DOP .
real-time differential survey	A type of GNSS survey. A real-time differential survey uses the differential corrections transmitted from a land-based receiver or from SBAS or OmniSTAR satellites to achieve submeter positioning at the rover.
real-time kinematic and data logging survey	A type of GNSS survey. A real-time kinematic and data logging survey records raw GNSS data during an RTK survey. The raw data can be postprocessed later, if required.
real-time kinematic and infill survey	A type of GNSS survey. A real-time kinematic and infill survey allows you to continue a kinematic survey when radio contact with the base station is lost. The infill data must be postprocessed.
reference station	See base station .
refline	The process of establishing the position of an occupied point relative to a baseline by taking measurements to two known or unknown points.
resection	The process of establishing the position of an occupied point by taking measurements to two or more known points.
RMS	Root Mean Square. This is used to express the accuracy of point measurement. It is the radius of the error circle within which approximately 70% of position fixes are to be found.
RMT	Remote target
robotic survey	A survey in which the controller running the Origin software is connected via radio to a conventional instrument, so that the instrument can be controlled robotically from the Origin software.
rounds	Conventional observation method of multiple observations to multiple points.

rover	Any mobile GNSS receiver and field computer collecting data in the field. The position of a roving receiver can be differentially corrected relative to a stationary base GNSS receiver.
RTCM	Radio Technical Commission for Maritime Services. This is a commission that was established to define a differential data link for the real-time differential correction of roving GNSS receivers.
RTK	Real-time kinematic, a type of GNSS survey.
SBAS	Satellite Based Augmentation System. SBAS is based on differential GNSS, but applies to wide area networks of reference stations (for example, WAAS, EGNOS, MSAS). Corrections and additional information are broadcast using geostationary satellites.
servo instrument	<p>A conventional instrument that is equipped with servo motors, which enables the instrument to change face and turn to track targets automatically. Compare with a <u>mechanical instrument</u>.</p> <p>If the servo instrument is also equipped with a radio, you can use it in a <u>robotic survey</u>, where the instrument is controlled via the Origin software.</p>
Shapefile	A Shapefile is an ESRI vector data storage format for storing geographic features as points, lines, or polygons as well as attribute information.
single-frequency	A type of receiver that only uses the L1 GNSS signal. There is no compensation for ionospheric effects.
single distance offset	Measurement of horizontal and vertical angles and a slope distance. Plus additional offset distances to position obstructed points.
SNR	Signal-to-Noise Ratio, a measure of the strength of a satellite signal. SNR ranges from 0 (no signal) to 99, where 99 is perfect and 0 means the satellite is not available. A typical good value is 40. A GNSS system typically starts using a satellite when its SNR value is higher than 25.
station	The distance or interval along a line, including an arc, alignment, or road.
station setup	The process of defining the instrument occupation point and setting the orientation of the instrument to a backsight point or points.

string	A string is a series of 3D points joined together. Each string represents a single feature such as a curb line or the centerline of a road.
surface	A surface can be a 3D digital representation of a topographical surface (terrain) or a representation of an object or the face of objects in a 3D model or BIM file. Topographical surfaces are typically digital terrain model (DTM) files which represent the surface using a mesh of contiguous triangles.
superelevation	In terms of a road design, superelevation refers to the addition of an extra slope (banking) on curves of the road to assist vehicles negotiating the curves. Adding superelevation assists in achieving the required design speed for the curve. Superelevation is generally defined in conjunction with widening, page 711 .
SV	Satellite Vehicle (or Space Vehicle).
target height	Height of prism above the point being measured.
TDOP	Time Dilution of Precision. See also DOP .
TOW	Time of Week in seconds, from midnight Saturday night/Sunday morning GPS time.
tracking	The process of receiving and recognizing signals from a satellite.
tracking mode	Used to measure towards moving targets.
Tracklight	A visible light that guides the prism operator on the correct bearing.
traverse	A traverse is formed by surveying a number of points at traverse stations and then linking them into a circuit. A closed traverse is formed when the circuit ends at the starting point. It is useful for surveying large areas which are defined by a boundary. An open traverse is formed when the circuit ends at a different point to the starting point. It is useful for surveying a narrow strip of land such as a coastline or a corridor for a road. A valid traverse station has one or more backsight observations to the previous traverse station, and one or more observations to the next traverse station. To compute a traverse closure, there must be at least one distance measurement between successive points used in the traverse.

Trimble Terrain Model	A Trimble Terrain Model (TTM) file represents a 3D terrain surface model as a mesh of contiguous triangles.
TRK	See tracking mode .
TTM	See Trimble Terrain Model .
USNG	United States National Grid
UTC	Universal Time Coordinated. A time standard based on local solar mean time at the Greenwich meridian. See also GPS time .
VBS	Virtual Base Station.
VDOP	Vertical Dilution of Precision. See also DOP .
vertical circle	Graduated or digital disc from which the vertical angle is measured.
VPI	Vertical Point of Intersection.
WAAS	Wide Area Augmentation System. A satellite-based augmentation system (SBAS) that improves the accuracy and availability of the basic GNSS signals over its coverage area, which includes the continental United States and outlying parts of Canada and Mexico.
Weight exponent	The Weight exponent is used in the neighborhood adjustment calculation. When the coordinate adjustment to be applied to a new point is calculated, the calculated distances from each new point to the control points used in the station setup are weighted according to the Weight exponent.
widening	In terms of a road design this refers to the widening of the road around a curve to provide extra safety for cars negotiating the curve. Widening is generally defined in conjunction with superelevation, page 710 .
WGS-84	World Geodetic System (1984), the mathematical ellipsoid used by GPS since January 1987. See also ellipsoid .

Legal information

Trimble Inc.

spectrageospatial.com

Copyright and trademarks

© 2024, Trimble Inc. All rights reserved.

Spectra, CenterPoint, FOCUS, and Trimble RTX are trademarks of Trimble Inc. registered in the United States and in other countries.

IonoGuard, VRS and VRS Now are trademarks of Trimble Inc.

Microsoft, Excel, Internet Explorer, and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Google and Android are trademarks of Google LLC.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks is under license.

Wi-Fi is a registered trademark of the Wi-Fi Alliance.

All other trademarks are the property of their respective owners.

This software is based in part on the work of the Independent JPEG Group, derived from the RSA Data Security, Inc, MD5 Message-Digest Algorithm.

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (www.openssl.org/).

Spectra Geospatial Origin includes a number of open source libraries.

For more information, see [Open source libraries used by Spectra Geospatial Origin](#).

The Trimble Coordinate System Database provided with the Origin software uses data from a number of third parties. For more information, see [Trimble Coordinate System Database Open Source Attribution](#).

The Trimble Maps service provided with the Origin software uses data from a number of third parties. For more information, see [Trimble Maps Copyrights](#).